

# AUTOMATIC WASHING MACHINE WITH DRYER

USER'S MANUAL

**PHILCO**



*Famous for Quality the World Over*

**PLD 14961 WD**

**Dear customer,  
Thank you for buying a PHILCO brand product. So that your appliance serves you well, please read all the instructions in this user's manual.**

# CONTENTS

<b>PART 1: BEFORE PUTTING INTO OPERATION .....</b>	<b>2</b>
• Important safety instructions.....	2
• General safety information.....	2
• Important safety measures .....	4
<b>PART 2: INSTALLATION .....</b>	<b>6</b>
• Removal of the transportation screws .....	6
• Levelling the washing machine.....	7
• Electrical connection.....	8
• Water supply connection.....	8
• Water drain connection.....	9
<b>PART 3: DESCRIPTION OF THE APPLIANCE AND THE CONTROL PANEL .....</b>	<b>10</b>
• Description of the appliance.....	10
• Washing detergent drawer .....	11
• Control panel.....	13
• Program selection dial.....	13
<b>PART 4: BASIC SETTINGS .....</b>	<b>14</b>
• Language selection.....	14
• Setting an economic time (Economically advantageous time period).....	15
• Setting the current time.....	15
• Setting audio sounds .....	16
• Setting the display brightness.....	16
• Setting the display contrast .....	17
• Restore factory settings.....	17
<b>PART 5: WASHING YOUR LAUNDRY .....</b>	<b>18</b>
• First wash cycle.....	18
• Sorting your laundry .....	18
• Washing symbols.....	18
• Placing laundry into the washing machine.....	19
• Dosage of the washing detergent.....	20
• Selecting programs and functions .....	21
• Child safety lock .....	31
• Program chart .....	32
<b>PART 6: MAINTENANCE AND CLEANING .....</b>	<b>40</b>
• Water inlet filters.....	40
• Pump filter.....	40
• Washing detergent drawer .....	42
• Siphon plug .....	42
• Cabinet of the washing machine .....	42
• Drum.....	43
• Removal of scale deposits from the washing machine.....	43
<b>PART 7: PRACTICAL INFORMATION .....</b>	<b>44</b>
<b>PART 8: PREVENTION OF MINOR MALFUNCTIONS .....</b>	<b>45</b>
<b>PART 9: AUTOMATIC MALFUNCTION DETECTION SYSTEM .....</b>	<b>47</b>
<b>PART 10: TECHNICAL SPECIFICATIONS .....</b>	<b>49</b>

# PART 1: BEFORE PUTTING INTO OPERATION

## Important safety instructions

- Read carefully and store for future use.
- The appliance must be installed by an authorised service technician or another responsible person. Otherwise, there exists a risk of an accident, injury or damage to the appliance.
- The safety of this appliance complies with industry norms and meets legal appliance safety requirements. However, as manufacturers, we consider it our duty to provide you with the following safety instructions.
- It is essential that you store this user's manual in a safe place so that you can use it in the future. If you intend to sell the appliance, give it to another owner or if you move, always make sure that the user's manual is attached to the appliance so that the new owner can find out about the operation of the appliance and the relevant warnings.
- Before installation or operation of the appliance you **MUST** carefully read all the safety instructions and the user's manual.
- Before putting the appliance into operation for the first time, check that it has not been damaged during transport. Never connect a damaged appliance. If some parts are damaged, contact the supplier.
- If the washing machine is supplied in the winter months, when the temperature falls under 0°C, store the appliance at room temperature for 24 hours before first use.
- Only use the appliance for washing laundry which is marked by the manufacturer on the label as suitable for washing and drying in a washing machine.
- You must remove the transportation screws located in the back part of the washing machine before putting it into operation. **Otherwise, the appliance could be damaged and damage to property could occur. This event is not covered by the warranty.**
- The warranty does not cover damaged arising from external factors (floods, fire, rodents, etc.).

## General safety instructions

- Changing the technical parameters or making any other modifications to the appliance is dangerous.
- During the course of a high temperature program the door, cabinet and hoses heat up to a high temperature. Do not touch the door, the cabinet of the washing machine or the hoses!
- Ensure that small household pets cannot get into the drum. It is therefore better to always check the inside of the drum before use.
- Items such as coins, safety pins, nails, bolts, stones and other heavy or sharp items can cause considerable damage and do not belong in the appliance.
- Use only the recommended amount of fabric softener and washing detergents. If you use a greater amount than is recommended, the fabric could be damaged.
- Always use the amount of detergent recommended by the manufacturer.
- Small pieces of laundry such as socks, shoelaces, washing bands, etc. should be washed in a special purpose washing bag or in a pillow case because the individual items could become jammed between the tube and the rotating drum.
- Frozen water in the hoses may damage the hoses and cause a subsequent explosion. In locations where temperatures fall below the freezing point it is not possible to guarantee the proper operation of the appliance.
- Do not use the washing machine to wash products with metal skeletons, fabrics which are not hemmed or that snag.
- Before using this appliance, check that the appliance is connected according to the instructions provided in this manual.

- After use, before cleaning or maintenance always disconnect the washing machine from the power supply and turn off the water inlet.
- Never attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may lead to injuries or serious damage to the appliance. Contact your local service centre for repairs. Always request original spare parts.
- Do not use multi-sockets or extension cords.
- Do not plug in the appliance with a defective power cord.
- If the power cord is damaged, have it replaced by the manufacturer or an authorised service technician to prevent hazardous situations.
- Do not pull the power plug out of the power socket by pulling on the cord. Hold the power cord by holding the power plug directly.
- Do not connect the power plug if you have wet hands.
- Never touch the appliance if you have wet hands or feet.
- Never open the detergent drawer while washing.
- Never attempt to open the washing machine door while washing.
- Because the washing machine can become very hot during operation, do not touch the hose during the draining or filling process.
- In the case of any defect, first turn off the appliance, disconnect it from the power supply and shut off the water inlet. Do not attempt to repair the device yourself. Contact the nearest authorised service.
- Do not forget that the packaging material from the washing machine may present a danger to children.
- Do not allow children to play with the washing machine.
- Keep household pets at a safe distance from the washing machine.
- The washing machine should only be used by persons fully instructed about the instructions, provisions and controls described in this user's manual.
- This washing machine is designed for domestic use only. The use of the washing machine for commercial purposes voids the warranty.
- Do not install the appliance on a carpet or another similar surface, which could block the ventilation vents on the underside.
- Do not place the drain hose into a container, bucket or sink.
- To avoid the risk of suffocation, keep the plastic pouch containing the documentation about the washing machine out of children's reach.
- Keep small parts out of the reach of small children.

## Recommendation

- Long term contact of washing detergents and fabric softeners with air will cause them to dry out and stick to the walls of the compartments. To prevent this from happening, fill the compartments with washing detergent and fabric softener only immediately before washing.
- We recommend the use of a prewash only for heavily soiled laundry.
- Do not exceed the maximum loading capacity of the drum.
- This appliance must not be used by persons (including children) with physical, sensory or psychological impairments or by inexperienced persons, unless properly trained or schooled in the safe use of the appliance, or unless they have been properly supervised by a person who will be responsible for their safety. Children should be supervised so as not to play with the appliance.
- If you will not be using the washing machine for an extended period of time, pull it out of the power socket, shut off the water inlet and leave the door open so that the inside of the washing machine can dry out and so unpleasant odours are not created.
- As a result of quality control procedures some water may remain in the washing machine. This will not damage the washing machine in any way.
- We recommend that the first wash is performed in the White 90 - 95° program (depending on the model) without any laundry, put 1/2 a measuring cup of washing agent into the second draw for the washing agent.
- Never open the detergent drawer while washing.
- Never attempt to open the washing machine door while washing.

- Always use the amount of detergent recommended by the manufacturer.
- Do not turn off the washing machine while the drying program is running, wait until it finishes.
- However, if it is necessary to turn off the washing machine, remove the laundry without delay and put it aside to cool down. Attention: the laundry may be very hot.
- Install the washing machine in a location where it will be possible to fully open the door of the washing machine. (Do not install the washing machine in a location where it will not be possible to fully open the door).
- Make sure that there is sufficient ventilation and air circulation around the washing machine.



## Important safety measures

**Carefully read all the important safety instructions. Otherwise, there exists a risk of an accident or a fatal injury.**



### Risk of burns

- For opening the door, use only the handle. Do not touch the glass door panel as it may become very hot, especially at the end of the drying program. The risk of burns may arise as a result of high temperatures.



### Risk of death/injury by electrical shock

- Do not use multi-sockets or extension cords.
- Do not use damaged or cracked power sockets. Do not plug in the appliance with a defective power cord.
- Never pull on the power cord when disconnecting the appliance from a power socket.
- Hold the power cord by holding the power plug.
- Do not touch the power plug with wet hands to avoid injury by electrical shock.
- Never touch the appliance with wet hands or feet.
- If the power cord is damaged, have it replaced by the manufacturer or an authorised service technician to prevent hazardous situations.



### Risk of flooding

- Check that the water flows in and drains continuously.
- If drainage goes via the wash basin, make sure that the hose is firmly and securely attached.
- Make sure that the inlet and drain hoses are properly connected, tightened and that they cannot be loosened easily. The reverse thrust of the hose may cause it to come loose if it is not properly attached. Pay increase attention when the appliance is drained via a wash basin.



### Risk of explosion

- Before starting the drying program, check that the laundry is not stained by chemicals, stain removers and similar substances.
- They could ignite and result in an explosion.



### Risk of fire

- Dry unwashed laundry must not be dried in the dryer.
- Do not store or place flammable substances near the washing machine.

- Laundry that has been stained by oil, acetone, alcohol, petrol, kerosene, stain removers, thinners, solvents, beeswax, beeswax removers and similar substances must first be washed and the stains must be removed. Otherwise there is a risk of a fire hazard when using the drying program.
- If you select the washing program with drying, do not use gel capsules or washing balls or similar washing detergents. There is a danger of a fire hazard.
- Laundry must not be dried, if:
  - the laundry has not been washed.
  - the laundry is stained by table oil, creams, etc. and has not been washed.
  - the laundry has been dry cleaned.
  - the laundry contains a large amount of foam, rubber, etc.
  - the laundry is made from rubber (e.g. swimming caps), latex, water-resistant material, laundry with rubber edges and clothing or pillows containing a rubber sponge, etc.
  - damaged pieces of laundry with rubber or foam padding as these could ignite easily.
  - the padding could ignite easily.
  - prints containing sulphur, which can cause corrosion. Never use fabrics with pictures that can easily be removed.
  - you used a foam or plastic washing detergent dispenser in the washing machine's drum. It could melt and damage laundry and the drum.
  - the laundry was not properly rinsed after a stain remover was used.
  - the laundry or the washing detergent contains a solvent.
  - you do not remove all foreign items (gels, pins, coins, lighters, matches, etc.) from pockets and the laundry. **There is a danger of a fire hazard.**



### Risk of accident or injury

- Do not climb or hang on the washing machine. The top cover could crack resulting in an injury.
- During installation put the hoses, power cord and packaging materials to the side.
- Do not place the washing machine upside down or on its side.
- Do not move the washing machine by holding moving parts such as the washing detergent compartment, door, etc. These parts could break and cause an injury.
- After completing the installation, guide the hoses and the power cord according to the instruction contained herein.



The washing machine must be carried by at least two people.



### Child safety

- Do not allow children to play with the washing machine. The appliance has live electric current inside.
- Do not leave children near the washing machine without supervision. They could easily lock themselves in the drum.
- The outer cover and glass door panel may heat up during operation. (Therefore it is important that children do not approach or touch the washing machine. There is a danger of a burns.)
- Keep packaging materials out of the reach of children!
- Store the washing powder and fabric softener out of the reach of children. There is a danger of poisoning, eye injury or skin irritation if children come into contact with the washing powder or fabric softener. Store the washing powder and fabric softener out of the reach of children.

## PART 2: INSTALLATION

Carefully read the entire user's manual before putting your washing machine into operation and store it in a safe place for future reference.





**The appliance must be installed by an authorised service technician or another responsible person.**

### Removal of the transportation screws

- You must remove the transportation screws located in the back part of the washing machine before putting it into operation.
- Loosen the bolts using a correctly sized spanner, turning it anticlockwise.
- Remove the bolts by pulling them out.
- Insert plastic plugs found in the accessories pouch into the transportation screw holes.
- Carefully store the transportation screws removed from the washing machine for future transport purposes.

**NOTE:**

*You must remove the transportation screws located in the back part of the washing machine before putting it into operation. Defects caused by starting the washing machine with the transportation screws installed are not covered by the warranty.*

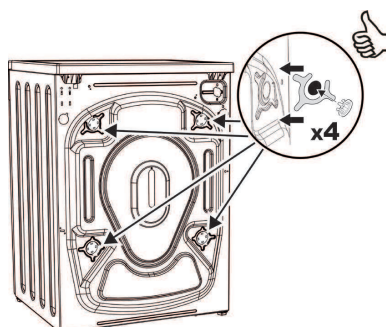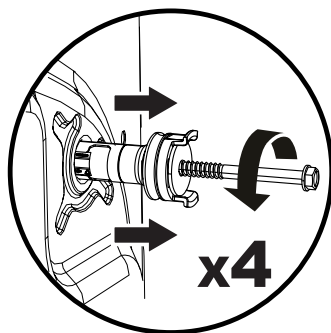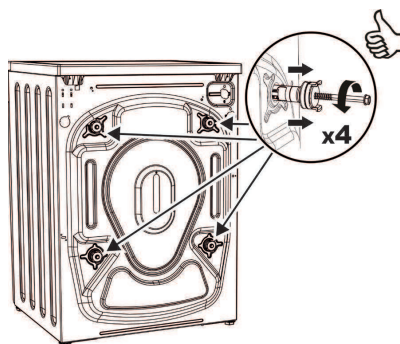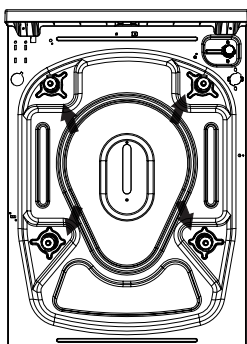



## Levelling the washing machine

Do not place the washing machine on carpets or similar surfaces.


To ensure quiet and vibration free operation of your washing machine, you should place it on an even, non-slip and firm surface.

You can level the washing machine by adjusting the adjustable feet.

First loosen the plastic nut. Adjust by screwing out the feet upwards or downwards.

After levelling the washing machine, re-tighten the plastic nut by screwing it upwards.

Never level the washing machine on an uneven surface by placing cardboard, wooden blocks, etc. under the feet.

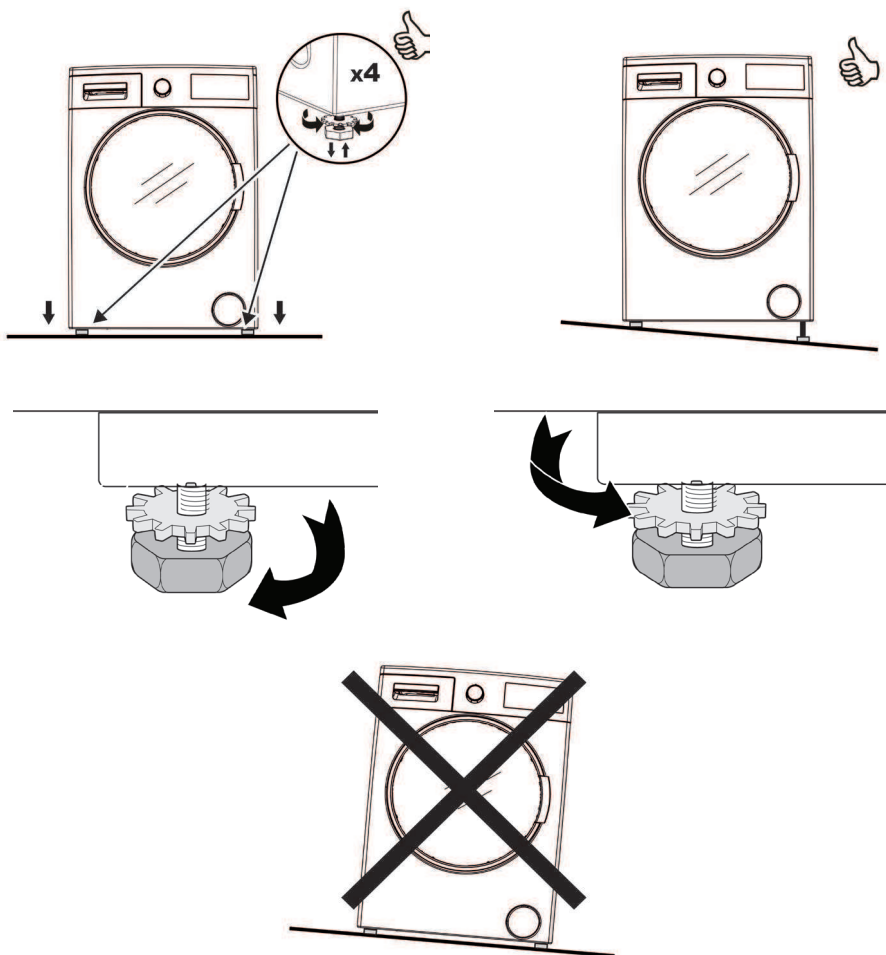


## Electrical connection

- Technical specifications of your washing machine: 220-240 V ~ 50 Hz.
- A special grounding plug is attached to the power cord of your washing machine. This plug must be fully inserted into a grounded power socket (with 10 A). The electrical fuse or circuit breaker to which the washing machine is connected should be rated at 10A. If you do not have such sockets and fuses in your home then have them installed by a qualified electrician.
- Our company takes no responsibility for any damages caused by using the washing machine without grounding.


## Water supply connection

- Depending on the functions of your washing machine, the washing machine is equipped with either a single water inlet (cold) or a double water inlet (cold/hot). The hose with the white end is intended for the cold water inlet and the hose with the red end is intended for the hot water inlet (on washing machines with a hot and cold water inlet).
- To prevent water from leaking from the connection points, the hose kit also includes 1 seal (for washing machines with a cold water inlet) or 2 seals (for washing machines with hot and cold water inlets). Install these seals on the end of the water inlet hose that is to be connected to the tap.
- Connect the hose with the white end to the water inlet valve with the white filter and the hose with the red end to the water inlet valve with the red filter (the second mentioned option applies to washing machines with a hot and cold water connection). Tighten the plastic connecting parts using your hand. A qualified plumber will provide a safer connection.
- The water pressure of 0.1 - 1 MPa in your water tap will ensure a more efficient operation of your washing machine (the pressure of 0.1 MPa equates to a flow rate of more than 8 litres of water per minute from a fully open tap).
- After completing all connections, check that the connections do leak, by fully opening the tap.
- Check that the supply hoses are not bent, broken or cracked.
- Connect the supply hose to a 3/4" threaded water tap.

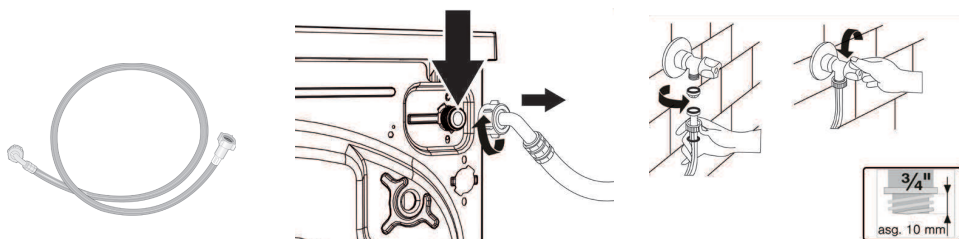


## Water drain connection

- Check that the supply hoses are not bent, twisted, cracked or excessively stretched.
- The drain hose should be installed at a height of min. 60 cm and max. 100 cm above the ground.
- The end of the drain hose may be inserted directly into the drain opening or to a special end fitting attached to the drain of the wash basin.
- Do not place the drain hose into a container, bucket or sink.
- Never attempt to extend the length of the drain hose by adding extra parts.

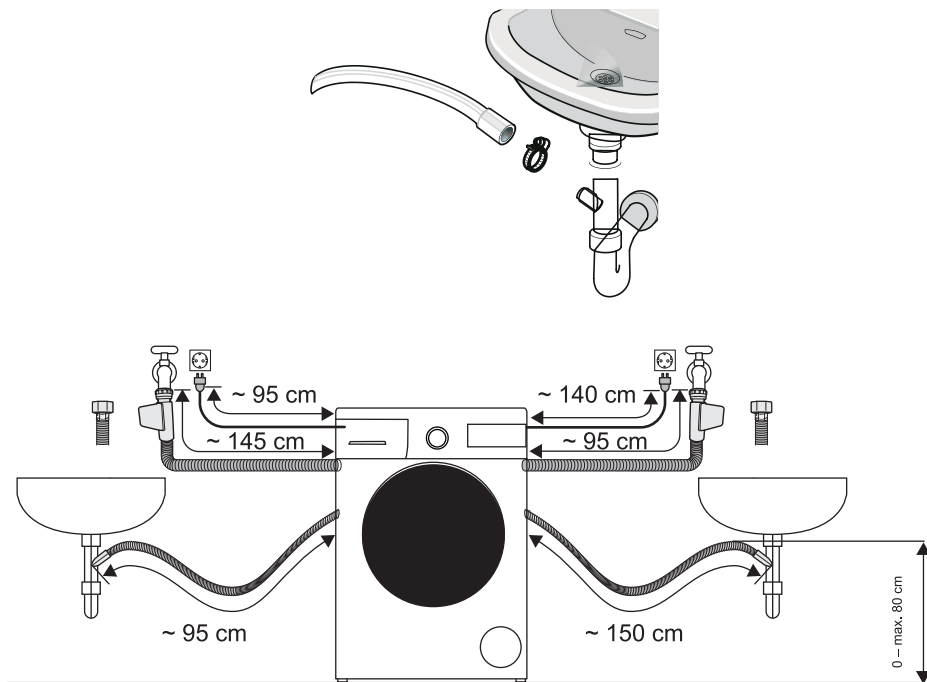


## PART 3: DESCRIPTION OF THE APPLIANCE AND THE CONTROL PANEL

### Description of the appliance

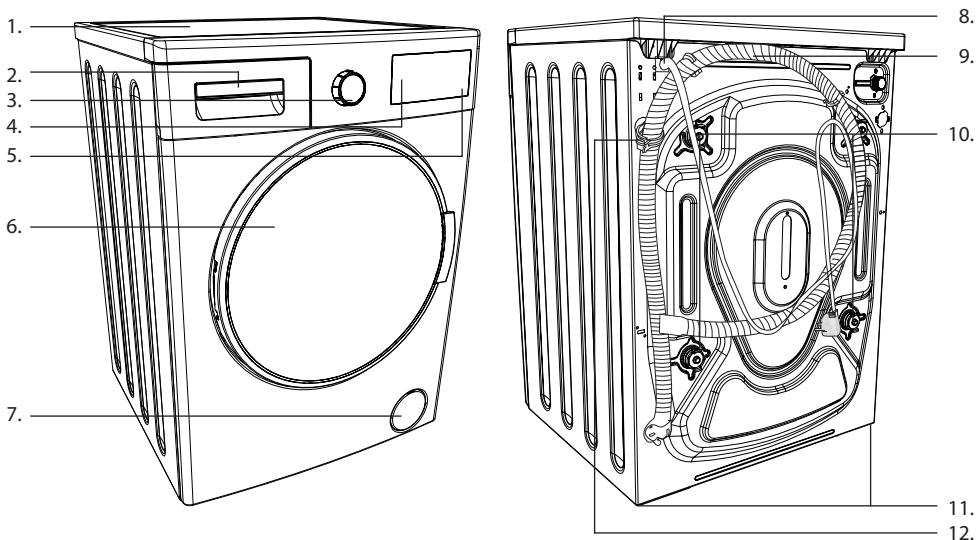

1. Top cover
2. Washing detergent drawer
3. Program selection dial
4. LCD display
5. Function buttons
6. Door
7. Pump filter cover
8. Power cord
9. Drain hose
10. Transportation screws
11. Adjustable levelling feet
12. Plastic holder for the drain hose  
(Removing this holder may negatively affect the operation of the washing machine. Do not remove this plastic holder.)


## Washing detergent drawer

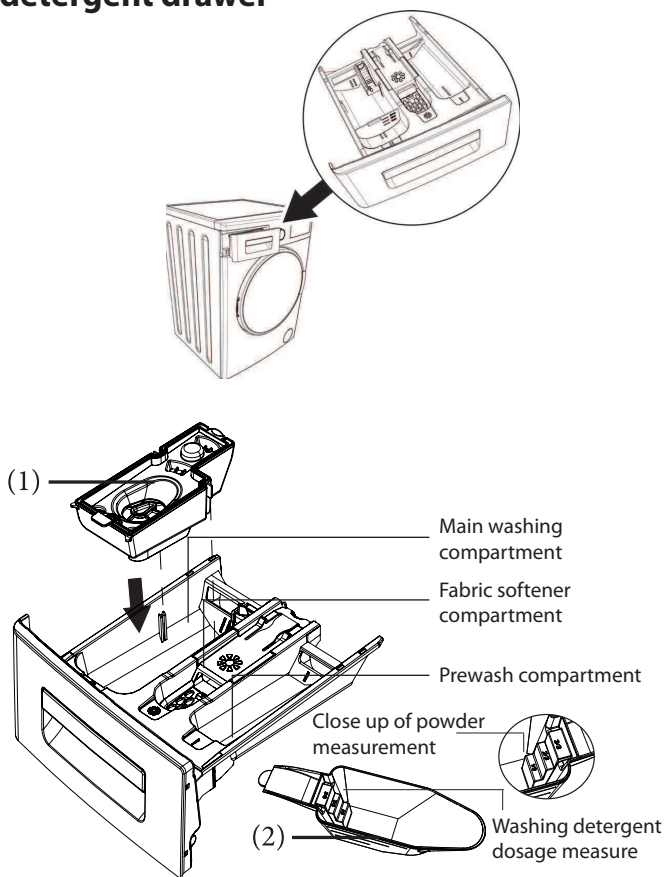

If you are going to use a liquid washing detergent, it is necessary to use a special liquid detergent adapter. (You will find it in the washing machine's accessories.) You can use liquid detergents for all washing programs without a prewash. Place the adapter into the main wash compartment – see illustration above; and pour in the liquid washing detergent as necessary. Do not go over the maximum mark. Always remove the adapter when using a powder washing detergent.


## Main washing compartment

Into this part of the drawer, place only washing detergent (liquid or powder), lime scale remover, etc. When using a liquid washing detergent use the special adapter. You will find it in the washing machine's accessories.

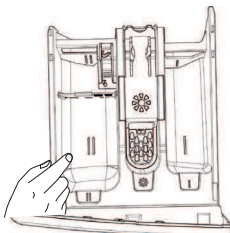


## Fabric softener compartment

In this part only use fabric softener (we recommend that you use the amount and type of fabric softener according to the instructions of the manufacturers of the fabric softener and the laundry). Sometimes remains of the fabric softener may remain in the compartment. This is because fabric softeners are viscous (sticky). To prevent this from occurring, we recommend that you use a fabric softener that is less viscous (i.e. sticky) or you can dilute it using water.

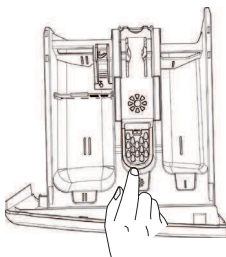


## Prewash compartment

Fill this compartment only if the prewash function is selected. We recommend that you use this function only for heavily soiled laundry. More information further in this user's manual.

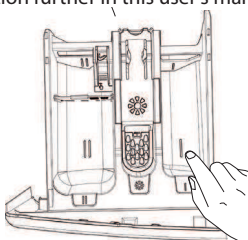


# Control panel

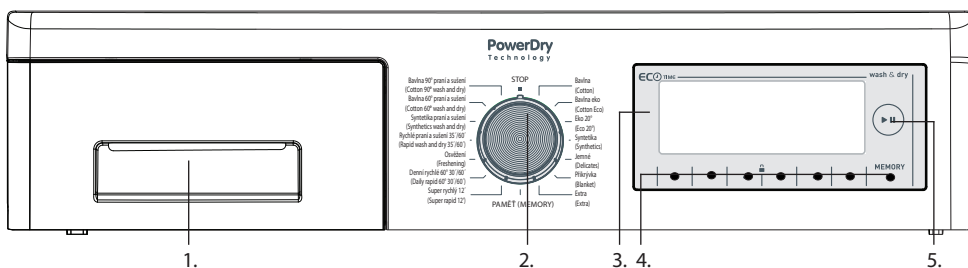

1. **Washing detergent drawer**
2. **Program selection dial:** Select the appropriate washing program. Turn the program selection dial in both directions to select the desired program. Make sure that the mark on the dial points exactly to the given program.
3. **Display:** Here you can see the washing or drying program functions, which you selected and also information about the condition of the washing machine.
4. **Function buttons:** These are touch buttons. Press a button to select the respective function.
5. **Start/Pause button** Press this button once to start a program, press again to pause the program.

## Program selection dial

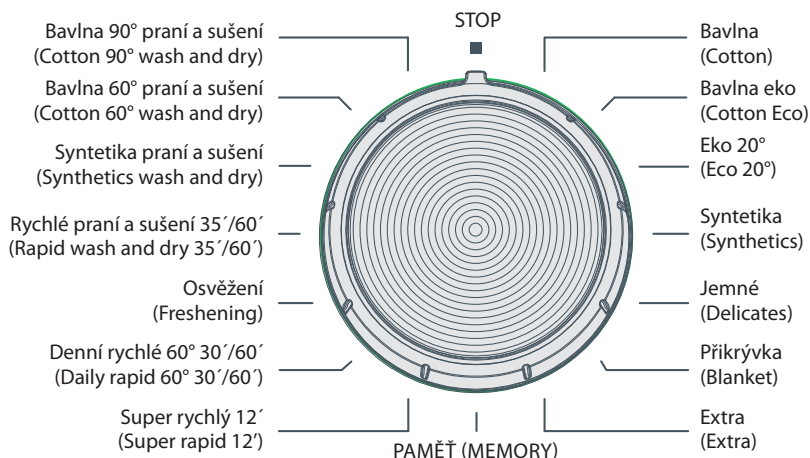

Using the program selection dial, select a program with which you wish to wash your laundry. The program selection may be done by turning the program selection dial in both directions. When making settings, ensure that the symbol on the program selection dial exactly matches your selected washing program. If you switch the program selection dial to position STOP (off), the washing machine will drain the water so as to complete (cancel) the program cycle. After completing the draining operation the washing machine will switch to the stand-by mode. Now you can select another program that you want to start.

## PART 4: BASIC SETTINGS






In order to perform the initial settings, it is necessary to:

- insert the power plug into the power socket;
- open the water valve;
- turn the program selection dial.

### Language selection

The first item that appears on the display are the language settings.

- Select a language that you wish to set and use the button with the ✓ symbol.
- If you wish to enter the menu and do not wish to set the language, select the button with the ✕ symbol.
- Select a language that you wish to set and use the button with the <> symbol.
- Confirm the language selection using the button with the ✓ symbol.
- If you wish change the language selection again, enter the language selection menu and use the buttons with the <> symbols.
- Confirm using the button with the ✓ symbol to save the selection. You will be asked to confirm your language selection.
- Confirm the language selection using the button with the ✓ symbol.
- If you selected incorrectly, select the button with the ✕ symbol and perform the language selection again. As soon as you confirm the change in the language, the selected language will be active.

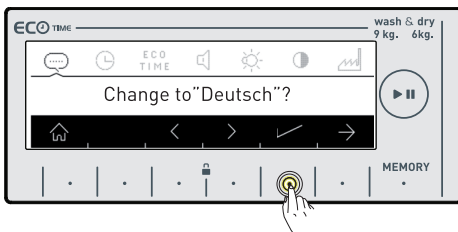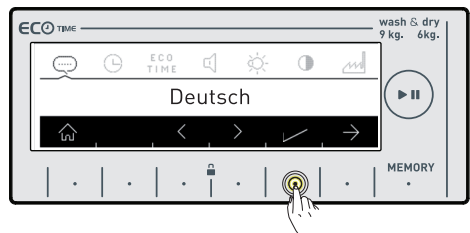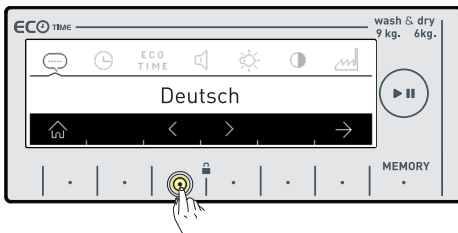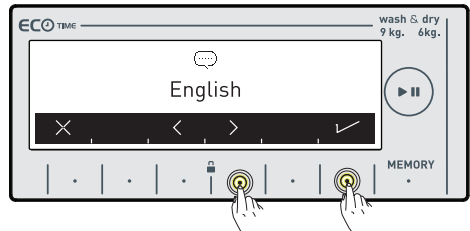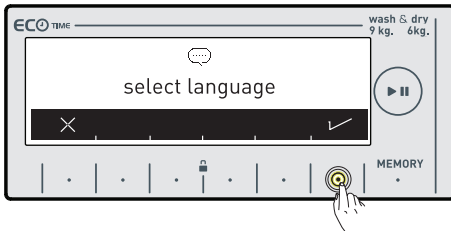




## ECO TIME **Setting an economic time (Economically advantageous time period)**

The price of electricity can vary during the day depending on the power company's tariff time intervals. You can obtain more information about these intervals from your power company and then you can set a time when the price of electricity is low and when the washing machine will be in operation.

### **NOTE:**

**It is necessary for a clock with the respective energy saving feature to be installed.**

- Press the button with the ✓ symbol to make the settings.
- If you want to make the settings at a later time, press the button with the ✕ symbol.
- You can set an economically advantageous interval by pressing buttons with the < > symbols. More information further in the manual about the activation of an economically advantageous interval.
- Confirm the using the button with the ✓ symbol.

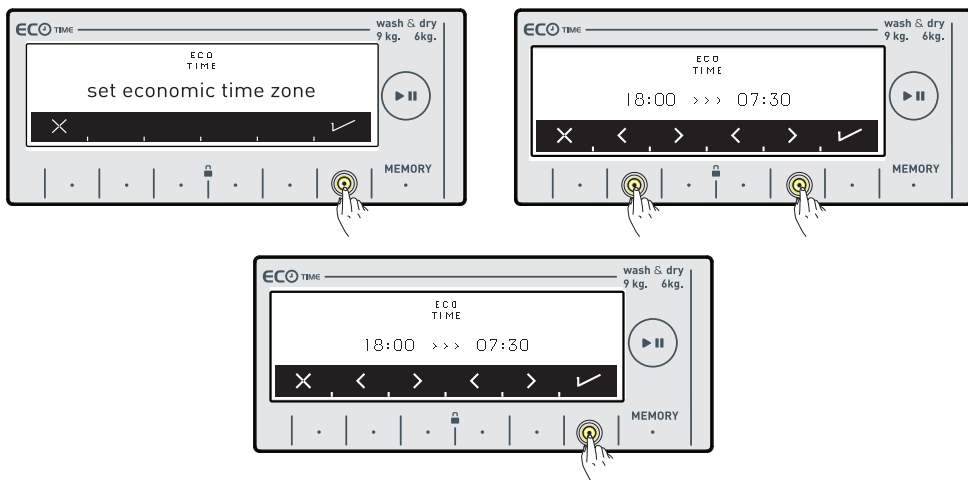

## **Setting the current time**

It is recommended that you correctly set the time when installing the appliance.


When you turn on the appliance you will be asked to set the time.




Enter the settings menu using the button with the ✓ symbol.

The button with the ✕ symbol serves to end and exit the settings.

### **NOTE:**



**Check that you have set the correct time. Otherwise this could negatively affect all other time-related functions. If you disconnect the appliance for a period longer than 15 days, the information about time will be erased. In such an event it is necessary to set the time again the next time you turn on the washing machine.**



- Set the hours and minutes using the buttons with the >> symbols.
- After setting the clock, confirm using the button with the ✓ symbol.
- The appliance will automatically return to the main screen of the selected program. To enter the settings menu press the button with the  symbol.

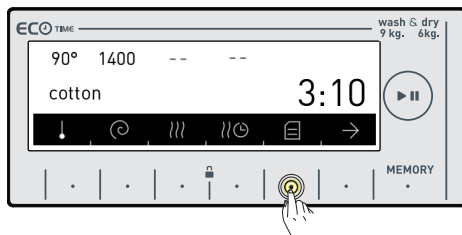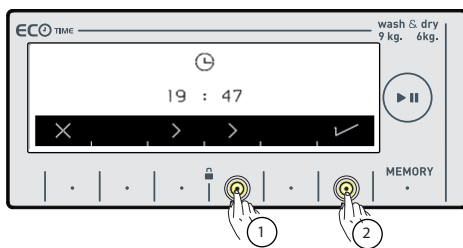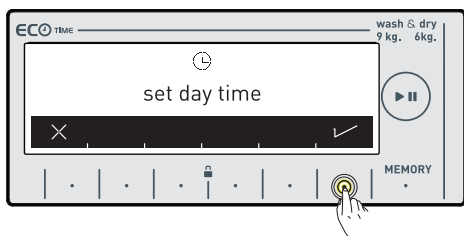

## Setting audio sounds

 You can set audio sounds to be made when the <> buttons are pressed.


-  symbol indicates that audio sounds are activated.
-  symbol indicates that audio sounds are deactivated.

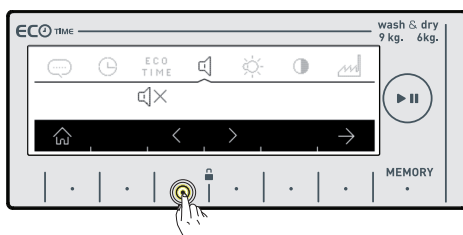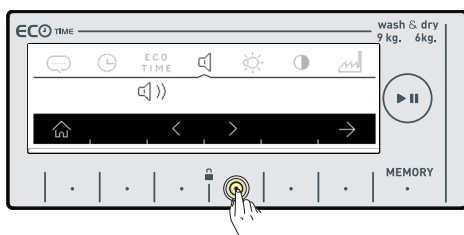

## Setting the display brightness


Set the display brightness using the buttons with the <> symbols.

To move to the display contrast setting, use the button with the → symbol.

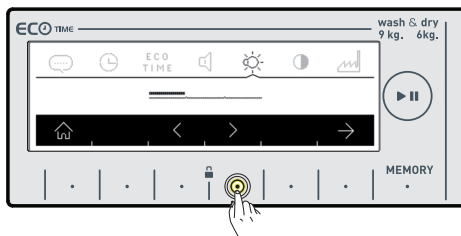

## Setting the display contrast



Set the display contrast using the buttons with the <> symbols.  
To restore factory settings, use the button with the → symbol.

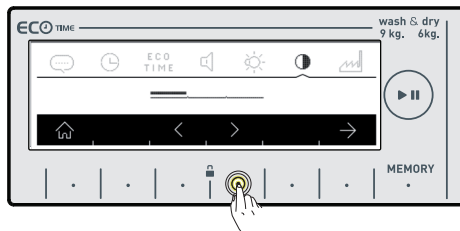

## Restore factory settings

This menu serves to restore the factory set values. All performed settings will be erased.

- Press the button with the ↺ symbol.
- You will be asked to confirm your intention to restore factory settings.
- To confirm, press the button with the ✓ symbol.
- If you do not wish to restore factory settings, press the button with the ✕ symbol.
- To return to the main screen, use the button with the ↵ symbol.

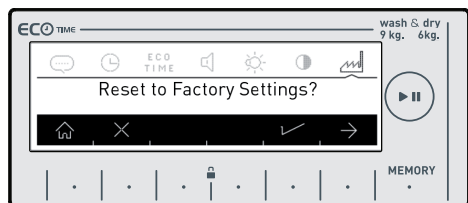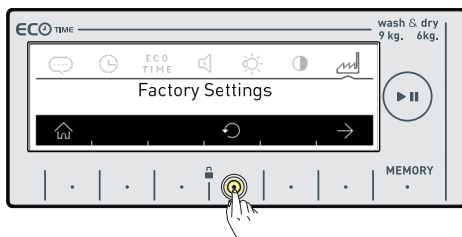

## PART 5: WASHING LAUNDRY

- Connect the washing machine to a power socket.
- Open the water inlet.




















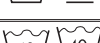




### First wash cycle

There may be some water left over inside the washing machine from the factory tests. We therefore recommend to perform the first wash without laundry so as to drain this water; put half a measure of standard detergent into compartment 2, which is used for washing detergents and select the program for cotton at 90 °C.

### Sorting laundry

- Sort the laundry according to its type (cotton, synthetics, delicates, wool, etc.), washing temperature and the level of dirtiness.
- Never wash whites together with coloured laundry.
- Because your new coloured laundry may release some of its colour, wash it separately.
- Before placing the laundry into the washing machine check pockets for any forgotten items. In this way you will prevent damaging your clothes and the washing machine.
- Do up zips and buttons on the laundry.
- From curtains and drapes remove the plastic or metal hooks or insert the into a wash bag and tie it up.
- Turn clothing such as pants, knitted fabrics, T-shirts and singlets inside out.
- Wash small items such as socks and handkerchiefs in a wash bag.

### Washing symbols


	Resistant fabric		Maximum ironing temperature is 110°C
	Fine fabric		Must not be ironed
	Maximum washing temperature is 95°C		Dry cleaning with all types of agents
	Maximum washing temperature is 60°C		Cleaning only with perchloroethylene, gas, alcohol or R113
	Maximum washing temperature is 40°C		Cleaning only with perchloroethylene, gas, alcohol or R113
	Maximum washing temperature is 30°C		Must not be dry cleaned
	Hand wash		Dry on a flat underlay
	Only dry cleaning		Hang after spin drying
	Bleaching only in cold water		Hang to dry
	Do not bleach.		Drying at the normal temperature of the dryer
	Maximum ironing temperature is 200°C		Low drying temperature
	Maximum ironing temperature is 150°C		Do not place in a dryer.

## Placing laundry into the washing machine







It is necessary to select a program before placing laundry into the washing machine. Otherwise the load sensor will not be activated.

### NOTE:

*The maximum laundry volume can vary depending on the selected program. Do not exceed the maximum capacity specified in the program chart. If you exceed the capacity of the selected program, the display will show the  symbol and a warning sound will be made. Keep removing excess laundry from the drum of the washing machine until the symbol disappears.*

- Open the door of the washing machine.
- Check that there are no foreign objects, laundry or animals in the drum. The drum could contain laundry from the previous wash. Remove the laundry from the washing machine.
- Arrange the laundry evenly inside the washing machine. Fold large items such as bed sheets or covers in the manner shown in the illustration below.
- The washing machine is equipped with a system that detects the amount of inserted laundry. The system weighs the laundry inside the drum and this value is shown on the display. The values for the selected program are set automatically (duration, electricity and water consumption, etc.).
- If you start an overloaded washing machine, you can negatively affect the washing and drying results.
- Furthermore, you will cause damage to the washing machine and the laundry, which may turn yellow during the drying process.
- Insert one item at a time.
- When closing the door, make sure that no laundry has been caught in the door.
- Check that the washing machine door is properly closed.
- Firmly close the washing machine door, otherwise the washing machine will not start.

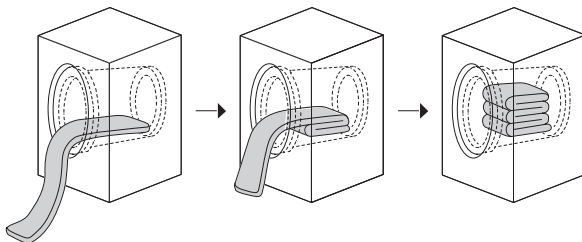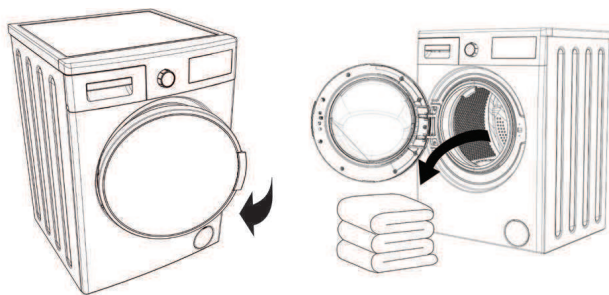

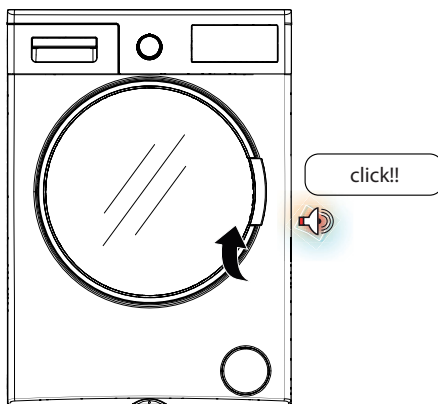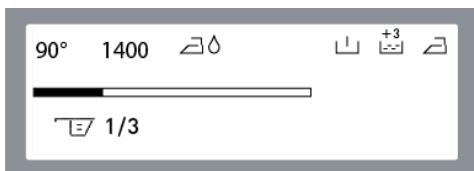


## Detergent dosage

The amount of detergent you use in the washing machine depends on the following criteria:


- The consumption of detergent changes with the degree of dirtiness of the laundry.
- Do not use a prewash for lightly soiled laundry and use a small amount of detergent in compartment 2 of the drawer for washing detergents.
- We recommend the use of the prewash only for heavily soiled laundry.
- For excessively soiled laundry select a program with a prewash, put 1/4 of a detergent measuring cup into compartment 1 for washing detergents and put the remainder of the measuring cup into compartment 2.
- Use washing detergents specially made for automatic washing machines. The dosage of the detergent is shown on the packaging.
- Increased water hardness necessitates the use of an increased amount of detergent in the wash.
- Increased laundry loads also necessitate the use of an increased amount of detergent in the wash.
- Pour fabric softeners (conditioners) into the fabric softener compartment in the detergent drawer. Do not go over the MAX mark. Otherwise the fabric softener will flow out the siphon into the water used for washing.
- If the fabric softener is very thick then dilute it with water before placing it in the compartment. The thick fabric softener could clog up your siphon and so prevent the fabric softener from entering the washing machine.
- You can use liquid detergents for all washing programs without a prewash. Place the adapter into the 2nd compartment intended for the main wash and pour in the liquid washing detergent as necessary.

- Your washing machine is equipped with a washing detergent dosage identification system based on the inserted laundry load. The symbol  and number will appear on the display.



**NOTE:**


 
**3/3 means that it is necessary to fill up the compartment completely. The amount of washing detergent shown on the display roughly corresponds to the markings in the washing detergent measure.**

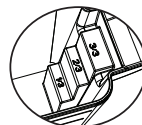


**If you are planning to use a washing program with drying then do not place capsules, special dosers with powder or liquid detergent, washing balls or similar washing aids. There is a danger of a fire hazard.**

## Selecting programs and functions


 

Select a program and additional functions appropriate for your laundry using the program selection dial. The name of the program and its function will appear on the display.

- You can set the temperature (20°, 30°, 40°, 60°, 90°) using the button with the  symbol.
- You can set the spin drying speed (400, 600, 800, 1000, 1200, 1400) using the button with the  symbol. More information further in this user's manual.

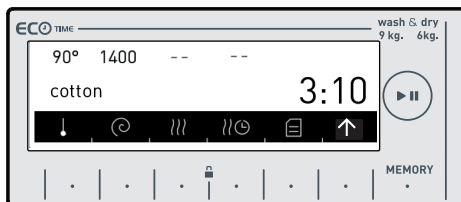


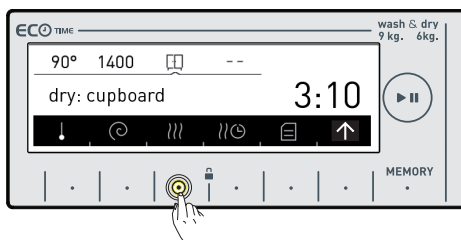
## Drying after a wash is finished

- Set drying function after finishing a wash function by pressing the button with the  symbol.

 **"Into Cupboard" drying**  
We recommend this function for use on laundry that is folded directly into a cupboard. If you wish to use this "Into Cupboard" drying function, press the button with the  symbol until the  symbol appears on the display.



**NOTE:**

 **If the  symbol does not appear on the screen, it means that it is not possible to use this function for the selected program.**




### "Coat hanger" drying

We recommend this function is used for laundry intended to be dried on a coat hanger.

If you wish to use this "coat hanger" drying function, press the button with the  symbol until the  symbol appears on the display.



#### **NOTE:**

*If the  symbol does not appear on the screen, it means that it is not possible to use this function for the selected program.*

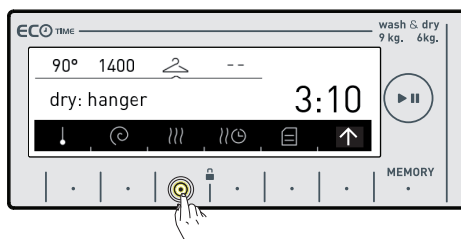


### "Ironing" drying

 We recommend this is used for laundry intended to be ironed.

If you wish to use this "ironing" tumble dry function, press the button with the  symbol until the  symbol appears on the display.


#### **NOTE:**

*If the  symbol does not appear on the screen, it means that it is not possible to use this function for the selected program.*

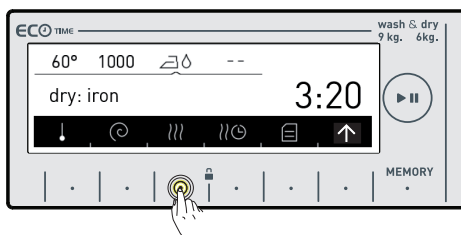

### Drying for a preset time


This function serves to postpone the drying program.

Press the button with the  symbol. The display will show 30, 60 and 120 minutes.



**NOTE:**

If any of the 30<sup>min</sup> 60<sup>min</sup> 120<sup>min</sup> symbols is not shown on the display, it means that this function is not supported for the selected program or that the laundry load is not suitable for such a drying time.

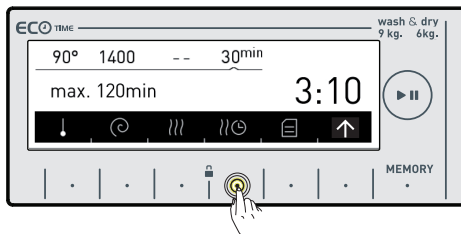**NOTE:**


The recommended drying time for 1 kg of laundry is approx. 30 minutes, for 2 kg of laundry it is approx. 60 minutes and for 3.5 kg of laundry it is approx. 120 minutes. If you wish to dry more than 3.5 kg of laundry, we recommend that you select the „into cupboard“, „coat hanger“ or „ironing“ option.


## Other functions

Before starting the program you can also select additional functions. Press the button of the additional function that you wish to select. Not all functions may be available for certain programs or laundry volumes.

Why is the function not available?


- It is not compatible with the previously selected function.
- There is not enough time in the program for the selected additional function. You will find more information further in the program chart further on in this user's manual.

Press the button with the  symbol to enter the additional functions menu.

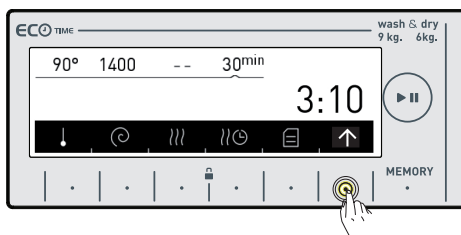


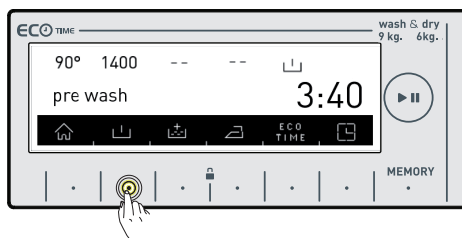
### Prewash

For heavily soiled laundry you can select the "prewash" function. When using this function it is necessary to add washing detergent into the prewash compartment.

Press the button with the  symbol to turn on the "prewash" function.

**NOTE:**

 
If the  symbol does not appear on the screen, it means that it is not possible to use this function for the selected program.




### Extra rinse

You can add extra rinse cycles to the washing program. The washing machine offers up to 3 rinse cycles.

: One extra rinse at the end of the wash.

 
: Two extra rinses at the end of the wash.

: Three extra rinses at the end of the wash.

If you want to set more than 1 extra rinse, repeatedly press the button with the  symbol until the respective symbol appears on the display.



#### **NOTE:**

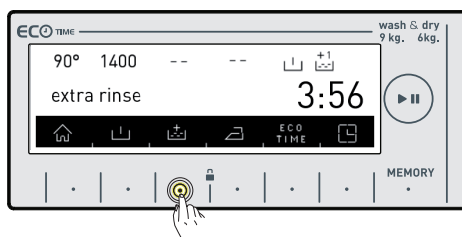**If the  symbol does not appear on the screen, it means that it is not possible to use this function for the selected program.**




### Anti-allergic program

You can also add extra rinse to the washing program. The washing machine will perform all the rinsing steps using hot water (we recommended this for fine laundry, children's laundry and underwear).


Press the button with the  symbol until the  symbol appears on the display.

#### **NOTE:**


**If the  symbol does not appear on the screen, it means that it is not possible to use this function for the selected program.**

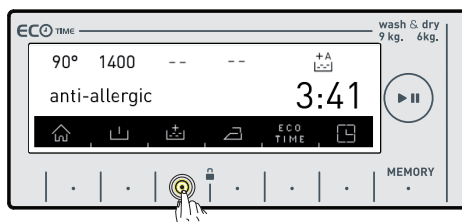


## Easy iron

 This function prevents laundry from being excessively crumpled at the end of a wash. Press the button with the  symbol to activate this function.



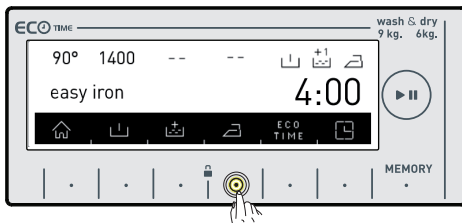

### NOTE:




*If the  symbol does not appear on the screen, it means that it is not possible to use this function for the selected program.*



## ECO TIME **Selecting and economical time of day**

To activate this function it is necessary to first set the economical time (see information in a preceding part of this user's manual).


- To activate the function press the button with the  symbol.
- The symbol  will be shown on the display.
- The economical time will be shown on the display until you turn it off. To turn it off, press the button of this function.
- If you want to start a program at an economically advantageous time press the button with the  symbol. The starting time of the program will automatically be postponed until the clock interval of the economically advantageous time is reached. The display will show the starting time and the length of the program within the scope of the given interval.
- If you do not want to start a program at an economically advantageous time press the button with the  symbol again. The economical time will be deleted and the message "eco time cancelled" will appear on the display.
- The appliance will return to the main menu of the selected program for 3 seconds. To start the program press the Start/Pause button.

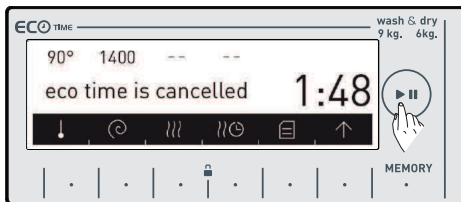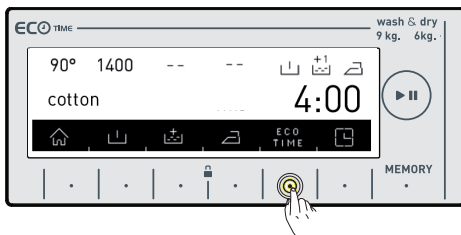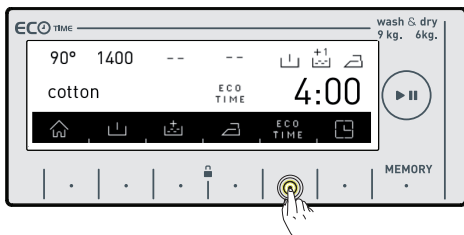






### Delayed start / end a program at a preset time

This function makes it possible to postpone the start of the wash in a range from 10 minutes to 23 hours and 50 minutes, or you can set the time at which the program will end.

- To activate this function press the button with the  symbol.
- The current time will be shown on the display for a short moment.
- The delayed current time will automatically change to displaying the time of the delayed start.
- On this display you can set the time of the delayed start or to set the time at which the program will end by using the buttons with the <> symbols.

#### **NOTE:**

**The current time setting must be accurate for this function to be started correctly. More information in a preceding part of this user's manual "setting the time".**

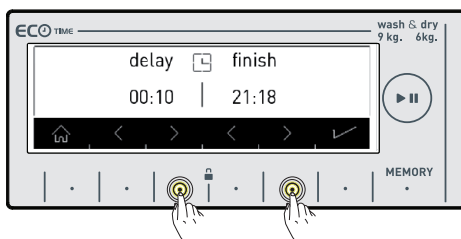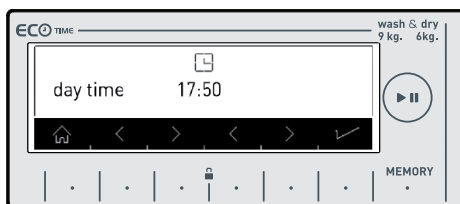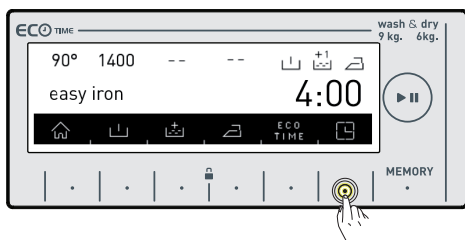


## Memory

With the help of this function you will be able to save a setting of a washing or drying program, which you used by pressing a single button. In this way you can wash and dry without the need for settings. Select the setting, save to memory by pressing the Memory button.


- If you wish to make changes to the washing or drying program before saving it to memory, press the button with the ✕ symbol to make the necessary changes.

Confirm by pressing the button with the ✓ symbol.


Then a message will appear asking you to confirm that you want to overwrite.

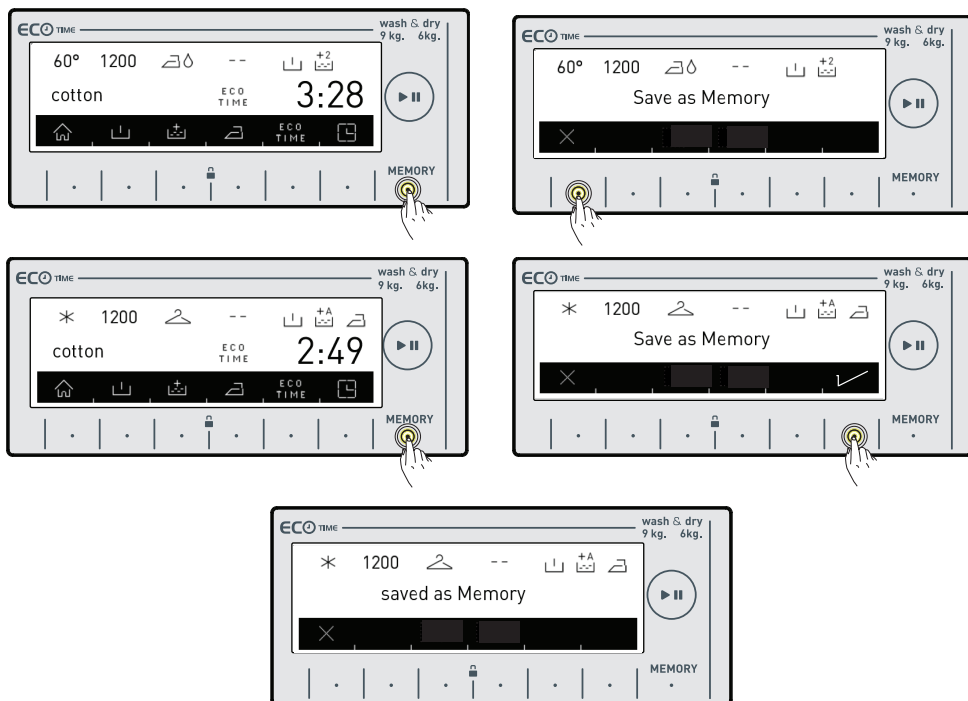


You can wash laundry or select a program by pressing the Start/Pause button.

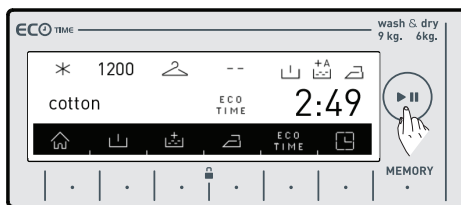


If you wish to use a program with memory, turn the program selection dial to the position „Memory“.

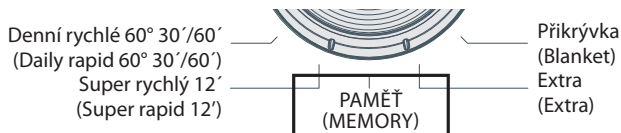

If you wish to change the settings of a program already saved in memory, select the memory option or select another program and press the save to memory button

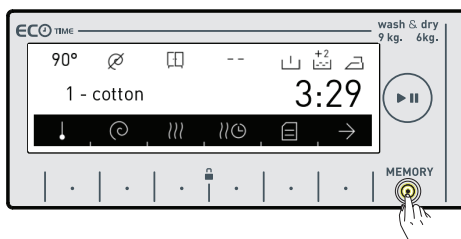

If you overwrite the current program with a new program, a confirmation message will appear.

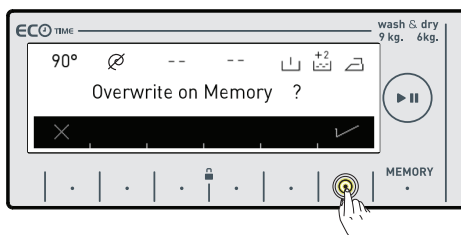

In this way you will save the new program to memory.




## Start/Pause button


### Starting a program

Start the selected program by pressing the Start/Pause button.

When the washing machine is turned on the selected program will appear on the display. Below are examples of displays that may appear during the washing or drying process.

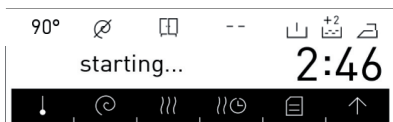

Washing program is ready

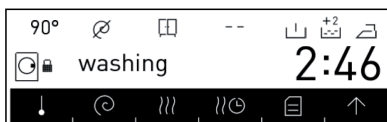

Washing program is on.



Washing




Rinsing



Spinning



Drying program is ready.

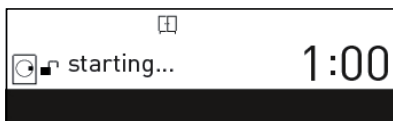


A drying program was selected.




A drying program is running.



Drying

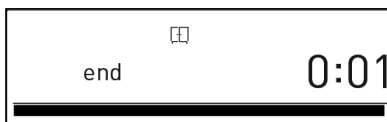

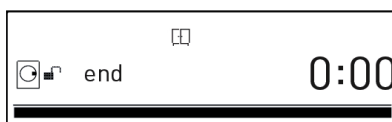


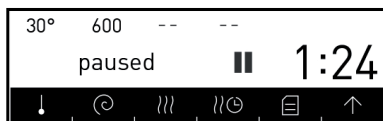
End of program.



The door is unlocked.

### Pausing a program / adding laundry

- Press the  button to pause or restart the selected program. You can use this function to add laundry.
- The washing cycle is complete.
- As soon as the  symbol appears on the display, you can open the door of the washing machine and add laundry.
- As soon as the  symbol appears on the display, you cannot open the door of the washing machine.



### Cancelling a program

If you want to cancel a program that is running:

- Switch the program to the STOP position.
- The washing machine will stop washing and the program will be cancelled.
- To drain water, turn the program selection dial to any program.
- The washing machine will automatically drain the water and the program will be cancelled.
- Select a new program and start the washing machine again.

More information is contained in the chart below.



### Ending a program

After a program is completed, the washing machine will turn off automatically.

"end" will appear on the display.

Open the washing machine door and take the laundry out.

Leave the door open so that excess water can evaporate.

Turn the program selection dial to the STOP position.

Disconnect the power cord from the power socket.

Shut off the water inlet.

#### **NOTE:**


**The washing machine is equipped with a cooling system, which reduces the laundry temperature at the end of the drying process. In this way this system prevents possible burns which could occur when taking laundry out of the drum.**





## Child Safety Lock


Your washing machine is equipped with a child lock to prevent the changing the process of a program by pressing a button during a wash.

Activate the the child safety lock with the buttons with the  symbol and hold it down for at least 3 seconds.

The following text appears on the display.



If you press any button, the following text will appear on the display (hold down for 3 seconds to unlock).

If the lock is activated while a program is running and the washing machine is turned off by turning the dial to STOP and a new program is turned on, the child safety lock function will remain activated. No change will occur.



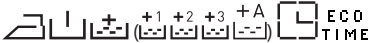

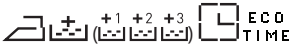

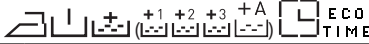

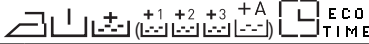

Deactivate the child lock by pressing the same buttons  and holding them down for at least 3 seconds. When the child safety lock is deactivated the following text will appear.

### NOTE:



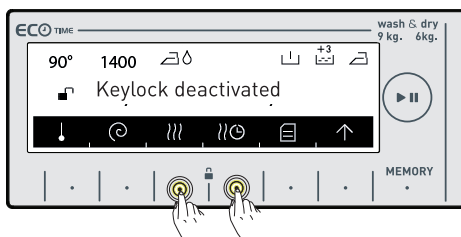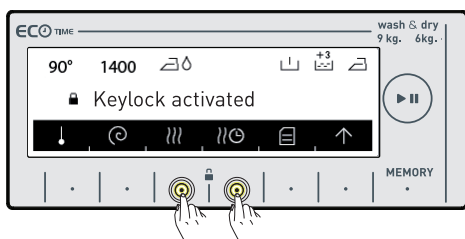

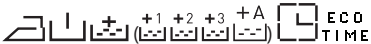



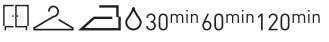
**The child safety lock does not make it possible to block the pump cover or the washing detergent drawer.**




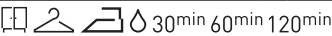


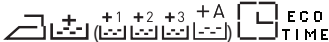


## Program Table

<b>Cotton</b>		
Temperature (°C)	* (cold water), 30°, 40°, 60°, <b>90°*</b>	
* Max. laundry capacity for washing/drying (kg)	9.0/6.0	
Spinning (rpm)	∅ (without spinning), 400, 600, 800, 1000, 1200, <b>1400*</b>	
Type of laundry / description	Temperature resistant, cotton or linen textiles (underwear, bed linen, table cloths, towels (max. 4.0 kg))	
Additional washing functions**		
Additional drying functions**		
<b>Cotton Eco</b>		
Temperature (°C)	* (cold water), 30°, 40°, <b>60°*</b>	
* Max. laundry capacity for washing/drying (kg)	9.0/6.0	
Spinning (rpm)	∅ (without spinning), 400, 600, 800, 1000, 1200, <b>1400*</b>	
Type of laundry / description	Cotton or linen textiles (underwear, bed linen, table cloths, towels (max. 4.0 kg))	
Additional washing functions**		
Additional drying functions**		
<b>Eco 20°C</b>		
Temperature (°C)	<b>20°*</b>	
* Max. laundry capacity for washing/drying (kg)	4.0/4.0	
Spinning (rpm)	∅ (without spinning), 400, 600, 800, 1000, 1200, <b>1400*</b>	
Type of laundry / description	Lightly soiled, cotton or linen textiles (underwear, bed linen, table cloths, towels (max. 2 kg))	
Additional washing functions**		
Additional drying functions**		
<b>Synthetics</b>		
Temperature (°C)	* (cold water), 30°, 40°, <b>60°*</b>	
Max. laundry capacity for washing/drying (kg)	3.5 / 3.5	
Spinning (rpm)	∅ (Without spinning), 400, 600, <b>800*</b>	
Type of laundry / description	Synthetics and textiles from synthetic blends.	
Additional washing functions**		
Additional drying functions**		
<b>Synthetics ***</b>	Temperature (°C)	* (cold water), 30°, 40°, <b>60°*</b>
	Max. laundry capacity for washing/drying (kg)	3.5 / 3.5
	Spinning (rpm)	∅ (Without spinning), 400, 600, <b>800*</b>
	Type of laundry / description	Synthetics and textiles from synthetic blends.
	Additional washing functions**	
	Additional drying functions**	



	<b>Extra</b>	
<b>Cotton Dry***</b>	Temperature (°C)	-
	Max. laundry capacity for drying (kg)	6.0
	Spinning (rpm)	-
	Type of laundry / description	Cotton laundry marked as suitable for drying in a dryer.
	Additional washing functions**	 E C O T I M E
	Additional drying functions**	
<b>Gentle Dry ***</b>	Temperature (°C)	-
	Max. laundry capacity for drying (kg)	3.5
	Spinning (rpm)	-
	Type of laundry / description	Cotton laundry marked as suitable for drying in a dryer.
	Additional washing functions**	 E C O T I M E
	Additional drying functions**	
<b>Rinse ***</b>	Temperature (°C)	-
	Max. laundry capacity for washing/drying (kg)	9.0 / 6.0
	Spinning (rpm)	∅ (without spinning), 400, 600, 800, 1000, 1200, <b>1400*</b>
	Type of laundry / description	If you wish to rinse laundry that has already been washed once more, you can use this program for any type of laundry.
	Additional washing functions**	  E C O T I M E
	Additional drying functions**	
<b>Spin ***</b>	Temperature (°C)	-
	Max. laundry capacity for washing/drying (kg)	9.0 / 6.0
	Spinning (rpm)	400, 600, 800, 1000, 1200, <b>1400*</b>
	Type of laundry / description	When you need to spin laundry after a program has finished.
	Additional washing functions**	 E C O T I M E
	Additional drying functions**	

<b>Drain ***</b>	Temperature (°C)	-
	Max. laundry capacity for washing/drying (kg)	-
	Spinning (rpm)	-
	Type of laundry / description	When you need to drain water out of the drum.
	Additional washing functions**	E C O T I M E
	Additional drying functions**	
<b>Cleaning of the drum***</b>	Temperature (°C)	-
	Max. laundry capacity for washing/drying (kg)	-
	Spinning (rpm)	-
	Type of laundry / description	This is a program for cleaning the drum. It must be used without any laundry inside.
	Additional washing functions**	E C O T I M E
	Additional drying functions**	

<b>Super Rapid 12 minutes</b>	
Temperature (°C)	* (cold water), <b>30°*</b>
* Max. laundry capacity for washing/drying (kg)	2.0/2.0
Spinning (rpm)	☞ (Without spinning), 400, 600, <b>800*</b>
Type of laundry / description	Slightly soiled laundry, cotton, coloured and linen textiles, 12-minute wash. <b>Note:</b> Because this is a short cycle, use less washing detergent than is used for the other programs. The duration of the program will be extended if the washing machine detects an unstable load.
Additional washing functions**	
Additional drying functions**	
<b>Daily rapid 60° 60'</b>	
Temperature (°C)	* (cold water), 30°, 40°, <b>60°*</b>
* Max. laundry capacity for washing/drying (kg)	4.0/4.0
Spinning (rpm)	☞ (without spinning), 400, 600, 800, 1000, 1200, <b>1400*</b>
Type of laundry / description	Soiled coloured cotton and linen laundry
Additional washing functions**	
Additional drying functions**	
<b>Refresh</b>	
Temperature (°C)	-
Max. dry laundry capacity (kg)	1.0
Spinning (rpm)	-
Type of laundry / description	Laundry that is not dirty but has an unpleasant smell. <b>Note:</b> This is not a washing program. This function merely blows hot air into the laundry, rids it of the unpleasant odour and gives it a fresh smell.
Additional washing functions**	
Additional drying functions**	-
<b>Fast 35 minutes</b>	
Temperature (°C)	* (cold water), <b>30°*</b>
* Max. laundry capacity for washing/drying (kg)	0.5 kg (3 bed sheets) (35 minutes) 1.5 kg (9 bed sheets) (60 minutes)
Spinning (rpm)	<b>800*</b>
Type of laundry / description	Coloured cotton and linen laundry that can be dried in a dryer. <b>Note:</b> The final washing time depends on the laundry load in the drum of the washing machine.
Additional washing functions**	
Additional drying functions**	

	<b>Wash and dry</b>	
<b>Synthetics wash and dry</b>	Temperature (°C)	* (cold water), 30°, 40°, <b>60°*</b>
	Max. laundry capacity for washing (kg)	3.5
	Spinning (rpm)	<b>800*</b>
	Type of laundry / description	Synthetics and textiles from synthetic blends.
	Additional washing functions**	
	Additional drying functions**	
<b>Cotton 60 wash and dry</b>	Temperature (°C)	* (cold water), 30°, 40°, <b>60°*</b>
	Max. laundry capacity for washing (kg)	6.0
	Spinning (rpm)	<b>1400*</b>
	Type of laundry / description	Cotton and linen laundry (underwear, bed linen, table cloths, towels (max. 4.0 kg))
	Additional washing functions**	
	Additional drying functions**	
<b>Cotton 90 wash and dry</b>	Temperature (°C)	* (cold water), 30°, 40°, 60°, <b>90°*</b>
	Max. laundry capacity for washing (kg)	6.0
	Spinning (rpm)	<b>1400*</b>
	Type of laundry / description	Cotton and linen laundry (underwear, bed linen, table cloths, towels (max. 4.0 kg))
	Additional washing functions**	
	Additional drying functions**	

(\*) Factory setting

(\*\*) If you wish to select more than a single additional function, however their compatibility is not guaranteed.

(\*\*\*) This is a subprogram.

Do not dry towels, cotton and linen laundry together with synthetic textiles. Always select the most appropriate drying program.

**NOTE:**

**THE DURATION OF THE PROGRAM MAY DIFFER DEPENDING ON THE LAUNDRY LOAD, WATER, AMBIENT TEMPERATURE AND THE SELECTED ADDITIONAL FUNCTIONS.**

## Selecting a subprogram (Synthetics)





If you select the synthetics laundry program with the program selection dial then two options will appear.

1 - Synthetics

2 - Curtains

- Select the respective program by pressing the symbol button <>.
- Press the button with the symbol → to activate the selected program.

After a program is activated, the display will return to the main screen. You can select other additional functions. To start the program press the Start/Pause button.

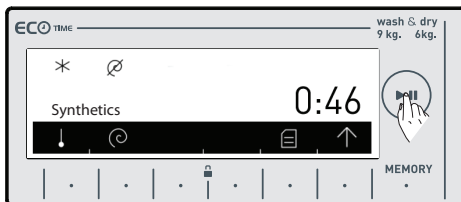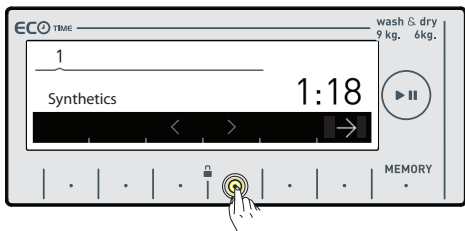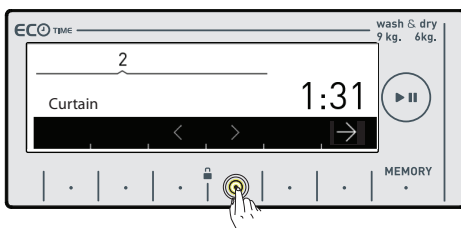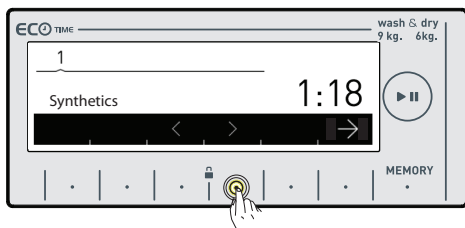



## Selecting a subprogram (fine)





If you select the fine laundry program with the program selection dial then two options will appear.

1 – Wool

2 – Silk

- Press the button with the  symbol to select the appropriate program.
- Press the button with the  symbol to activate the selected program.

After selecting a program, the main menu of the selected program will appear on the display. You can select an additional function on the display and start the washing machine using the Start/Pause button.



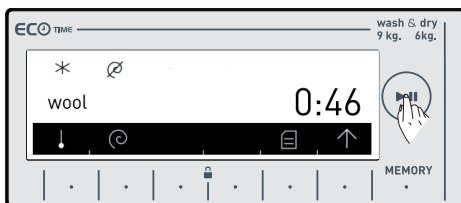
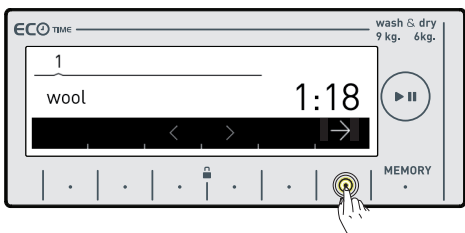
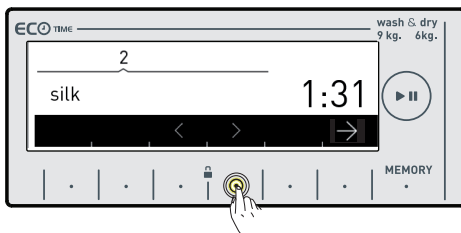
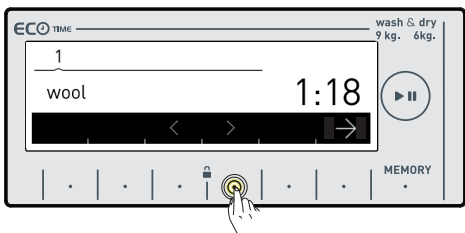




## Selecting a subprogram (Extra)

If you select the Extra program with the program selection dial then 6 options will appear.

1. Cotton Dry
  2. Gentle Dry
  3. Rinse
  4. Spin
  5. Drain
  6. Clean the drum
- Press the button with the <math>\langle \rangle</math> symbol to select the appropriate program.
  - Press the button with the <math>\rightarrow</math> symbol to activate the selected program.
  - After selecting a program, the main menu of the selected program will appear on the display. You can select an additional function on the display and start the washing machine using the Start/Pause button.

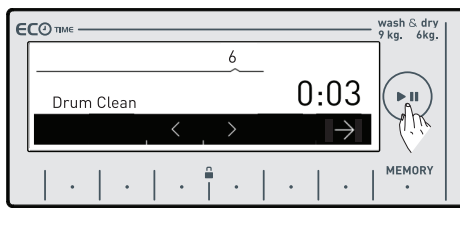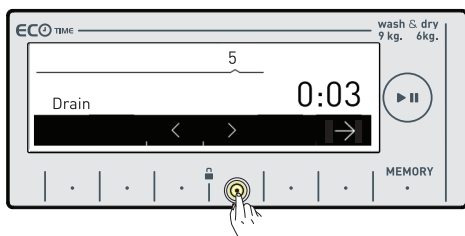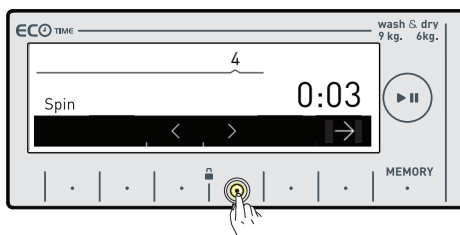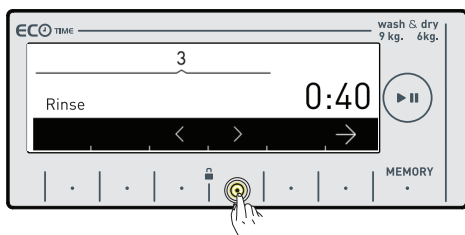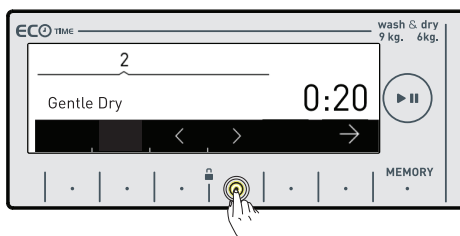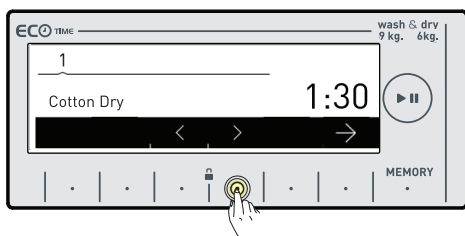

## PART 6: MAINTENANCE AND CLEANING

- Disconnect the washing machine from the power socket.
- Shut off the water inlet.





### Attention!

The washing machine and its components could be damaged if you use agents containing solvents. Do not use washing detergents or fabric softeners containing solvents.

## Water inlet filters

There are filters connected to the hose ends at the tap end and at the end of the inlet valves, which prevent dirt and foreign materials contained in water from entering the washing machine. If the washing machine is not filling up with a sufficient amount of water despite the water inlet being open then clean these filters.

- Disconnect the supply hose.
- Using tweezers take the filters out of the inlet valves and clean them with a brush.
- Using your hand, take out the filters on the supply hoses at the end connected to the tap together with the seals and clean them.
- After cleaning the filters, put them back in the same way.

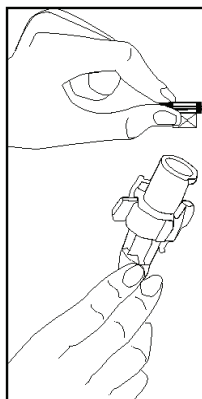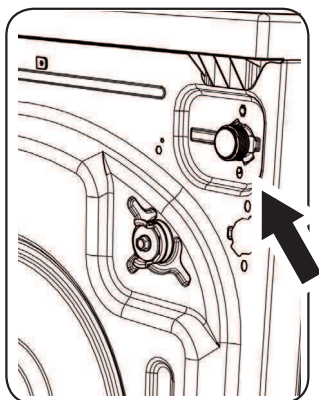

## Pump filter

The pump filtration system extends the life of the pump, which is used for draining dirty water. It ensures that lint from the laundry does not enter the pump. We recommend you clean the pump filter every 2-3 months. Clean the pump filter as follows:

- Open the kick plate cover by pulling on the handle.
- Before opening the filter cover, place a container in front of it, into which the water remaining in the washing machine will flow.
- Loosen the filter cover by turning it anticlockwise and drain the water.
- Remove all foreign material from the filter.
- Check by hand that the pump rotates









- After cleaning the pump, return the filter by turning it clockwise.
- Reattach the kick plate cover.
- Don't forget that if you do not attach it correctly, water will leak from your washing machine.



**WARNING!**

***Danger of scalding!***






***Because the water in the pump may be very hot, wait until it has cooled down.***

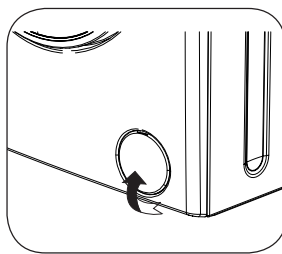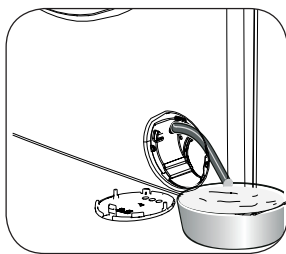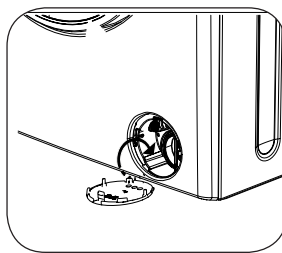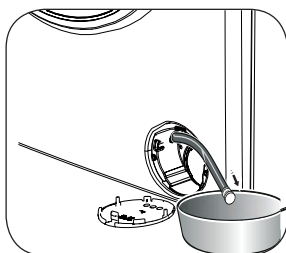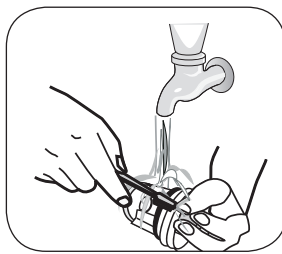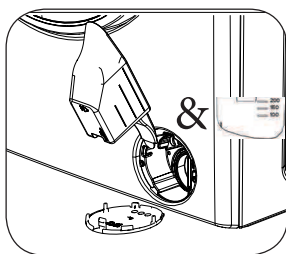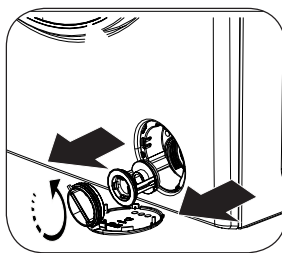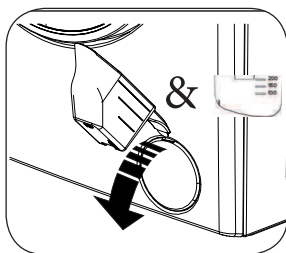

## Washing detergent drawer

Over time washing detergent deposits may accumulate in the drawer and in the washing machine opening. Therefore, the washing detergent drawer needs to be regularly cleaned from accumulated deposits. Take the drawer out as follows:

- Pull the drawer out completely.
- Fully press down the lid of the siphon inside the drawer and pull the drawer until you pull it out.
- Wash using water and a brush.
- Remove the deposits accumulated inside the drawer opening without them being allowed to enter the washing machine.
- Once the drawer is dry, insert it back into the washing machine in the reverse sequence here described.

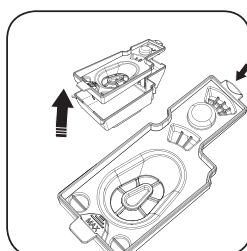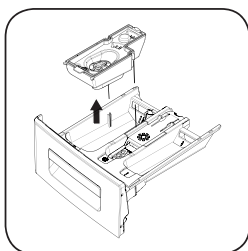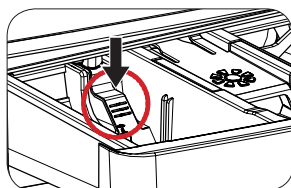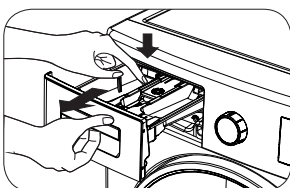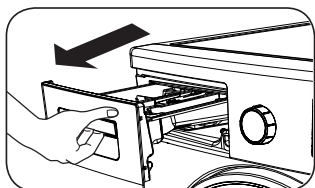

## Siphon plug

Take out the washing detergent drawer. Pull out the siphon plug and thoroughly clean off fabric softener residue. Reinsert the cleaned siphon plug in its place. Check that it is properly inserted.

Siphon plug

## Washing machine cabinet

Clean the washing machine from the outside using lukewarm water and a gentle cleaning agent, which will not damage the surface coat of the washing machine cabinet. After rinsing with clean water, wipe the washing machine with a soft and dry wiping cloth.



### **WARNING!**

***If you have installed the washing machine in a place where the ambient temperature falls below 0°C and you will not be using it, take the following measures:***

## Drum

Do not leave any metal items such as pins, paper clips or coins inside the washing machine. These items can cause rusty stains on the drum. If you wish to remove these stains, use a cleaning agent not containing chlorine and follow the instructions of the cleaning agent's manufacturer. Never use steel wool used for dishes or any other similar abrasive items to clean the rusty stains.

## Removal of scale deposits from the washing machine

We recommend the use of a commonly available scale remover and to follow the instructions printed on the packaging.



**WARNING!**

***Scale removal mixes contain acids and may cause discolouration of your laundry and may have a negative effect on your washing machine.***

## PART 7: PRACTICAL INFORMATION



**Alcoholic beverages:** First prewash the stain in cold water, then apply glycerine and water and rinse in a solution of water and vinegar.



**Shoe polish:** First lightly scrub the stain without damaging the fabric using a washing detergent and then rinse. If the stain does not go away, apply a solution of one part pure alcohol (96 percent) and two parts water and subsequently wash in lukewarm water.



**Tea and coffee:** Stretch the part of the laundry with the stain over the top of a pot and rinse with water that is as hot as the fabric will handle. If it is appropriate for your laundry, wash the stain in bleaching lye.



**Chocolate and cocoa:** Leave your laundry in cold water and scrub with soap or washing detergent, then wash in water that is as hot as the fabric will handle. If an oily stain remains on your laundry, wash in hydrogen peroxide (concentration 3%).



**Ketchup:** After scratching away dried residues without damaging the laundry, leave to soak for about 30 minutes in cold water and wash with a washing detergent.



**Bouillon, eggs:** Remove dried residues and wipe with a sponge or a soft wiping cloth dipped in cold water. Apply washing detergent and wash in diluted lye.



**Greasy and oily stains:** First wipe away any residues. Apply washing powder to the stain and then wash in lukewarm water soapy water.



**Mustard:** First apply glycerine to the stain. Apply washing powder and then wash. If the stain does not disappear, apply alcohol to the stain (for synthetics and coloured laundry use a solution of 1 part alcohol and 2 parts water)



**Blood:** Leave your laundry to soak in cold water for 30 minutes. If the stain does not disappear, dip into a solution of water and ammonia (3 spoons of ammonia per 4 litres of water) for about 30 minutes.



**Cream, ice cream and milk:** Leave your laundry in cold water and apply washing detergent to the stain. If the stain does not disappear, apply lye to it in the correct concentration for the given type of fabric (do not use lye on coloured laundry).



**Soil:** Remove soil stains as soon as possible. Wash in washing detergent and if it does not disappear, apply oxygenated water (concentration 3%).



**Ink:** Dip the stain in cold water and wait until the ink dissolves in the water. Then apply water with lemon juice a washing detergent to the stain, wait about 5 minutes and then wash.



**Fruit:** Stretch the part of the laundry with the stain over the top of a pot and pour cold water on it. Pour hot water on to the stain. Apply cold water and glycerine. Wait 1-2 hours and sprinkle with white vinegar, then rinse.



**Grass stains:** Apply washing detergent to the stain. If it is appropriate for this type laundry, wash the stain in lye. To woollen clothing apply alcohol. (For coloured clothing use a solution of 1 part pure alcohol and 2 parts water).



**Oil paints:** You should remove the stains before they dry using a solvent. Then apply a washing detergent and wash.





**Scorch stains:** If your laundry will allow it, you can put lye into the washing water. For woollen laundry you should cover the stain with a wiping cloth dipped in oxygenated water, place a dry wiping cloth over this and iron over the stain. After rinsing you should thoroughly wash the laundry.

## PART 8: PREVENTION OF MINOR MALFUNCTIONS

All necessary repairs of the washing machine should be performed by an authorised service centre. If it is necessary to repair your washing machine or you are unable to remedy the malfunction using the information below:

- Disconnect the washing machine from the power socket.
- Shut off the water inlet.
- Contact the nearest authorised service.

MALFUNCTION	POSSIBLE CAUSE	REMEDY
Your washing machine is not working.	It is not connected to a power socket.	Connect the power plug to the power socket.
	The fuse has burnt out.	Replace the fuse.
	A power outage occurred.	Check whether the electricity is working.
	You didn't press the Start/pause button.	Press the Start/pause button.
	The program selection dial is in the STOP position (off).	Turn the program selection dial to the desired position.
Your washing machine is not filling up with water.	The washing machine door is not properly shut.	Close the door properly. You should hear it click in.
	The water inlet is shut off.	Open the water inlet.
	The supply hose may be bent.	Check the supply hose.
	The supply hose is clogged.	Clean the supply hose filters. (*)
	The inlet valve filter is clogged.	Clean the inlet valve filters. (*)
Your washing machine is not draining water.	The washing machine door is not properly shut.	Close the door properly. You should hear it click in.
	The drain hose is clogged or bent.	Check the drain hose.
The washing machine is vibrating.	The pump filter is clogged.	Clean out the pump filter. (**)
	The washing machine is not levelled.	Level the washing machine. (***)
	You didn't remove the transporting screws.	Remove the transporting screws. (****)
	There is a small laundry load in the drum.	This will not damage the washing machine in any way.
	The washing machine is overloaded or the laundry is arranged unevenly.	Do not insert more laundry than the recommended load and check that the laundry is evenly arranged inside the washing machine.
There is an excessive amount of foam in the drawer for washing detergent.	The washing machine is leaning against a hard surface.	Avoid installing the washing machine leaning on a hard surface. When installing the washing machine, leave a free space of 2 cm between it and the wall or hard place.
	You have used enough washing detergent.	Press the Start/Pause button. You can prevent foam from forming by pouring a mixture of half a spoon of fabric softener and half a litre of water into the washing detergent drawer. Press the Start/Pause button again after 5-10 minutes. When you wash again, use the correct amount of washing detergent.
	Unsuitable washing detergent.	Only use washing detergents specially made for automatic washing machines.

Unsatisfactory wash result.	The degree to which your laundry is soiled does not correspond to the program you selected.	Select a program appropriate for the given degree to which your laundry is soiled. (More information in the program chart.)
	Insufficient amount of washing detergent.	Use an amount of washing detergent that corresponds to the level of soiling.
	You exceeded the maximum recommended laundry load in the drum.	The laundry load in the washing machine should not exceed the maximum capacity of the washing machine.
The water is drained out of the washing machine immediately after it has been filled.	The end of the drain hose is too low relative to the washing machine.	Locate the drain hose at an appropriate height. (*****)
No water can be seen in the drum during the wash.	This is not a malfunction. Water is in a part of the drum that is not visible.	
There are washing detergent residues on the laundry.	Residues of the washing detergent in the form of white stains may appear on the laundry.	Set your washing machine to start the addition rinse program or remove the stains using a brush after the laundry has dried.
There are washing detergent residues on the laundry.	These stains may be caused by oil, a cream or a lotion.	During the next wash use the maximum amount of washing detergent set by its manufacturer.
Spinning does not take place or it occurs with a delay.	This is not a malfunction. The uneven contents testing system was activated.	The uneven contents testing system may be trying to evenly arrange the laundry in the drum. The spinning process will commence as soon as the laundry is arranged evenly. Next time you wash, arrange the laundry evenly inside the drum.
The laundry load detection system is not activated when laundry is being placed in the drum of the washing machine.	You have not selected a washing or drying program.	Take the laundry out of the drum of the washing machine. Turn the program selection dial to the STOP position and select a program. Put the laundry back in to the drum of the washing machine.
 this symbol will appear on the display and the washing machine will not start.	The laundry load is greater than the maximum recommended load for the given washing or drying program.	 Gradually take laundry out until the symbol disappears from the display.
The laundry is still wet after a drying program has finished.	An incorrect drying program was selected. The maximum load suitable for the given program was exceeded.	Select a different drying program for the given laundry load (see information in the program chart).

(\*) See page 40.

(\*\*) See page 40.

(\*\*\*) See page 7.






(\*\*\*\*) See page 6.


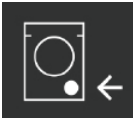




(\*\*\*\*\*) See page 8.



## PART 9: AUTOMATIC MALFUNCTION DETECTION SYSTEM

Your washing machine is equipped with a system, which during the washing process continually monitors the correct progress and in the case of any malfunction takes the necessary remedy measures and will at the same time inform you about the malfunction.

<b>Error codes</b>	 Check the door.
<b>POSSIBLE CAUSE</b>	Open washing machine door.
<b>SOLUTION</b>	Close the washing machine door. If the problem continues, turn off the washing machine disconnect it from the power socket and immediately contact the nearest authorised service centre.
<b>Error codes</b>	 <b>NO WATER SUPPLY</b> Check the water supply. 
<b>POSSIBLE CAUSE</b>	Water outage or low water pressure
<b>SOLUTION</b>	<ul style="list-style-type: none"> <li>- The water supply may be clogged. Check it.</li> <li>- There may be a water outage. Check it.</li> <li>- If it is so, switch the program selection dial to the STOP position. You can select a program and start the washing machine once water supply is renewed.</li> <li>- The water pressure may be low. Check it.</li> <li>- The supply hose may be bent. Check it.</li> <li>- The supply hose may be clogged.</li> <li>- Clean the supply hose filters. (*)</li> </ul> <p>If the problem persists, disconnect the washing machine from the power socket, shut off the water inlet and contact your nearest authorised service centre.</p>
<b>Error codes</b>	 <b>PUMP</b> Disconnect the washing machine from the power socket. 
<b>POSSIBLE CAUSE</b>	The pump is damaged, the pump filter is clogged or the pump electronics are not working.
<b>SOLUTION</b>	Clean out the pump filter (**). If the problem persists, contact your nearest authorised service centre.

<b>Error codes</b>	 <b>FILTER</b> Check the filter.	
<b>POSSIBLE CAUSE</b>	The pump is damaged, the pump filter is clogged or the pump electronics are not working.	
<b>SOLUTION</b>	<ul style="list-style-type: none"> <li>- The pump filter may be clogged.</li> <li>- Clean out the pump filter. (**)</li> <li>- The drain hose may be clogged or bent.</li> <li>- Check the drain hose.</li> <li>- If the problem persists, contact your nearest authorised service centre.</li> </ul>	
<b>Error codes</b>	 <b>WASHING MACHINE OVERFLOWED</b> Shut off the water inlet.	
<b>POSSIBLE CAUSE</b>	There is an excessive amount of water in the washing machine.	
<b>SOLUTION</b>	The washing machine will automatically drain this water. After draining the water, turn off the washing machine and disconnect it from the power socket. Shut off the water inlet and contact your nearest authorised service centre.	
<b>Error codes</b>	 <b>POWER SUPPLY</b> Power supply outage.	
<b>POSSIBLE CAUSE</b>	The power supply is too high or too low.	
<b>SOLUTION</b>	The problem may be in the power supply to the washing machine, check that you have connected the washing machine to a properly grounded power socket. Measure the input voltage in your home. If you have eliminated a power supply defect, disconnect the power cord from the mains socket outlet and contact your nearest authorised service centre.	

(\*) See page 40.

(\*\*) See page 40.

## PART 10: TECHNICAL SPECIFICATIONS

Max. dry laundry capacity (kg)	9.0
* Max. laundry capacity for drying (kg)	6.0
Spinning (rpm)	1400
Number of programs	15
Operating voltage / frequency (V/Hz)	220-240 / 50
Water pressure (MPa)	Max.: 1 Min.: 0.1
Dimensions (hxdxw) (mm)	845 × 597 × 582
*Unwashed dry laundry must not be dried in the washing machine.	

Power consumption (washing, spinning, drying) (kWh/cycle)	6.12
Power consumption (washing, spinning) (kWh/cycle)	0.90
Water consumption (washing, spinning, drying) (litres/cycle)	112
Water consumption (washing, spinning) (litres/cycle)	48

The washing programs conform to norm EN 50229	
<b>Program selected for the washing cycle:</b>	
Program: Cotton Eco, load: 9 kg, temperature: 60°C, spinning: max – 1400 rpm, water: none	
<b>Program selected for drying:</b>	
<b>Drying 1 part:</b>	
Program: Cotton Dry, load: 4.5 kg (1 bed sheet + 16 pillow covers) option: coat hanger dry (👔)	
<b>Drying 2 part:</b>	
Program: Cotton Dry, load: 4.5 kg (2 bed sheets + 2 pillow covers + towels), option: coat hanger dry (👔)	

**NOTE:**

**All the here mentioned data is subject to change.**

Information Sheet

INFORMATION SHEET: Philco

Philco brand: **PHILCO** 

Brand	Philco
Product number	PLD 14961 WD
Washing capacity (kg) - cotton 60°C	9
Drying capacity (kg) - cotton	6
Energy efficiency class (A... low electricity consumption to G high electricity consumption) for washing, spinning, drying per single cycle	A
Annual power consumption (kWh) - washing and drying - cotton 60°C *	1224
Annual power consumption (kWh) - washing - cotton 60°C *	198
Power consumption (kWh) - washing, drying - cotton 60°C/cycle	6-Dec
Power consumption (kWh) - washing - cotton 60°C/cycle	0.9
Water consumption (l) - washing, drying - cotton 60°C/cycle	112
Water consumption (l) - washing - cotton 60°C/cycle	48
Annual water consumption (l) - washing, drying - cotton 60°C *	22 400
Annual water consumption (l) - washing - cotton 60°C *	10 560
Spinning class	B
Maximum rpm (washing)	1400
Standard program duration (min)	595
Noise level dB (re 1pW) ** - washing	58
Noise level dB (re 1pW) ** - spinning	77
Noise level dB (re 1pW) ** - drying	64
Dimensions cm (h x w x d) cm	84.5x59.7x58.2
Weight kg	81

The standard program for washing cotton at 60°C is the standard washing program, to which the information contained on the rating label relates. This program is suitable for washing standard soiled cotton laundry and is the most effective program in terms of the combined water and power consumption.

\* The annual water and power consumption based on 220 standard wash cycles using the program for cotton at 60°C

\*\* Noise level according to European norm EN 60704

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

### **For business entities in the European Union**

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

### **Disposal in other countries outside the European Union**

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

