

WINE COOLER

USER'S MANUAL

PHILCO



Famous for Quality the World Over

PW 15 K

**Dear customer,
thank you for buying a PHILCO brand product. So that your appliance serves you well, please read
all the instructions in this user's manual.**

CONTENTS

PART 1: IMPORTANT SAFETY INSTRUCTIONS	2
PART 2: OVERVIEW	6
PART 3: BEFORE INSTALLING THE APPLIANCE	7
PART 4: INSTALLING THE APPLIANCE	7
PART 5: AMBIENT TEMPERATURE	7
PART 6: MOVING YOUR APPLIANCE.....	7
PART 7: BEFORE FIRST USE	8
PART 8: OPERATION.....	8
PART 9: AUTOMATIC DEFROSTING	9
PART 10: OPERATING NOISES	9
PART 11: TIPS FOR SAVING ENERGY	9
PART 12: CLEANING AND MAINTENANCE	9
PART 13: TROUBLESHOOTING.....	10
PART 14: SPECIFICATIONS	10
PART 15: INFORMATION SHEET.....	11

PART 1: IMPORTANT SAFETY INSTRUCTIONS

ACKNOWLEDGMENT

Thank you for purchasing our product. We hope you enjoy using the many features and benefits it provides. Before using this product please study this entire Instruction Manual carefully. Keep this manual in a safe place for future reference. Ensure that other people using the product are familiar with these instructions as well.

WARNINGS

This appliance is intended to be used in household.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The appliance shall not be exposed to rain.

WARNING

Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

WARNING

Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING

Do not damage the refrigerant circuit.

WARNING

Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. For the details concerning the method of cleaning, please see section “Cleaning and maintenance” on pages 9.

For disposal of the appliance

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources and the flammable insulation blowing gases. And the disposal should only be done through public collection points.

For installation, servicing

Appliance should be placed on a horizontal floor and keep the ventilation freely. Don't try to replace or repair any components by yourself, ask the service agency for help if necessary.

For handling

Always handle the appliance to avoid any damage.

INSTALLATION:

DO NOT INSTALL THIS APPLIANCE IN AREAS THAT ARE TOO HUMID OR TOO COLD, SUCH AS THE OUTBUILDINGS, GARAGES OR WINE CELLARS.

IMPORTANT SAFETY INSTRUCTIONS

- This appliance is intended to be used exclusively for the storage of wine.
- Do not place heavy objects on the top of the appliance.
- Unplug the appliance from the mains socket when not in use or before cleaning.
- Do not stand or support yourself on the base or doors, etc.
- Do not store food in the appliance as the interior temperature may not be cool enough to prevent spoilage.
- Always carry, store and handle the appliance in a vertical position.


Dispose of your old appliance

The appliance contains refrigerant and gases in the insulation.

Refrigerant and blowing gases must be disposed of professionally. Ensure that tubing of the refrigerant circuit is not damaged prior to proper disposal.


PART 2: OVERVIEW

CONTROL PANEL

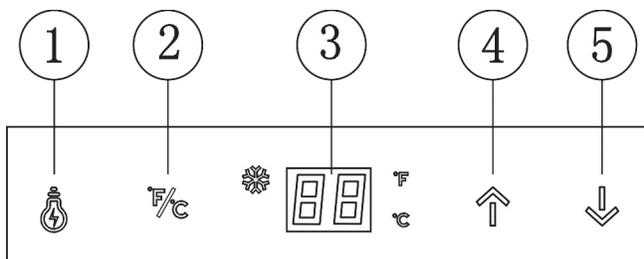

1. Light button ;
2. °C and °F Switch button ;
3. Temperature setting display
4. Temperature setting buttons (+)
5. Temperature setting buttons (-)

Description of the part

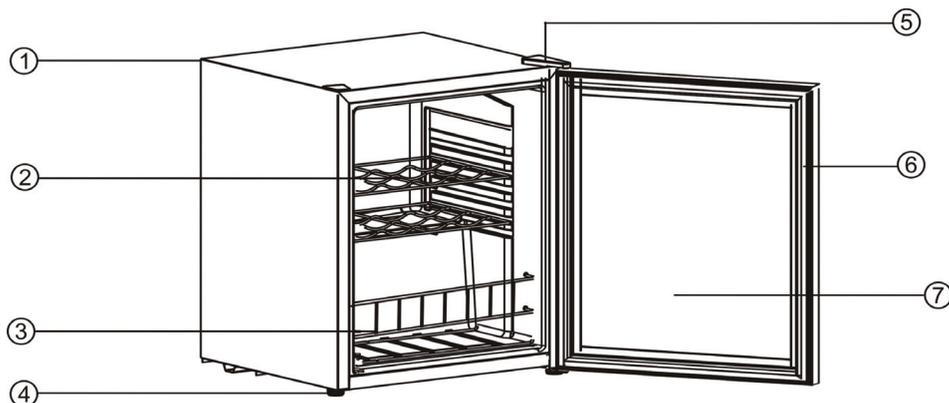

1. Cabinet
2. Chrome shelf
3. Two line bottom wine rack
4. Adjustable feet
5. Door Hinge protector
6. Door gasket
7. Tempered glass door

PART 3: BEFORE INSTALLING THE APPLIANCE

Before connecting your appliance to the power supply, check that the voltage stated on the rating label of your appliance corresponds to the voltage in your home. A different voltage could damage the appliance.

The plug is the only way to unplug the appliance and should therefore be accessible at all times. To turn off main power to the appliance, detach the plug from the outlet. Do not immerse the appliance, the power cord or the plug in water or other liquid.

The appliance must be grounded. The manufacturer is not responsible for damages that may occur as a result of usage without grounding.

PART 4: INSTALLING THE APPLIANCE

This appliance is designed to be free standing only.

Install the appliance in a dry, well ventilated room. The installation location should neither be exposed to direct sunlight nor near a heat source, e.g. a cooker, radiator, etc.

To ensure adequate ventilation for the appliance, allow a minimum of 10 cm of airspace on each side of the cabinet.

For uneven surfaces, front feet can be aligned.

PART 5: AMBIENT TEMPERATURE

This appliance is designed to operate in ambient temperature between 10°C and 32°C. If these temperatures are exceeded, i.e. colder or warmer, the appliance will not operate correctly.

PART 6: MOVING YOUR APPLIANCE

- Make sure that the appliance is unplugged from the mains socket. Remove all bottles and shelves to avoid any shock.
- Always move the appliance vertically.
- After moving, wait for 30 minutes before plugging in the appliance.

Your appliance uses isobutane (R600a) as a refrigerant. Although R600a is an environmentally friendly and natural gas, it is explosive. Therefore you should be careful during shipment and installation to prevent your appliance's cooler elements from being damaged. In the event of a leak caused by damage to the cooler elements, move your appliance from open flame or heat sources and ventilate the room where the appliance is located for a few minutes.

PART 7: BEFORE FIRST USE

- Remove all packaging.
- Clean the inside of the appliance with warm water and a little liquid detergent to remove manufacturing and transportation dust.

PART 8: OPERATION

Ensure that the appliance is placed on a flat and stable surface.

Plug the appliance into the mains socket. The display will show the current actual temperature of the internal cabinet.

Allow the appliance to cool down for 2–3 hours before placing wine bottles in the appliance.

Selecting the temperature

The temperature can be set from 4°C to 18°C. The default factory temperature is set at 12°C.

1. Repeatedly press  /  to select the required temperature.
 - Each time you press  /  the temperature will be increased or decreased by 1°C.
2. The temperature selected will flash on the display for approximately 3 seconds, then the display will return to the current actual temperature of the internal cabinet.
 - The current actual temperature will vary depending on the quantity of bottles stored and how often the door is opened.
 - To view the set temperature, press  / , the set temperature will flash on the display for approximately 3 seconds and then return to the current actual temperature of internal cabinet.
 - The temperature display can be switched between Celsius (°C) and Fahrenheit (°F) by pressing °F/°C. The corresponding indicator light °C or °F will illuminate.

Interior lights

Press  to turn the interior lights on or off.


The interior light will automatically turn off after approximately 10 minutes if you leave the light on.

Tips for storing wine

Store wine in sealed bottles.

Do not overload the appliance. The maximum number of bottles that can be stored is 15, depending on the size of bottles.

To achieve the maximum capacity of the appliance, the bottles should be laid out as shown.

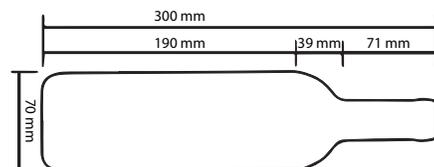

Standard 750ml Bordeaux bottle

PART 9: AUTOMATIC DEFROSTING

Ice build-up on the inner back wall during compressor operation will defrost automatically when the compressor has cycled off.

Defrost water will drain out through the drain outlet into a drain pan from where it will evaporate.

PART 10: OPERATING NOISES

Normal noises

- Motors are running.
- Refrigerant is flowing through the tubing.

PART 11: TIPS FOR SAVING ENERGY

For the most energy efficient use of your appliance:

- Ensure your appliance has adequate ventilation as recommended in the installation instructions.
- Keep door openings to a minimum.
- Open the appliance as briefly as possible.
- Ensure that the door is always closed properly.

PART 12: CLEANING AND MAINTENANCE

- Unplug the appliance from the mains socket before cleaning.
- Remove all bottles and shelves from the appliance.
- Clean the appliance with a soft cloth, warm water and detergent. Clean shelves with a slightly damp cloth. Dry thoroughly.
- Do not use any abrasive or cleaning agents.

The interior LED lights in the appliance cannot be replaced by the user. If the LED lights stop working, please contact the local authorised service agent.

PART 13: TROUBLESHOOTING

If there is a problem with your appliance, please check the following points before contacting customer service.

Problem	Possible Cause	Possible Solution
The appliance is not working.	The appliance is not plugged in the mains socket.	Check that the appliance is properly plugged in the mains socket.
The appliance is noisy during operation.	The appliance is not level.	Adjust the front feet to level the appliance.
The appliance is not cool enough.	Temperature set incorrectly	Check temperature and reset if necessary.
	External environment may require colder temperature.	
	The door is opened too often.	Only open the door when necessary.
	Door seal is worn.	Contact a local authorised service agent.

PART 14: SPECIFICATIONS

Appliance type	Wine Cooler
Rated current	0.5A
Input power	85W
Lamp power	<1W
Insulation blowing gas	Cyclopentane
Class of protection against electric shock	I
Refrigerant/Amount	R600a/18g
Energy consumption	0.30 kWh/24h
Bottle capacity	15

We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.

PART 15: INFORMATION SHEET

INFORMAČNÍ LIST: Philco

Obchodní značka Philco: **PHILCO** 

Brand	Philco
Product number	PW 15 K
Type of appliance ³⁾	2
Energy efficiency class (A+++... low electricity consumption to G high electricity consumption)	A
Electricity consumption per 365 days ¹⁾ kWh	110
Total available volume: l	46
of which: refrigerator part l	46
of which: freezer part l	–
Temperature range	+4 to + 18°C
Internal humidity	62.6 – 74.8 %
Climatic class ²⁾	N,SN
Installation	free standing
Voltage	220-240v/50Hz
Noise level ⁴⁾ dB (re 1pW)	40
Dimensions in mm (h x w x d)	515 x 430 x 480
Weight kg	15

NOTE:

This appliance is designed for the single purpose of storing wine.

¹⁾ Electricity consumption in kWh/year is based on the results of a normalised test carried out over a period of 24 hours. Actual electricity consumption depends on the use and location of the appliance.

²⁾ SN: ambient temperatures from +10 °C to +32 °C

ST: ambient temperatures from +18 °C to +38 °C

N: ambient temperatures from +16 °C to +32 °C

³⁾ 1 = Refrigerator without low temperature areas

2 = Appliance is for storing wine

7 = Refrigerator/freezer with low temperature areas ^{*}(***)

8 = Upright freezer

⁴⁾ Noise level according to European norm EN 60704.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fi nes.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

Czech is the original version.

Manufacturer address: PHILCO, Praha 10, Černokostelecká 2111, CZ-10000; CZECH REPUBLIC