

SIDE-BY-SIDE REFRIGERATOR

OWNER'S MANUAL

PHILCO



Famous for Quality the World Over

PXI 3652 X

PXI 3652 NFDX

Dear customer,
Thank you for buying a PHILCO brand product. So that your appliance serves you well, please read all the instructions in this user's manual.

CONTENTS

1. SAFETY PRECAUTION	7
2. PARTS	8
3. PLACEMENT	9
4. OPERATION CHECK	10
5. CONTROL PANEL	11
OPERATION DESCRIPTION	11
FRIDGE TEMPERATURE SETTING	11
FREEZER TEMPERATURE SETTING	11
6. MODE DESCRIPTION	12
MODE SETTING	12
SMART MODE	12
QUICK COOLING MODE	12
QUICK FREEZE MODE	12
HOLIDAY MODE	12
7. FOOD STORAGE	13
FRESH FOOD STORAGE	13
CONTROL DISPLAY	13
FROZEN FOOD STORAGE	14
8. MAINTENANCE	15
CLEANING	15
WATER PAN CLEANING	15
LEAVING THE UNIT SWITCHED OFF	16
REPLACING THE LED LIGHT	16
9. TROUBLE SHOOTING	17
FAULT DISPLAY	18
10. TECHNICAL DATA	19




 
WARNINGS

- THE APPLIANCE HAS TO BE UNPLUGGED AFTER USE AND BEFORE CARRYING OUT USER MAINTENANCE ON THE APPLIANCE.
- THIS APPLIANCE IS NOT INTENDED FOR USE BY PERSONS(INCLUDING CHILDREN) WITH REDUCED PHYSICAL,SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.
- CHILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THE APPLIANCE.
- IF THE SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY MANUFACTURER, ITS SERVICE AGENT OR SIMILARLY QUALIFIED PERSONS IN ORDER TO AVOID A HAZARD.
- SAVE THESE INSTRUCTIONS AND BE SURE THAT THEY REMAIN WITH THE APPLIANCE IF IT IS MOVED OR SOLD, SO THAT ANYONE, USING IT THROUGHOUT ITS LIFE, WILL BE PROPERLY INFORMED ON USAGE AND SAFETY NOTICES.
- DO NOT USE MECHANICAL DEVICES OR OTHER MEANS TO ACCELERATE THE DEFROSTING PROCESS, OTHER THAN THOSE RECOMMEND BY THE MANUFACTURER.
- DO NOT DAMAGE THE REFRIGERANT CIRCUIT.
- DO NOT USE ELECTRICAL APPLIANCES INSIDE THE FOOD STORAGE COMPARTMENTS OF THE APPLIANCE, UNLESS THEY ARE OF THE TYPE RECOMMENDED BY THE MANUFACTURER.

- PLEASE ABANDON THE REFRIGERATOR ACCORDING TO LOCAL REGULATORS FOR IT USE FLAMMABLE BLOWING GAS.
- KEEP VENTILATION OPENINGS, IN THE APPLIANCE ENCLOSURE OR IN THE BUILT-IN STRUCTURE, CLEAR OF OBSTRUCTION.
- DO NOT STORE EXPLOSIVE SUBSTANCES SUCH AS AEROSOL CANS WITH A FLAMMABLE PROPELLANT IN THIS APPLIANCE.
- THIS APPLIANCE IS INTENDED TO BE USED IN HOUSEHOLD AND SIMILAR APPLICATIONS SUCH AS
 - STAFF KITCHEN AREAS IN SHOPS, OFFICES AND OTHER WORKING ENVIRONMENTS;
 - FARM HOUSES AND BY CLIENTS IN HOTELS, MOTELS AND OTHER RESIDENTIAL TYPE ENVIRONMENTS;
 - BED AND BREAKFAST TYPE ENVIRONMENTS;
 - CATERING AND SIMILAR NON-RETAIL APPLICATIONS.
- THIS APPLIANCE IS INTENDED TO BE USED IN HOUSEHOLD AND SIMILAR APPLICATIONS SUCH AS STAFF KITCH AREAS IN SHOP, OFFICES AND OTHER WORKING ENVIRONMENTS; FARM HOUSES AND BY CLIENTS IN HOTELS, MOTELS AND OTHER RESIDENTIAL ENVIRONMENTS; BED AND BREAKFAST TYPE ENVIRONMENTS; CATERING AND SIMILAR NON-RETAIL APPLICATIONS.
- IF THE SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY THE MANUFACTURER, ITS SERVICE AGENT OR SIMILARLY QUALIFIED PERSONS IN ORDER TO AVOID A HAZARD.
- DO NOT STORE EXPLOSIVE SUBSTANCES SUCH AS AEROSOL CANS WITH A FLAMMABLE PROPELLANT IN THIS APPLIANCE.

- THE APPLIANCE HAS TO BE UNPLUGGED AFTER USE AND BEFORE CARRYING OUT USER MAINTENANCE ON THE APPLIANCE.
- **WARNING:** KEEP VENTILATION OPEN, IN THE APPLIANCE ENCLOSURE OR IN THE BUILT-IN STRUCTURE, CLEAR OF OBSTRUCTION.
- **WARNING:** DO NOT USE MECHANICAL DEVICES OR OTHER MEANS TO ACCELERATE THE DEFROSTING PROCESS, OTHER THAN THOSE RECOMMENDED BY THE MANUFACTURER.
- **WARNING:** DO NOT DAMAGE THE REFRIGERATOR CIRCUIT.
- **WARNING:** DO NOT USE ELECTRICAL APPLIANCES INSIDE THE FOOD STORAGE COMPARTMENTS OF THE APPLIANCE, UNLESS THEY ARE OF THE TYPE RECOMMENDED BY THE MANUFACTURER.
- **WARNING:** PLEASE ABANDON THE REFRIGERATOR ACCORDING TO LOCAL REGULATIONS BECAUSE IT USES FLAMMABLE BLOWING GAS AND REFRIGERATOR.
- **WARNING:** WHEN POSITIONING THE APPLIANCE, ENSURE THE SUPPLY CORD IS NOT TRAPPED OR DAMAGED.
- **WARNING:** DO NOT LOCATE MULTIPLE PORTABLE SOCKET-OUTLETS OR PORTABLE POWER SUPPLIES AT THE REAR OF THE APPLIANCE.
- DO NOT USE EXTENSION CORD OR UNGROUNDED (TWO PRONG) ADAPTERS.
- **DANGER:** RISK OF CHILD ENTRAPMENT. BEFORE YOU THROW AWAY YOUR OLD REFRIGERATOR OR FREEZER:
 - TAKE OFF THE DOORS.
 - LEAVE THE SHELVES IN PLACE SO THAT CHILDREN MAY NOT EASILY CLIMB INSIDE.

- THE REFRIGERATOR MUST BE DISCONNECTED FROM THE SOURCE OF ELECTRICAL SUPPLY BEFORE ATTEMPTING THE INSTALLATION OF ACCESSORY.
- REFRIGERANT AND CYCLOPENTANE FOAMING MATERIAL USED FOR REFRIGERATOR ARE FLAMMABLE. THEREFORE, WHEN THE REFRIGERATOR IS SCRAPPED, IT SHALL BE KEPT AWAY FROM ANY FIRE SOURCE AND BE RECOVERED BY A SPECIAL RECOVERING COMPANY WITH CORRESPONDING QUALIFICATION OTHER THAN BE DISPOSED BY COMBUSTION, SO AS TO PREVENT DAMAGE TO THE ENVIRONMENT OR ANY OTHER HARM.
- FOR EN STANDARD: THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCE PHYSICAL SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BENN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED.CHILDREN AGED FROM 3TO 8 YEARS ARE ALLOWED TO LOAD AND UNLOAD REFRIGERATING APPLIANCES.
- FOR IEC STANDARD: THIS APPLIANCE IS NOT INTENDED TO BE USED BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL,SENSORY OR MENTAL CAPABILITES, OR LACK OF EXPERIENCE AND KONWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.
- CHILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THE APPLIANCE.

- TO AVOID CONTAMINATION OF FOOD , PLEASE RESPECT THE FOLLOWING INSTRUCTIONS: OPENING THE DOOR FOR LONG PERIODS CAN CAUSE A SIGNIFICANT INCREASE OF THE TEMPERATURE IN THE COMPARTMENTS OF THE APPLIANCE.
 - CLEAN REGULARLY SURFACES THAT CAN COME IN CONTACT WITH FOOD AND ACCESSIBLE DRAINAGE SYSTEMS.
 - CLEAN WATER TANKS IF THEY HAVE NOT BEEN USED FOR 48 H; FLUSH THE WATER SYSTEM CONNECTED TO A WATER SUPPLY IF WATER HAS NOT BEEN DRAWN FOR 5 DAYS.
 - STORE RAW MEAT AND FISH IN SUITABLE CONTAINERS IN THE REFRIGERATOR, SO THAT IT IS NOT IN CONTACT WITH OR DRIP ONTO OTHER FOOD.
 - TWO-STAR  FROZEN-FOOD COMPARTMENTS ARE SUITABLE FOR STORING PRE-FROZEN FOOD, STORING OR MAKING ICE CREAM AND MAKING ICE CUBES.
 - ONE- , TWO-  AND THREE-STAR  COMPARTMENTS ARE NOT SUITABLE FOR THE FREEZING OF FRESH FOOD.
 - IF THE REFRIGERATING APPLIANCE IS LEFT EMPTY FOR LONG PERIODS, SWITCH OFF, DEFROST, CLEAN, DRY, AND LEAVE THE DOOR OPEN TO PREVENT MOULD DEVELOPING WITHIN THE APPLIANCE.




WARNING: RISK OF FIRE / FLAMMABLE MATERIALS


1. SAFETY PRECAUTION

PLEASE ALWAYS FOLLOW THE SAFETY HINT LISTED BELOW:

The power supply for the unit should be exactly the same as described on the data sheet, and use the standard tri-prong socket.

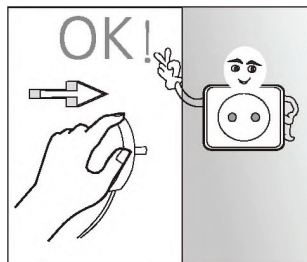

The unit should be operated in the absence of flammable or explosive fumes. It is prohibited to put the flammable, acid or volatile goods in cabinet.

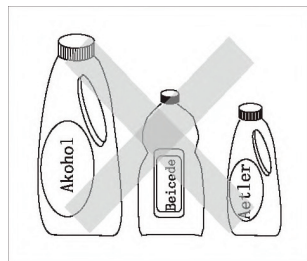

Please unplug the unit first when you replace the light bulb or repair the refrigerator.



Please unplug the unit immediately if you find any abnormal smell or smoke, and contact your local service center.



Hanging or sitting on the door is very dangerous, it may overturn the unit and subvert the goods in (or on) the refrigerator.


2. PARTS

Due to the production's improvement, the unit you purchased maybe different from below sketch.



- ❶ Shelf
- ❷ Crisper
- ❸ Freezer Shelf
- ❹ Refrigerator Door Rack
- ❺ Bottle Rack
- ❻ Adjustable Feet


3. PLACEMENT

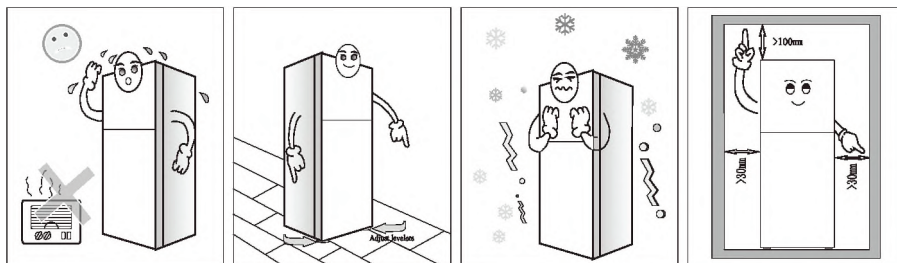


- ① The unit should be placed in a ventilated and dry environment. Do not put the unit in direct sunshine, and keep it as far as possible from heat sources.
- ② The unit should be placed on flat and steady ground. Keep the unit level by adjusting the front leg levelers.
- ③ Don't put the unit in cold area.
- ④ There should be enough spare space around the unit as shown, to allow proper ventilation.

4. OPERATION CHECK


Make sure the unit has been placed properly and all instructions have been observed.

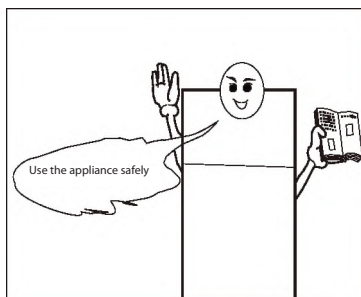

Plug in the unit. After closing the door for several minutes, both side of cabinet becomes warm.

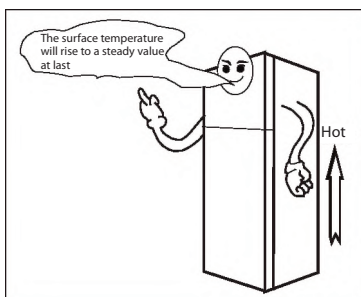

30 minutes later, open the freezer compartment door, feel the cold air, that means the unit works properly. After a period of time the thermostat will switch off & on automatically and set the compartments at the desired temperature.

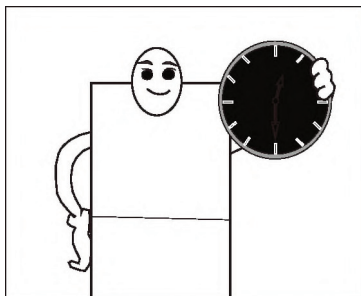

5. CONTROL PANEL

Use your appliance according to the following control regulations, your appliance has the corresponding functions as the control panels showed in the pictures below.



OPERATION DESCRIPTION

Keep long press “unlock” button for 3 seconds, then you can press other buttons for operating.

Touch the “room” button, the current room will flash, and then press the “room” button again, you can choose between the fridge rooms and freezer rooms. If there is no operation for more than 5 S, the default will be confirmed, then the settings take effect.

Touch the “Temperature” button, the temperature of compartment will increase and cycle. Short press “function” button to select the different mode.

FRIDGE TEMPERATURE SETTING

Press the “room” button, select the fridge compartment, indicator flash;

Each time of press “temperature” key, the temperature rise and cycle as 2 → 3 → ... → 8 → OF → 2 → 3 → ... → 8 → OF,

no operation for 5 S, display flash stopped, the settings take effect.

OF means stopping cooling.

FREEZER TEMPERATURE SETTING

Press the “room” button, select the freezer compartment, indicator flash;

Each time of press “temperature” key, the temperature rise and cycle as -25 → ... → -16 → -15 → -25 → . . . → -16 → -15,

no operation for 5 sec, display flash stopped, the settings take effect.

6. MODE DESCRIPTION

MODE SETTING

Press the "function" button, the current mode will flash; you can choose between smart, quick cooling, quick freeze, holiday and other four modes by pressing the "function" button; If there is no operation for more than 5 S, the default will be confirmed, then the settings take effect; when you're setting the temperature, you'll exit this function freeze and the light indicator off.

SMART MODE

The refrigerator will adjust the temperature automatically according to the ambient temperature and the temperature inside the refrigerator, you don't have to choose the temperature by yourself, save your time and effort.

QUICK COOLING MODE

In this mode, the temperature of fridge compartment will reach setted temperature quickly, which will help to keep the food fresh. If you want to put much food in the refrigerator at once, please choose this mode.

QUICK FREEZE MODE

The food will be frozen in a short time. Note: This mode has a duration of 6 hours and a duration of 48 hours for both time modes to be choosed. When entering the quick freeze function normally, it defaults to a 6 hour quick time mode. If you need to enter the 48 hour quick-freezing function you also need to do the following: in the quick-freeze function has been effective, continue to hold the "function" key and "temperature" button for 5 seconds, enter the set frozen time selection, frozen temperature display area display the current freezing time (unit: hours), the remaining icons are not displayed; then press the "temperature" key to set the quick-freezing time, set the order of 48 → 6 → 48 ... → 6 cycles; 5 sec. no key operation after the automatic lock confirmation or press the "unlock" button for 3 seconds, the settings take effect, and return to the normal state. Frozen mode takes effect immediately after you have finished setting, and automatically exits and returns to normal control when the quick freeze time is set.

How to cancel the quick freeze mode:


If you want to end the quick freeze mode after selecting it, press 'Intelligent' button to switch to a new mode; or you can press 'room' button to adjust the temperature inside fridge room and freezer room separately to cancel the quick freeze mode; or you could also wait for the quick freeze function period to end until 6 hours or 48 hours expires, after the quick freeze time that you set up is satisfied, the refrigerator will exit from this mode automatically, and restore normal control.

HOLIDAY MODE

When you and your family intend to go on holiday, and no one at home, you can choose this mode. The fridge and freezer compartment will automatic the appropriate temperature in this mode.

7. FOOD STORAGE


The temperature in the fresh compartment is between 0 ~ 10 °C, although this lower temperature can limit the bacteria propagation, it is not suitable for a long period of food storage.

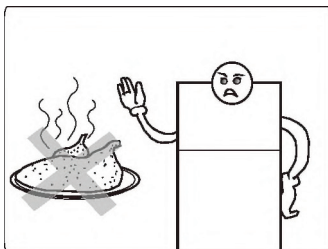

FRESH FOOD STORAGE

Cooked food should be cooled down to room temperature before putting into the refrigerator. It is better to put the food in a sealed bag before placing into the refrigerator.

In order to keep vegetables fresh in the crisper, any water should be removed first, otherwise the vegetables may spoil. If you put the vegetables in the bag, they may be stored for a longer period.

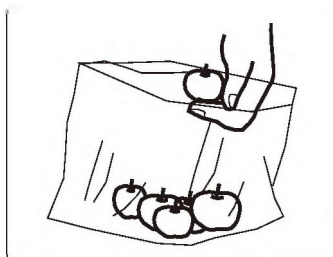

CONTROL


Is used to adjust the temperature of different compartment. User can adjust for desired temperature.

User can adjust the temperature of cooling by TOUCH CONTROL on door. According to the above picture, the contoler is used for controlling temperature of cooling.

FROZEN FOOD STORAGE

The temperature of the freezer is colder than -18°C . It is to store food to be kept for a long period.

After buying frozen food, please put it into the freezer compartment as soon as possible.


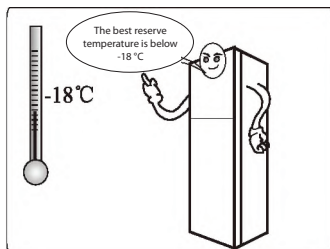


Any hot food must be cooled down to room temperature before it is put into the freezer.

Please don't put glass containers filled with liquid into the freezer compartment as the glass may break.

It is better to presort the foods before putting them into the freezer. Put the same kinds of food together to help to minimize the time to the freezer door opening when you take the food out, and helps to save energy.

The food should be put too close to the outlet or inlet of the airflow. It may affect the air circulation.

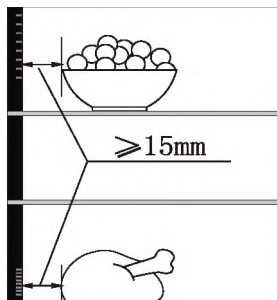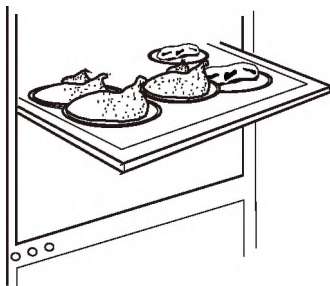

8. MAINTENANCE



CLEANING

Always unplug the unit before cleaning.

The unit should be cleaned frequently both inside and outside using water and a little neutral detergent. Never use boiling water, harsh cleaning agents, acid, alkali or benzene etc.

This product must be serviced by an authorized service center, and only genuine spare parts must be used.

- 1) If the appliance is frost free.
- 2) If the appliance contains freezer compartment.

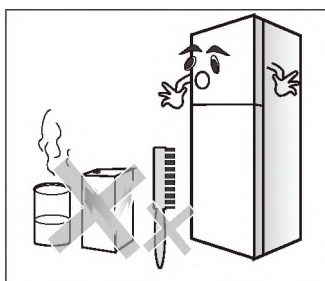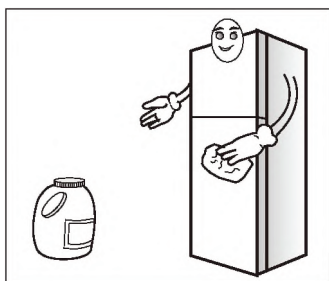


WATER PAN CLEANING

The water pan is located in the back of cabinet. Its function is to collect and evaporate the defrost water. Usually it doesn't need special care, but if you find some water overflow or odd smell, it may need to be checked and cleaned. Pull out the power cord first. Lift the water pan up a little, and then pull it straight out carefully.


Caution: make sure the discharge pipe is not too hot.

After cleaning, refix the water pan into the original position. Make sure that the pipe is on the top of the water pan before you push it into the original.

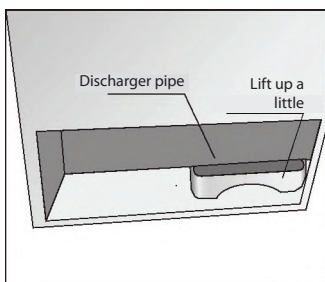

LEAVING THE UNIT SWITCHED OFF

If the unit will be switched off for a long time, the plug should be pulled out, the clean the unit thoroughly. Ensure that the door cannot be fully closed (leaved a suitable gap), and place the unit in a well-ventilated area to avoid any odour.

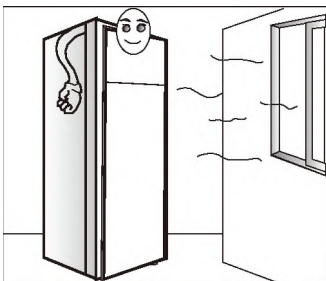

REPLACING THE LED LIGHT

Warning: The LED light must not be replaced by the user!

If the LED light is damaged, contact the customer helping for assistance. To replace the LED light, the below steps can be followed:

1. Unplug your appliance.
2. Remove light cover by pushing up and out.
3. Hold the LED cover with one hand while pressing the connector latch.

9. TROUBLE SHOOTING

If you experience a problem with your appliance or are concerned that the appliance is not functioning correctly, you can carry out some easy checks before calling for service, please see below.

Warning! Don't try to repair the appliance yourself. If the problem persists after you have made the checks mentioned below, contact a qualified electrician, authorized service engineer or the shop where you purchased the product.

PROBLEM	POSSIBLE CAUSE & SOLUTION
Appliance is not working correctly	Check whether the power cord is plugged into the power outlet properly.
	Check the fuse or circuit of your power supply, replace if necessary.
	The ambient temperature is too low. Try setting the chamber temperature to a colder level to solve this problem.
	It is normal that the freezer is not operating during the automatic defrost cycle, or for a short time after the appliance is switched on to protect the compressor.
Odours from the compartments	The interior may need to be cleaned.
	Some food, containers or wrapping cause odours.
Noise from the appliance	The sounds below are quite normal: <ul style="list-style-type: none">• Compressor running noises.• Air movement noise from the small fan motor in the freezer compartment or other compartments.• Gurgling sound similar to water boiling.• Popping noise during automatic defrosting.• Clicking noise before the compressor starts.
	Other unusual noises are due to the reasons below and may need you to check and take action: <ul style="list-style-type: none">• The cabinet is not level.• The back of appliance touches the wall.• Bottles or containers fallen.
The motor runs continuously	It is normal to frequently hear the sound of the motor, it will need to run more when in following circumstances: <ul style="list-style-type: none">• Temperature setting is set colder than necessary• Large quantity of warm food has recently been stored within the appliance.• The temperature outside the appliance is too high.• Doors are kept open too long or too often.• After your installing the appliance or it has been switched off for a long time.

PROBLEM	POSSIBLE CAUSE & SOLUTION
A layer of frost occurs in the compartment	Check that the air outlets are not blocked by food and ensure food is placed within the appliance to allow sufficient ventilation. Ensure that door is fully closed. To remove the frost, please refer to cleaning and care chapter.
Temperature inside is too warm	You may have left the doors open too long or too frequently; or the doors are kept open by some obstacle; or the appliance is located with insufficient clearance at the sides, back and top.
Temperature inside is too cold	Increase the temperature by following the "Display controls" chapter.
Doors cant be closed easily	Check whether the top of the refrigerator is tilted back by 10-15 mm to allow the doors to self close, or if something inside is preventing the doors from closing.
Water drips on the floor	The water pan (located at the rear bottom of the cabinet) may not be properly leveled, or the draining spout (located underneath the top of the compressor depot) may not be properly positioned to direct water into this pan, or the water spout is blocked. You may need to pull the refrigerator away from the wall to check the pan and spout.
The light is not working	<ul style="list-style-type: none"> • The LED light may be damaged. Refer to replace LED lights in cleaning and care chapter. • The control system has disabled the lights due to the door being kept open too long, close and reopens the door to reactivate the lights.

FAULT DISPLAY

Fault display shows as following under Fault mode:

ERROR CODE	ERROR TYPE
UC	Communication failure or model mismatch
RS	Sensor failure (refrigerating chamber)
CS	Sensore failure (Drinks box)
FS	Sensor failure (freezing chamber)
Fd	Defrosting sensor failure
FF	Fan failure
FH	Defrosting failure

10. TECHNICAL DATA

DATA SHEET

DATA SHEET: Philco

Philco trademark: **PHILCO** 

Brand:	Philco
Model identification	PXI 3652 X / PXI 3652 NFDX
Appliance type ³⁾	7
Energy efficiency class (A... low electricity consumption to G... high electricity consumption)	A++
Energy consumption over a 365 day period 1) (kWh)	263
Total usable volume (l)	365
of that: refrigerating section volume (l)	261
of that: freezer section volume (l)	104
Star rating of the freezer section	****
No frost	No frost (refrigerating and freezer section)
Storage time after shutdown (temperature build-up time) [h]	10
Freezing capacity (kg/24 h)	8
Climate class ²⁾	N-T
Voltage	220-240 V / 50 Hz
Noise level ⁴⁾ (dB) (re 1pW)	42
Dimensions (cm) (H x W x D)	184.7 x 75.3 x 68.8
Weight (kg)	82
Built-on appliance	NO
The appliance is suitable for storing wine	NO

- 1) Annual energy consumption in kWh/year is based on the results of a normalized 24 hr. test.
The actual energy consumption depends on usage conditions and location of the appliance.
- 2) SN: ambient temperature from +10 °C to +32 °C
ST: ambient temperature from +18 °C to +38 °C
N: ambient temperature from +16 °C to +32 °C
- 3) 1 = Refrigerator without freezer sections
7 = Refrigerator/freezer with freezer sections *(***)
8 = Upright freezer
- 4) Noise level according to the European standard EN 60704.

ENERGY SAVING TIPS

- The appliance should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of the direct sunlight.
- Let hot foods cool to room temperature before placing in the appliance. Overloading the appliance forces the compressor to run longer. Foods that freeze too slowly may lose quality, or spoil.
- Be sure to wrap foods properly, and wipe containers dry before placing them in the appliance. This cuts down on frost build-up inside the appliance.
- Appliance storage bin should not be lined with aluminum foil, wax paper, or paper toweling. Liners interfere with cold air circulation, making the appliance less efficient.
- Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.

DAILY USE

To avoid contamination of food, please respect the following instructions

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Clean water tanks if they have not been used for 48h; ush the water system connected to a water supply if water has not been drawn for 5 days.
- Store raw meat and sh in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments(if they are presented in the appliance) are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.
- One-, two- and three -star compartments (if they are presented in the appliance) are not suitable for the freezing of fresh food.
- If the appliance is left empty for long periods, switch o, defrost, clean, dry and leave the door open to prevent mount developing within the appliance.

Position different food in different compartments according to below table

Refrigerator compartments	Type of food
Door of balconies of fridge compartments	<ul style="list-style-type: none">• Food with natural preservatives, such as jams, juices, drinks, condiments.• Do not store perishable foods.
Crisper drawer (salad drawer)	<ul style="list-style-type: none">• Fruits, herbs and vegetables should be placed separately in crisper bin.• Do not store bananas, onions, potatoes, garlic in the refrigerator.
Fridge shelf - bottom Chiller (box/drawer)	<ul style="list-style-type: none">• Raw meat, poultry, fish (for short-term storage)
Fridge shelf - middle	<ul style="list-style-type: none">• Dairy products, eggs.
Fridge shelf - top	<ul style="list-style-type: none">• Foods that do not need cooking, such as ready-to-eat foods, deli meats, leftovers.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.



WARNING! DURING USING, SERVICE AND DISPOSAL THE APPLIANCE, PLEASE PAY ATTENTION TO SYMBOL SIMILAR AS LEFT SIDE, WHICH IS LOCATED ON REAR OF APPLIANCE (REAR PANEL OR COMPRESSOR) AND WITH YELLOW OR ORANGE COLOR.



IT'S RISK OF RE WARNING SYMBOL. THERE ARE FLAMMABLE MATERIALS IN REFRIGERANT PIPES AND COMPRESSOR. PLEASE BE FAR AWAY RE SOURCE DURING USING, SERVICE AND DISPOSAL.

Manufacturer/Importer:
Fast ČR, a.s.
Praha 10, Černokostelecká 2111
CZ-10000; CZECH REPUBLIC

PHILCO® 

**is a registered trademark used under license from
Electrolux Home Products., Inc.**