

Microwave oven

User'manual

EN



SENCOR®

SMW 4317SS

Translation of the original manual

Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.

We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	3
READ CAREFULLY AND STORE FOR FUTURE USE.....	3
DESCRIPTION OF THE APPLIANCE	8
BEFORE FIRST USE.....	9
INSTALLATION.....	9
GROUNDING INSTRUCTIONS	9
RADIO WAVE INTERFERENCE.....	10
OPERATING INSTRUCTIONS FOR THE MICROWAVE OVEN	10
GRILL / COMBINATION COOKING	11
USING THE CORRECT KITCHEN COOKWARE	11
THE BASICS OF COOKING IN A MICROWAVE OVEN	13
CLEANING AND MAINTENANCE	13
BEFORE YOU CONTACT AN AUTHORISED SERVICE CENTRE	14
TECHNICAL SPECIFICATIONS	14
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS.....	15
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT	15

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.



Warning:

If the door or the door gasket seal is damaged then the oven must not be used until repaired by an authorised service centre.



Warning:

It is dangerous for any untrained person to carry out any repairs or maintenance whatsoever that leads to the removal of any cover providing protection against microwave energy radiation.



Warning:

Liquids or other food must not be heated in closed containers as they could explode.

Microwave oven

SMW 4317SS

- This appliance is designed for domestic use and similar locations such as:
 - kitchens in stores; offices and other work environments, in agriculture;
 - guests of hotels, motels and other accommodation environments;
 - in bed and breakfast establishments.
- To ensure sufficient air circulation there must be free space left around the microwave oven. Ensure free space of 20 cm above the top surface of the oven, 10 cm from behind and on the sides. Do not block any opening of the oven. Do not remove the feet of the oven.
- Use only containers that are suitable for use in microwave ovens.
- Do not use the kitchen cookware, tableware and utensils listed below in the microwave oven:
 - metal pans and crockery with metal handles or with metal decorations;
 - clamps on plastic bags;
 - dishes with melamine surface treatment;
 - standard thermometers, which are used for measuring the temperature of meat, etc.
- When heating a meal on plastic or paper dishes, frequently check the oven to prevent them from catching on fire.
- The microwave oven is designed for heating food and beverages. Dehydrating food or drying clothes and heating up heating cushions, home footwear, washing sponges, damp textiles and similar items may lead to an injury hazard, ignition or fire.
- If smoke is being created, turn off the appliance or pull the plug out of the power socket and leave the door closed to prevent any potential fire from spreading.

- Microwave heating of drinks may cause a delayed boil, which must be considered when holding the container. Therefore, be careful when handling the container.
- The contents of baby bottles and baby food must be stirred through or shaken up and their temperature must be checked prior to consumption to prevent burns.
- Eggs in their shells and whole hard boiled eggs must not be heated in the microwave oven because they could explode even after the microwave heating process has finished.
- Regularly clean the door and the window of the oven from both sides, the door gasket seal and neighbouring parts and any food remains. For cleaning, we recommend the use of a weak kitchen detergent. Ensure that remains of the cleaning agent do not remain on the inside wall.
- Clean the oven regularly according to the above mentioned instructions and remove any food that remains inside it. Failure to keep the oven clean could lead to surface damage, which could adversely affect the lifetime of the appliance and could lead to a dangerous situation.
- The appliance must not be cleaned using a steam cleaner.
- This microwave oven is intended for use as a free-standing appliance. It is not designed to be installed into a cabinet.
- The microwave oven must not be placed into a cabinet.
- The microwave oven is intended to be placed on a countertop at a maximum height of 900 mm.
- Before connecting the appliance to a power socket, check that the voltage on its rating label matches the electrical voltage in the power socket.
- Connect the appliance only to a properly grounded socket.


- Do not use the microwave oven outdoors or subject it to the effects of the outdoor environment.
- Do not place the microwave oven on window sills, kitchen sink drainboards or unstable surfaces. Always place it on a stable, even and dry surface.
- Never use the microwave oven in the direct vicinity of a bath, shower or swimming pool.
- Do not use the microwave for industrial or laboratory purposes.
- Kitchen dishes may become hot as a result of the heat transferred from the heated food. Sometimes it is necessary to use kitchen gloves.
- Do not attempt to use the microwave oven with the door open. You could expose yourself to the harmful effect of microwaves. Do not run the microwave oven when it is empty.
- Be especially careful when handling heated beverages and foodstuffs as hot steam may be released from them.
- Do not fry food in the microwave oven. Hot oil may damage parts of the oven, dishes or may also cause skin burns.
- Before cooking, prick food that has a thick peel, such as potatoes, pumpkins, apples.
- When not using the oven, do not leave paper materials, kitchen dishes or food inside.
- Keep the inside of the oven clean. If the walls of the oven are splattered with food juices then wipe them away using a damp cloth. If the oven is heavily soiled, you can use a weak solution of a neutral kitchen detergent.
- Do not use the microwave oven if the power cord or power plug is damaged, if it is not working correctly, if it is damaged or if it has been dropped on the floor. Any repair of the microwave oven or replacement of a damaged power cord may only be

carried out by an authorised service centre, as this will prevent a dangerous situation from occurring.

Microwave oven

SMW 4317SS

DESCRIPTION OF THE APPLIANCE

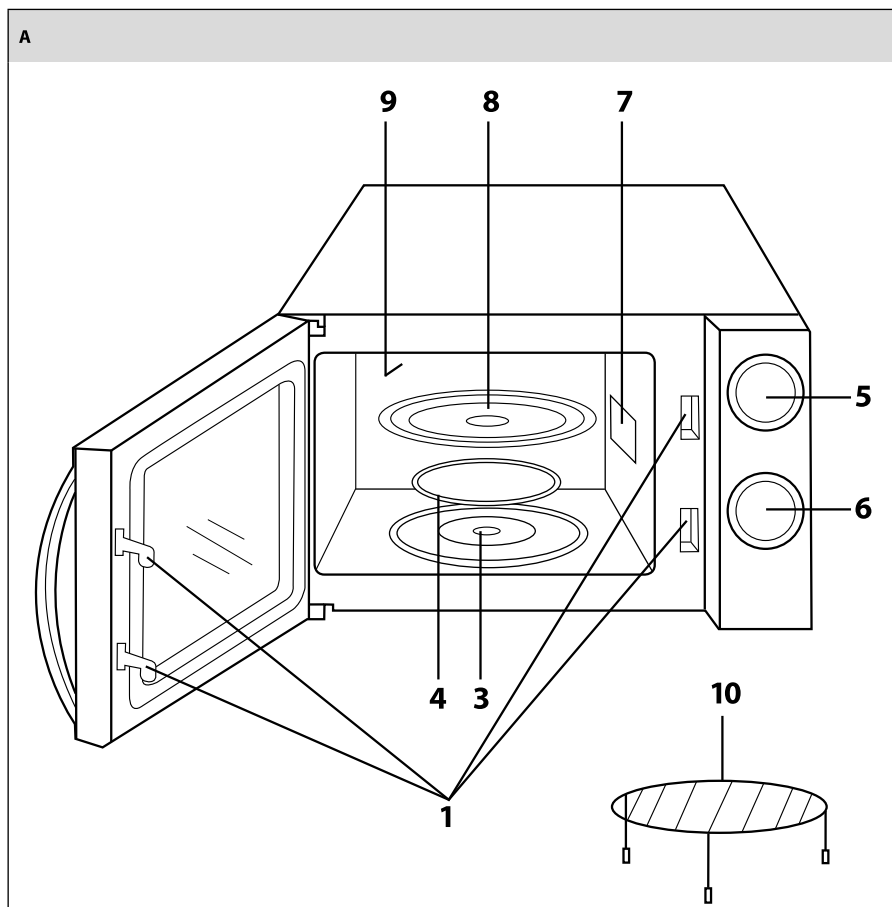

- A1** Safety door closing mechanism
- A2** Door viewing window
- A3** Central swivel connector
- A4** Turning tray holder
- A5** Operating mode setting knob

- A6** Time setting knob
- A7** Magnetron cover
- A8** Turning plate
- A9** Grilling element
- A10** Metal rack

BEFORE FIRST USE

- Before first use, take the appliance and its accessories out of the packaging material and remove all promotional labels and stickers. Check that neither the appliance nor any of its parts is damaged.

INSTALLATION

1. Make sure that you have taken all packaging materials, such as plastic bags, polystyrene, etc. out from inside the oven.



Note:

Do not remove the cover of the magnetron **A7**, which is located on the right side of the inside area of the oven.



Warning:

Check whether the oven is damaged in any way, e.g. whether the oven door is incorrectly attached or dented, whether the door gasket seal is damaged or whether the hinges or locks are loose. If you discover any damage, do not use the oven and contact a qualified service technician.

2. The microwave oven must be placed on an even, stable surface, that can bear its weight even with the food inside.
3. Do not locate the oven near sources of heat, in locations with increased humidity or near flammable materials.
4. This appliance is designed to be used in open space, it is not designed to be built-in. Therefore, ensure sufficient free space around the oven. Leave at least 20 cm of free space above the top of the oven and at least 5 cm around its sides. The rear side of the oven may be positioned against a wall. Do not cover or block the vents. Do not remove the feet of the microwave oven.
5. Do not use the oven without the turning plate **A8** installed.
6. Make sure that the power cord is not underneath the oven or in contact with hot or sharp surfaces.
7. The electrical power socket must be easily accessible in case it is necessary to quickly disconnect the power cord.
8. Do not use the microwave oven outdoors

GROUNDING INSTRUCTIONS

- This microwave oven must be grounded. The microwave oven is equipped with a power cord, which has a grounding wire with a grounded power plug. The power plug must be connected to an electric power socket, which is properly installed and grounded. Grounding reduces the risk of electrical shock. In the case of a short circuit the electric current is conducted through the grounding wire. We recommend that the oven be connected to an independent electrical circuit.



Warning:

An incorrectly grounded power socket may present a danger of electric shock.



Note:

If you have any questions regarding grounding or electrical instructions, consult all such matters with a qualified electrician or repair person.

Neither the manufacturer nor the vendor take any responsibility for whatever damage to the oven or injury resulting from an incorrect electrical connection.

Microwave oven

SMW 4317SS

RADIO WAVE INTERFERENCE

- The operation of the oven may cause interference to a radio, television or similar devices. If you register any interference, perform the following steps to limit or entirely eliminate the interference:
 1. Clean the door and the door gasket seals.
 2. Move the radio or television antenna to a different location.
 3. Point the microwave oven away from the receiver.
 4. Move the microwave oven farther away from the receiver.
 5. Connect the power plug of the microwave oven into a different power socket so that the oven and the receiver have their own separate circuits.

OPERATING INSTRUCTIONS FOR THE MICROWAVE OVEN

1. Install the turning tray holder **A4** and the turning tray **A8** into the microwave oven before first use.



Note:

The tray **A8** must turn freely when the microwave oven is in operation.

2. Connect the power cord plug to a power socket.
3. Place the food you wish to cook into a container suitable for use in a microwave. Open the microwave oven door and place the container with the food on to the turning tray **A8**.
4. Close the oven door and use knob **A5** to select the desired operating mode.

Operating mode	Description / power level of the microwave oven
MIN	Minimum power / 18 %
DEFROST	Defrosting / 36 %
LOW	Low power / 58 %
MEDIUM	Medium power / 81 %
HIGH	High power / 100 %
GRILL	Grill
COMB 1	30 % of the time microwave cooking + grill 70 % of the time
COMB 2	49 % of the time microwave cooking + grill 51 % of the time
COMB 3	67 % of the time microwave cooking + grill 33 % of the time



Attention:

Do not leave the microwave oven in operation without supervision.

5. Use knob **A6** to set the desired operating time. Setting the operating time will automatically start the microwave oven.



Note:

If you need to set an operating time shorter than 2 minutes, turn knob **A6** over "2" and then turn it back to the desired value, e.g. "1".

6. If you wish to check the condition of the food during the cooking process, open the door. The microwave oven will automatically stop. Close the door to complete the cooking process.
7. The microwave oven will turn itself off automatically at the end of the set time. If you wish to end the cooking process earlier, set knob **A6** to 0.
8. Take the container with the food out of the microwave oven.



Note:

Dishes may become hot as a result of the heat transferred from the heated food. In such a case use protective kitchen gloves.

9. Check the temperature of the food before consuming it.

GRILL / COMBINATION COOKING

Grill is suitable for thin pieces of meat, steaks, schnitzels, kebabs, sausages or chicken pieces. This is also suitable for toasting sandwiches and roasting meals.

Combination cooking has 3 cooking modes. Depending on the desired degree of heating (microwave cooking) and degree of crunchiness (grill) of the meal, the following can be selected:

Combi 1: Grill 70 % of the time + microwave cooking 30 % of the time. This function is suitable for preparing fish, potatoes and baked foods.

Combi 2: Grill 49 % of the time + microwave cooking 51 % of the time. This function is suitable for baked potatoes and poultry.

Combi 3: Grill 33 % of the time + microwave cooking 67 % of the time. This function is suitable for making, for example, omelettes.

RACK A10: Place the rack **A10** on the turning plate **A8** with the objective of improving the grilling results, the combination function.



Note:

When the grill function is used for the first time, you may register a small amount of smoke and a slight odour. This is a normal event since the protective layer on the grill heating element is being burnt off. This event will disappear with use.

USING THE CORRECT KITCHEN COOKWARE

1. The ideal type of cookware for cooking in the microwave oven is a transparent container, which permits the penetration of microwaves inside for the heating of food.
2. Metal dishes or bowls with a metal rim should not be used, because microwaves cannot pass through metals.
3. Do not use recycled paper products for cooking in the microwave because they may contain small metal particles.
4. It is better to use circular or oval containers than square or rectangular containers. Food located in the corners has a tendency to overcook.
5. You should use containers suitable for microwave ovens only in accordance with the instructions of the manufacturer.

Microwave oven

SMW 4317SS

This general list will help you select the right dishes.

Kitchen dishes	Safe use	Notes
Special plates for creating a crust	•	Do not use them longer than 8 minutes.
Porcelain and pottery dishes	•	Porcelain, pottery dishes including glazed dishes and bone porcelain are suitable if they do not have metal decorations.
Single use polyester plates	•	Plates are used for the packaging of some frozen foods.
Wrapped ready food • Polystyrene cups	•	May be used to heat foods. Overheating may cause the polystyrene to melt.
• Paper bags or newspapers	x	May catch on fire in the oven.
• Recycled paper or metal edging	x	May cause sparks in the oven.
Glass • Glass cookware	•	May be used if it doesn't have metal decorations.
• Fine glass	•	May be used to heat foods and beverages. Fine glass may crack, if it is suddenly heated to a higher temperature.
• Glass jars	•	Remove the lid. Use only for heating.
Metal dishes		
• Plates	x	May cause sparks in the oven or food to catch on fire.
• Metal bag clips	x	
Paper dishes • Plates, cups, napkins and kitchen paper towels	•	Are appropriate for a short time for heating and cooking, likewise for the absorption of excess moisture.
• Recycled paper	x	May cause sparks in the oven.
Plastic dishes • Dishes	•	Use only heat resistant plastics, other plastics may due to high temperatures lose their shape or colour. Do not use products from melamine.
• Wrapping foils	•	Use to maintain moisture, should not come into contact with food. When removing them be careful of the escaping steam.
• Bags for frozen foods	▲	Only if intended for cooking or resistant against high temperatures. Must not be airtight. If necessary penetrate using a fork.
Waxed paper	•	May be used to maintain moisture in foods and for preventing drops of fat and juices from spraying.

• recommended use; ▲ limited use; x not recommended;

THE BASICS OF COOKING IN A MICROWAVE OVEN

1. Carefully organise the food. Place the larger food pieces on the perimeter of the dish.
2. Place the food on an appropriate dish before putting it into the oven. Do not prepare food directly on the turning plate **A1**.
3. Set the correct cooking time. We recommend that you set a shorter cooking time and extend it if necessary. When cooking foods at high temperatures smoke may be created or a fire may start.
4. Cover the food before cooking. You will prevent juices from splashing around by covering the food.
5. To speed up the cooking of foods, such as chickens or hamburgers, turn them over once during the cooking process. Large pieces of food such as roasts must be turned over at least once.
6. When cooking, organise foods such to hamburgers from the top down and from the centre of the dish to its edge.

CLEANING AND MAINTENANCE

- Before cleaning the oven, always turn it off and disconnect it from the power supply.



Warning:

To prevent the risk of injury by electrical shock, do not submerge the appliance, power cord or power plug in water or any another liquid.

- For cleaning, do not use cleaning products with an abrasive effect, solvents, etc. that could damage the appliance.
- Before first use, wash the turning tray **A8** in a weak solution of kitchen detergent and then rinse thoroughly under running drinking water.
- To prevent damaging the operating components of the oven, make sure that during cleaning, water does not enter the ventilation openings located on the left hand side of the microwave oven.
- From time to time it is necessary to remove the turning tray **A8** and clean it. Clean it in warm soapy water or in a dishwasher.
- The turning tray holder **A4** and the underside of the inside area of the oven should be regularly cleaned to prevent excessive noise. Simply clean out the underside of the inside area of the oven using a weak neutral kitchen detergent solution. You may clean the turning tray holder **A4** in a weak neutral kitchen detergent solution or in a dishwasher. After cleaning it, insert it back into the microwave oven.
- If it becomes necessary to replace the lighting inside the oven, please contact the vendor or an authorised service centre.
- Clean the oven regularly according to the above mentioned instructions and remove any food that remains inside it.
- Failure to keep the oven clean could lead to surface damage, which could adversely affect the lifetime of the appliance and could lead to a dangerous situation.



Warning:

Do not use steam cleaners to clean the microwave oven.

- When cleaning the control knobs, leave the door of the microwave oven open to prevent accidentally turning on the microwave oven while empty. Prevent excessively wetting the control knobs and the area around them.
- If the door fogs up from both the inside and the outside, wipe it using a clean, dry wiping cloth. This is a normal event, especially when preparing food with a high water content.
- To remove unpleasant odours from the inner area of the microwave oven, in a deep container mix one cup of water with the juice and peel of one lemon. Set the operating mode to MEDIUM or HIGH and the operating time to 5 minutes. Then wipe out the inner area of the microwave oven using a clean, dry wiping cloth.

Microwave oven

SMW 4317SS

• Storage

- When not using the microwave oven for an extended period of time, disconnect the power plug from the power socket and clean it according to the instructions provided above.
- Before storing it, check that the appliance and all its accessories are thoroughly clean and dry.
- Store the appliance in a dry, clean and well-ventilated location not exposed to extreme temperatures and out of children's reach.

BEFORE YOU CONTACT AN AUTHORISED SERVICE CENTRE

If the microwave oven is not working:

- check that the oven is properly connected to the power grid. If you are not sure, disconnect the power plug from the power socket, wait 10 seconds and then reconnect it.
- check that a circuit breaker has not disengaged. If the microwave oven is still not working, check on a different device whether the electric power socket is working.
- check that you have set the proper values on the control panel.
- check that the oven door is properly closed. Otherwise, it is not possible to start the set cooking program.



Warning:

If the above mentioned steps do not help, contact an authorised service centre. Do not attempt to modify or repair the microwave oven yourself.

TECHNICAL SPECIFICATIONS

Rated voltage range	230–240 V~
Rated frequency	50 Hz
Rated power input	1,200 W
Microwave power output	700 W
Grill power.....	900 W
Operating frequency	2,450 MHz
Noise level.....	58 dB(A)
Diameter of the turning plate.....	24.5 cm
Volume	17 l
External dimensions.....	26,2 x 45.2 x 35.5 mm
Weight	approx. 11.3 kg

The declared noise emission level of the appliance is 58 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 - pW.

We reserve the right to change text and technical specifications.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

Microwave oven

SMW 4317SS