

REFRIGERATOR

OWNER'S MANUAL

PHILCO



Famous for Quality the World Over

PTB 1931

**Dear customer,
Thank you for buying a PHILCO brand product. So that your appliance serves you well, please read all the instructions in this user's manual.**

CONTENTS

PART 1: SAFETY INFORMATION.....	3
Meaning of safety warning symbols	9
Electricity related warnings	9
Warnings for using.....	11
Warnings for placement	12
Warnings for energy.....	13
Warnings for disposal	13
PART 2: PROPER USE OF REFRIGERATORS	14
Placement	14
Levelling feet	15
Door Right-Left Change.....	16
Changing the Light.....	18
Starting to use	18
PART 3: STRUCTURE AND FUNCTIONS.....	19
Key components.....	19
Refrigerating chamber	19
Functions.....	20
PART 4: MAINTENANCE AND CARE OF THE APPLIANCE	21
Overall cleaning.....	21
Defrosting	21
Out of operation	21
PART 5: TROUBLESHOOTING	22
PART 6: OTHERS INFORMATIONS.....	23
Climate classes	23
Energy Saving Tips.....	24
Daily use	24
PART 7: INFORMATION SHEET.....	25



This appliance has been tested in accordance with the directives in force in the European Union.
This appliance conforms to the relevant safety provisions for electrical appliances in force in the European Union.

Dear customer:

Thank you for buying this refrigerator. To ensure that you get the best results from your new refrigerator, please take time to read through the simple instructions in this booklet.

Please ensure that the packing material is disposed of in accordance with the current environmental requirements.

When disposing of any refrigerator equipment please contact your local waste disposal department for advice on safe disposal.

This appliance must be only used for its intended purpose.

CAUTION:

The appliance is not intended for use by young children or infirm persons without supervision.

Young children should be supervised to ensure that they do not play with the appliance.

PART 1: SAFETY INFORMATION




WARNING: RISK OF FIRE / FLAMMABLE MATERIALS


THIS APPLIANCE IS INTENDED TO BE USED IN HOUSEHOLD AND SIMILAR APPLICATIONS SUCH AS STAFF KITCHEN AREAS IN SHOPS, OFFICES AND OTHER WORKING ENVIRONMENTS; FARM HOUSES AND BY CLIENTS IN HOTELS, MOTELS AND OTHER RESIDENTIAL TYPE ENVIRONMENTS; BED AND BREAKFAST TYPE ENVIRONMENTS; CATERING AND SIMILAR NON-RETAIL APPLICATIONS.

IF THE SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY THE MANUFACTURER, ITS SERVICE AGENT OR SIMILARLY QUALIFIED PERSONS IN ORDER TO AVOID A HAZARD.


DO NOT STORE EXPLOSIVE SUBSTANCES SUCH AS AEROSOL CANS WITH A FLAMMABLE PROPELLANT IN THIS APPLIANCE.


THE APPLIANCE HAS TO BE UNPLUGGED AFTER USE AND BEFORE CARRYING OUT USER MAINTENANCE ON THE APPLIANCE.

 **WARNING!** KEEP VENTILATION OPENINGS, IN THE APPLIANCE ENCLOSURE OR IN THE BUILT-IN STRUCTURE, CLEAR OF OBSTRUCTION.

 **WARNING!** DO NOT USE MECHANICAL DEVICES OR OTHER MEANS TO ACCELERATE THE DEFROSTING PROCESS, OTHER THAN THOSE RECOMMENDED BY THE MANUFACTURER.

 **WARNING!** DO NOT DAMAGE THE REFRIGERANT CIRCUIT.


 **WARNING!** THE COOLING SYSTEM CONTAINS REFRIGERANT UNDER HIGH PRESSURE. DO NOT MANIPULATE WITH THE SYSTEM. THE SYSTEM MAY BE REPAIRED BY AUTHORISED PERSONS ONLY.


 **WARNING!** DO NOT USE ELECTRICAL APPLIANCES INSIDE THE FOOD STORAGE COMPARTMENTS OF THE APPLIANCE, UNLESS THEY ARE OF THE TYPE RECOMMENDED BY THE MANUFACTURER.


 **WARNING!** PLEASE ABANDON THE REFRIGERATOR ACCORDING TO LOCAL REGULATORS FOR IT USE FLAMMABLE BLOWING GAS AND REFRIGERANT.


 **WARNING!** DO NOT PLACE SEVERAL PORTABLE SOCKETS TO THE REAR OF THE APPLIANCE.


 **WARNING!** WHEN POSITIONING THE APPLIANCE, ENSURE THE SUPPLY CORD IS NOT TRAPPED OR DAMAGED.

 **WARNING!** DO NOT LOCATE MULTIPLE PORTABLE SOCKET-OUTLETS OR PORTABLE POWER SUPPLIES AT THE REAR OF THE APPLIANCE.

 **WARNING!** IF THE SUPPLY CABLE GETS DAMAGED, HAVE IT REPLACED BY A SPECIALIZED SERVICE CENTER IN ORDER TO AVOID DANGEROUS SITUATIONS. IT IS PROHIBITED TO USE AN APPLIANCE WITH THE SUPPLY CABLE DAMAGED.

 **WARNING!** DO NOT USE ANY MECHANICAL DEVICES OR MEANS OTHER THAN RECOMMENDED BY THE MANUFACTURER TO SPEED UP THE DEFROSTING PROCESS.

 **WARNING!** DO NOT USE ELECTRIC APPLIANCES IN THE AREA DESIGNED FOR KEEPING FOOD, UNLESS THESE ARE TYPES RECOMMENDED BY THE MANUFACTURER.

 **DANGER!** RISK OF CHILD ENTRAPMENT. BEFORE YOU THROW AWAY YOUR OLD REFRIGERATOR OR FREEZER:

- TAKE OFF THE DOORS.
- LEAVE THE SHELVES IN PLACE SO THAT CHILDREN MAY NOT EASILY CLIMB INSIDE.

REFRIGERANT

REFRIGERANT AND CYCLOPENTANE FOAMING MATERIAL USED FOR THE REFRIGERATOR ARE FLAMMABLE. THEREFORE, WHEN THE REFRIGERATOR IS SCRAPPED IT SHALL BE KEPT AWAY FROM ANY FIRE SOURCE AND BE RECOVERED BY A SPECIAL RECOVERING COMPANY WITH CORRESPONDING QUALIFICATION OTHER THAN BE DISPOSED BY COMBUSTION, SO AS TO PREVENT DAMAGE TO THE ENVIRONMENT OR ANY OTHER HARM.

FOR EN STANDARD: THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCE PHYSICAL SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION. CHILDREN AGED FROM 3 TO 8 YEARS ARE ALLOWED TO LOAD AND UNLOAD REFRIGERATING APPLIANCES.

TO AVOID CONTAMINATION OF FOOD, PLEASE RESPECT THE FOLLOWING INSTRUCTIONS:




- OPENING THE DOOR FOR LONG PERIODS CAN CAUSE A SIGNIFICANT INCREASE OF THE TEMPERATURE IN THE COMPARTMENTS OF THE APPLIANCE.
- CLEAN REGULARLY SURFACES THAT CAN COME IN CONTACT WITH FOOD AND ACCESSIBLE DRAINAGE SYSTEMS.
- CLEAN WATER TANKS IF THEY HAVE NOT BEEN USED FOR 48 H; FLUSH THE WATER SYSTEM CONNECTED TO A WATER SUPPLY IF WATER HAS NOT BEEN DRAWN FOR 5 DAYS. (NOTE 1)
- STORE RAW MEAT AND FISH IN SUITABLE CONTAINERS IN THE REFRIGERATOR, SO THAT IT IS NOT IN CONTACT WITH OR DRIP ONTO OTHER FOOD.
- TWO-STAR ****** FROZEN-FOOD COMPARTMENTS ARE SUITABLE FOR STORING PRE-FROZEN FOOD, STORING OR MAKING ICE-CREAM AND MAKING ICE CUBES. (NOTE 2)
- ONE ***** -, TWO ****** -AND THREE-STAR ******* COMPARTMENTS ARE NOT SUITABLE FOR THE FREEZING OF FRESH FOOD. (NOTE 3)
- IF THE REFRIGERATING APPLIANCE IS LEFT EMPTY FOR LONG PERIODS, SWITCH OFF, DEFROST, CLEAN, DRY, AND LEAVE THE DOOR OPEN TO PREVENT MOULD DEVELOPING WITHIN THE APPLIANCE.

NOTE 1,2,3: PLEASE CONFIRM WHETHER IT IS APPLICABLE ACCORDING TO YOU PRODUCT COMPARTMENT TYPE.

THIS APPLIANCE IS INTENDED TO BE USED IN HOUSEHOLDS AND SIMILAR PREMISES, SUCH AS

 
- KITCHENETTES IN SHOPS, OFFICES AND OTHER WORKPLACES;
- APPLIANCES USED BY GUESTS IN HOTELS, MOTELS, AND OTHER ACCOMMODATION FACILITIES;
- APPLIANCES USED IN BED AND BREAKFAST FACILITIES;
- APPLIANCES USED IN CATERING AND OTHER SIMILAR NON-VENDING ENVIRONMENTS.

Meaning of safety warning symbols


 Prohibition symbol	This is a prohibition symbol. Any incompilance with instructions marked with this symbol may result in damage to the product or endanger the personal safety of the user.
 Warning symbol	This is a warning symbol. It is required to operate in strict observance of instructions marked with this symbol; or otherwise damage to the product or personal injury may be caused.
 Note symbol	This is a cautioning symbol. Instructions marked with this symbol require special caution. Insufficient caution may result in slight or moderate injury, or damage to the product.

This manual contains lots of important safety information (which shall be observed by the users.

ELECTRICITY RELATED WARNINGS

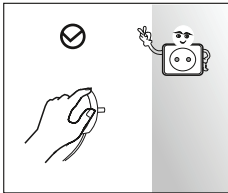

 
- DO NOT PULL THE POWER CORD WHEN PULLING THE POWER PLUG OF THE REFRIGERATOR. PLEASE FIRMLY GRASP THE PLUG AND PULL OUT IT FROM THE SOCKET DIRECTLY.
- TO ENSURE SAFE USE, DO NOT DAMAGE THE POWER CORD OR USE THE POWER CORD WHEN IT IS DAMAGED OR WORN.

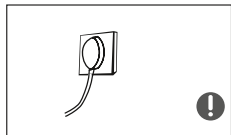

- PLEASE USE A DEDICATED POWER SOCKET AND THE POWER SOCKET SHALL NOT BE SHARED WITH OTHER ELECTRICAL APPLIANCES.
THE POWER PLUG SHOULD BE FIRMLY CONTACTED WITH THE SOCKET OR ELSE FIRES MIGHT BE CAUSED.
- PLEASE ENSURE THAT THE GROUNDING ELECTRODE OF THE POWER SOCKET IS EQUIPPED WITH A RELIABLE GROUNDING LINE.




 - PLEASE TURN OFF THE VALVE OF THE LEAKING GAS AND THEN OPEN THE DOORS AND WINDOWS IN CASE OF LEAKAGE OF GAS AND OTHER FLAMMABLE GASES. DO NOT UNPLUG THE REFRIGERATOR AND OTHER ELECTRICAL APPLIANCES CONSIDERING THAT SPARK MAY CAUSE A FIRE.

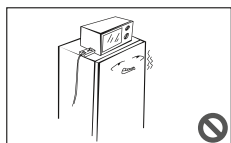


- DO NOT USE ELECTRICAL APPLIANCES ON THE TOP OF THE APPLIANCE, UNLESS THEY ARE OF THE TYPE RECOMMENDED BY THE MANUFACTURER.

 WARNINGS FOR USING

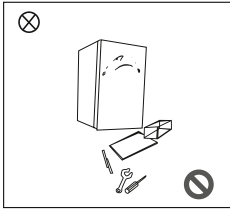

 
- DO NOT ARBITRARILY DISASSEMBLE OR RECONSTRUCT THE REFRIGERATOR, NOR DAMAGE THE REFRIGERANT CIRCUIT; MAINTENANCE OF THE APPLIANCE MUST BE CONDUCTED BY A SPECIALIST.
- DAMAGED POWER CORD MUST BE REPLACED BY THE MANUFACTURER, ITS MAINTENANCE DEPARTMENT OR RELATED PROFESSIONALS IN ORDER TO AVOID DANGER.

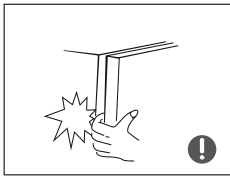

- THE GAPS BETWEEN REFRIGERATOR DOORS AND BETWEEN DOORS AND REFRIGERATOR BODY ARE SMALL, BE NOTED NOT TO PUT YOUR HAND IN THESE AREAS TO PREVENT FROM SQUEEZING THE FINGER. PLEASE BE GENTLE WHEN CLOSE THE REFRIGERATOR DOOR TO AVOID FALLING ARTICLES.
- DO NOT PICK FOODS OR CONTAINERS WITH WET HANDS IN THE FREEZING CHAMBER WHEN THE REFRIGERATOR IS RUNNING, ESPECIALLY METAL CONTAINERS IN ORDER TO AVOID FROSTBITE.




 - DO NOT ALLOW ANY CHILD TO GET INTO OR CLIMB THE REFRIGERATOR; OTHERWISE SUFFOCATION OR FALLING INJURY OF THE CHILD MAY BE CAUSED.

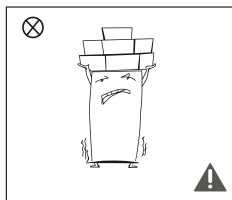


- DO NOT PLACE HEAVY OBJECTS ON THE TOP OF THE REFRIGERATOR CONSIDERING THAT OBJECTIVES MAY FALL WHEN CLOSE OR OPEN THE DOOR, AND ACCIDENTAL INJURIES MIGHT BE CAUSED.
- PLEASE PULL OUT THE PLUG IN CASE OF POWER FAILURE OR CLEANING. DO NOT CONNECT THE REFRIGERATOR TO POWER SUPPLY WITHIN FIVE MINUTES TO PREVENT FROM DAMAGES TO THE COMPRESSOR DUE TO SUCCESSIVE STARTS.

 
WARNINGS FOR PLACEMENT

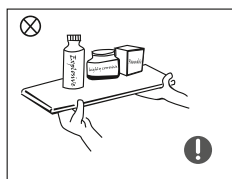

 - DO NOT PUT FLAMMABLE, EXPLOSIVE, VOLATILE AND HIGHLY CORROSIVE ITEMS IN THE REFRIGERATOR TO PREVENT DAMAGES TO THE PRODUCT OR FIRE ACCIDENTS.
- DO NOT PLACE FLAMMABLE ITEMS NEAR THE REFRIGERATOR TO AVOID FIRES.

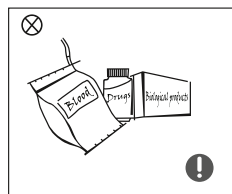

 - THE REFRIGERATOR IS INTENDED FOR HOUSEHOLD USE, SUCH AS STORAGE OF FOODS; IT SHALL NOT BE USED FOR OTHER PURPOSES, SUCH AS STORAGE OF BLOOD, DRUGS OR BIOLOGICAL PRODUCTS, ETC.

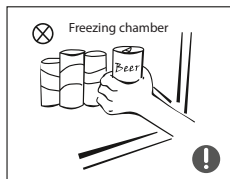

- **DO NOT STORE BEER, BEVERAGE OR OTHER FLUID CONTAINED IN BOTTLES OR ENCLOSED CONTAINERS IN THE FREEZING CHAMBER OF THE REFRIGERATOR; OTHERWISE THE BOTTLES OR ENCLOSED CONTAINERS MAY CRACK DUE TO FREEZING TO CAUSE DAMAGES.**

Warnings for energy

1. Refrigerating appliances might not operate consistently (possibility of defrosting of contents or temperature becoming too warm in the frozen food compartment) when sited for an extended period of time below the cold end of the range of temperatures for which the refrigerating appliance is designed.
2. The fact that effervescent drinks should not be stored in food freezer compartments or cabinets or in low-temperature compartments or cabinets, and that some products such as water ices should not be consumed too cold;
3. The need to not exceed the storage time(s) recommended by the food manufacturers for any kind of food and particularly for commercially quick-frozen food in food-freezer and frozen-food storage compartments or cabinets;
4. The precautions necessary to prevent an undue rise in the temperature of the frozen food while defrosting the refrigerating appliance, such as wrapping the frozen food in several layers of newspaper.
5. The fact that a rise in temperature of the frozen food during manual defrosting, maintenance or cleaning could shorten the storage life.
6. The necessity that, for doors or lids fitted with locks and keys, the keys be kept out of the reach of children and not in the vicinity of the refrigerating appliance, in order to prevent children from being locked inside

Warnings for disposal




REFRIGERANT AND CYCLOPENTANE FOAMING MATERIAL USED FOR THE REFRIGERATOR ARE FLAMMABLE. THEREFORE, WHEN THE REFRIGERATOR IS SCRAPPED, IT SHALL BE KEPT AWAY FROM ANY FIRE SOURCE AND BE RECOVERED BY A SPECIAL RECOVERING COMPANY WITH CORRESPONDING QUALIFICATION OTHER THAN BE DISPOSED BY COMBUSTION, SO AS TO PREVENT DAMAGE TO THE ENVIRONMENT OR ANY OTHER HARM.




WHEN THE REFRIGERATOR IS SCRAPPED, DISASSEMBLE THE DOORS, AND REMOVE GASKET OF DOOR AND SHELVES; PUT THE DOORS AND SHELVES IN A PROPER PLACE, SO AS TO PREVENT TRAPPING OF ANY CHILD.

PART 2: PROPER USE OF REFRIGERATORS

 
Placement

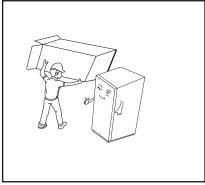

 
- Before use, remove all packing materials, including bottom cushions, foam pads and tapes inside of the refrigerator; tear off the protective film on the doors and the refrigerator body.

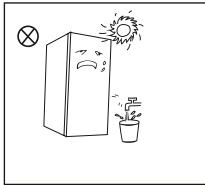

 - Keep away from heat and avoid direct sunlight. Do not place the freezer in moist or watery places to prevent rust or reduction of insulating effect.
- Do not spray or wash the refrigerator; do not put the refrigerator in moist places easy to be splashed with water so as not to affect the electrical insulation properties of the refrigerator.

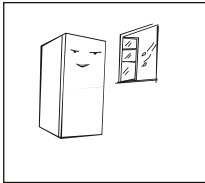

 - The refrigerator is placed in a well-ventilated indoor place; the ground shall be flat, and sturdy (rotate left or right to adjust the wheel for levelling if unstable).

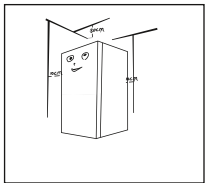

- The top space of the refrigerator shall be greater than 30 cm, and The refrigerator should be placed against a wall with a free distance more than 10 cm to facilitate heat dissipation.




Precautions before installation:

Information in the Instruction Manual is only for reference. The physical product may differ. Before installation and adjusting of accessories, it shall be ensured that the refrigerator is disconnected from power.

Precautions shall be taken to prevent fall of the handle from causing any personal injury.

Levelling feet

Schematic diagram of the levelling feet

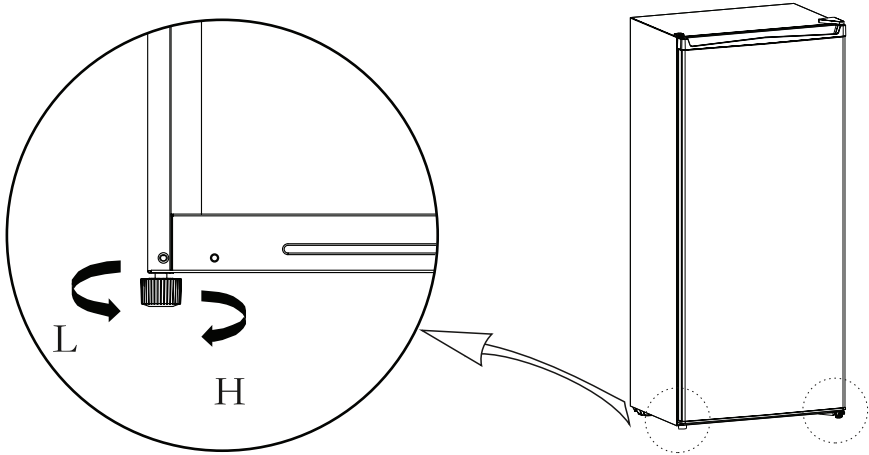 





(The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor)


Adjusting procedures:

 - a. Turn the feet clockwise to raise the refrigerator;
- b. Turn the feet counterclockwise to lower the refrigerator;
- c. Adjust the right and left feet based on the procedures above to a horizontal level.


Door Right-Left Change

List of tools to be provided by the user			
	Cross screwdriver		Putty knife thin-blade screwdriver
	5/16" socket spanner		Masking tape


 
1. Power off the refrigerator, and remove all objects from the door trays.
2. Remove the upper hinge cover .upper hinge and hole cover on the other side.

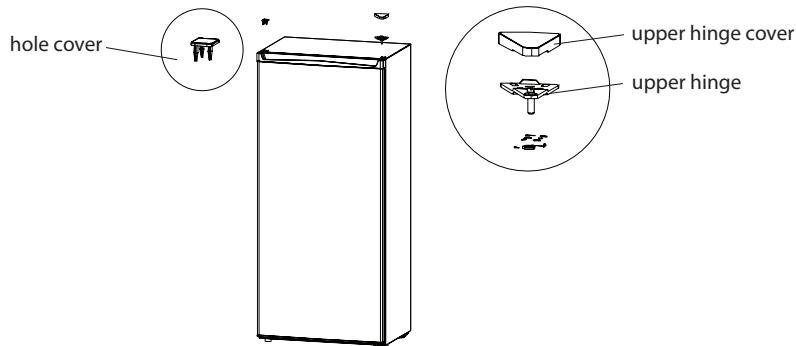

 3. Then remove the door, the bottom hinge, adjusting foot.
4. Install the bottom hinge and adjustable foot on the other side of cabinet; dismantle the door stopper, and install it on the other side of door lower end-cap.

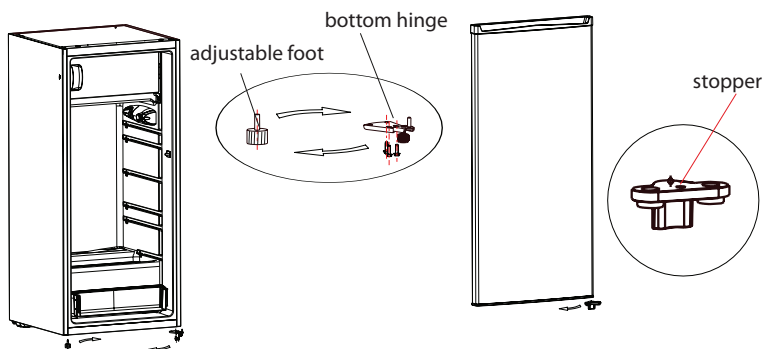

  5. Install the door to the bottom hinge, install the upper hinge, upper hinge cover and hole cover on the other side.

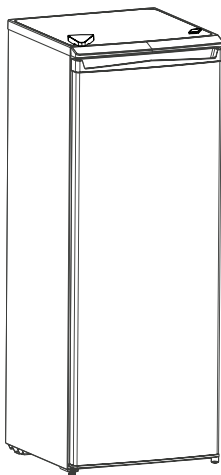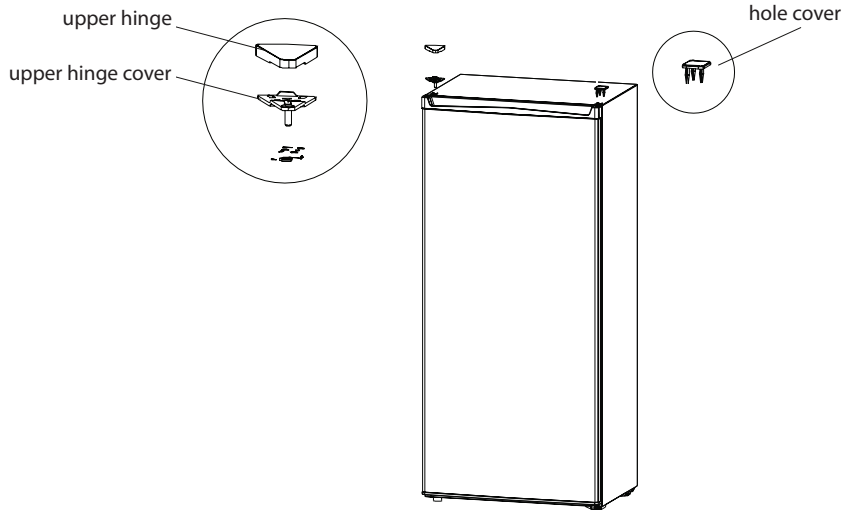


The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor.


Changing the Light

Any replacement or maintenance of the LED lamps is intended to be made by the manufacturer, its service agent or similar qualified person.

 Starting to use

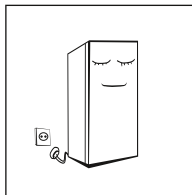

 
- Before initial start, keep the refrigerator still for 2 hours before connecting it to power supply.
- Before putting any fresh or frozen foods, the refrigerator shall have run for 2-3 hours, or for above 4 hours in summer when the ambient temperature is high.

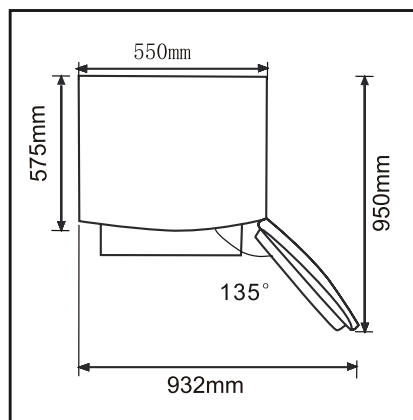

- Spare enough space for convenient opening of the doors and drawers or statement by the distributor.

PART 3: STRUCTURE AND FUNCTIONS

 Key components

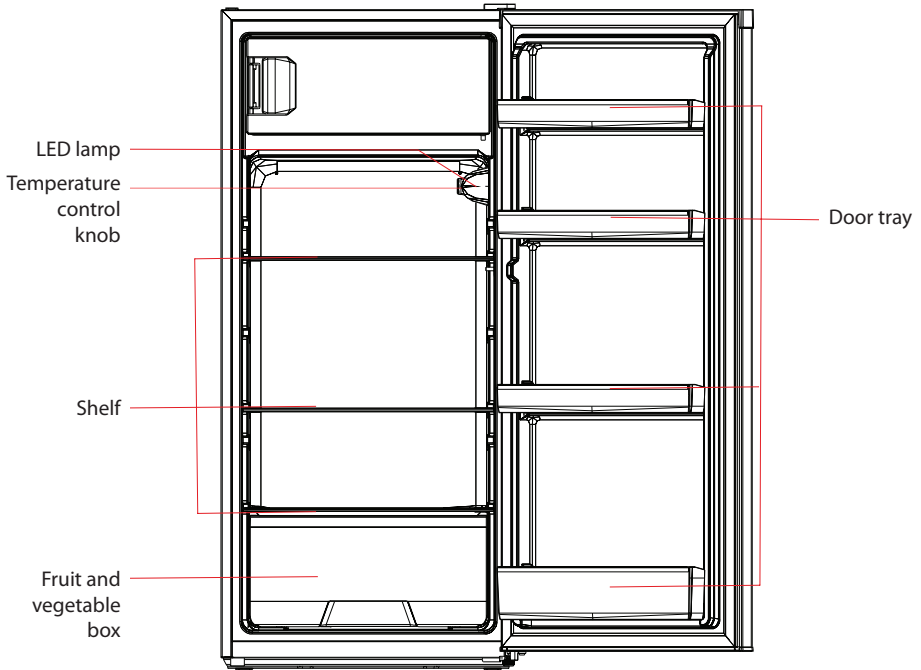


The picture above is only for reference. The actual configuration will depend the physical product or statement by the distributor.

Refrigerating chamber

- The Refrigerating Chamber is suitable for storage of a variety of fruits, vegetables, beverages and other food consumed in the short term.
- Cooking foods shall not be put in the refrigerating chamber until cooled to room temperature.
- Foods are recommended to be sealed up before putting into the refrigerator.
- The glass shelves can be adjusted up or down for a reasonable amount of storage space and easy use.

 Functions

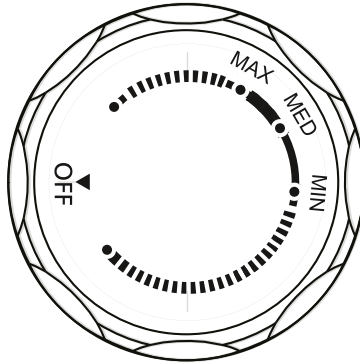

The picture above is only for reference. The actual configuration will depend the physical product or statement by the distributor.

- Turn the temperature control knob to MAX, the internal temperature of the refrigerator becomes lower.
- Turn the temperature control knob to MIN, the internal temperature of the refrigerator becomes higher.
- The letter on the knob only represents the temperature level, but does not mean the specific temperature, the "OFF" means stop working.

NOTE: Please adjusting and using between "MAX" and "MIN".

PART 4: MAINTENANCE AND CARE OF THE APPLIANCE

Overall cleaning

- Dusts behind the refrigerator and on the ground shall be timely cleaned to improve the cooling effect and energy saving. The interior of the refrigerator should be cleaned regularly to avoid odor. Soft towels or sponge dipped in water and non-corrosive neutral detergents are suggested for cleaning. The freezer of shall be finally cleaned with clean water and dry cloth. Open the door for natural drying before the power is turned on.
- Do not use hard brushes, clean steel balls, wire brushes, abrasives, such as toothpastes, organic solvents (such as alcohol, acetone, banana oil, etc.,), boiling water, acid or alkaline items clean refrigerator considering that this may damage the fridge surface and interior.
- Do not rinse with water so as not to affect the electrical insulation properties.



PLEASE UNPLUG THE REFRIGERATOR FOR DEFROST AND CLEANING.

Defrosting

- Unplug the power cord.
- Remove the food from the refrigerator and place it properly to prevent food from melting.
- Clear the drain pipe (to use soft materials to prevent damage to the liner), combined with the defrost preparation of water containers (pay attention to clean the compressor compartment water tray, Prevent overflow to the ground).
- You can use the natural temperature of the natural defrost, you can also use the ice shovel to eliminate the frost (to use plastic or wooden ice shovel, to prevent damage to the liner or pipe)
- You can also use the appropriate amount of hot water to speed up the defrost, with a dry towel to dry the water after defrosting.
- Put the food back and power on again.

Out of operation

- Power failure: In case of power failure, even if it is in summer, foods inside the appliance can be kept for several hours; during the power failure, the times of door opening shall be reduced, and no more fresh food shall be put into the appliance.
- Long-time nonuse: The appliance shall be unplugged and then cleaned; then the doors are left open to prevent odor.
- Moving: Before the refrigerator is moved, take all objects inside out, fix the glass partitions, vegetable holder, freezing chamber drawers and etc. with tape, and tighten the leveling feet; close the doors and seal them with tape. During moving, the appliance shall not be laid upside down or horizontally, or be vibrated; the inclination during movement shall be no more than 45°.



THE APPLIANCE SHALL RUN CONTINUOUSLY ONCE IT IS STARTED. GENERALLY, THE OPERATION OF THE APPLIANCE SHALL NOT BE INTERRUPTED; OR OTHERWISE THE SERVICE LIFE MAY BE IMPAIRED.

PART 5: TROUBLESHOOTING

You may try to solve the following simple problems by yourself.
If them cannot be solved, please contact the after-sales department.

Failed operation	Check whether the appliance is connected to power or whether the plug is in well contact. Check whether the voltage is too low. Check whether there is a power failure or partial circuits have tripped.
Odor	Odorous foods shall be tightly wrapped. Check whether there is any rotten food. Clean the inside of the refrigerator.
Long-time operation of the compressor	Long operation of the refrigerator is normal in summer when the ambient temperature is high. It is not suggestible having too much food in the appliance at the same time. Food shall get cool before being put into the appliance. The doors are opened too frequently.
Light fails to get lit	Check whether the refrigerator is connected to power supply and whether the illuminating light is damaged. Have the light replaced by a specialist.
Doors cannot be properly closed	The door is stuck by food packages. The refrigerator is tilted.
Loud noise	Check whether the floor is level and whether the refrigerator is placed stably. Check whether accessories are placed at proper locations.
Door seal fails to be tight	Remove foreign matters on the door seal. Heat the door seal and then cool it for restoration (or blow it with an electrical drier or use a hot towel for heating).
Water pan overflows	There is too much food in the chamber or food stored contains too much water, resulting in heavy defrosting. The doors are not closed properly, resulting in frosting due to entry of air and increased water due to defrosting.
Hot housing	Heat dissipation of the built-in condenser via the housing, which is normal. When housing becomes hot due to high ambient temperature and storage of too much food, it is recommended to provide sound ventilation to facilitate heat dissipation.
Surface condensation	Condensation on the exterior surface and door seals of the refrigerator is normal when the ambient humidity is too high. Just wipe the condensate with a clean towel.
Abnormal noise	Buzz: The compressor may produce buzzes during operation, and the buzze are loud particularly upon start or stop. This is normal. Creak: Refrigerant flowing inside of the appliance may produce creak, which is normal.

PART 6: OTHERS INFORMATIONS

Climate classes

Class	Symbol	Ambient temperature range °C
Extended temperate	SN	+ 10 to+ 32
Temperate	N	+16 to +32
Subtropical	ST	+ 16 to+ 38
Tropical	T	+ 16 to + 43

Energy Saving Tips

- The appliance should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of the direct sunlight.
- Let hot foods cool to room temperature before placing in the appliance. Overloading the appliance forces the compressor to run longer. Foods that freeze too slowly may lose quality, or spoil.
- Be sure to wrap foods properly, and wipe containers dry before placing them in the appliance. This cuts down on frost build-up inside the appliance.
- Appliance storage bin should not be lined with aluminum foil, wax paper, or paper toweling. Liners interfere with cold air circulation, making the appliance less efficient.
- Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.

Daily use

To avoid contamination of food, please respect the following instructions


- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Clean water tanks if they have not been used for 48h; flush the water system connected to a water supply if water has not been drawn for 5 days.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments (if they are presented in the appliance) are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.
- One-, two- and three -star compartments (if they are presented in the appliance) are not suitable for the freezing of fresh food.
- If the appliance is left empty for long periods, switch off, defrost, clean, dry and leave the door open to prevent mould developing within the appliance.

Position different food in different compartments according to below table

Refrigerator compartments	Type of food
Door of balconies of fridge compartments	<ul style="list-style-type: none">• Food with natural preservatives, such as jams, juices, drinks, condiments.• Do not store perishable foods.
Crisper drawer (salad drawer)	<ul style="list-style-type: none">• Fruits, herbs and vegetables should be placed separately in crisper bin.• Do not store bananas, onions, potatoes, garlic in the refrigerator.
Fridge shelf - bottom Chiller (box/drawer)	<ul style="list-style-type: none">• Raw meat, poultry, fish (for short-term storage)
Fridge shelf - middle	<ul style="list-style-type: none">• Dairy products, eggs.
Fridge shelf - top	<ul style="list-style-type: none">• Foods that do not need cooking, such as ready-to-eat foods, deli meats, leftovers.

PART 7: INFORMATION SHEET

INFORMATION SHEET: Philco

Philco brand: PHILCO 	
Brand	Philco
Product number	PTB 1931
Type of appliance ³⁾	7
Energy efficiency class (A... low electricity consumption to G... high electricity consumption)	A+
Energy consumption over a 365 day period ¹⁾ (kWh)	201
Total available volume (l)	193
of which: refrigerating part (l)	177
of which: freezer part (l)	16
Star mark for the freezer area	****
No frost	Static
Power cut safe in h	15
Freezing capacity (kg/24 h)	2
Climatic class ²⁾	ST/N
Voltage	220-240 V/50Hz
Noise level ⁴⁾ (dB) (re 1pW)	40
Dimensions (cm) (h x w x d)	123.2 x 55 x 57.5
Weight (kg)	36.45
Built-in appliance	NO
Appliance suitable for storing wine	NO

- 1) Electricity consumption in kWh/year is based on the results of a normalized test carried out over a period of 24 hours.
Actual electricity consumption depends on the use and location of the appliance.
- 2) SN: ambient temperatures from +10 °C to +32 °C
ST: ambient temperatures from +16 °C to +38 °C
N: ambient temperatures from +16 °C to +32 °C
- 3) 1 = Refrigerator without low temperature areas
7 = Refrigerator/freezer with low temperature areas *(***)
8 = Box freezer
- 4) Noise level according to European norm EN 60704.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.



WARNING! DURING USING, SERVICE AND DISPOSAL THE APPLIANCE, PLEASE PAY ATTENTION TO SYMBOL SIMILAR AS LEFT SIDE, WHICH IS LOCATED ON REAR OF APPLIANCE (REAR PANEL OR COMPRESSOR) AND WITH YELLOW OR ORANGE COLOR.



IT'S RISK OF RE WARNING SYMBOL. THERE ARE FLAMMABLE MATERIALS IN REFRIGERANT PIPES AND COMPRESSOR. PLEASE BE FAR AWAY RE SOURCE DURING USING, SERVICE AND DISPOSAL.

Manufacturer/Importer:
Fast ČR, a.s.
Praha 10, Černokostecká 2111
CZ-10000; CZECH REPUBLIC

PHILCO[®] 

**is a registered trademark used under license from
Electrolux Home Products., Inc.**