



### COOLER BOX

Translation of the original manual

 
 
 


**SENCOR®**

**SCM 1122**



**A**

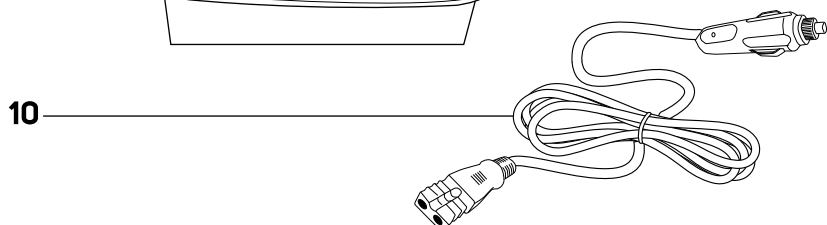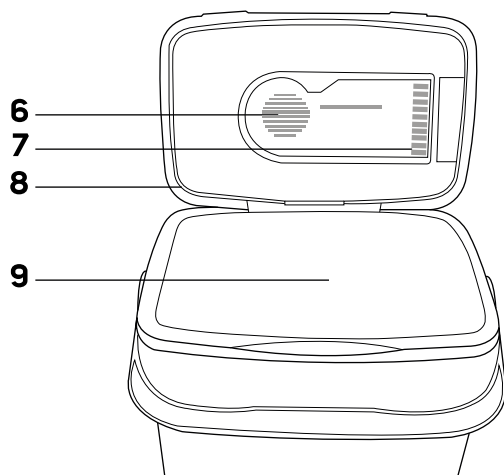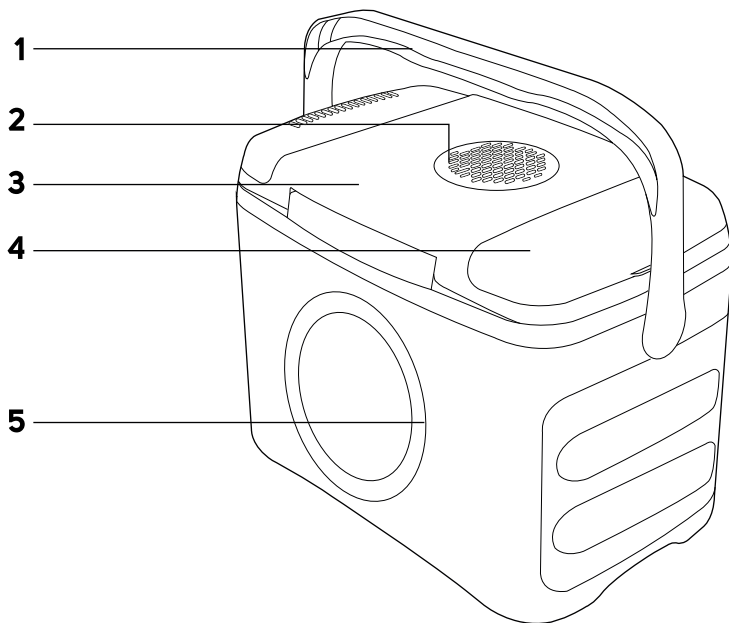

## Important safety instructions

### READ CAREFULLY AND STORE THEM FOR FUTURE USE

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children aged 3 to 8 years of age may put food into and take food out of cooling appliances.
- Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.



#### **WARNING**

The vents in the cover of the appliance or on its body must be kept unobstructed, i.e. at least 15 cm on every side.



#### **WARNING**

Do not use electrical appliances in the area that is used for keeping food, unless the manufacturer specifies the precise type of such an electrical appliance.

- Do not place or store explosive substances in this appliance, e.g. sprays with flammable propulsive gases.
- This appliance is intended for home use. Likewise, this appliance is intended for personal non-commercial use in locations such as:
  - kitchens in stores; offices and other workplaces;
  - appliances used by guests of hotels, motels and other similar locations;
  - appliances used in bed and breakfast establishments;
  - appliances used in eateries and similar non-commercial environments.



**WARNING:**

This appliance is not intended to be built-in. Always place it on an even and rigid surface.

- Follow the instructions provided in this user's manual to ensure the safe storage of food.
- To prevent contaminating food, please adhere to the following recommendations:
  - Keeping the lid open for a long time may significantly raise the temperature inside the appliance.
  - Regularly clean the surfaces that come into contact with food.
  - Place raw meat and fish into the appliance in suitable packaging so that they do not come into contact with other foods or so that they do not drip.
- This appliance is intended for short term food storage. It is not suitable for freezing food and for its long term storage.

- When not using the appliance for an extended period of time, turn it off according to the instructions in section "Cleaning and maintenance" and leave the lid open to prevent the formation of moulds inside the appliance.

**WARNING:**

When positioning the appliance, ensure that the power cord is not crimped or damaged.

**WARNING:**

Do not place portable multi-socket adapters or portable extension cords on the rear side of the appliance.

- The appliance can be used at home, in the car, caravan, on a boat or when camping. However, it must not be exposed to rain.
- The appliance may only be powered using a safe low voltage corresponding to the designation on the rating label of the appliance.
- This appliance may be connected to multiple power sources. Connect the 220–240 V ~ power cord exclusively to a power socket with the same voltage; the 12 V power cord exclusively to a socket with the same voltage of corresponding shape (e.g. car cigarette lighter).
- Keep all cables and their plugs clean. When cleaning, do not use metal or other conductive items.
- In cars, where it is possible to power the appliance from a 12 V power socket without the car engine running, it is important to check the state of the car battery to prevent it from going completely flat.

**Attention:**

Before you connect the appliance to a 220–240 V ~ power socket on a boat, make sure that the socket is equipped with a residual current device. Otherwise there is a risk of injury.

- Do not use the appliance in very dusty or humid rooms, e.g. laundries or bathrooms, in areas where chemicals are stored or in industrial surroundings.
- Do not place the appliance in the vicinity of an open flame or appliances that are sources of heat.
- Do not expose the appliance to direct sunlight.
- Take care that the appliance does not tilt over.
- Do not fill the appliance with ice or pour any liquids into it.
- Do not submerge the power cord or plug and connectors in water or any other liquid.
- Do not leave the appliance without supervision when it is connected to an el. power source.
- Always disconnect the appliance from the power source when not using it, and before moving or cleaning it.
- Do not handle the plug of the cable with wet hands.
- Do not disconnect the appliance from the power source by pulling on the cable. This could damage it or the power socket. Disconnect the cord by gently pulling the plug of the power cord.
- Make sure the power cord is not touching a hot surface, is not tangled, bent or otherwise damaged.
- Do not use the appliance if it is not working correctly, if it has been damaged or has been submerged in water. Have all repairs or adjustments of the appliance performed at an authorised service centre. Tampering with the appliance during the warranty period may void the warranty.
- The manufacturer is not responsible for damages or injuries arising from the incorrect use of the appliance or unqualified handling.

# EN Cooler Box

## User's manual

### COOLER BOX

- Thank you for purchasing a SENCOR brand product and we hope that you will be happy with it. Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

### DESCRIPTION OF THE APPLIANCE

<b>A1</b>	Handle	<b>A6</b>	Fan cover
<b>A2</b>	Vent	<b>A7</b>	Air outlet
<b>A3</b>	Lid	<b>A8</b>	Gasket seal
<b>A4</b>	Control panel (located underneath the tilt-down cover)	<b>A9</b>	Food and beverage storage area, usable volume 21 l
<b>A5</b>	Outer case	<b>A10</b>	12 V power adapter

### BEFORE FIRST USE

- Before first use, take the appliance and its accessories out of the packaging material and remove all promotional labels and stickers. Check that neither the appliance nor any of its parts is damaged.
- Place the Cooler Box on a dry and even surface. Ensure that there is sufficient amount of free space around the Cooler Box for correct ventilation, i.e. at least 15 cm on every side.
- Wipe the inside area of the Cooler Box using a soft sponge lightly dampened in warm water and wipe dry with a clean wiping cloth.
- We recommend to leave the lid open for 1–2 hours to remove any unwanted odours from the inner area of the Cooler Box.

### BASIC FUNCTIONS AND FEATURES OF THE COOLER BOX

1. The 12 V power socket is suitable for connection to a safe power source with a voltage of 12 V, e.g. a car battery. If the voltage is lower or higher, the Cooler Box will automatically shut off its operation to protect the power supply. We recommend that the minimum input voltage is higher than 11 V and the maximum input voltage is not higher than 15 V.
2. When the Cooler Box is connected to an el. power source, it turns on and starts cooling automatically.
3. When the ambient temperature is 25 °C, in the cooling mode the temperature at the bottom of the Cooler Box may be 18–20 °C lower than the temperature outside of the Cooler Box.

### USING THE COOLER BOX

- This car Cooler Box serves to cool food and drinks. We recommend sufficiently cooling the food prior to placing it inside the Cooler Box to keep it cool for longer for the entire time that the Cooler Box is in operation.
  - It is possible to also put warm food into the Cooler Box, nevertheless, it is necessary to keep in mind that the Cooler Box does not have a heating function and the food will gradually cool down over time. In this case, however, do not connect the Cooler Box to an el. power source.
1. Open the lid and place the food and drinks into the inner area of the Cooler Box. We recommend storing food and drinks in their original packaging or in other suitable packaging.
  2. Close the lid and position the Cooler Box on a secure surface within reach of a power source. To provide for proper ventilation and to prevent the accumulation of heat, ensure that there is sufficient space around the Cooler Box.
  3. Using the supplied power adapter, connect the Cooler Box to an el. power source. The Cooler Box will turn on and start cooling automatically.
  4. When you have finished using the Cooler Box, disconnect the power adapter from the el. power source.

### CLEANING AND MAINTENANCE

- Before cleaning, disconnect the power adapter from the el. power supply and from the connection socket in the travel cooler.
- For cleaning, do not use cleaning products with an abrasive effect, solvents, etc. that could damage the appliance.



#### Warning:

To prevent the risk of injury by electrical shock, do not submerge the appliance, power adapter cord or power plug in water or any another liquid.

- Keep the Cooler Box clean. Regularly wipe it with a soft sponge lightly dampened in warm water and then wipe dry using a clean wiping cloth. Make sure that water does not enter into the vents.

### Storage

- Before storing it, check that the appliance perfectly clean and dry.
- Store the appliance in a dry, clean and well-ventilated location not exposed to extreme temperatures and out of children's reach.

**TROUBLESHOOTING**

- The table below describes the problems that may arise during use. In the event that a given problem persists or is not described in the table below, stop using the Cooler Box and contact an authorised service centre.

Problem	Possible cause	Suggested solution
The Cooler Box does not turn on when the power cord is connected to an el. power source and the operating mode is selected.	The voltage is too low.	Disconnect the cable from the power source and check the voltage in the power socket. Then reconnect.
	El. supply was cut off.	Contact your power company.
The fan does not run when the appliance is turned on.	The fan is damaged.	Contact an authorised service centre.
The Cooler Box does not cool, the inside temperature is high.	The cooling sensor is incorrectly installed.	Contact an authorised service centre.
The Cooler Box does not cool when it is connected to the power source and the fan is running.	Cooling sensor error.	Contact an authorised service centre.

**TECHNICAL SPECIFICATIONS**

Input voltage .....	12 V DC, 7 A
Power input .....	45 W
Maximum cooling capacity .....	18 °C to 20 °C (below the ambient temperature)
Climatic class.....	N/SN
Insulation .....	Cyclopentane (C5H10)
Nominal gross capacity .....	22 l
Usable capacity.....	21 l
12V power cord length.....	145 cm
Dimensions (w × h × d).....	460 × 340 × 292 mm
Weight .....	4.5 kg

Safety class for electrical shock protection:



Class II – Electrical shock protection is provided by double or heavy-duty insulation.

We reserve the right to change text and technical specifications.

**INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS**

Dispose of used packaging material at a site designated for waste in your municipality.

**DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save

valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

**For business entities in European Union states**

If you want to dispose of electric or electronic equipment, ask your retailer or supplier for the necessary information.

**Disposal in other countries outside the European Union.**

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.



