

SENCOR®

SMW 7024BK





MICROWAVE OVEN
Translation of the original manual



SENCOR®

SMW 7024BK

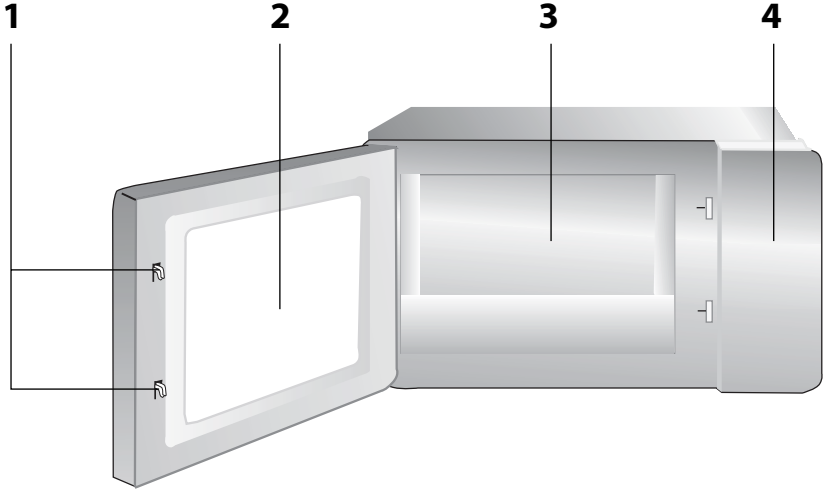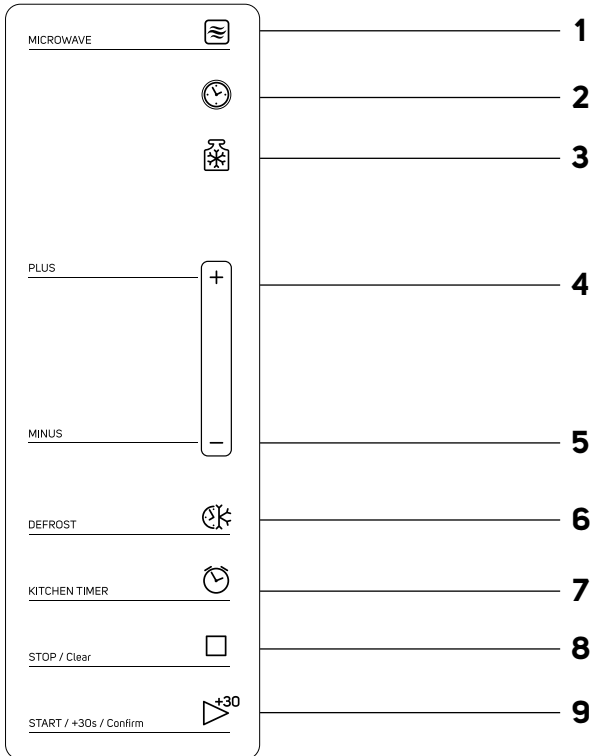

A**B**

EN Microwave oven

Important Safety Instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

General Warnings

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.



WARNING:

It is dangerous for any untrained person to carry out any repairs or maintenance whatsoever that leads to the removal of any cover providing protection against microwave energy radiation.



WARNING:

If the door or the door gasket seal is damaged then the oven must not be used until repaired by a qualified person.

**WARNING:**

Liquids and other foods must not be heated in closed containers because they could explode.

- This appliance is designed for domestic use and similar locations such as:
 - kitchens in stores; offices and other work environments;
 - in agriculture;
 - guests of hotels, motels and other accommodation environments;
 - in bed and breakfast establishments.
- To ensure sufficient air circulation there must be free space left around the microwave oven. Allow free space of at least 20 cm above the top surface of the oven and 10 cm from behind and on the sides. Do not block any vents of the oven. Do not remove the feet of the oven.
- Use only containers that are suitable for use in microwave ovens.
- Do not use metal containers for cooking or heating foods or liquids unless the manufacturer specifies the size and shape of metal containers suitable for microwave cooking.
- When heating a meal on plastic or paper dishes, frequently check the oven to prevent them from catching on fire.
- The microwave oven is designed for heating food and beverages. Dehydrating food or drying clothes and heating up heating cushions, home footwear, washing sponges, damp textiles and similar items may lead to an injury hazard, ignition or fire.

- If smoke is being created, turn off the appliance or pull the plug out of the power socket and leave the door closed to prevent any potential fire from spreading.
- Microwave heating of drinks may cause a delayed boil, which must be considered when holding the container. Be careful when handling the container.
- The contents of baby bottles and baby food must be stirred through or shaken up and their temperature must be checked prior to consumption to prevent burns.
- Eggs in their shells and whole hard boiled eggs must not be heated in the microwave oven because they could explode even after the microwave heating process has finished.
- Regularly clean the door and the window of the oven from both sides, the door gasket seal and neighbouring parts and any food remains. For cleaning, we recommend the use of a weak kitchen detergent. Ensure that remains of the cleaning agent do not remain on the inner surface of the door.
- Clean the oven regularly according to the above mentioned instructions and remove any food that remains inside it.
- Failure to keep the oven clean could lead to surface damage, which could adversely affect the lifetime of the appliance and could lead to a dangerous situation.
- The appliance must not be cleaned using a steam cleaner.
- The microwave oven is intended to be placed on a countertop at a maximum height of 900 mm.

- This microwave oven is intended for use as a free-standing appliance. It is not designed to be built-in or installed into a cabinet.
- The microwave oven must not be placed into a cabinet.
- Before connecting the appliance to a power socket, check that the voltage on its rating label matches the electrical voltage in the power socket.
- Connect the appliance only to a properly grounded socket.
- Do not use the microwave oven outdoors or subject it to the effects of the outdoor environment.
- Do not place the microwave oven on window sills, kitchen sink drainboards or unstable surfaces. Always place it on a stable, even and dry surface.
- This microwave oven is intended for heating and cooking food. Use it only for the purposes described in this user's manual. Do not use corrosive chemicals or fumes in it.
- Never use the microwave oven in the direct vicinity of a bath, shower or swimming pool.
- Do not use the microwave for industrial or laboratory purposes.
- Kitchen dishes may become hot as a result of the heat transferred from the heated food. Sometimes it may be necessary to use protective gloves.
- Do not use the kitchen cookware, tableware and utensils listed below in the microwave oven:
- Metal pans and crockery with metal handles or with metal decorations;
 - Clamps on plastic bags;
 - dishes with melamine surface treatment;
 - Standard thermometers, which are used for measuring the temperature of meat, etc.
- Do not attempt to use the microwave oven with the door open. You could expose yourself to the harmful effect of microwaves. Do not run the microwave oven when it is empty.
- Be especially careful when handling heated beverages and foodstuffs as hot steam may be released from them.
- Do not fry food in the microwave oven. Hot oil may damage parts of the oven, dishes or may also cause skin burns.
- Before cooking, prick food that has a thick peel, such as potatoes, pumpkins, apples.
- Prior to moving the oven, always ensure that the turning tray is removed or properly secured in the internal area of the oven. This may damage it.
- Do not use the oven without the turning tray being correctly installed.
- Some components of the microwave oven may heat up during operation. Do not touch hot surfaces. There is a danger of a burns.
- When not using the oven, do not leave paper materials, kitchen dishes or food inside.
- Keep the inside of the oven clean. If the walls of the oven are splattered with food juices then wipe them away using a damp cloth. If the oven is heavily soiled, you can use a weak solution of a neutral kitchen detergent.
- Do not use the microwave oven if the power cord or power plug is damaged, if it is not working correctly, if it is damaged or if it has been dropped on the floor. Any repair of the microwave oven or replacement of a damaged power cord may only be carried out by an authorised service centre, as this will prevent a dangerous situation from occurring.

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Before using this appliance, please familiarise yourself with the user manual, even if you are already familiar with using similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference.
- It is recommended to keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right of defective performance or quality guarantee. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.

6. The power socket must be easily accessible to quickly disconnect the power cable if necessary.
7. Do not use the microwave oven outdoors.



Note:

If you turn on the microwave for the first time, you may notice a slight odour and smoke. This is a normal occurrence which disappears with use. We recommend placing a bowl of water inside the oven, setting the microwave power to maximum, and running the microwave oven for several minutes during the initial use. This will make it easier to eliminate the odour.

DESCRIPTION OF THE APPLIANCE

A1 Safety door lock system	A3 Interior of the oven
A2 Door window	A4 Control panel

DISPLAY DESCRIPTION

B1 MICROWAVE button – to set the microwave power.	B7 KITCHEN TIMER button – to set the kitchen timer
B2 button – to set the clock	B8 STOP/CLEAR button – to pause the microwave operation / clear settings or cancel operation
B3 button – to select the defrost programme based on weight	B9 START/+30 SEC/CONFIRM – to start the microwave operation / start quick preparation / confirm settings
B4 + button	
B5 – button	
B6 DEFROST button – to select the defrost programme based on time	

BEFORE FIRST USE

- Before first use, remove the appliance and its accessories from the packaging and remove all promotional labels and tags. Check that neither the appliance nor any of its components is damaged.

INSTALLATION

1. Make sure to remove all packaging material from the interior of the oven, such as plastic bags, polystyrene, etc.



Note:

Do not remove the magnetron cover located on the right side of the interior of the oven.



Warning:

Check if the oven is damaged in any way, such as misaligned or dented door, damaged door seal, or loose hinges or door locks. If any damage is found, do not use the oven and contact a qualified service technician.

2. The microwave oven must be placed on an even, stable surface that can bear its weight even with food inside.
3. Do not place the microwave oven near heat sources, in areas with high humidity, or near flammable materials.
4. This appliance is intended for use in free space, not as a built-in unit. Therefore, ensure sufficient adequate clearance around the oven. Leave at least 30 cm of space above the top of the oven and at least 20 cm on each side. The back of the microwave oven can be placed against the wall. Do not cover or block the ventilation openings. Do not remove the feet of the microwave oven.
5. Ensure that the power cable is not placed under the bottom of the oven or in contact with hot or sharp surfaces.

EARTHING INSTRUCTIONS

- This microwave oven must be earthed. The microwave oven is equipped with a power cable which has an earthing wire with an earthing plug. The power plug must be connected to a properly installed and earthed power socket. Earthing reduces the risk of electrical shock. In the case of a short circuit the electric current is conducted through the earthing wire. It is recommended that the oven be connected to a separate electrical circuit.



Warning:

Improperly earthed power socket may cause the risk of electric shock.



Note:

If you have any questions regarding earthing or electrical instructions, consult everything with a qualified electrician or repair technician. Neither the manufacturer nor the seller take any responsibility for any damage to the oven or injuries caused by improper electrical connections.



RADIO INTERFERENCE

- Operation of the microwave oven may cause interference with radios, televisions or similar receivers. If interference is detected, take the following measures to reduce or eliminate it.
 1. Clean the door and door seals.
 2. Relocate the radio or television antenna.
 3. Position the microwave oven away from the receiver.
 4. Move the microwave oven further away from the receiver.
 5. Plug the power cable of the microwave oven into a different socket so that the oven and the receiver are in a separate electrical circuit.

OPERATION OF MICROWAVE OVEN

- Upon plugging in the power cable into a power socket, an audible alert will sound. Set the clock. Follow the instructions in the **"Setting the Clock"** section below. However, the microwave oven can also be operated without setting the clock, but to use certain programmes in real-time, it is necessary to set the current time.
- If you need to check the status of cooking during microwave operation, open the microwave oven door. The operation of the microwave oven will pause. To resume cooking, briefly press the **START/+30 SEC/CONFIRM** button; to cancel cooking, press the **STOP/CLEAR** button.
- If you make a mistake during the microwave setup, press the **STOP/CLEAR** button to cancel the settings.
- If you do not press the **START/+30 SEC/CONFIRM** button within 1 minute after setup, the settings will not be saved and the display will show the clock.
- Each button press is accompanied by a beep sound.

Setting the Clock

- You can set the clock after plugging the power cable in the power socket or during use.
- While the microwave oven is in stand-by mode, briefly press the button. The numerical value of the clock will flash on the display.
 - Use the +/- buttons to set the hours.
 - Briefly press the  button. The numerical value of minutes will flash on the display.
 - Use the +/- buttons to set the minutes.
 - Briefly press the  button to confirm, and the set time will appear on the display.

Kitchen Timer

- While the microwave oven is in stand-by mode, briefly press the **KITCHEN TIMER** button. "00:00" will appear on the display.
- Use the +/- buttons to set the kitchen timer duration. You can set a maximum of 95 minutes.
- Briefly press the **START/+30 SEC/CONFIRM** button to start the countdown.
- Once the set time has elapsed, an audible alert will be sound.

Quick Preparation

- The quick preparation function is used for rapid heating of food at the maximum microwave power.
- While the microwave oven is in stand-by mode, press the **START/+30 SEC/CONFIRM** button, and the microwave oven will start at maximum power for 30 seconds. Each press of the **START/ QUICK START** button will extend the cooking time by 30 seconds. The maximum cooking time is 95 minutes.

Microwave Cooking


- The microwave cooking function is suitable for cooking or heating food.
- While the oven is in stand-by mode, press the **MICROWAVE** button and "P100" will appear on the display.
 - Press the **MICROWAVE** button repeatedly or use the +/- buttons to select the microwave power in the following sequence: P100 – P80 – P50 – P30 – P10. The set power will appear on the display.
 - Press the **START/+30 SEC/CONFIRM** button to confirm the set power.
 - Use the +/- buttons to set the desired cooking time ranging from 0:05 to 95:00. Press the **START/+30 SEC/CONFIRM** button to confirm the set cooking time, and the microwave oven will start.



Note:

Press the +/- buttons to set the cooking time in the following steps:
00:05–01:00: set in 5-second increments
01:00–05:00: set in 10-second increments
05:00–10:00: set in 30-second increments
10:00–30:00: set in 1-minute increments
30:00–95:00: set in 5-minute increments

Weight-Based Defrosting

- This function is suitable for defrosting food.
- While the microwave oven is in stand-by mode, briefly press the  button and "dEF1" will appear on the display.
 - Use the +/- buttons to set the desired weight of the food in the range of 100–2,000 g.
 - Press the **START/+30 SEC/CONFIRM** button to confirm the set weight, and the microwave oven will start.



Note:

During defrosting, the microwave oven will automatically pause to allow you to check and rotate the food. Press the **START/+30 SEC/CONFIRM** button to resume the microwave oven operation.

Time-Based Defrosting

- This function is suitable for defrosting food.
- While the microwave oven is in stand-by mode, press the **DEFROST** button, and "dEF2" will appear on the display.

- Use the +/- buttons to set the desired defrosting time. The maximum defrosting time is 95 minutes.
- Press the **START/+30 SEC/CONFIRM** button to confirm the set defrosting time, and the microwave oven will start.



Note:

During defrosting, the microwave oven will automatically pause to allow you to check and rotate the food. Press the **START/+30 SEC/CONFIRM** button to resume the microwave oven operation.

Automatic Cooking

- In automatic cooking programmes, there is no need to set the cooking time or power level. You only need to select the type of food, its weight, or the number of servings.
- While the microwave oven is in stand-by mode, press the + button to enter the automatic cooking programme selection.
 - Use the +/- buttons to select the desired automatic cooking programme. The selected automatic cooking programme will appear on the display.
 - Press the **START/+30 SEC/CONFIRM** button to confirm the selected programme.
 - Use the +/- buttons to set the weight.
 - Press the **START/+30 SEC/CONFIRM** button to confirm the set weight, and the microwave oven will start.

Table of Automatic Cooking Programmes

Programme	Weight	Display
A-1 Pizza	200 g	200
	400 g	400
A-2 Meat	250 g	250
	350 g	350
	450 g	450
A-3 Vegetables	200 g	200
	300 g	300
	400 g	400
A-4 Pasta	50 g (with 450 g of cold water)	50
	100 g (with 800 g of cold water)	100
A-5 Potatoes	200 g	200
	400 g	400
	600 g	600
A-6 Fish	250 g	250
	350 g	350
	450 g	450
A-7 Beverage	1 cup (120 ml)	1
	2 cups (240 ml)	2
	3 cups (360 ml)	3
A-8 Popcorn	50 g	50
	85 g	85
	100 g	100



Note:

The temperature of the food, the weight and the shape can significantly affect the cooking time. If the result is unsatisfactory, adjust the food weight to a higher or lower setting.

Multi-Sequence Food Preparation

- In order to achieve the best results, it will be necessary to use different microwave powers in some cases. The oven allows you to set up to 2 powers.

Example: You want to defrost food for 5 minutes and then cook it at 80% microwave power for 7 minutes. Proceed as follows:

- While the oven is in stand-by mode, briefly press the **DEFROST** button, and "dEF2" will appear on the display.
- Use the +/- buttons to set the defrosting time: 5 minutes.
- Press the **MICROWAVE** button twice and set the power "P80".
- Press the **START/+30 SEC/CONFIRM** button to confirm the setting.
- Use the +/- buttons to set the cooking time: 7 minutes.
- Press the **START/+30 SEC/CONFIRM** button to confirm the setting, and the oven will start. Once one sequence is complete, an audible alert will sound, and the oven will automatically move on to the next sequence.

**Note:**

In multi-sequence preparation, quick cooking or automatic cooking cannot be selected.

Child Lock

- The child lock function allows you to lock the buttons so that it is not possible to prevent changing the oven settings or accidentally starting the oven empty.
- Activating the child lock:** While the oven is in stand-by mode, press and hold the **STOP/CLEAR** button for about 3 seconds. All buttons will be inactive. “**cc :z**” will appear on the display.
- Deactivating the child lock:** To deactivate the child lock, press and hold the **STOP/CLEAR** button for about 3 seconds.

USING THE CORRECT COOKWARE

This general list will help you select the correct cookware.

Cookware	Safe Use	Notes
Special plates for creating a crust	●	Do not use them for more than 8 minutes.
Porcelain or pottery ware	●	Porcelain, pottery ware including glazed ware, and bone china are suitable if they do not have metal decorations.
Disposable polyester plates	●	Used for the packaging of some frozen foods.
Packaged ready-made meats • Polystyrene cups	●	Can be used to heat foods. Overheating may cause the polystyrene to melt.
• Paper bags or newspapers	×	May ignite in the oven.
• Recycled paper or metal edging	×	May cause sparks in the oven.
Glass • Glassware	●	Can be used if not decorated with metal.
• Fine glass	●	Can be used to heat foods and beverages. Fine glass may break if suddenly heated to a high temperature.
• Preserve jars	●	Remove the lid. Use only for heating.
Metal cookware		
• Plates	×	May cause sparks in the oven or food to catch on fire.
• Metal bag clips	×	
Paperware • Trays, cups, napkins and kitchen paper	●	Suitable for a short heating and cooking times, also for absorbing excess moisture.
• Recycled paper	×	May cause sparks in the oven.
Plastic ware • Dishes	●	Use only heat resistant plastics; other plastics may lose their shape or colour due to high temperatures. Do not use melamine products.
• Foil	●	Use to maintain moisture; it should not come into contact with food. When removing, be careful of the escaping steam.
• Bags for frozen food	▲	Only if intended for cooking or resistant to high temperatures. Must not be airtight. If necessary, puncture with a fork.

Cookware	Safe Use	Notes
Waxed paper	●	Can be used to retain moisture in foods and prevent splattering of grease and juices.

- recommended use; ▲ limited use; × not recommended;

COOKING PRINCIPLES IN THE MICROWAVE OVEN

- Arrange the food carefully. Place thicker food pieces around the edges of the dish.
- Place the food on an appropriate dish before putting it into the oven.
- Set the correct cooking time. We recommend setting a shorter cooking time and extend it if necessary. Cooking food at high temperatures can cause smoking or ignition.
- Cover the food before cooking. This prevents juice splatter, and the food heats evenly.
- To speed up the cooking of certain foods, such as chicken or hamburgers, turn them over once during cooking. Larger pieces of food, e.g. roasts, must be turned over several times.
- Some foods, such as meatballs or patties, should be rearranged during cooking both from top to bottom and from centre to edge.

CLEANING AND MAINTENANCE

- Before cleaning, unplug the power cable from the socket and allow the appliance to cool down.
- Do not use abrasive cleaning agents, solvents, or any substances to clean any parts of the appliance that could damage the surface of the appliance. None of the components of this appliance is dishwasher safe.

**Warning:**

To prevent the risk of electric shock, do not immerse the appliance, power cable, or plug into water or any other liquid.

- To prevent damaging the operating parts of the oven, make sure that water does not enter the ventilation openings located on the sides of the microwave oven.
- Keep the microwave oven clean. Clean it regularly according to the instructions below and remove any food residues. Neglecting cleanliness could damage the surface of the appliance. That could adversely affect the lifespan of the microwave oven and result in a dangerous situation.

**Warning:**

Do not use steam cleaners to clean the microwave oven.

- If the interior of the microwave oven becomes dirty, wipe the interior walls with a soft sponge lightly dampened with warm water. Wipe with a dry cloth. If the interior is heavily soiled, soak the sponge in warm water with a little dishwashing detergent. Wipe dry with a clean cloth. Do not use any sprays or harsh cleaners. They may scratch the surface or leave stains or marks.
- Wipe the outer surface, including the door and door seals of the microwave oven, with a soft sponge lightly dampened with warm water. Wipe dry with a clean cloth.
- When cleaning the control panel, leave the door slightly open to prevent the microwave oven from being accidentally turned on empty. Wipe the control panel with a dry cloth. Prevent water from entering the gaps between the buttons.
- If the doors fog up from the inside or outside, wipe them with a clean, dry cloth. This is a normal occurrence, especially when preparing foods with high water content.
- To remove unpleasant odours from the interior of the microwave oven, mix one cup of water with juice and zest from one lemon in a deep container. Set the cooking time to 5–10 minutes. Then wipe the interior with a clean, dry cloth.

- If you need to replace the interior light of the oven, contact an authorised service centre.
- If you have not used the microwave oven for an extended period, an unpleasant odour may have formed inside. To remove it, you can:
 1. Pour water and add a few lemon slices into a larger glass container. Run the oven at maximum power for 2–3 minutes.
 2. Place a cup with red tea and run the oven at maximum power.
 3. Place orange peels in a larger bowl and run the oven at maximum power for 1 minute.

Storage

- If you are not going to use the appliance for an extended period of time, unplug it from the power socket, allow it to cool down and clean it following the instructions in the “**Cleaning and Maintenance**” section.
- Before storing, ensure that the appliance and all accessories are thoroughly clean and dry.
- Store the appliance in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

TROUBLESHOOTING

- Before contacting an authorised service centre, please check the recommendations below.

Problem	Meaning
Microwave operation interferes with TV reception.	TV and radio reception may be disrupted during microwave operation. This is similar interference to that caused by other small appliances such as a blender, vacuum cleaner, or hairdryer. This is a normal occurrence.
Dimming of oven light.	The oven light may dim at low microwave power. This is a normal occurrence.
Water accumulates and condensates on the door and hot air comes out of the ventilation openings.	Steam may escape from the food during cooking. Most of it exits through the ventilation openings, but some may accumulate on the door and condense. This is a normal occurrence.
The oven was accidentally started empty.	It is very dangerous to run the oven empty. Turn it off immediately.

Problem	Possible Cause	Solution
Microwave oven cannot be started.	The power cable plug is incorrectly inserted in the power socket.	Disconnect and reconnect the plug into the socket.
	Blown fuse or tripped circuit breaker.	Replace the fuse and reset the tripped circuit breaker. Only a qualified electrician or other trained professional is authorised to replace the fuse.
	Problem with the power socket.	Test if the socket is working by plugging in another electrical appliance.
The oven does not generate heat.	The door is not properly closed.	Close the door properly.



Warning:

If the problem persists, stop using the microwave oven, unplug the power cable from the socket and contact an authorised service centre. Under no circumstances should you repair the microwave oven yourself. There are no user serviceable parts inside.

TECHNICAL SPECIFICATIONS

Rated voltage range	230 V~
Rated frequency	50 Hz
Rated input power	1,270 W
Microwave output	800 W
Operating frequency	2,450 MHz
Noise level	63 dB(A)
Volume	23 l
Outer dimensions	502 × 406 × 302 cm
Weight	13.5 kg

The declared noise emission level of the appliance is 63 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

We reserve the right to change the text and technical specifications.

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material in the designated waste disposal area determined by the municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste.

For proper disposal and recycling of these products, deliver them to designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By properly disposing of this

product, you help preserve valuable natural resources and contribute to preventing potential negative impacts on the environment and human health resulting from improper waste disposal. For further details, contact your local authorities or the nearest collection point. Fines may be imposed for improper disposal of this type of waste in accordance with national regulations.

For Business Entities in European Union States

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product complies with all the essential requirements of the applicable EU directives.

