

# Popcorn Maker

User's manual

EN



**SENCOR®**

SPM 8023

Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.

We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

EN-1

## TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS .....	3
DESCRIPTION OF THE APPLIANCE .....	6
BEFORE FIRST USE .....	7
INSTRUCTIONS FOR DOSING CORN KERNELS .....	7
OPERATING THE APPLIANCE.....	7
MAINTENANCE AND CLEANING.....	8
STORAGE.....	9
TECHNICAL SPECIFICATIONS .....	10
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS ....	10
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT.....	10

## IMPORTANT SAFETY INSTRUCTIONS

### READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Cleaning and user maintenance must not be performed by children unless they are older than 8 years of age and under supervision. Keep this appliance and the power cord out of reach of children that are younger than 8 years of age. Children must not play with the appliance.
- This appliance is designed for domestic use and similar locations such as:
  - staff kitchens in stores, offices and other workplaces;
  - hotel or motel rooms and other living areas;
  - bed and breakfast establishments.
- Do not use the appliance in an industrial environment or outdoors or for anything other than its intended use.
- Connect the appliance only to a grounded power socket.
- Before connecting the appliance to a power socket, check that the technical details on its rating label match the voltage in the socket. Make sure the power cord does not hang over the edge of a table and that it does not touch a hot surface.



#### **Attention:**

- This appliance is not designed to be controlled using a programmed device, external timer switch or remote control.
- Do not place the appliance on an electric or gas stove or in its vicinity, on the edge of a table or on an unstable surface. Only place the appliance on an even, dry and stable surface.
- The appliance must be located at least 20 cm away from curtains, walls and other heat-sensitive materials.
- Only use the accessories supplied with this appliance.

- Before putting the appliance into operation, always make sure that the integrated spoon is removed from the lid.



Pour only corn kernels that are intended for making popcorn into the popcorn making chamber. Never add oil, butter, margarine or other fats, salt or any flavourings. Fat added into the popcorn making chamber can result in a fire.

- Do not fill the popcorn making chamber above the MAX mark located on the inner wall.
- During operation there needs to be sufficient area for air circulation above the appliance and around it.




The appliance heats up during operation. Take care not to touch the hot surface of the lid.

- Before any handling, allow the appliance to cool down for at least 5 minutes. For increased protection of the skin on your hands, we recommend using kitchen gloves.
- Do not touch the lid or the butter melting cup / corn kernel measuring cup when it is located in the lid.
- In the event that the lid is tilted open during operation, the safety mechanism will shut off the appliance.
- Do not leave the appliance in continuous operation for longer than 5 minutes. If you wish to make more popcorn, allow the appliance to cool down for 10 minutes before using it again.
- Always turn off the appliance and disconnect it from the power socket if you leave it without supervision, if you will not be using it and before moving or cleaning it.
- Allow the appliance to cool down before moving or cleaning it.
- Clean out the appliance after each use according to the instructions in chapter Maintenance and cleaning.
- To prevent potential injury by electrical shock, do not submerge this appliance or its power cord in water or any other liquid.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord

or the power socket. Disconnect the cord from the power socket by gently pulling on the plug of the power cord.

- It is forbidden to use the appliance if it has a damaged power cord. If the power cord is damaged, have it replaced at a professional service centre.
- Do not use the appliance if it is damaged, if it is not working correctly, if it has been dropped on the floor or submerged in water. In order to prevent a hazardous situation arising, do not repair the appliance yourself or modify it in any way. Have all repairs performed at an authorised service centre. By tampering with the appliance you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

## DESCRIPTION OF THE APPLIANCE

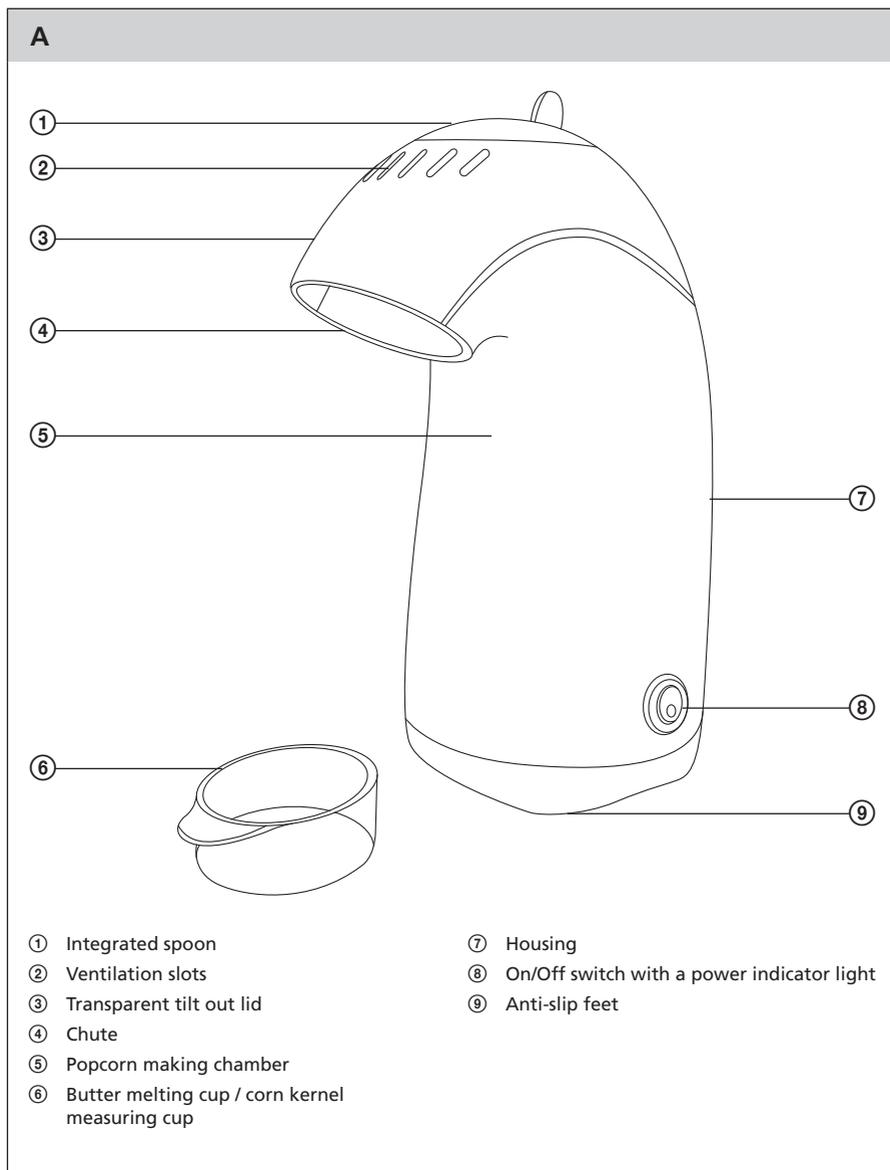

## BEFORE FIRST USE

- Before first use take the appliance and its accessories out of the packaging material.
- Make sure that the appliance is turned off and disconnected from the power socket.
- Tilt the lid A③ open backwards and wipe it with a lightly dampened cloth and then dry it thoroughly.
- Wash the integrated spoon A① that you had previously taken off the lid A③ and the butter melting cup / corn kernel measuring cup A⑥ in warm water using a neutral kitchen detergent. Then rinse these parts under clean running water and dry them thoroughly.
- Wipe out the popcorn making chamber A⑤ using lightly dampened cloth and then wipe it thoroughly dry.



### Attention:

No part of the popcorn maker is suitable for washing in a dishwasher. Do not submerge the popcorn maker or its power cord in water or any other liquids.

## INSTRUCTIONS FOR DOSING CORN KERNELS

Dosing corn kernels	Amount of popcorn produced
70 g / 1 measuring cup A⑥	7 cups



### Note:

A "cup" is a measuring unit used in Great Britain.

- Do not fill the popcorn maker with less corn kernels than specified above, otherwise it will not function correctly and it may be damaged.
- Do not fill the popcorn maker with more corn kernels than specified above, otherwise it may overheat.

## OPERATING THE APPLIANCE

- Locate the popcorn maker on a dry, even and stable surface.
- Take off the spoon A① and put it aside. Tilt open the lid A③ backwards to a vertical position.
- Measure out the correct amount of corn kernels according to the instructions in the previous chapter. Use popcorn type corn, which is suitable for popping (making popcorn).
- Pour the corn kernels into the popcorn making chamber A⑤. The amount of corn kernels must not exceed the MAX mark shown on the inner wall of the chamber A⑤.
- Never add butter, oil or other fats, salt or other flavourings into the chamber A⑤.
- Close the lid A③ to the initial position so that it covers the popcorn making chamber A⑤.
- Under the chute A④ of the popcorn maker, place a sufficiently large container made from a heat resistant material. Freshly popped popcorn will fall into the container. Make sure that there are no obstacles in or under the chute A④ and that the popped popcorn will be able to freely fall into the prepared container.
- Connect the power cord to a power socket and start the popcorn maker by setting the switch to the ON position (turned on). The power indicator light will be lit. Hot air will start circulating inside the chamber A⑤ and the popped corn will fall into the prepared container. Do not stand directly in front of the chute A④ when popping corn because very hot unpopped corn kernels may fall out of it. Do not tilt open the lid A③ during operation.



### Attention:

In the event that the lid A③ is tilted open during operation, the safety mechanism will shut off the appliance.

- It takes approximately 3 minutes to pop one batch of popcorn. When the corn kernels stop popping, the popping process is finished and you must turn off the popcorn maker by setting the switch to the OFF position (turned off). The power indicator light will turn off. When the popcorn maker is turned off, approximately 10 to 20 unpopped corn kernels may remain at the bottom of the chamber A⑤.

**Attention:**

Corn kernels may continue to pop even shortly after the appliance is turned off, therefore, do not tilt open the lid A③ immediately after turning off the appliance.

The lid A③ heats up to a high temperature during operation and remains hot for several minutes after the appliance is turned off. Take care not to touch the hot surface. For increased protection of the skin on your hands, we recommend using kitchen gloves.

- If you wish to make butter popcorn, fill the butter melting cup A⑥ with no more than 2 tablespoons of butter that you have already allowed to warm up to room temperature. Before putting the popcorn maker into operation, place the butter melting cup A⑥ containing the butter on to the tilted down lid A③, into the groove where spoon A① was initially located. The butter will melt while the popcorn is being popped. After turning off the popcorn maker, allow the butter melting cup A⑥ to sit on the lid A③ for about 3 minutes to ensure that all the butter melts. Then take it off and pour the melted butter over the freshly popped popcorn contained in the heat resistant container. You may use the spoon A① to mix the melted butter into the popcorn.

**Attention:**

Do not remove the cup A⑥ from the lid A③ while the popcorn maker is in operation.

- Before starting to pop another batch of popcorn, allow the appliance to cool down for at least 10 minutes and remove any remains of corn kernels or popcorn from the chamber A⑤ according to the instructions provided below.
- Check that the popcorn maker is turned off and that it has cooled down. Remove all remains of the corn kernels or popcorn from the popcorn making chamber A⑤ by turning the popcorn maker upside down. While doing this, hold the transparent lid A③ closed against the chute A④. Do not place hands into the chamber A⑤ because it may still be hot. Dispose of unpopped corn kernels. Do not attempt to pop them again.
- After you have finished, turn off the popcorn maker by setting the switch to the OFF position (turned off) and disconnect the power cord from the power socket. Allow the popcorn maker to fully cool down and then clean it according to the instructions contained in chapter Maintenance and cleaning.

## MAINTENANCE AND CLEANING

- Before cleaning, turn the popcorn maker off, disconnect it from the power socket and allow it to cool down completely.
- Clean the popcorn maker after each use.
- Remove all remains of the popcorn or corn kernels from the popcorn making chamber A⑤ by turning the popcorn maker upside down. While doing this, hold the transparent lid A③ closed against the chute A④ to prevent it being damaged. Then turn the popcorn maker back over with the lid A③ facing upwards, tilt open the lid A③ and wipe out the chamber A⑤ with a lightly dampened cloth and then wipe thoroughly until dry.
- Wipe the lid A③ with a lightly dampened cloth and then dry it thoroughly.
- Wash the integrated spoon A① that you had previously taken off the lid A③ and the cup A⑥ in warm water using a neutral kitchen detergent. Then rinse these parts under clean running water and dry them.
- Wipe the housing A⑦ using lightly dampened cloth and then wipe it thoroughly dry.

# Popcorn Maker

SPM 8023

EN

**Attention:**

No part of this appliance is suitable for washing in a dishwasher.

- Do not submerge the popcorn maker or its power cord in water or any other liquids. Do not use steel wool, abrasive cleaning products, petrol or solvents for cleaning. To prevent potential injury by electric shock, do not submerge the popcorn maker or its power cord in water or any other liquid.

**STORAGE**

- Make sure that the lid A③ is tilted down on to the chute A④ and store the popcorn maker in a dry, clean place out of the reach of children.

## TECHNICAL SPECIFICATIONS

Rated voltage range .....	230–240 V
Rated frequency .....	50/60 Hz
Rated power .....	1 050–1 150 W

We reserve the right to change text and technical specifications.

### INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

### DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

#### For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

#### Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your vendor



This appliance meets all the basic requirements of EU directives related to it.