

lamart
by Pierre lamart

POIDS

EN PRODUCT INFORMATION AND INSTRUCTIONS

Thank you for purchasing a Lamart brand product by Piere Lamart

■ Product Feature

- Equipped with four precision strain gauge sensors system
- Max Capacity: 5kg/11lb:0.4oz 5000ml/176fl'oz
- Division: 1g/0.1oz 1ml/0.1fl'oz
- Touch on/Auto off/Touch off
- TARE function
- Measure volume of water and milk
- Two weight units: g-lb:oz
- Two volume units: ml-fl'oz
- Low battery/ over-load indication

■ Button Functions



Touch on / Touch off / Zero / TARE



Unit Conversion: g-lb:oz, ml-fl'oz

Mode Conversion: weight<—>milk volume<—> water volume

■ LCD Display Functions



—: negative value

⏻: TARE weight

ml: volume unit

g: weight unit
lb:oz: weight unit
fl'oz: volume unit



weight mode

 


milk volume mode




water volume mode


■ To Insert or Replace Battery



 1. On the base of the scale, remove the isolation sheet before us.




 2. Take out the used battery with the aid of a sharp object to replace new battery.



3. Remove the batter cover

 ■ Operation



Before use, place the scale on a solid, level surface. Place any container or bowl (if used) on the scale before operation.



Gently touch the  button to turn on the scale.



 
The scale LCD display will show its start routine of segment as it powers on.




Wait until the "0" is shown on the display.




Place the item to be weighed on the scale (or in the bowl if required). The LCD will show the weight reading.



After weighing press the  button for 3 seconds to turn off the sale. Or leave the scale and it will automatically power off in 2 minutes.


■ Mode Conversion

 The scale is with three weighing modes. To measure different items, users can select required weighing mode by touching the "UNIT" button to convert the desired weighing mode, weight mode, milk volume mode or water volume mode. At the left corner of the LCD screen, it shows the status of the weighing modes. See above LCD Display Functions.

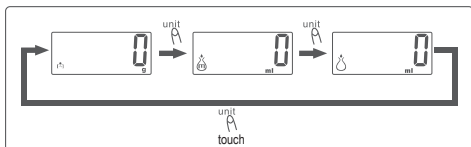


■ Unit Conversion

 
If the scale is with unit systems of Metric (g,ml) and Imperial (lb:oz,fl'oz), users can select units from g to lb:oz or ml to fl'oz.

While the scale is on, select the required unit by touching the  button for 3 seconds until the desired unit is shown, g/lb:oz or ml/ fl'oz.

 
1. weight mode



 2. milk volume mode




 3. water volume mode



■ TARE Function

 
The tare function allows you to weigh another item consecutively after weighing the first item without removing it from the scale.



Gently touch the  button to turn on the scale.



 The scale LCD display will show its start routine of segment asit powers on.



Wait until the "0" is shown on the display. Put the container on the scale platform.



The LCD display will show the steady weight of the container.



 
Touch the  button to clear the weight of the container (reset to zero).



The lower-left corner will show icon , it means the TARE function is activated.





Add the ingredients into the container.




The LCD will show the weight of the ingredients only. Repeat touching the  button to weight new different ingredients.

 ■ Negative value




The display will show a negative value (see LCD functions) if a weight has been removed from the scale. Please press the  button to clear the negative value, the display will show "0" again.

 
■ Error Indication



 The "Lo" symbol on display indicates that the battery power is running low. Please replace new battery.




 The "Err" symbol on display indicates that the scale is over-loaded. Please remove excessive load immediately to avoid possible damage to the product.



The "unSt" symbol on display indicates that the scale is not stable for weighing. Please follow operation instructions for usage.

 ■ Care and Maintenance




- Place the scale on a solid level surface before use.
- Avoid hitting or dropping the scale otherwise damage may occur.
- Do not overload the scale or put heavy things on the scale when not use.



- Treat the scale with care as it is a highly precise electronic instrument.
- Do not immerse this product in water or any other liquid. Please keep dry surface.
- Clean the scale with a soft damp cloth, do not use chemicals or harsh abrasives.

 ■ Battery Advice



- If the scale is not to be used for long periods, it's recommended to remove the battery to avoid damage to the scale due to possible battery leakage.
- Keep the batteries out of reach of children.



- Do not mix old and new batteries, with different compositions or of different brands in order to prevent possible leakage, explosion.
- Do not heat or deform the batteries or expose to fire.



- Waste batteries should not be disposed of with household waste.
- Please check with your local authority for battery recycling advice.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



SAFETY NOTICE

Do not use coarse or aggressive cleaning agents – this can damage the surface (e.g. caustic pipe cleaning agents).

Negligent handling may lead to surface damage (chipping). These defects are the result of improper use and do not constitute a product defect. We recommend that it is always cleaned by hand using non-aggressive cleaning agents and fine towels or sponges. Must not be used in a dishwasher.

ECOLOGY

Depending on the size of the product, all products have marks printed on them denoting the material used for the production of the packaging, components and accessories, as well as their recycling. Negligent handling may lead to surface damage (chipping). These defects are the result of improper use and do not constitute a product defect. We recommend that it is always cleaned by hand using non-aggressive cleaning agents and fine towels or sponges. Must not be used in a dishwasher.

Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste. **Keep plastic bags out of the reach of children, danger of suffocation.**

The buyer was informed about the function and handling of the product.

WARRANTY CARD

This product is covered by a 36-month warranty period from the date of purchase of the product. The warranty period commences on the date of purchase. The warranty card must be presented together with a valid proof of purchase of the given product. The provision of the warranty does not affect the rights of the buyer, which relate to the purchase of a product according to special legal regulations. Other relationships between the vendor and the buyer are governed by the valid provisions of the Civil Code.

PRODUCT (NAME/PRODUCT NUMBER/EAN):

SALE DATE:

VENDOR (business name and address):

STAMP AND SIGNATURE OF THE VENDOR/STORE:

This warranty card must be presented with every lodged complaint.

Always carefully store this warranty card.

The warranty card is only valid if it is legible and properly filled out with the stamp and signature of the vendor/store, sale date, address of the vendor/store and product description.

The warranty does not cover the following:

- the product was not used properly or was used in a way that contradicts this user's manual
- the product was modified or repaired at an unauthorised service centre or by an unauthorised person and original parts were not used for the repair.

This image shows a full page of white paper with horizontal dotted lines. The lines are evenly spaced and run across the width of the page, providing a guide for writing or drawing. There are no margins, text, or other markings on the page.



Výrobce/Manufacturer:
FAST ČR, a.s.; Černokostelecká 2111, 100 00 Praha 10, Czech Republic

www.lamart.cz