



### EN ■ Citrus Juicer

**READ CAREFULLY AND STORE FOR FUTURE USE.**

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Children must not play with the appliance. Cleaning and maintenance must not be performed by children unless they are older than 8 years of age and under supervision.
- Keep this appliance and the power cord out of reach of children that are younger than 8 years of age.
- The appliance is designed for household use only. It is not intended for use in locations such as:
  - staff kitchens in stores, offices and other workplaces;
  - hotel or motel rooms and other living areas;
  - agricultural farms;
  - bed and breakfast establishments.
- This appliance serves to press juice out of citrus fruits such as grapefruit, oranges, mandarins, lemons, limes, etc. Do not use it for any other purposes than those for which it is intended.

 
 
 
 
 
 
**Warning:**

Incorrect use may lead to injuries.

- Do not use the appliance in an industrial environment or outdoors.
- Before connecting this appliance to a power socket, make sure the rated voltage stated on its rating label corresponds to the voltage in your power socket.
- Do not place the appliance on an electric or gas stove or in its vicinity, on the edge of a table or on an unstable surface. Only place the appliance on an even, dry and stable surface.
- Only use the appliance with the original accessories that came with it.
- Make sure that the appliance is properly assembled before putting it into operation.
- During operation, ensure that your hands or other items do not come into contact with the rotating parts of the appliance.

- The appliance is equipped with a thermal fuse protecting the motor from damage in case of overload. If the appliance shuts off as a consequence of the motor being overloaded, disconnect it from the power socket and allow it cool for at least 20 minutes. Then you may continue using it.
- Always disconnect the appliance from the power socket when not using it and when leaving it without supervision, before assembly, disassembly, cleaning and moving it.
- Check that the motor unit is disconnected from the power socket and that the rotating parts have come to a complete stop before removing the removable accessories from the motor unit.
- Clean it according to the instructions in chapter Cleaning and maintenance. Do not submerge the motor unit and its power cord in water or any other liquid, or wash these parts under running water.
- Ensure that the power plug contacts do not come into contact with moisture. Do not place heavy items on the power cord. Make sure that the power cord does not hang over the edge of a table or that it is not touching a hot surface.
- Disconnect the appliance from the power socket by pulling on the plug, never pulling on the power cord. Otherwise, this could damage the power cord or the socket.
- If the power cord is damaged, it must be replaced by an authorised service centre or by another similarly qualified person, this will prevent the creation of a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.
- Do not use the appliance when it is not functioning properly or showing any signs of damage. In order to prevent a hazardous situation arising, do not repair the appliance yourself or modify it in any way. Have all repairs performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

**A**

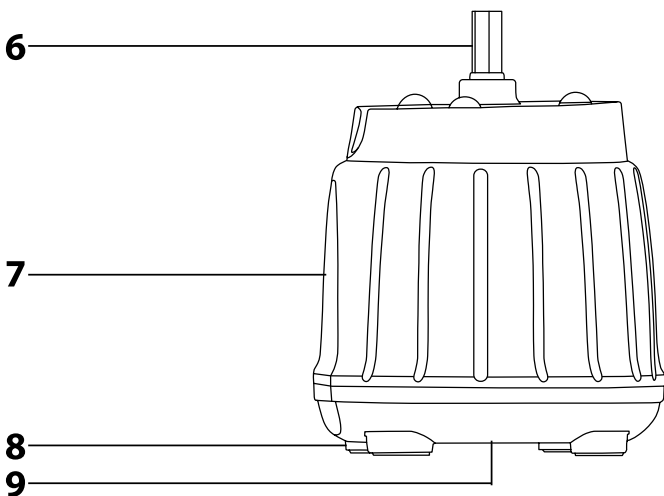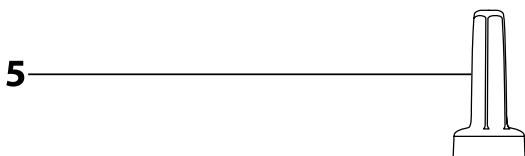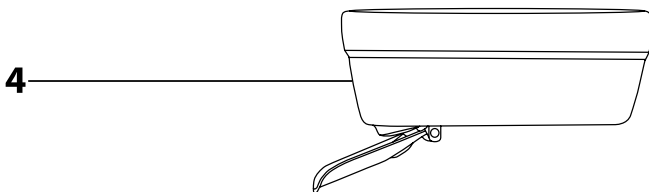

- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

## DESCRIPTION OF THE APPLIANCE

- |  |  |
|--|--|
| <b>A1</b> Protective dust cover  | <b>A5</b> Shaft attachment               |
| <b>A2</b> Pressing cone<br>Presses juice at the optimal speed of 110 rpm | <b>A6</b> Shaft                          |
| <b>A3</b> Filtration strainer<br>captures pits and pulp                  | <b>A7</b> Motor unit                     |
| <b>A4</b> Juice collector<br>with a closable spout                       | <b>A8</b> Anti-slip feet                 |
|  | <b>A9</b> Power cord storage compartment |

## BEFORE FIRST USE

- Remove all packaging materials, including promotional tags and labels, from the appliance and its accessories.
- Thoroughly wash the removable accessories that are intended to come into contact with food using warm water and a neutral kitchen detergent. Then rinse with clean water and dry thoroughly with a wiping cloth. Removable parts are likewise suitable for washing in a dishwasher (in the upper rack).
- Do not rinse the motor unit **A7** and its power cord under water or submerge it in water.

## ASSEMBLING AND DISASSEMBLING THE APPLIANCE

- Before you start assembling or disassembling the appliance, check that the motor unit **A7** is disconnected from the power socket and that the rotating parts have come to a complete stop.
- Place the motor unit **A7** on a stable, even, dry surface, for example on a kitchen countertop. Seat the attachment **A5** on to the shaft **A6**.
- Place the juice collector **A4** on to the motor unit **A7** so that the shaft **A6** with the attachment **A5** passes through the central hole in the juice collector **A4** and the spout fits into the groove in the front: part of the motor unit **A7**. To prevent its movement while the appliance is being used, the juice collector **A4** must be fully seated on the motor unit **A7**.
- Insert the filtration strainer **A3** into the juice collector **A4**. The edges of the filtration strainer **A3** must be level along the entire perimeter of the juice collector **A4**.
- Place the juicing cone **A2** on to the motor shaft **A6** with the attachment **A5** installed.
- To disassemble proceed in the reverse sequence.



### Note:

The shaft attachment **A5** does not need to be removed after every use. It only needs to be removed when soiled.

## OPERATING THE APPLIANCE

1. Make sure that the appliance is correctly assembled and connect it to a power socket.
2. Place a glass or another appropriately-sized vessel under the juice spout. Push the spout downwards so that the juice can run out of the juice collector **A4** into the prepared glass.
3. Slice the citrus fruits that you wish to juice transversely in half. Take one half of the citrus fruit and gently push the cut side on to the juicing cone **A2**. When the citrus fruit is pushed on to the juicing cone **A2**, the motor will engage automatically and the cone will begin to rotate. When you release the pressure, the motor will stop automatically. Take the pressed out half of the citrus fruit off the juicing cone **A2** and you can continue pressing more fruit.



### Note:

You will extract the most juice from the fruit by pressing it down repeatedly on to the juicing cone **A2** for a short time.



### Attention:

Do not exert too much pressure on to the juicing cone **A2** because this could choke the motor.  
You may extract up to 1 litre of juice per batch. Then allow the appliance to cool down for several minutes.

4. When you have finished using it, close the spout by lifting it upwards to prevent juice from dripping out.
5. Disconnect the appliance from the power socket and clean it out according to the instructions in chapter Cleaning and maintenance.

## CLEANING AND MAINTENANCE

- Before cleaning, make sure that the appliance disconnected from the power socket and that the rotating parts are not moving.
- Make sure that the juice spout is closed. Grasp the juice container **A4** by the edges and lift it together with the other accessories inserted in it and take it to the sink. Disassemble the accessories into the individual parts and thoroughly wash with warm water using kitchen detergent. Then rinse them under clean running water and thoroughly wipe dry with a wiping cloth. Removable parts are likewise suitable for washing in a dishwasher (in the upper rack).



**Note:**

We recommend that accessories are washed immediately after use. Dried on pulp is more difficult to remove.

- To clean the outer surface of the motor unit **A7**, use a cloth lightly dipped in a weak detergent solution. After applying the kitchen detergent, wipe the surface with a cloth lightly dampened in clean water and then wipe dry.
- Never submerge the motor unit **A7** or the power cord in water or in any other liquid.
- Do not use steel wool, solvents, cleaning products with an abrasive effect, etc. to clean the appliance. Otherwise the surface coat of the appliance may be damaged.

**STORAGE**

- To protect accessories intended for contact with food against dust deposits, place the cover **A1** on to the assembled appliance.
- Keep the appliance in a clean, dry place out of reach of children.

**TECHNICAL SPECIFICATIONS**

Rated voltage range .....	220–240 V
Rated frequency .....	50 Hz
Rated power input .....	80 W
Electrical shock protection class .....	II
Noise level .....	70 dB(A)

The declared noise emission level of the appliance is 70 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

**Explanation of technical terminology**

Safety class for electrical shock protection:  
Class II – Electrical shock protection is provided by double or heavy-duty insulation.

Changes to text and technical parameters are reserved.

**INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS**

Dispose of used packaging material at a site designated for waste in your municipality.

**DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal and recycling, take these products to designated collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

**For business entities in European Union states**

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

**Disposal in other countries outside the European Union**

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.