

**PHILCO®** 

*Famous for Quality the World Over*



## PHSI 2213

Instruction manual

Návod k obsluze

Návod na obsluhu

Instrukcja obsługi

Használati útmutató

---

Dear customer,  
Thank you for buying a PHILCO brand product. So that your appliance serves you well, please read all the instructions in this user's manual.

---

# CONTENTS

PART 1: IMPORTANT SAFETY INSTRUCTIONS.....	2
PART 2: KNOW YOUR IRON.....	3
PART 3: BEFORE FIRST USE .....	4
PART 4: HOW TO CLEAN AND STORE .....	7

## PART 1: IMPORTANT SAFETY INSTRUCTIONS

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision. Keep this appliance and the power cord out of reach of children younger than 8 years of age.
- Children must not play with the appliance.

## IMPORTANT SAFEGUARDS

When using your iron, basic safety precautions should always be followed:

1. Make sure the power used corresponds with the one indicated on the rating label.
2. Use the iron only for needed use as described in the instruction manual.
3. Close supervision is necessary when any appliance is used near children. Do not leave iron unattended while connected or on an ironing board. Burns can occur from touching hot metal parts, hot water or steam.
4. Keep the iron out of reach of children.
5. The iron should never be left unattended while it is connected to the mains supply.
6. Unplug the iron from the mains electrical supply before:
7. Cleaning
8. Filling with water or emptying the water tank
9. Immediately after use
10. Never operate the iron with damaged power cord or plug, or after it has fallen or been damaged in any way. To avoid the risk of electric shock, do not disassemble the iron, take it to a qualified serviceman for examination and repair.
11. Do not let cord touch hot surfaces.
12. To protect against a risk of electric hazards, do not immerse the iron in water or any other liquid.
13. The iron must be used and rested on a stable surface.
14. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
15. The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

## PART 2: KNOW YOUR IRON



1. Waterfilling inlet
2. Steam control turning knob
3. Burst of steam button
4. Spray Button
5. Temperature control buttons
6. LED display lights
7. Power cord protector
8. Water tank
9. Soleplate
10. Self-cleaning button
11. Spray Nozzle

## PART 3: BEFORE FIRST USE

It is normal for small amount of smoke to be produced the first time, this will quickly disappear.

When using the steam function for the first time, do not direct the steam towards the laundry, as there could be debris from the steam vents.

### FILLING WITH WATER

We recommend the use of distilled water.

Make sure that both the Steam Control turning Knob is in "off"

Hold the iron upright so that the water-filling inlet is in a horizontal position.

Fill with water through Water Filling Inlet until the water reach the "MAX" mark indicated on the side of the iron, and never fill above this mark.

### LED DISPLAY PANEL

Displays the fabric setting and the temperatures indicators

### SETTING TEMPERATURE

Follow the ironing instructions on the garment label. If there is no instruction but you do know the kind of fabric, please consult the following table.

**NOTE:**

If the fabric consists of various kinds of fabrics, always select the temperature required by the most delicate fabrics.

Fabric	Temperature control	Temperature requirement
Synthetic	●	Low temperature
Silk, wool	●●	Medium temperature
Cotton, linen	●●● MAX	High temperature

### Ironing without steam

If you intend to dry-iron fabrics there is no need to fill the water tank ,However,if water is already in the water tank, you don't need to empty it

1. Set the steam control to the off position
2. Plug your iron in to the mains supply socket and switch the socket on ,The STANDBY and and ● lights will illuminate.
3. Press the +/- buttons to select the temperature setting appropriate to the fabric type being ironed. For example, if you select the ●●● setting ,The STANDBY ● and ●● lights will illuminate and the ●●● light will flash as your iron heats up .when the ●●● light stops flashing .your iron is at the correct temperature and ready to use .
4. During use, the ●●● light will flash periodically as your iron maintains the selected temperature

## Steam ironing

If you do not allow your iron to reach the selected temperature, water may drip from the soleplate during steam ironing .

It is recommended that for harder to iron fabrics such as cotton and linen, steam should be used when ironing. When ironing cotton and linen ,always select the highest temperature ,steam should never be used on delicate fabrics like nylons, acrylics and synthetics .

1. Filled your iron with water
2. Plug your iron into the mains supply and switch on
3. Use the +/- buttons to select the ●●● or MAX setting ,The hotter your iron ,The more steams is generated
4. When the ●●● or MAX light stops flashing ,your irons is at the correct temperature and ready to use, During use, the ●●● or MAX light will flash periodically as your iron maintains the selected temperature
5. Adjust the steam control lever to select the desired steam output
6. Move the steam control lever to the high steam  setting to increase the amount of steam ,or towards the off (O) setting to decrease the amount of steam ,
7. The steam can be shut off at any time by setting the steam control to the off (O) postion

## Spraying

The spray function will only operate when there is water in the water tank

1. The water spray can be used to help iron heavy fabrics or difficult areas(collars, pockects, sleeves, creases, etc ).It can also be uses when ironing delicate fabrics which can not be steam ironed.
2. Simply press the button as required to produce as spray of water .if the spray is being used for the first time ,or if the iron has been standing for some time ,you may need to press the spray button a few times before it works correctly

## Burst of steam

Your iron must be set to either ●●● or MAX ,Wait several seconds between each press of the steam button .press the shot of steam button whenever you have a stubborn crease that needs extra steam ,Steam will burst from the holes in the soleplate of your iron into the fabric.

Vertical steam ironing

Never iron garments when they are being worn

Your iron can be used for vertical steam ironing curtains ,dresses on the hangers etc.

1. Fill your iron with water
2. Plug your iron into the mains supply and switch on
3. Use the +/- buttons to select the ●●● or MAX setting ,The hotter your iron ,The more steams is generated
4. When the ●●● or MAX light stops flashing ,your irons is at the correct temperature and ready to use, During use, the ●●● or MAX light will flash periodically as your iron maintains the selected temperature
5. Hold your iron 15cm(6 inches) from the fabric
6. Press the shot of steam button ,The steam will penetrate the fabric removing the creases. To apply more steam press the shot of steam button again ,wait several seconds between each press of the button

## ANTI-CALC SYSTEM

A special filter inside the water tank softens the water and prevents scale build-up in the soleplate. The filter is permanent and does not need replacing.

Note: Use tap water only. Distilled and demineralized water makes the anti-calc system ineffective by altering its physicochemical characteristics.

## ANTI-DRIPPING SYSTEM

This iron is equipped with drip stop function: the iron automatically stops steaming when the temperature is too low to prevent water from dripping out of the soleplate.

With the anti-dripping system, you can perfectly iron even the most delicate fabrics.

## Safety auto shut-off function

ALWAYS disconnect your iron from the mains supply socket after use, NEVER leave the iron unattended with the auto shut-off function in operation

Your iron will shut off if it has not been used for 15 minutes when resting on its heel ,or 30 seconds with the soleplate face down ,The STANDBY light will flash indicating that your iron is now in auto-shut off mode. To restart your iron, either press the +/- buttons or mover your iron gently. The iron will revert back to its previous setting .

## PART 4: HOW TO CLEAN AND STORE

After using, lift the iron with the filling hole downwards to empty the remaining water from the Water tank. Insert the plug into the socket, and set the Temperature Control Dial to "MAX" for 1-2 minutes to evaporate the remaining water, and then unplug the iron and let it cool down before storing it.

**ATTENTION:**

When the plug connecting with the power socket, the user is not allowed to leave.  
When the power cord is damaged, contact your dealers or an authorized service center for repair.

In case of any repairs, replacement of cord or plug, or adjustment, please consult a qualified technician, or take appliance to an authorized service facility.

**NOTE:**

1. This appliance is not intended for use by persons (including children) with reduced physical. Sensory or mental capabilities ,or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance
3. The iron must not be left unattended while it is connected to the supply mains
4. The plug must ne removed from the socket-outlet before the water reservoir is filled with water
5. The filling aperture must not be opened during use ,
6. The iron must be use and rested on a stable surface
7. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable
8. The iron is not be used if it has been dropped .if there are visible signs of damage or it is leaking

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

### DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these products to determined collection points. Or as an alternative in some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product. Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This appliance complies with EU rules and regulations regarding electromagnetic and electrical safety.

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make such changes.



**PHILCO**<sup>®</sup> 

is a registered trademark used under license from  
Electrolux International Company, U.S.A.