

**PHILCO®** 

*Famous for Quality the World Over*



## PHSS 4516

Instruction manual

Návod k obsluze

Návod na obsluhu

Instrukcja obsługi

Használati útmutató

---

Dear customer,  
Thank you for buying a PHILCO brand product. So that your appliance serves you well, please read all the instructions in this user's manual.

---

# CONTENTS

PART 1: IMPORTANT SAFETY INSTRUCTIONS.....	2
PART 2: PARTS OF THE DEVICE.....	4
PART 3: INSTALLATION.....	6
PART 4: CLEANING AND MAINTENANCE.....	6
PART 5: SERVICING.....	6
PART 6: TECHNICAL DATA.....	7

## PART 1: IMPORTANT SAFETY INSTRUCTIONS

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision. Keep this appliance and the power cord out of reach of children younger than 8 years of age.
- Children must not play with the appliance.

We congratulate you on your choice the powerful and handy product. It allows an easy and professional ironing at home. Using the homogeneous steam at the right temperature, you can iron more quickly sheets, towels, jeans etc. The holes in the point of the iron release a jet of steam which stretches softly even the hardest creases.

## WARNINGS AND SAFETY PRECAUTIONS



- Improper operation and misuse can cause damage to the device and to the user
- The device must be operated only for the use for which it was designed. We will not be held responsible for any damage caused by misuse or improper handling.
- Do not operate this device close to water taps, bathtubs, washbasins, showers or other containers full of water. Don't put the device or its plug in water or any other liquids. If the iron accidentally falls in the water, immediately unplug it and let it be checked by an authorized servicing center. Never dip your hands in the water to recover the device. Not to follow these rules could cause an electric shock.
- Don't operate the device with wet hands or when the floor is damp or the device itself is damp. Don't touch the plug with wet or damp hands.
- Don't operate the device if it fell or it was damaged in other ways or if the cable or the plug are damaged. If damaged, take the device to an authorized servicing center to be checked and repaired if necessary.
- Never attempt to repair it yourself, to avoid all risks related to electricity. Don't let the cable lean on sharp edges and keep it away from heating sources and bare flames.
- Put the plug out of the wall outlet, holding it and not pulling the cable.
- Make sure that the voltage of the place where the iron is to be used matches the voltage indicated on the product label.

- This device is not intended for professional use.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never leave the device unattended while using it.
- The plug must be removed from the socket-outlet before the water reservoir is filled with water.
- Children don't recognize the dangers related to an improper use of electrical devices; for this reason, don't let them use electrical appliance without supervision.
- Always take the plug out of the wall outlet if you are not using the device and before cleaning it. CAUTION: The voltage indicated exists as long as the device remains connected to the wall outlet. Turn off the device before unplugging it. Don't hold the device by the cable. Don't use extension (cable).
- Don't operate this device in a corrosive and explosive atmosphere, in order to avoid short-circuit and explosions.
- Using non-original accessories may prejudice the functionality of the device and causes the loss of the guarantee.
- The appliance must not be left unattended while it is connected to the supply mains.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.

## IMPORTANT


- While operating, the iron and the boiler reach very high temperatures, be very careful, burns danger. Don't touch the metal parts of the iron when it is hot.
- Before replacing or cleaning, unplug the device from the power supply outlet and wait until it has completely cooled down.
- Don't use the device outdoors.
- Don't use the device close to curtains, furniture or other inflammable objects.
- Caution: the steam is very hot, burns danger. Never direct the steam jet towards persons, animals or objects that could be damaged or burned.
- Use only tap water or demineralized water to fill the boiler. Other liquids could damage components and gaskets causing the loss of the guarantee of the product. Don't fill the boiler with too much water.
- Don't put other liquids or other materials or additives in the boiler.
- If the cap doesn't open easily, don't try to open it.
- Always place the iron on a stable, flat and heat-resistant surface.
- Don't load weights on the monotube nor try to squash it.
- Don't wind the cable around the device.
- Check carefully that the label of the fabric to iron matches the setting and the temperature of the iron.
- Always place the iron on its seat on the boiler, don't let the iron put on fabrics or elsewhere.

## PART 2: PARTS OF THE DEVICE

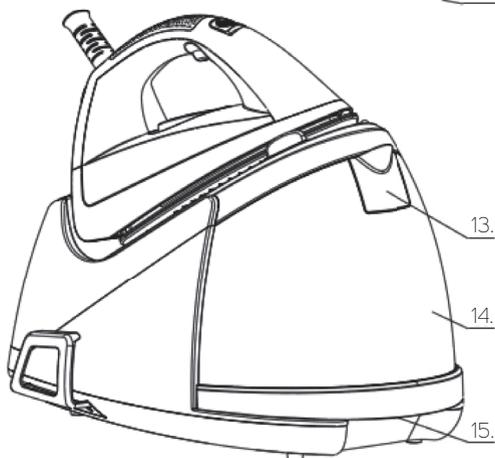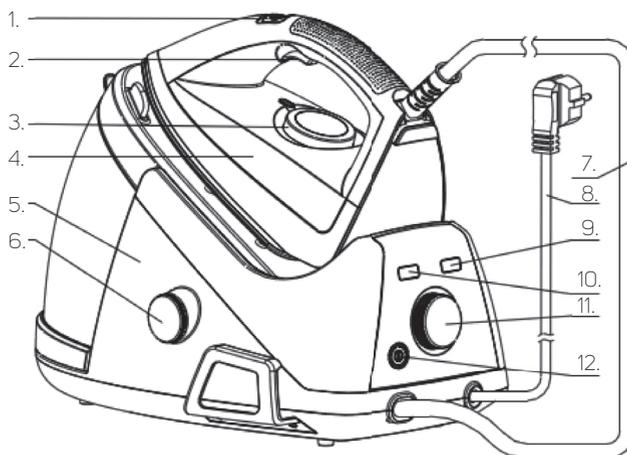

- |                             |                                 |
|-----------------------------|---------------------------------|
| 1. Steam Button             | 9. Steam Ready Indicator        |
| 2. Steam Trigger            | 10. Lower Water Indicator Light |
| 3. Temperature Control Dial | 11. Steam Control Knob          |
| 4. Iron                     | 12. Switch Button               |
| 5. Station                  | 13. Water Inlet Cover           |
| 6. Self-Clean Cover         | 14. Water Tank                  |
| 7. Interconnection Cord     | 15. Water Tank Locker           |
| 8. Power Cord               |                                 |

Some models may differ in the steam button or steam trigger; the operation for the product is the same.

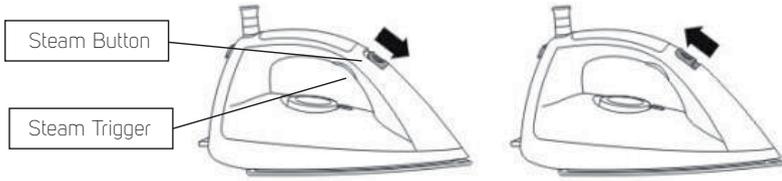

- Place the device on a stable and heat-resistant surface
- Twist off the tank
- Supply tap water or demineralized water. The water tank capacity is 1.6 liters..
- Insert the plug in the wall outlet and turn on switch.
- Wait until the indicator of boiler operating will light on.
- Turn on the iron pressing the iron turning on/off button which will light on; the iron operating light indicator will also light on.
- Adjust the temperature dial in terms of choose the kind of fabrics that you want to iron.

**NOTE:**

If you want to use the steam ironing, we suggest you to adjust the temperature dial on MAX. When the iron operating light indicator goes out the device will be ready for use.

**NOTE:**

During the whole operating time, the iron operating light indicator will go on and off in erratic intervals, this is normal.

- Adjust the steam jet turning the steam temperature dial. To make the steam jet come out, press the steam button. To obtain a continuous steam jet, operate on the steam button. If the steam stops coming out, this is probably because there is no more water in the tank. In order to continue ironing, follow the instructions of the paragraph "SUPPLYING WATER WHILE OPERATING"

## Steaming Fabrics

Follow the "INSTRUCTIONS" from (a) to (h)

Place the iron vertically at a minimum distance of 20-30cm from curtains or fabrics, and press the steam button, then steam the fabrics describing round figures.

**NOTE:**

Be very careful about the compatibility of the cloth label with this kind of treatment. It with Super-large capacity water tanks and can be used for long time. The ironing will send a reminder sound when out of water (this sound will stop till after 30 seconds), you can pull out the water tanks easily and full it very conveniently.

## Dry Ironing (without steam)

- a) Place the device on a stable and heat-resistant surface
- b) Turn on the iron, pressing the iron turning on/off button which will light on, the iron operating light indicator will also light on.
- c) Adjust the temperature dial in terms of the kind of fabrics that you want to iron.
- d) When the iron operating light indicator goes out, the iron will be ready for use



## PART 3: INSTALLATION

Take the device out of the box and remove the packing. In order to ensure a sufficient ventilation, the distance between iron and the wall or other objects should be at least of 15cm on the back and of 15cm on the side.

## PART 4: CLEANING AND MAINTENANCE

After unplugging the device from the wall outlet, let it completely cool down and then clean it with a damp cloth. Don't use any detergents, but only a soft cloth dampened with lukewarm water. Replace the iron vertically in a dry and clean place.

Note: Possible servicing operations for damage or fault caused by the formation of scale are not covered by the guarantee.

## PART 5: SERVICING

**ATTENTION:**

This device must be repaired only by qualified technicians authorized by specific centers.

## PART 6: TECHNICAL DATA

MODEL:	PHSS 4516
Rated voltage	230-240V, 50/60Hz
Rated power input	2150 W
Boiler power	1350 W
Iron power	800 W
Energy saving function	No

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

### DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these products to determined collection points. Or as an alternative in some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product. Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This appliance complies with EU rules and regulations regarding electromagnetic and electrical safety.

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make such changes.



**PHILCO**<sup>®</sup> 

is a registered trademark used under license from  
Electrolux International Company, U.S.A.