



# BEVERAGE & TEA MAKER

Instructions for use  
BEVERAGE & TEA  
MAKER



BM 8030

# BEVERAGE PREPARATION KETTLE

## CONTENT

4	Congratulations
5	Catler recommends safety first
10	Know your BM 8030 kettle
14	Kinds of tea
16	Operating your BM 8030 kettle
24	Care and cleaning
28	Troubleshooting



# Congratulations

on the purchase of your new BM 8030 beverage preparation kettle



## CATLER RECOMMENDS SAFETY FIRST

We at Catler are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions:

### IMPORTANT SAFEGUARDS FOR YOUR BM8030 BEVERAGE PREPARATION KETTLE

- Before using for the first time please ensure that your electricity supply is the same as shown on the rating label on the underside of the appliance. If you have any concerns please contact your local electricity company.
- Carefully read all instructions before operation and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the appliance for the first time. Check if the appliance is not damaged. Under no circumstances should a damaged product be used, appliance with a damaged power cord, etc.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.
- Do not place the kettle near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water.
- Do not place the kettle on or near a hot gas burner, electric element or where it could touch a heated oven.
- This appliance has been designed specifically for the purpose of boiling drinking quality water only. Under no circumstances should this product be used to boil any other liquids or foodstuffs. Use the product only to purposes it is designed for. Do not use it outdoors.
- Do not place any part of the product into gas, electric or

microwave oven or on the hot gas or electric plate.

- Keep the kettle clear of walls, curtains and other heat or steam sensitive materials. Minimum 20 cm distance.
- Do not operate the kettle on a metal surface, such as a sink drain board for example.
- The power plug should stay easy accessible for unplugging.
- Always ensure the kettle is properly assembled before connecting to a power outlet and operating. Follow the instructions provided in this book.
- The kettle is not intended to be operated by means of an external timer or separate remote control system.
- The kettle must be used only with the power base supplied. Do not use this supplied power base for other types of kettles.
- Never use the water kettle near water sources, such as a bathtub, shower or swimming pool, etc.
- Do not place anything on top of the lid.
- Do not touch the kettle with

wet hands.

- Do not touch hot surfaces. Use the handle for lifting and carrying the kettle.
- Do not leave the kettle unattended while in use.
- Always use the kettle on a flat, clean surface. Do not use it on an inclined surface, do not carry or move with kettle while in use.
- Use caution when pouring water from the kettle, as boiling water and steam will scald. Do not pour the water too quickly.
- To protect against electric shock, do not immerse the kettle base, power base, power cord or power plug in water or allow moisture to come in contact with these parts.
- Do not remove the kettle from the power base during operation. Ensure the kettle has switched off after the water has boiled or reached the selected temperature, before removing the kettle from the power base.
- Do not open the lid while it is turned on.

- Always take in mind the MIN and MAX levels when pouring water into the kettle. If the water kettle is overfilled, boiling water may splash out. Do not manipulate with the kettle lid if the water is boiling.
- Avoid pouring water or any other liquid on the power cord and plug.
- Always ensure the kettle switch is in the 'off' position, then turn the power off at the power outlet and remove the plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning and storing.
- Do not use abrasive or caustic cleaning agents to clean the product.
- Keep the outside and inside of the kettle clean. Follow the cleaning instructions provided in this book.
- Do not store or use any explosive or flammable substances (for example sprays) in or near the product.
- Do not unplug the water kettle by pulling on the power cable.

This may damage the power cable or socket. Unplug the cable by pulling the electrical plug.

- Use only supplied accessories with Catler product or recommended accessories by a manufacturer.

## **IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES**

- Fully unwind the power cord before use.
- Do not let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted.
- For the security reasons, we recommend to plug the Catler Tea Maker directly to its own circuit, separate from other appliances. It is not recommended using hub or extension cord.
- This appliance shall not be used by children. Keep the appliance and its cord out of the reach of children.
- This appliance can be used by children aged from 8 years and above and if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of the reach of children aged less than 8 years.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- It is recommended to inspect the appliance regularly. Do not use the appliance if power supply cord, plug or appliance become damaged in any way. Return the entire appliance to the nearest authorised Catler Service Centre for examination and/or repair.
- This appliance is for household use only. Do not use it for commercial purpose. Do not use in moving vehicles or boats. Do not use outdoors. Do not use this appliance for anything other than its intended use. Otherwise it may result in injury to persons.
- Do not use this appliance for other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

**CAUTION: HOT SURFACE.  
THE TEMPERATURE OF ACCESSIBLE  
SURFACES MAY BE HIGHER IF THE  
APPLIANCE IS IN OPERATION.**



**WARNING:  
TO PROTECT AGAINST ELECTRIC SHOCK  
DO NOT IMMERSE THE POWER CORD,  
POWER PLUG OR APPLIANCE IN WATER  
OR ANY OTHER LIQUID.  
DO NOT OPERATE THE KETTLE ON AN  
INCLINED SURFACE. DO NOT MOVE THE  
KETTLE WHILE IT IS SWITCHED ON.  
THE POWER PLUG SHOULD STAY EASY  
ACCESSIBLE FOR UNPLUGGING.**



**WARNING:  
ONLY FOR HOUSEHOLD USE.  
DO NOT IMMERSE INTO WATER OR ANY  
OTHER LIQUID. FULLY UNWIND THE CORD.**



# Know your BM 8030 kettle

## KNOW YOUR BM 8030 KETTLE



1. **Strainer lid**
2. **Kettle lid**
3. **Strainer handle**
4. **Strainer**
5. **Ergonomically shaped handle**
6. **Glass kettle**
7. **Base**
8. **Power cord storage area  
(in the bottom of the kettle base)**



### Control buttons and LCD display

1. **The KEEP WARM button** is used to keep the temperature for 30 minutes.
2. **The TIME/TEMP button** is used to set the infusion temperature or time and to modify your own programmes.
3. **The button ▼** is used to reduce infusion temperature or to shorten infusion time.
4. **Warming icon**
5. **KEEP WARM mode icon**
6. **LCD display**
7. **Own programmes**
8. **Temperature and time icons**
9. **The MENU button** is used to select the kind of tea or the temperature setting mode or to choose one of up to three of your own programmes.
10. **The ▲ button** is used to increase temperature or prolong infusion time.
11. **The START button** is used to switch the kettle on or off.

## TYPES OF TEA

**We distinguish between four main kinds of tea from the Chinese tea tree (*Camellia sinensis*) based on processing. The collection and fermentation processes (oxidation of polyphenols that leads to chemical changes in tea leaves and causes them to darken) affect the final type of tea produced.**

**Black tea** is the most popular tea in the world. The harvested leaves are fermented (oxidised) several hours prior to heating or drying. During the oxidation process, the leaves darken and the theine content increases. Black tea has the strongest taste and richest colour out of all the kinds of tea.

**White tea** is the rarest and most exclusive tea. It contains whitish tea buds that are steamed and then dried naturally. This type of tea has a low content of theine and has a slightly sweet taste.

**Green tea** accounts for about 10% of the World's tea. The tea leaves are collected, rolled, and dried before darkening. Green tea has a distinctive aroma and slightly bitter taste.

**Oolong tea** is semi-fermented tea, which means that the leaves are processed immediately after collection. They only pass through oxidation for a short time, where they become green or light reddish to brown. The tea has a pleasant fruity taste. However, it is not recommended to drink oolong tea with milk, sugar or lemon.

**Herbal decoctions and teas** are not produced from a tea tree but from flowers, leaves, roots or seeds. The most popular herbal teas are chamomile tea, mint tea, fennel tea, rosehip tea, and lemon verbena. Herbal decoctions that do not contain tea cannot turn bitter during a long infusion and can be infused up to three times in a row without loss of taste.

### Tea blends

Tea manufacturers also produce tea blends by combining different types of tea, very often to

achieve a better taste from one season to the next. Examples of popular black tea blends are English Breakfast, Earl Grey, Irish Breakfast and Russian Caravan.

### TIP:

The leaves of infused tea can serve as garden fertilisers and can improve soil quality.

### Storage of tea

- Tea is very prone to taking different scents and smells. To ensure the right taste and aroma, tea should not be allowed to moisten or come into contact with light.
- Store tea in vacuum packs, where it can be stored for up to 2 years. However, this depends on the quality and the type of tea. Once the vacuum pack is opened, tea should be transferred to airtight containers and stored in a dry and dark place.
- After opening, black tea lasts much longer than green or oolong tea; however, all teas should be stored in a dry and dark place.
- After the expiration data, the tea loses its aroma and the taste ranges from bitter to faint.

### Tips for optimum tea preparation

- Water quality affects the taste of the tea extract. Use filtered water to get a more quality extract.
- Smaller tea leaves are infused much faster than entire large leaves. This results in a very quick release of a large amount of tannins, which can cause a tart taste. To achieve the optimum taste it is recommended to set the correct infusion time.
- Follow the instructions on tea packaging, which list the recommended infusion temperature and time.



# Operating your BM 8030 kettle

## OPERATING YOUR BM 8030 KETTLE

### BEFORE FIRST USE

1. Before first use, remove all packaging and advertising labels / stickers from the kettle.
2. Wash the strainer lid, the strainer, and the kettle lid in warm water with a little washing-up liquid. Rinse and wipe dry.
3. Wipe the kettle and the base with a dry soft sponge.
4. Before using the kettle for the first time, boil clean water in the kettle. Fill the kettle with clean water, bring to the boil and then pour the water out. Repeat this procedure three or four times.

### Using the kettle to prepare tea

1. Place the kettle on a dry and even surface near a socket.
2. Remove the kettle from the base.
3. Unwind the power cord fully. On the sides of the base are practical cut-outs to place the power cord safely. Insert the power cord into one of the cut-outs and click.
4. Turn the strainer lid counter-clockwise until the mark on the strainer is pointing to OPEN on the kettle lid. Remove the lid.
5. Take the strainer out and put it to one side.
6. Remove the kettle lid.
7. Pour the required amount of water into the kettle. Do not use too much cold water. When filling the kettle with water, keep to the minimum and maximum lines.

### NOTE:

The maximum water volume for tea preparation is 1200 ml. Do not add more water if preparing tea. Hot water can splash from the kettle and there is a risk of burns. The minimum water volume for tea preparation is 500 ml. If you pour less water into the kettle, the infusion process may not be fully effective.

### WARNING:

**Do not use too cold or icy water. Allow the kettle to cool before reuse.**

8. Position the kettle lid and then the strainer lid. Align the mark on the strainer lid with the OPEN sign on the kettle lid. Turn the lid clockwise until it reaches the CLOSE sign.
9. Transfer the kettle to the base.
10. Now plug the power cord in the socket. A beep will sound and the LCD display will light up.
11. Press MENU repeatedly to select the type of tea to prepare or select one of your own saved programmes (for more information see the next section of the manual).

**NOTE:**

The kettle has seven pre-set programmes and three programmes that the users can modify themselves. The pre-set (default) programmes are: Green, Black, Herbal, Oolong, White, Boil (warming-up to 100°C), Flower. Each of these programmes has a pre-set temperature and infusion time. However, these values can also be changed according to your personal preference using the TIME / TEMP button.

**SUMMARY OF DEFAULT PROGRAMMES**

Warm-up temperature	Infusion time
Green tea / 75 °C	3 minutes
Black tea / 95 °C	6 minutes
Herbal tea / 90 °C	8 minutes
Oolong tea / 90 °C	5 minutes
White tea / 85 °C	4 minutes
Boil / 100 °C	-
Flower / 95 °C	5 minutes

**NOTE:**

Press the TIME / TEMP button again to switch between the default infusion time and the default temperature.

12. Press the START button. The warming-up icon lights up and the water begins to be heated to the required temperature. As soon as the water temperature inside the kettle reaches 30 °C, the temperature will be displayed, which will increase at 5 °C increments.

- 13. When warming-up the water, add tea, dried herbs, fresh herbs, or tea bags to the strainer. The amount of tea or herbs used always depends on your personal taste. Generally, 2 to 3 grams of tea per 200 ml of water are used. If you prefer a more intense taste, increase the amount of tea used.
- 14. Once the water in the kettle reaches the set temperature, a beep sounds and "PAUSE" appears in the display. At the same time, a 10-minute timer countdown starts. During this time, the kettle will keep the set temperature and the warming-up icon will flash. At the same time, a beep will sound every 2 minutes, indicating the need to insert the strainer. If you do not press the START button within 10 minutes to start the infusion process, the kettle will turn off.
- 15. Remove the strainer lid and insert the strainer. It is important that the strainer handle points towards the kettle handle. Position the lid back. It is important that you do not remove the kettle from the base. This would cancel the entire heating process and stop the infusion.

**NOTE:**

If any tea or herbs stay on the surface, use a teaspoon to immerse them into water.

**WARNING:**  
Be particularly careful when removing the strainer lid. After removing, very hot steam may escape from the opening, which can cause serious burns, or hot or boiling water may splash out. Do not touch the kettle lid while inserting the strainer. The kettle lid is very hot and severe burns can occur.

- 16. Now press the START button to start the infusion process. A beep sounds and "PAUSE" disappears from the display. The warming-up icon lights up and the infusion time countdown starts.
- 17. Once the pre-set infusion time has elapsed, a beep sounds and the kettle switches off. The warming-up icon disappears from the display.

18. Remove the strainer lid and take the strainer out immediately after the infusion time has elapsed. This prevents any degradation of the tea, as some types of tea may become bitter if they are infused for too long.

**NOTE:**

If you do not remove the strainer within 30 seconds after the infusion is completed, a beep sounds to indicate the need to remove the strainer.

**WARNING:**  
Be careful when handling the lid and strainer. Never handle them over the control panel and display. Use a bowl or dessert plate to rest the lid and strainer on.

- 19. Position the strainer lid back. The tea is now ready for drinking.
- 20. The timer stops five minutes after completion of the infusion if the kettle is not removed from the base sooner.

**NOTE:**

During the entire tea preparation period, the temperature or infusion time can be checked by pressing the TIME / TEMP button.

To cancel the tea preparation process, briefly press the START button for about 2 seconds.

The preparation process can also be cancelled by removing the kettle from the base.

### HEATING THE WATER TO THE REQUIRED TEMPERATURE

To heat the water in the kettle to the desired temperature, proceed as follows:

1. Follow steps 1 - 10 from the section "Using the kettle to prepare tea".
2. Press the MENU button repeatedly until "BOIL" lights up in the display. To quickly select, briefly press and hold the MENU button for about 2 seconds.
3. Use the ▼ / ▲ buttons to set the temperature. You can set it in intervals between 50 °C and 100 °C at 5 °C increments.
4. Press the START button. The warming-up icon lights up and the water begins to heat up to the required temperature. As soon as the water temperature inside the kettle reaches 30 °C, the temperature is displayed and increases in 5 °C increments.
5. As soon as temperature inside the kettle reaches the pre-set temperature, a beep sounds and the kettle switches off. The warming-up icon disappears from the display.

**NOTE:**

To immediately stop the heating, press the START button for about 2 seconds.

### ADJUSTING THE TEMPERATURE AND INFUSION TIME

Pre-set temperatures and infusion times can be adjusted according to your preference.

1. After selecting the type of tea using the MENU button, the temperature can be adjusted using the ▼ / ▲ buttons. Temperatures can be adjusted in intervals between 50 °C and 100 °C at 5 °C increments for each type of tea.
2. After adjusting the temperature, press the TIME / TEMP button to adjust the infusion time. Use the ▼ / ▲ buttons to shorten or prolong the pre-set time. The infusion time can be set from 30 seconds to 10 minutes in 30-second increments.
3. Once the temperature and infusion time have been adjusted, press the START button to start the kettle.

**NOTE:**

As described above, the adjustments to the temperature and infusion time are not saved in the kettle memory and need to be reset when reheating.

### OWN PROGRAMMES

The Catler BM 8030 kettle can save up to three programmes for your favourite teas in the kettle memory.

1. Press the MENU button repeatedly until the number of one of your own programmes lights up in the display.

2. Set the temperature using the ▼ / ▲ buttons. Press and hold the TIME / TEMP button for about 2 seconds to save the set temperature.
3. Set the infusion time using the ▼ / ▲ buttons. Press and hold the TIME / TEMP button for about 2 seconds to save the set infusion time.
4. Press the START button to turn the kettle on. The values are saved in the kettle memory. These will remain saved in the kettle memory until the set parameters are changed.

**NOTE:**

The values will remain in the kettle memory even after the power cord is unplugged.

### THE KEEP WARM MODE

- The KEEP WARM mode keeps the set water or tea temperature for a maximum of 30 minutes.
- In the tea preparation mode, the kettle keeps the temperature in the range between 50 °C and 80 °C. In the water heating mode, the kettle keeps the temperature in the range between 50 °C and 90 °C. The lower the starting temperature, the lower the temperature in the KEEP WARM mode.
- The Catler BM 8030 kettle can save up to three programmes for your favourite teas in the kettle memory.

#### 1. KEEP WARM MODE FOR TEA PREPARATION

- a) Press the KEEP WARM button when heating the water or during the infusion time. The KEEP WARM mode icon lights up in the display.

**NOTE:**

The KEEP WARM mode cannot be started once the infusion time has elapsed.

- b) Once the infusion time has elapsed, the kettle automatically switches to the KEEP WARM mode and the display starts to measure the time. The maximum time is 30 minutes.
  - c) When removing the kettle from the base, the mode is interrupted although measuring the time does not stop. The display shows "PAUSE" and the warming-up icon flashes. The warming-up mode is restored when the kettle is put back on the base and the START button is pressed. "PAUSE" will disappear from the display and the warming-up icon will stop flashing.
  - d) When the KEEP WARM mode time has elapsed (30 minutes), a beep sounds and the kettle switches to standby mode. The KEEP WARM mode icon will disappear from the display.
- To cancel the KEEP WARM mode, briefly press and hold the START button for about 2 seconds until a beep sounds. The KEEP WARM mode icon will disappear from the display.

#### 2. KEEP WARM MODE FOR TEA PREPARATION

- The KEEP WARM mode for water heating is identical to the KEEP WARM mode for tea preparation and must be started before the infusion phase is completed.

### **STANDBY MODE**

- If the kettle is plugged into a socket and is not operated within 5 minutes, the illuminated LCD will switch off. The LCD will not emit any light when in standby mode. To cancel the standby mode, press any button on the control panel. Unplug the power cord from the socket when the kettle is not in use.

### **OVERHEATING PROTECTION**

- The Catler BM 8030 kettle is fitted with safety protection against overheating in the event that the kettle is operated without water. In this case, the kettle will switch off automatically and E1 will appear on the display. Unplug the power cord from the socket, pour the water out of the kettle, do not put the kettle on the base and let it cool down for about 30 minutes. Then refill the kettle with clean cold water, place it back on the base and plug it into a socket. None of the buttons on the control panel will function until the kettle has cooled down.

### **RESTORE TO FACTORY SETTINGS**

- To restore the factory settings, press and hold the KEEP WARM button for about 5 seconds until a beep sounds and all icons in the display light up. If restoring the factory settings, all previous settings will be erased.

## CARE & CLEANING

**BEFORE CLEANING YOUR KETTLE, ALWAYS DISCONNECT THE CORD FROM THE SOCKET FIRST.**

**WARNING:**  
Never wash the kettle, the base, the cord or the cord plug under running water nor immerse them in water or another liquid.

- Use of the kettle may result in the accumulation of minerals from water and tannins from tea. This depends on the hardness of the water used and how frequently the kettle is used. Deposited scale and tannins can adversely affect the taste of the tea, so the kettle should be cleaned regularly.

### **CLEANING THE STRAINER LID AND KETTLE LID**

- Wash the strainer lid and the kettle lid in warm water with a little washing-up liquid using a soft sponge. Rinse and wipe dry.
- Neither the strainer lid nor the kettle lid is suitable for dishwasher washing.

### **CLEANING THE GLASS KETTLE**

- After each use, rinse the kettle with clean water. Do not leave the infused tea in the kettle for too long, e.g. overnight.
- Use a soft sponge to wipe the outer casing and the inside of the kettle. Always use clean, warm water, especially when using the kettle exclusively for tea preparation.

To remove residual tannins and mineral deposits:

- a) Fill the kettle with water up to the MAX 1200 mark and put a sliced lemon and lemon juice into the water. Let it boil and then infuse overnight. Pour the water out and discard the lemon slices. Fill the kettle with clean water and boil the water again. Pour the water out. Repeat as needed.
  - b) Fill the kettle with water up to the MAX 1200 mark and put 2 table spoons of baking soda into the water. Let it boil and then infuse overnight. Pour the water out. Fill the kettle with clean water and boil the water again. Pour the water out. Repeat as needed.
  - c) Fill the kettle with water up to the MAX 1200 mark and put 6 table spoons of white vinegar into the water. Let it boil and then infuse overnight. Pour the water out. Fill the kettle with clean water and boil the water again. Pour the water out. Repeat as needed.
- Wipe the kettle with a dry cloth.

### **CLEANING THE STRAINER**

- Wash the strainer in warm water with a little washing-up liquid using a soft sponge. Rinse and wipe dry.
- To remove excess deposits, use a mild, non-abrasive cleaning agent. Apply the cleaning agent to the sponge, not to the strainer. Always use a soft sponge. Do not use scouring pads, sponges with scouring pads etc.
- The strainer can also be washed in the upper dishwasher basket.
- When cleaning, be careful not to break the handle of the strainer.

### **CLEANING THE BASE**

- Wipe the base with a soft cloth slightly moistened with warm water. Then wipe dry with a clean cloth.

**WARNING:**  
Never immerse the glass kettle, the wireless base, the cord or cord plug in water or another liquid. Never expose the kettle or its parts to moisture.

**WARNING:**  
Never wash the glass kettle in running water or immerse it in water or any other liquid.

#### **NOTE:**

In order to prevent damage to the appliance, do not use alkaline cleaning agents; when cleaning, use a soft cloth and a mild cleaning agent.

### **STORAGE**

- Before storing, make sure that the kettle is turned off, cleaned and dry. Check that the lid is properly closed. Wrap the cord around the bottom of the base. Store your kettle vertically and never place anything on top of the lid.

# Troubleshooting

## TROUBLESHOOTING

<b>PROBLEM</b>	<b>SOLUTION</b>
<b>The kettle did not switch on.</b>	Make sure the plug is inserted into the socket. Insert the kettle plug into a different socket. Reset the electrical circuit breaker if necessary.
<b>The kettle does not warm up the water.</b>	Make sure the glass kettle is placed on the base properly.
<b>The LCD display is switched off.</b>	If the kettle is not used for more than 5 minutes, it switches to standby mode. The LCD is not backlit in the standby mode. To cancel the standby mode, press any button on the control panel.
<b>No function can be set.</b>	Some functions cannot be set or changed when warming or preparing tea.
<b>Tea infusion is too weak or too strong.</b>	The final taste of the tea depends entirely on your personal preference. This is why you should experiment with the preparation in order to get the best taste from your favourite tea. In order to obtain stronger infusion, it is necessary to increase the amount of tea or to prolong the infusion time. To obtain a weaker infusion, it is necessary to reduce the amount of tea or to shorten the infusion time.
<b>The KEEP WARM mode does not work</b>	To activate the KEEP WARM mode, press the KEEP WARM button when heating the water or during the infusion time.
<b>A programme did not save</b>	If adjusting the temperature or infusion time for pre-set programs, these modifications are not saved. You can use own programmes to save your settings.
<b>The infusion mode did not start</b>	The infusion mode must be activated by pressing the START button during the 10-minute break after the water warm-up ended. The infusion time was set for 0 minutes.





**Catler®**

# BEVERAGE & TEA MAKER

800 SERIES  
PREMIUM GRADE TOOLS

Due to continued product improvement, the products illustrated/photographed in this brochure may vary slightly from the actual product.



WWW.CATLER.EU

CUSTOMER SERVICE

INFO@CATLER.EU