

Catler®

400 SERIES

CLASS GRADE TOOLS

CORDFREE KETTLE

Instructions
for use



KE 4014

FAST BOIL KETTLE

CONTENTS

- 2 Congratulations
- 3 Catler recommends safety first
- 5 Know your kettle KE 4014
- 6 Operating your kettle KE 4014
- 8 Care and cleaning



Congratulations

on the purchase of your new kettle KE 4014.

CATLER RECOMMENDS SAFETY FIRST

We understand the importance of safety and so from the initial design concept to production itself we focus primarily on your safety. Nevertheless, we ask that you please be careful and follow the following instructions when using electrical appliances:

IMPORTANT SAFETY INSTRUCTIONS FOR USING YOUR KE 4014 KETTLE

- Before first use, make sure that the voltage in your power socket matches the nameplate voltage on the unit bottom. In case of any doubt, please contact a qualified electrician.
- Before operating your appliance, read all the instructions carefully and store them in a safe place for possible future reference.
- Before using the appliance for the first time, please remove all packaging and ad stickers and discard them in an environmentally safe manner. Check the appliance for any defects. Under no circumstances should you use a damaged appliance or an appliance with a damaged power cord etc.
- To eliminate the risk of small children suffocating, remove the protective cover of the power plug from this appliance and dispose of it safely.

- Do not operate the appliance on the edge of a desktop or a table. Make sure that the surface is flat, clean and free of water or other liquid stains.
- Do not place the appliance on a gas or electric stove or near it or in a location where it could come into contact with a hot oven.
- This appliance has been designed only for boiling drinking water. Never use the appliance to warm up other liquids or food. Use the appliance only for the purposes for which it has been designed. Do not use it outdoors.
- Do not put any part of the appliance in a gas, electric or microwave oven or on a hot gas or electric range.
- Do not place the appliance near walls, curtains or other substances sensitive to heat or steam. Please observe a minimum distance of 20 cm from such surfaces.
- Do not use the appliance on a metal pad such as a drip sink.
- A connected power outlet must be easily accessible for possible sudden disconnection.

- Before connecting your appliance to a power outlet and turning it on, make sure it's fully and correctly assembled. Follow the instructions provided in this user's manual.
- Do not use this appliance with a programmable switch, timer switch or any other component that automatically switches the appliance on.
- Use the kettle only with the base designed for and supplied with this type of kettle. Do not use the base supplied with this kettle for other types of kettles.
- Do not use the appliance near water sources like a kitchen sink, bathroom, swimming pool etc.
- Do not put any subjects on the lid.
- Do not touch the appliance with wet or damp hands.
- Do not touch hot surface. Use handle to manipulate the appliance.
- If the appliance is in operation, do not leave it unattended.
- Always operate the appliance on a flat surface. Do not operate the appliance on an inclined surface and do not move and/or handle it in any manner during operation.

- As hot water and steam may cause burns, be cautious when pouring boiled water. Do not pour water too fast.
- Do not wash the kettle, base, mains cord and plug under running water and do not immerse them in water or any other liquid.
- Do not remove the kettle from its base while it's turned on. Before removing the kettle from its base, make sure that it has been turned off.
- Do not open the kettle's lid during operation.
- Observe minimum and maximum level marks when filling the kettle with water. If the kettle is overfilled, the boiling water may splash out. Do not handle the kettle's lid while the water is boiling.
- Avoid spilling water or other fluid onto the mains cord and plug.
- Always turn the appliance off and disconnect the power plug from the power outlet whenever it is left unattended, after use, before you start cleaning it or before you take it elsewhere, disassemble it, assemble it or before storing it.

- Do not use rough abrasive or caustic detergents to clean the appliance.
- Keep both inside and outside of the appliance clean. Follow the cleaning instructions provided in this user's manual.
- Do not store or use any explosive and/or flammable substances inside or in the vicinity of this appliance, such as flammable gas sprays.
- To disconnect the appliance from the power outlet, always hold the cord plug, not the cord itself while pulling.
- Do not use any accessories other than those supplied with the Catler appliance.

IMPORTANT SAFETY INSTRUCTIONS FOR USING ELECTRICAL EQUIPMENT

- Fully unwind the power cord before use.
- Do not leave the power cord hanging over the edge of a table or countertop or allow it to touch a hot surface or to become tangled up.
- For safety reasons, we recommend to connect the appliance in an independent electrical circuit separated from other appliances. Do not use adapter plugs or extension cords to connect the appliance to a power outlet.
- This appliance is not to be used by children. Keep this appliance and its power cord out of children.
- This appliance may be used by children 8 years of age and older, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision. Keep the appliance and its power cord out

of reach of children younger than 8 years of age.

- This appliance may be used by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Children must not play with the appliance.
- We recommend that you inspect the appliance regularly. Do not use the appliance if it is damaged in any way or if the power cord or plug are defective. All repairs or adjustments must be performed at the nearest Catler authorised service centre.
- This appliance is designed for household use only. This appliance is not designed for commercial use. Do not use this appliance in moving vehicles or on boats, outdoors, or for any purpose other than it's intended. Otherwise, there is a risk of personal injury.
- Any maintenance other than standard cleaning must be performed at authorised Catler service centre.

- We recommend to install a residual current device (standard safety switches in your power outlet) to provide a higher level of protection when using the appliance. We recommend to install a residual current device (with

a nominal residual operating current of no more than 30mA) in the electric circuit in which your appliance is to be connected. For further expert advice, please contact your electrician.

WARNING:

DO NOT WASH THE KETTLE, BASE, MAINS CORD AND PLUG UNDER RUNNING WATER AND DO NOT IMMERSE THEM IN WATER OR ANY OTHER LIQUID. DO NOT USE THE KETTLE ON AN INCLINED SURFACE. DO NOT MOVE THE KETTLE WHILE IT'S PLACED ON ITS BASE AND TURNED ON. A CONNECTED POWER SOCKET MUST REMAIN EASILY ACCESSIBLE FOR EASY DISCONNECTION.

WARNING:

FOR DOMESTIC USE ONLY.

DO NOT SUBMERGE IN WATER OR IN ANY OTHER LIQUID. FULLY UNWIND THE MAINS CORD BEFORE USE.



KNOW YOUR KETTLE KE 4014



1. Detachable lid with viewing window
2. Double-layer housing
3. Brushed stainless steel
4. Volume of 1 l
5. MAX and MIN level marks (marked inside the kettle)
6. Ergonomically shaped handle
7. Power button
8. +/- buttons to set temperature from 50°C to 100°C
9. LCD display
 - During operation, the kettle shows increasing temperature.
 - When turned off, actual temperature inside the kettle is shown.
10. Heating element (inside the kettle, not shown)
11. Base with space to store the mains cord

OPERATING YOUR KETTLE KE 4014

Before first use

Before first use, remove all packaging and advertising labels / stickers from the kettle. Before using your kettle to prepare hot drinks for the first time, allow clean water to boil. Fill the kettle with clean water, bring to a boil and then pour the water out. Repeat this procedure 3 to 4 times. The kettle is then ready to be used for preparing hot drinks. Your kettle will only operate correctly if placed on its base connected to an electric outlet and if the power button is in the on position. As soon as the water boils, the kettle will switch off automatically.

Heating water to a required temperature

1. To fill the kettle with water, remove it from its base and detach the lid. Fill the kettle with the required amount of water. Do not fill the kettle below the minimum or above the maximum level mark. Lack of water would lead to turning the kettle off before boiling. If the kettle is overfilled, the boiling water might splash out.
2. Put the lid back and make sure it's firmly closed. Place the kettle on its base. Connect the mains cord to a power outlet.
3. An acoustic signal will sound. The LCD displays "—".
4. Use the +/- buttons to set the temperature from 50 to 100°C in 5°C steps. The initial temperature after turning on for the first time is 80°C.
5. Press the power button to start heating. The button will be backlit in red.
6. As soon as the temperature inside the kettle reaches 30°C, you will be able to watch it rise until the set value has been reached.

7. When the temperature inside the kettle reaches the set value, an acoustic signal will sound 5 times and the button will be backlit in yellow.
8. Disconnect the mains cord from the power outlet, remove the kettle from its base and pour the water in prepared cups.

If you need to turn the kettle off immediately, press the power button. An acoustic signal will sound and the heating process will stop.

NOTE

Fast selection - heating water to 100°C

1. If you need to heat water to 100°C, proceed as follows:
2. Perform steps 1 to 3 from "Heating water to a required temperature".
3. Hold down the + button for about 2 seconds. An acoustic signal will sound. 100°C will appear on the display.
4. Press the power button to switch the kettle on.
5. If the power button is not pressed within 6 seconds, the kettle will be put into standby and the LCD will show current temperature.

Fast selection - heating water to 60 °C

If you need to heat water to 60 °C, proceed as follows:

1. Perform steps 1 to 3 from "Heating water to a required temperature".
2. Hold down the - button for about 2 seconds. A short acoustic signal will sound. 60°C will appear on the display.
3. Press the power button to switch the kettle on.
4. If the power button is not pressed within 6 seconds, the kettle will be put into standby and the LCD will show current temperature.

Fast selection - heating water to 80°C

If you need to heat water to 80 °C, proceed as follows:

1. Perform steps 1 to 3 from "Heating water to a required temperature".
2. Hold down the - and + buttons simultaneously for about 2 seconds. A short acoustic signal will sound. 80°C will appear on the display.
3. Press the power button to switch the kettle on.
4. If the power button is not pressed within 6 seconds, the kettle will be put into standby and the LCD will show current temperature.

The last set heating temperature will be stored in the kettle's memory. If you want to warm up to the same temperature again, press the power button. If you wish to heat to another temperature, use the +/- buttons to set the required temperature and press the power button.

NOTE

If you need to check the set temperature during heating, hold down the + or - button for about 2 seconds. The set temperature will start flashing on the display for about 6 seconds. Then, the display will show the temperature progress during heating.

NOTE

"Keep-warm" mode (temperature keeping)

- The "Keep-warm" mode keeps the set temperature for a maximum of 60 minutes. When this time has elapsed, the kettle will automatically revert to standby.
- The mode will be enabled automatically when the heating has finished. The power button will be backlit in yellow as long as the "Keep-warm" mode is active.

- While the kettle is in the "Keep-warm" mode, it will switch on and off regularly. This is a normal state when the kettle keeps the set temperature.
- To cancel the "Keep-warm" mode, press the power button or remove the kettle from its base.
- If the set temperature is within 90 - 100°C, the water will automatically cool down to 90°C and the kettle will maintain this temperature (90°C) inside. As soon as the temperature reaches 90°C, acoustic signal will sound and the display will show 90°C. This is a common safety precaution to prevent the water from boiling out and possible damage to the kettle.
- When about 60 minutes have elapsed, acoustic signal will sound 5 times and the "Keep-warm" mode will turn off. The LCD will show the current water temperature inside the kettle. As the water temperature inside the kettle drops, the display readout will also decrease.

If you press the +/- button briefly while in the "Keep-warm" mode, the temperature the kettle has been warmed up to will be flashing on the display for about 6 seconds. Then, the display will revert to the current temperature.

NOTE

Stand-by mode

The kettle will automatically switch to stand-by mode after 30 hours of inactivity. If the "Keep-warm" mode is enabled, the kettle will not switch to standby until the "Keep-warm" mode has been disabled. To switch on from the standby mode, press +/- buttons or the power button.

Overheating protection

If the water temperature exceeds the preset level, the power button will go out, an acoustic signal will sound 3 times and the kettle will switch to standby. If such case, disconnect the mains cord plug from your electric outlet, empty the kettle, put it away from its base and allow it to cool down for about 20 minutes. Then, fill your kettle with clean cold water, put it on its base and plug the mains cord in the electric outlet.

Dry-boil protection

If the kettle recognizes no water inside, the heating will stop. The power button will go out and the kettle will turn off completely. A safety fuse will trip. Detach your kettle from its base and rinse with cold water. Disconnect the mains plug from the electric outlet, wait about 5 minutes and then reconnect.

Heating element

If the heating element fails, the appliance's electric circuit will open and all indicators will go out. "E1" will appear on the display. No kettle features will be available. Please contact Catler authorised service centre.

CARE AND CLEANING

Before cleaning your kettle, always disconnect the mains cord from the electric outlet first.

Cleaning the outer case KETTLE

To clean the kettle's outer surface, please use a damp cloth; to polish, use a dry cloth. For cleaning the outer case, do not use chemicals, wire brushes or abrasive detergents.

Removing mineral deposits

Tapped water may contain minerals that may deposit inside the kettle and water gauge and lead to colouration after some time. To remove the deposits, proceed as follows:

1. Fill your kettle to 2/3 of its level with 1 portion of vinegar and 2 portions of water. Boil the solution and leave stand in the kettle overnight.
2. Empty your kettle and then boil clean water twice. The kettle is then ready for further use.

The base heating element is made of high grade stainless steel. Brown stains that may appear during use are mineral deposits from the boiled water. This is no corrosion in any case.

NOTE

Storage

Before storing your kettle, make sure it's turned on, clean and dry. Check that the lid is closed properly. Wrap the mains cord around the bottom of the base. Store your kettle vertically and never put anything on the lid.



WARNING:

DO NOT SPLASH WATER OR ANY OTHER LIQUID ONTO THE KETTLE OR ANY OF ITS PARTS OR ACCESSORIES. DO NOT WASH THE KETTLE, BASE, MAINS CORD AND PLUG UNDER RUNNING WATER AND DO NOT IMMERSE THEM IN WATER OR ANY OTHER LIQUID.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



The product applies all regulations of EU.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

The original version is in the Czech language.

Address of the manufacturer: FAST ČR, a.s., Černokostelecká 1621, Říčany CZ-251 01



CORDFREE KETTLE

400 SERIES

CLASS GRADE TOOLS

Due to continued product improvement, the products illustrated/photographed in this brochure may vary slightly from the actual product.



W W W . C A T L E R . E U

CUSTOMER SERVICE

I N F O @ C A T L E R . E U