

SENCOR®

SKS 6500BK
SKS 6501WH



EN ■ Kitchen Scale


Translation of the original manual

SAFETY INSTRUCTIONS AND IMPORTANT NOTES


- This appliance is designed for household use. Do not use it for commercial purposes, for weighing animals or for other purposes for which it is not intended.
- This appliance may be used by children and persons with reduced physical, sensory or mental abilities or with insufficient experience and knowledge if they are properly supervised.
- Children must be supervised to ensure that they do not play with the appliance.
- Do not use the appliance outdoors, do not locate it on unstable surfaces, on electric or gas cooktops, in the vicinity of an open flame or other sources of heat.
- Do not expose the appliance to direct sunlight or high humidity and do not use it in an excessively dusty environment.
- During use, it is necessary to ensure that the appliance is located on an even, smooth, hard and stable surface. Otherwise, this may result in weighing inaccuracies.
- In the event that the maximum weighing capacity is exceeded, remove the excessively heavy food or item from the weighing platform to prevent possible damage to the appliance.
- Do not use the appliance as a place for placing items. It must be ensured that no items are placed on the appliance during storage.
- Always use new batteries of the same type. Never combine used and new batteries or various types of batteries. Never put the batteries in a fire, short circuit them or damage them in any way. Dispose of them ecologically at the end of their lifetime. Never throw batteries out with communal waste.
- If you will not be using the appliance for an extended period of time, remove the batteries. If the battery were to leak into the inner area of the appliance, this could damage it.
- Do not use rechargeable batteries to power this appliance.
- Keep the batteries out of children's reach as they may present a hazard to a child. In the event that a child swallows a battery, immediately seek medical help.

- Keep the appliance clean. When cleaning it, follow the instructions in chapter Cleaning and maintenance. Do not submerge the appliance under water or any other liquid and do not rinse it under running water.
- Do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

A

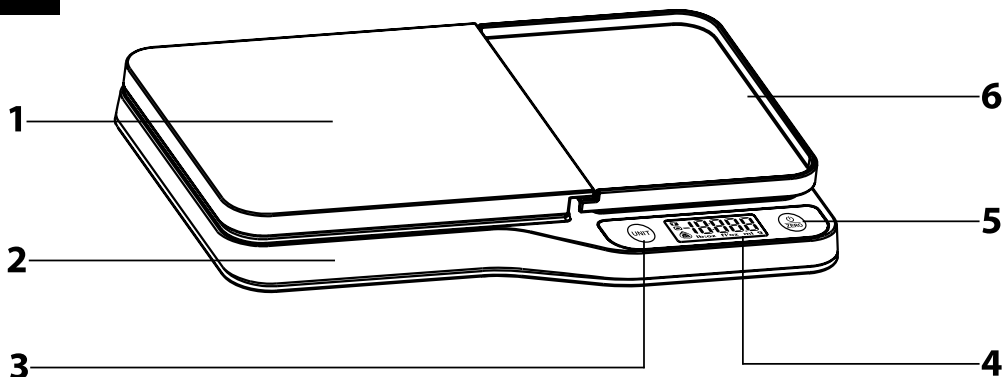

B

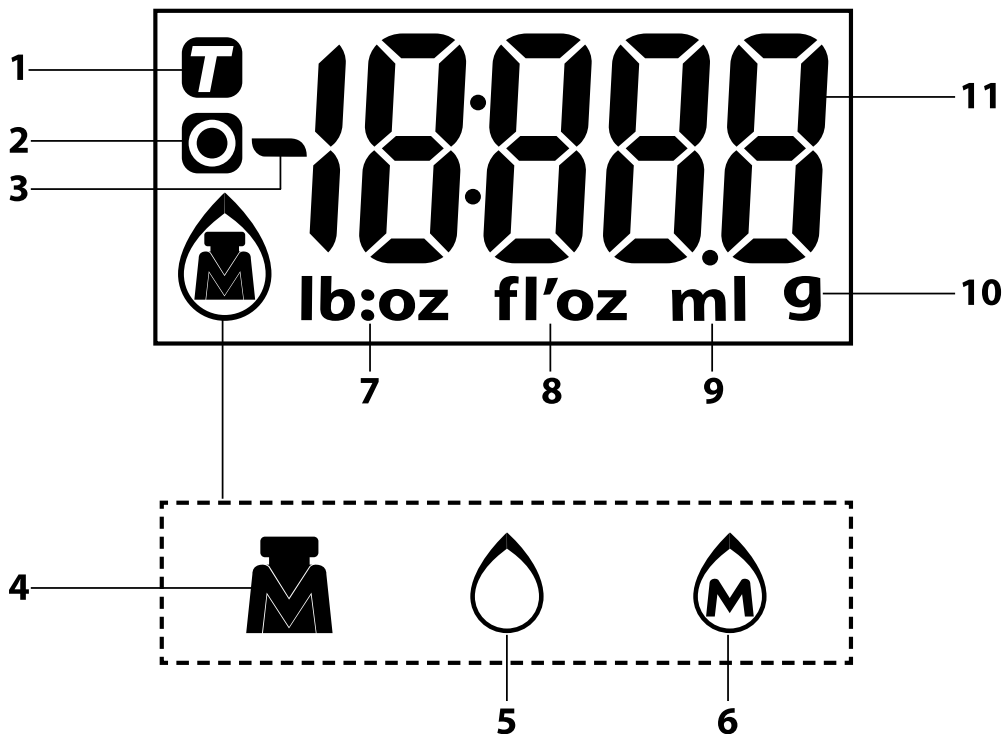

- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use. We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

DESCRIPTION OF THE APPLIANCE

- A1** Bamboo board
- A2** Kitchen scale base unit
- A3** UNIT button for toggling between metric and imperial measuring units
- A4** LCD display
- A5** ZERO button for turning the scale on and off, for zeroing the weight
- A6** Removable weighing tray
- Battery compartment (not shown) located on the underside of the scale.
- of the item located on the scale and for weighing additional ingredients

DESCRIPTION OF THE DISPLAY

- B1** Tare icon
- B2** Zeroing function icon
- B3** Minus symbol
- B4** Weighing mode
- B5** Water volume measurement mode
- B6** Milk volume measurement mode
- B7** Imperial weight unit
- B8** Imperial volume unit
- B9** Metric volume unit
- B10** Metric weight unit
- B11** Weight or volume value

POWER SOURCE

- This scale also comes with two type AAA 1.5 V alkaline batteries. The batteries are already installed in the battery compartment, however, during transport they are protected by an insulating strip to prevent them from discharging before reaching the end customer and damaging the appliance. To use the scale, remove the insulating strip.
- When the LCD display **A4** shows "LO", it is necessary to replace both batteries with new ones.
- Remove the battery compartment cover and take out the flat batteries. Insert new batteries of the same type. Ensure correct polarity as shown at the bottom of the battery compartment and put on the cover.

SELECTING A MODE

- Press the **UNIT** button **A3** and select the required weighing or volume measurement mode. Each time the button is pressed, the mode will change in the following order: weighing mode – water volume measurement mode – milk volume measurement mode. The mode setting is indicated by the respective icon (**B4 – B6**) on the display **A4**.

SELECTING A WEIGHT AND VOLUME MEASURING UNIT

- Hold down button **UNIT** **A3** and select from the metric or imperial measuring units. Then press the button **UNIT** **A3** to select a weight or volume unit. The respective icon (**B7 – B10**) will appear on the display **A4**.

WEIGHING

- Place the scale on an even and stable surface. Place the board **A1** and tray **A6** on to the kitchen scale base unit **A2**.
- Press the button ZERO **A5** to turn on the scale. Place the ingredients that you wish to weigh into the middle of the tray **A6**. The weight of the weighed ingredients will be shown on the display **A4**.
- If necessary, the tray **A6** with the inserted ingredients may be taken off the scale to a different location.



Note:

Ingredients can be cut into pieces on the bamboo board **A1** before being weighed.

MEASURING VOLUME

- Place the scale on an even and stable surface. Place the board **A1** and tray **A6** on to the kitchen scale base unit **A2**.
- Press the button ZERO **A5** to turn on the scale. Use button **UNIT** **A3** to select the volume measurement mode.
- Place a container for measuring volume in the middle of the tray **A6**. To reset the value on the display to zero, press button ZERO **A5** again. A zero will appear on the display **A4**. Pour the liquid into the container and its volume will be shown on the display **A4**.

ZEROING AND TARE FUNCTIONS

These functions are used for setting the weight of the container to zero when this weight is not intended to be added to the total weight of the ingredients, and for weighing additional ingredients.

Place the container or the ingredient on to the scale and wait until the weight is shown on the display **A4**. Before placing another item on to the scale, press button ZERO **A5**. This will set the value shown on the display **A4** to zero. The icon **B1** or **B2** will appear on the display **A4** based on the weight of the item placed on the scale – more information below. Now you may add another item and repeat the above described procedure.

A. Zero function

- If the total weight of the items located on the scale is $\leq 4\%$ of the maximum weighing capacity, i.e. ≤ 200 g, the display **A4** will show "—" or "0 g" each time that button ZERO **A5** is pressed. If "—" is shown on the display, wait until the value stabilises. When "0 g" is shown and icon **B2** is lit, the zeroing function is active. The maximum weighing capacity remains unchanged.

B. TARE function

- If the total weight of the items located on the scale is $> 4\%$ of the maximum weighing capacity, i.e. > 200 g, the display **A4** will show "—" or "0 g" each time that button ZERO **A5** is pressed. If "—" is shown on the display, wait until the value stabilises. When "0 g" is shown and icon **B1** is lit, the tare function is active. The maximum weighing capacity will be reduced by the total weight of the items on the scale.



Note:

When all the items are removed from the scale, the display **A4** will show a negative value.

TURNING OFF

- The scale will turn off when left idle for longer than 2 minutes.
- If you wish to turn the scale off sooner, press button ZERO **A5** when "0" is shown. If the weight of the ingredients is shown, hold down button ZERO **A5** for approx. 3 seconds to turn off the scale.

ERROR MESSAGES

| Display | What to do |
|------------|---|
| Lo | Batteries are flat. Replace the batteries. More information in chapter "Power source". |
| Err | The maximum weighing capacity of the scale is exceeded. Remove the ingredients from the tray A6 to prevent damaging the scale. |

CLEANING AND MAINTENANCE

- To clean the scale, use a soft sponge lightly dampened in warm water. Wipe dry using a clean wiping cloth.
- For cleaning, do not use steel wool, cleaning products with an abrasive effect, solvents, etc. Otherwise, the surface of the appliance may be damaged.
- Do not submerge the scale under water or any other liquid and do not rinse it under running water.

TECHNICAL SPECIFICATIONS

| | |
|--------------------------|----------------------------|
| Power source | 2x 1.5V type AAA batteries |
| Weighing capacity | 5 kg / 11 lb |
| Weighing precision | 1 g / 0.1 oz |
| Measuring units | kg / ml / fl.oz / lb.oz |

We reserve the right to change text and technical specifications.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED BATTERIES



Batteries contain environmentally damaging compounds and, therefore, do not belong in standard communal waste. Hand over used batteries for proper disposal at locations intended for their collection.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.



Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human

health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.