



EN ■ Meat grinder

Translation of the original manual

READ CAREFULLY AND STORE FOR FUTURE USE.**General warnings**

- This appliance may not be used by children. Keep the appliance and its power cord away from children.
- The appliance may be used by persons with reduced physical, sensory or mental capabilities or with a lack of experience and knowledge, if they are supervised or have been instructed to use the appliance in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.

**Warning:**

Incorrect use may lead to injuries.

- Be especially careful not to injure yourself on the sharp cutting edges when handling the chopping blades, especially when removing the blades from the feed tube, when emptying the feed tube and when cleaning it.
- The surfaces of the appliance that come into contact with food must always be cleaned according to the instructions in this user's manual.
- Always disconnect the appliance from the power supply when leaving it without supervision and before assembly, disassembly or cleaning.


■ Before replacing the accessories or accessible parts that move during use, turn the appliance off and disconnect it from the power supply.



- Before connecting this appliance to a power socket, make sure that the voltage stated on its rating label corresponds to the voltage in your power socket.
- Connect the appliance only to a properly grounded socket. Do not use an extension cord.
- Never connect the appliance to a power socket until it is properly assembled.
- Fully unwind the power cord before use.
- Do not connect and disconnect the power cord to and from the power socket with wet hands.
- Ensure that the power plug contacts do not come into contact with water or any other liquid. If precisely this happens, carefully dry the power plug before using it again.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the power socket. Disconnect the power cord from the power socket by pulling on the plug.
- Do not place heavy items on the power cord. Make sure the power cord does not hang over the edge of a table and that it is not touching a hot surface or sharp objects.
- Do not wind the power cord around the appliance.
- Always turn off the appliance and disconnect it from the power socket when not using it, when leaving it without supervision and before removing or replacing accessories, and before cleaning, maintenance or storage.
- To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments of the appliance performed at an authorised service centre. Tampering with the appliance during the warranty period may void the warranty.
- To prevent the risk of injury by electrical shock, never submerge the motor unit and its power cord in water or any other liquid, or wash these parts under running water.
- Always turn off the appliance and disconnect it from the power socket when you have finished using it.
- In the event that the appliance falls into water, under no condition reach for it, rather, immediately disconnect the power cord from the power socket. Never use an appliance that has been submerged in water. Hand it over to an authorised service centre for inspection.

SAFETY DURING USE



- This appliance is designed only for household use and constructed for processing the usual amount of food in a household. Do not use this appliance for commercial purposes.
- Do not use the appliance in an industrial environment or outdoors. Do not use it for any other purposes than those intended.
- The appliance is intended for domestic use and similar locations such as:
 - kitchens in stores; offices and other workplaces;
 - in agriculture;
 - for guests of hotels, motels and other similar locations;
 - in bed and breakfast establishments.
- This appliance is not intended to be operated using an external timer switch or a remote control system that would enable this appliance to be turned on automatically.
- Use the appliance and its accessories in accordance with the instructions contained in this user's manual.
- Only use the appliance with the original accessories that came with it.
- Before every use, check the selected accessory for damage. Never use the appliance with a damaged accessory.
- Do not place the appliance or its accessories on an electric or gas stove or in its vicinity, on the edge of a table or on an unstable surface. Only place the appliance on an even, dry and stable surface.
- Do not expose the appliance and its accessories to the outdoor environment, extreme temperatures, direct sunlight, excessive humidity or excessively dusty environments.
- Do not place the appliance and its accessories near heaters, open fires or other sources of heat.
- Make sure that the appliance is correctly assembled before putting it into operation.
- Do not use the appliance if it has fallen on the floor, if it was submerged in water, if it is not functioning correctly or if it is damaged in any other way.
- The meat grinder may run continuously for no longer than 15 minutes. Before starting it again, allow it to cool down for approximately 10 minutes.
- Do not turn on the appliance when it is empty. Incorrect use of the appliance may negatively affect its lifetime. Do not leave a running appliance without supervision.
- Do not touch moving rotating parts during operation. Otherwise, this could result in injury.
- Do not use the meat grinder for crushing bones, nuts or other hard foods.
- Before using the meat grinder, remove any bones, skin, cartilage, etc.
- Never process frozen food. Frozen food must be defrosted prior to being processed in the meat grinder.
- To prevent the meat grinder from clogging, push down gently on the pusher when adding the food into the feed tube.
- Always use the pusher supplied with the appliance. Never use your fingers or other items to push ingredients through the feed tube while the appliance is running.
- Before disassembly and installation of any accessories, always turn off the appliance and check that the rotating parts have stopped.
- Do not perform any maintenance on the appliance other than cleaning the individual components as described in chapter Cleaning and maintenance.
- Pay increased attention whenever handling the cross blade to prevent injury on the edges of the blade.
- In order to prevent a hazardous situation arising, do not repair the appliance yourself or modify it in any way. Have all repairs performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.
- Store the appliance in a dry environment.

A

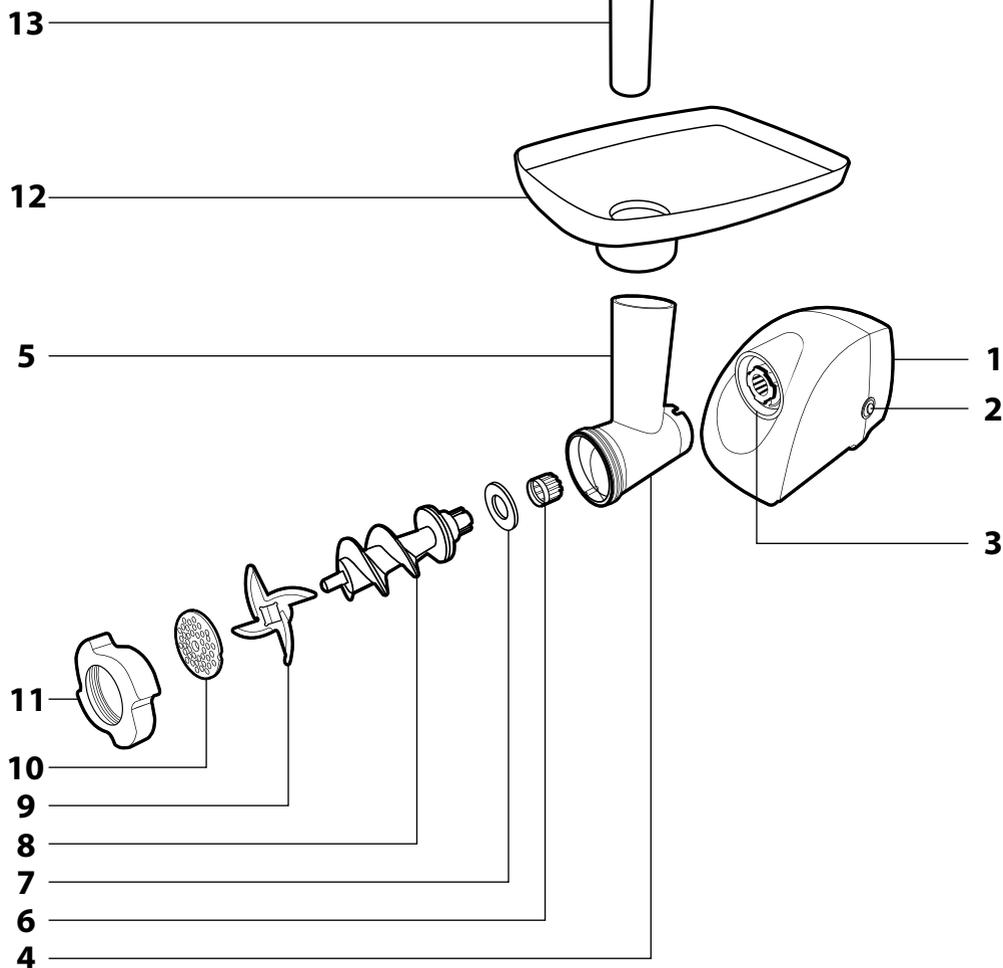

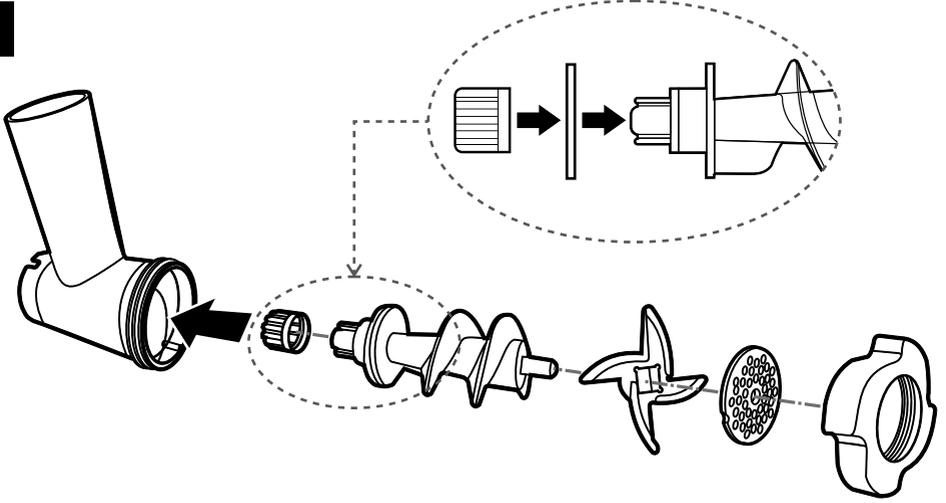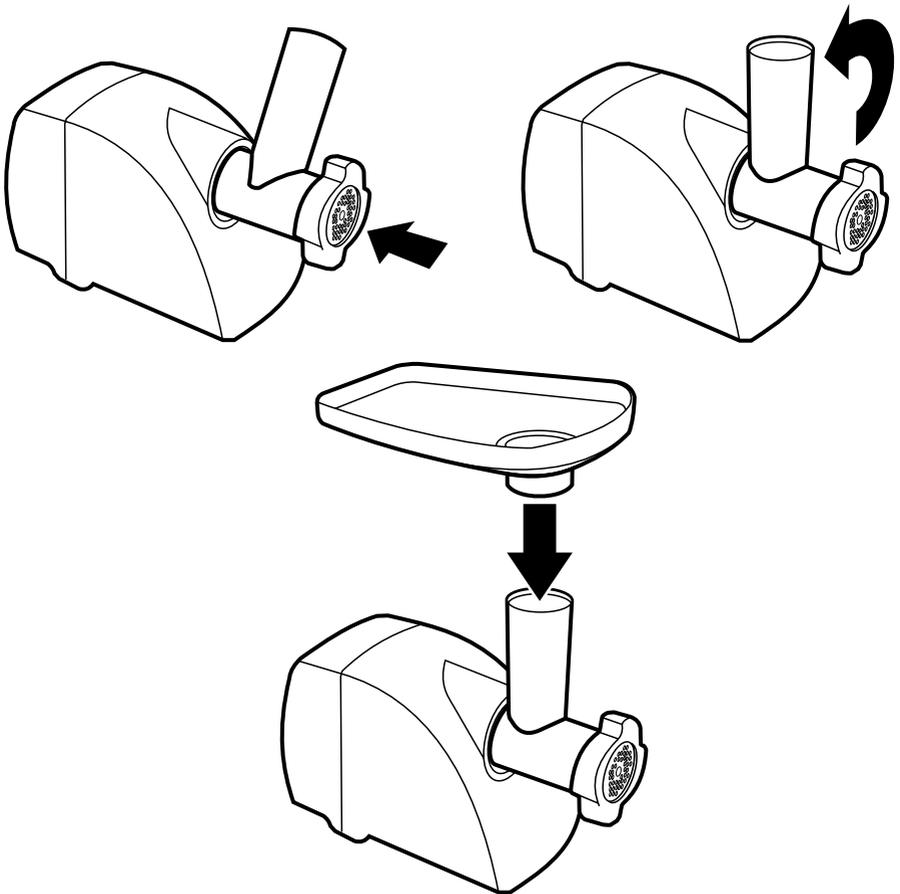B**C**

D

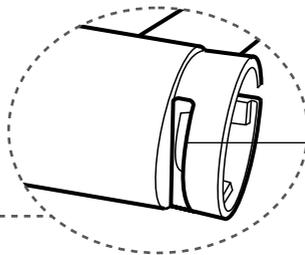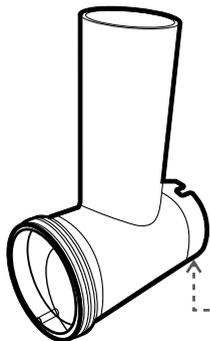

1

- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use. In the event that you hand this appliance over to somebody else, make sure to also include this user's manual.
- Carefully unpack the appliance and take care not to throw away any part of the packaging before you find all its parts. We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

DESCRIPTION OF THE APPLIANCE AND ITS ACCESSORIES

A1 Motor unit base	A7 Gasket ring
A2 Main power switch	A8 Screw shaft
A3 Hole with shaft for attaching the grinding chamber	A9 Cross blade
A4 Grinding chamber	A10 Grinding disc
A5 Feed tube	A11 Screw ring
A6 Safety clutch	A12 Filling tray
	A13 Pusher

D1 Fruit juice draining groove

PURPOSE OF USE

- The grinder is intended for processing meat, poultry, fish, fruits and vegetables.
- The grinder is not intended for crushing bones, nuts or other hard ingredients or frozen food.

BEFORE FIRST USE

- Before using it, wash all parts that come into contact with food in hot water using a small amount of kitchen detergent, then rinse with clean water and wipe dry.
- Wipe the outer surface of the motor unit base using a soft sponge dipped in warm water with a small amount of kitchen detergent and wipe it dry.



Attention:

When cleaning the cross blade **A8**, be very careful not to injure yourself on its sharp cutting edges.

ASSEMBLY AND DISASSEMBLY OF THE GRINDING ATTACHMENT

- Prior to using this appliance, it is always necessary to correctly assemble the grinding attachment (fig. B), which consists of parts **A4** to **A11**.
- Slide the gasket ring **A7** on to the screw shaft **A8**, then insert the safety clutch **A6** together with the shaft into the grinding chamber **A4** with the safety clutch going in first.
- Put the cross blade **A9** on to the end of the screw shaft. The cutting edge must point outwards from the grinding chamber.



Attention:

When attaching the cross blade, be very careful not to injure yourself on its sharp cutting edges.

- Put the grinding disc **A10** on to the blade. When putting on the disc, ensure that the tab on the head of the grinding chamber slides into the groove on the grinding disc.
- Screw the screw ring **A11** on to the grinding chamber and tighten it firmly.
- Put the assembled grinding attachment on to the motor shaft in hole **A3** so that the cogs on the rear part of the grinding attachment slide into the cogs on the motor shaft (fig. C) and then turn the attachment anticlockwise. Check that the attachment is properly attached and not moving in the motor shaft.
- Put the filling tray **A12** on to the feed tube **A5** of the grinding chamber.
- Now the grinder is assembled and ready for grinding food.
- When disassembling, proceed in reverse sequence to the assembly.

GRINDING

- Before grinding, remove any bones, cartilage and tendons from the meat. Cut the meat into pieces measuring approximately $20 \times 20 \times 40$ mm.
- Cut fruit and vegetables into pieces that will freely pass through the feed tube.



Attention:

Never attempt to grind frozen meat or other types of frozen food. It is necessary to allow frozen food to defrost completely before grinding it.

- Underneath the grinding attachment, place an appropriate bowl into which the ground food will fall.
- Place the appliance on an even, dry surface, unwind the power cord from the underside of the motor unit base **A1** and plug it into a power socket.
- Place the food that you wish to grind on to the filling tray **A12**.
- Turn on the grinder by pressing button **A2**.
- Gradually place the food into the feed tube **A5**, and using the pusher **A13**, push it down into the grinding chamber. To prevent the grinder from clogging, do not overfill the feed tube. Push down gently on the pusher.



Attention:

Never use your fingers or other items to push food through the feed tube while the grinder is running. Only use the supplied pusher for this purpose.

- To process food with a high juice content (certain types of fruit), the grinding chamber **A4** is equipped with a groove **D1** for draining away excess juice.
- In the event that the feed tube becomes clogged, first turn off the grinder using button **A2** and then disconnect it from the power socket. Then remove the grinding attachment and clean away any processed food. If necessary, completely disassemble the grinding attachment, clean it out and reassemble it. Put the attachment back on to the motor unit base **A1** and continue working.



Attention:

The maximum continuous operating time of the appliance is 15 minutes. Then allow it to cool down for approximately 10 minutes.

- When you have finished using the grinder, turn it off using button **A2** and disconnect the power cord from the power socket. Ensure that the rotating parts have stopped rotating and take the grinding attachment off the motor unit base **A1**, and then disassemble it into its individual parts. Then clean all used parts according to the instructions in chapter Cleaning and maintenance.

FUNCTION OF THE SAFETY CLUTCH

- In the event that a piece of hard food enters the grinding chamber **A4** and the screw shaft **A8** is subsequently jammed, the safety clutch **A6** will break. In this way, the motor unit is protected against overloading and damage.
- In the event that the safety clutch breaks, always immediately stop working with the grinder, turn it off and disconnect it from the power grid. Disassemble the grinding attachment and thoroughly clean all its parts. Fragments of the broken clutch that are not removed may again cause the screw shaft to jam or damage the motor unit. After cleaning out the grinding attachment, slide a new safety clutch on to the screw shaft and continue working.



Attention:

Never use the grinding attachment without the safety clutch **A6**. This could lead to serious damage of the motor unit.

TROUBLESHOOTING

MALFUNCTION	POSSIBLE CAUSE	REMEDY
The motor unit is running but the screw shaft is not turning.	The safety clutch is broken.	Disassemble the grinding attachment and thoroughly clean away any fragments of the clutch from all its parts. Slide a new safety clutch on to the screw shaft.
	Faulty clutch or motor.	Contact the supplier or professional service centre.
The motor unit is running irregularly, its speed is fluctuating.	Large amount of food is inserted or you are pushing down too hard on the pusher.	Insert the food more slowly and push gently on the pusher.
The motor unit stops during operation and cannot be started.	The motor overheated and its overload protection automatically shut it off.	Turn off the meat grinder, disconnect it from the power socket and allow it to cool down sufficiently.
	Motor malfunction.	Contact the supplier or professional service centre.
Food is not sufficiently defrosted.	The cross blade is installed in the wrong direction.	Disassemble the grinding attachment and check the position of the cross blade.
	The cross blade is blunt.	Have the blade professionally sharpened or replace it with a new one.
The grinding chamber clogs up constantly.	The food being ground is too big.	Cut the food into smaller pieces.
	The feed tube is overfilled.	Clean out the feed tube.
	You are inserting food too quickly into the feed tube or pushing down too hard on the pusher.	Insert the food more slowly and push gently on the pusher.
	It is possible that a bone fragment or another similar item is jammed in the grinding chamber.	Disassemble the grinding attachment and clean it out thoroughly.
The grinder cannot be turned on, the motor unit does not start rotating.	Unless there is a power outage, evidently the main power switch or power cord is faulty.	Contact the supplier or professional service centre.

CLEANING AND MAINTENANCE



Tip:

Remains of unground meat may remain in the grinding chamber that are hard to clean away. To make their removal easier, you can grind a piece of bread or bread roll. We recommend disassembling the grinding attachment in a kitchen sink or a larger bowl to prevent potentially soiling the work surface.

- Before cleaning, the appliance must be turned off and disconnected from the power socket. Never clean the grinder or its parts when it is turned on and running.
- If the grinder is used for an extended period of time, it is possible that unit may be hot to touch. Allow it to cool down before cleaning it.
- Disassemble the attachment into its individual parts. Clean away any food remains, wash in warm water with dish washing detergent and rinse under clean running water. Then allow them to dry naturally or dry them out thoroughly using a wiping cloth. Do not use abrasive cleaning products.
- No part of the grinding attachment is suitable for washing in a dishwasher.



Attention:

When cleaning the cross blade **A8**, be very careful not to injure yourself on its sharp cutting edges.

- If food remains are left on some parts of the grinding attachment, we recommend soaking these parts in warm water with a small amount of kitchen detergent, and to leave them to soak for a certain time, e.g. overnight. The soaking time depends on how soiled the accessories are.
- To clean the outer surface of the motor unit base **A1**, use a cloth lightly dipped in a weak detergent solution. After applying the detergent solution, wipe the surface with a cloth lightly dampened in clean water and then wipe dry. Do not use solvents, abrasive cleaning products, etc. for cleaning the appliance. Otherwise the surface coat of the appliance may be damaged.



Attention:

Never submerge the motor unit base **A1** or the power cord in water or in any other liquid.

STORAGE

- When you have finished using the appliance, place it and its accessories in a clean, dry place out of children's reach. Keep the stored appliance and its accessories away from extreme temperatures, direct sunlight and excessive humidity and do not store it in an overly dusty environment.

TECHNICAL SPECIFICATIONS

Rated voltage range.....	220–240 V
Rated frequency.....	50–60 Hz
Rated power input.....	160 W
Maximum power input.....	500 W
Grinding capacity.....	30 kg/h
Maximum non-stop operating time.....	15 min
Electrical shock protection class.....	II
Weight.....	3.5 kg
Noise level.....	≤82 dB(A)

EXPLANATION OF TECHNICAL TERMINOLOGY



Safety class for electrical shock protection:

Class II – Electrical shock protection is provided by double or heavy-duty insulation.

Amendments to text and technical parameters are reserved.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.