



## **EN ■ Convection heater**

*Translation of the original manual*

This product is suitable only for well insulated areas or for infrequent use.  
Information relating to local electric heaters according to Commission Directive EU 2015/1188  
is provided in the attachment to this user's manual.

# Convection heater

## Important safety instructions

### READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.
- Children younger than 3 years of age should be prevented from accessing the appliance unless they are under constant supervision.
- Children from 3 to 8 years of age must only turn this appliance on/off under the condition that it is located or installed in its intended normal operating position and that they are under supervision or were informed about the safe operation of the appliance and understand the potential hazards. Children from 3 to 8 years of age must not insert the plug into the power socket, regulate or clean the appliance or carry out maintenance performed by the user.



### ATTENTION

Certain parts of this product may become very hot and cause burns. Special attention should be paid when children and handicapped people are present.



### WARNING:

 
Do not cover. To prevent overheating, do not cover the convection heater.

- This appliance must not be located directly underneath a power socket.
- Do not use this appliance in the direct vicinity of a bath, shower or swimming pool.
- Children must not play with the appliance.
- This appliance is designed for household use only.
- This appliance is not intended to be mounted on a wall.
- This appliance is not intended for outdoor use or for commercial purposes such as, for example use at a construction site.


- Before connecting the appliance to a power socket, check that the nominal voltage on its rating label matches the voltage in the power socket to which you wish to connect it.
- Connect the appliance only to a properly grounded socket. Do not connect it to an extension cord or two way adapter.
- Do not handle the appliance or its power cord when you have wet hands.
- Do not use this appliance in a bathroom, laundry or in rooms with an elevated level of humidity, or place it in such locations, where there is a risk of water being poured on it or where it could come into contact with sprayed water.
- Do not locate the appliance in the vicinity of an open fire.
- Do not use the appliance in rooms with high dustiness or in locations where explosive or flammable substances are used or stored, e.g. petrol, paints, aerosols, etc., or where explosive or toxic fumes could be present, or in industrial surroundings.
- Do not place the appliance on inclining or unstable surfaces such as carpets with very long and thick fibres, couches, etc. Only place the appliance on a horizontal, dry, clean, smooth and stable surface.
- Do not place any objects into the openings of the appliance. This could lead to an electrical short circuit, fire or damage to the appliance.
- During operation there needs to be sufficient free space around the appliance. Leave at least 1 m of free space in front of the appliance, and leave at least 0.5 m free space on its sides.
- Do not use the appliance in the vicinity of curtains, drapes or other flammable materials. During operation, the appliance must be located at least 1 m away from flammable materials.
- We do not recommend using this appliance in a room measuring less than 6 m<sup>2</sup>.
- This appliance must not be used with a programming device, timer switch, a remote control system or any other device which switches the appliance on automatically, because there is a danger of a fire if the appliance is covered or incorrectly located.
- Increased attention and supervision must be paid when the appliance is used in the vicinity of animals.
- The appliance must not be left without supervision when it is in operation. Do not leave the appliance in operation when feeling sleepy or during sleep.
- Do not use the appliance for drying clothing.
- To turn the appliance off, turn the temperature control knob to the MIN position and set both the power level switches to the off position. Then disconnect the power cord from the power socket.

- Always turn off the appliance and disconnect it from the power socket when not using it, when leaving it without supervision, before moving or cleaning it and before performing maintenance. Do not move the appliance during operation. Allow the appliance to cool down before moving it, cleaning it or before carrying out maintenance.
- Keep the appliance clean. Clean it according to the instructions in chapter Cleaning and maintenance. Do not perform any maintenance on the appliance apart from the cleaning procedure described in chapter Cleaning and maintenance.
- To prevent potential injury by electrical shock, do not submerge this appliance or its power cord in water or in any other liquid.
- Locate the power cord in such a way that it cannot be tripped over, that it is not in contact with a hot surface or sharp objects. Do not locate it under a carpet, carpet runner, etc.
- Disconnect the appliance from the power socket by gently pulling the plug of the power cord, and not the power cord itself. Otherwise, this could damage the power cord or the socket.
- Do not use the appliance when it is not functioning correctly or after it has fallen on the floor, been submerged in water or is damaged in any other way. Hand it over to an authorised service centre for inspection or repair.
- Never repair the appliance yourself or make any adjustments to it. To prevent a dangerous situation from arising, have all repairs performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.
- The manufacturer is not responsible for any damages caused by the incorrect use of this appliance.


A

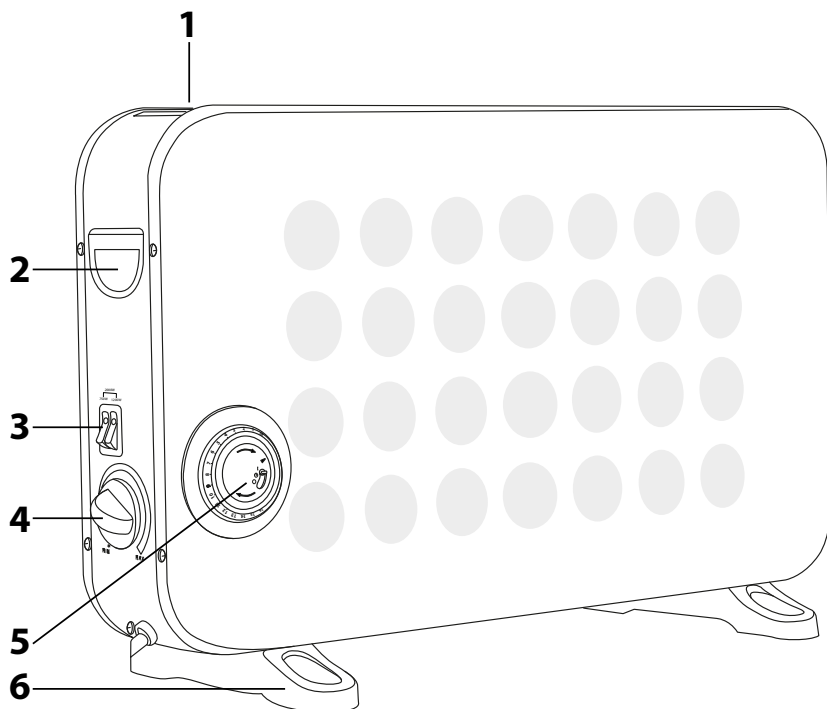

B

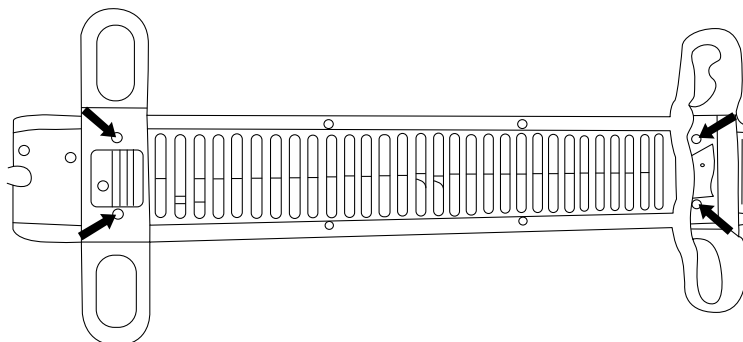 

C

 

### CONVECTION HEATER

Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use. We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

### DESCRIPTION OF THE APPLIANCE

- |                                                                                       |                                    |
|---------------------------------------------------------------------------------------|------------------------------------|
| <b>A1</b> Hot air outlets                                                             | <b>A4</b> Temperature control knob |
| <b>A2</b> Carry handle (located on both sides)                                        | <b>A5</b> Timer control knob       |
| <b>A3</b> Switch for setting the power level and for turning off the heating elements | <b>A6</b> Feet                     |

### BEFORE FIRST USE

Before first use, take the appliance and its accessories out of the packaging material and remove all promotional labels and stickers. Check that neither the appliance nor any of its parts is damaged.

#### Attaching the feet


**Warning:**

Before attaching the feet, always make sure that the power plug is disconnected from the power socket.

Put a blanket or another soft underlay on the floor. Then place the convection heater upside down on top of this blanket.

On the underside of the convection heater there are 2 drilled holes on either side. Align these holes with the holes in the feet **A6** and, using the supplied self-tapping screws, screw them to the underside of the convection heater – see figure B. Tighten securely. Check that both feet **A6** are correctly attached to the convection heater.

Turn the convection heater over and carefully put it down on the installed feet **A6**. Check its stability on a horizontal, dry and stable surface.

### USING THE CONVECTION HEATER

Prior to first use, check that the voltage in your power socket corresponds to the voltage on the rating label. Place the assembled convection heater on an even, clean, dry and stable surface within reach of a power socket. Make sure that all safety instructions are followed.

Insert the power plug into a power socket.

Turn the temperature control knob **A4** clockwise to the position MAX. To achieve the required room temperature as quickly as possible, set the maximum power level of the heating elements. To set the maximum power output, set the switches **A3** to the position marked by the power output level 750 W and 1250 W as shown in figure C. This will turn the heating elements to maximum power output. The indicator lights on the switches **A3** will turn on.

In the event that you do not require maximum power output, a lower power output of 750 W or 1250 W may be set by setting one of the switches **A3** to the position marked by the respective power level.


**Note:**

Upon first use or after it has not been used for an extended period of time, a slight odour may be sensed or a small amount of smoke may be emitted from the convection heater. This is completely normal and will quickly disappear.

When the desired temperature is reached and it is necessary to maintain it, turn the temperature control knob **A4** anticlockwise until you hear a click and the indicator lights of the switches **A3** turn off. The heating elements will turn off. They will turn on only once the ambient temperature falls. The heating elements will turn on and off while the temperature is being maintained. This is indicated by the indicator lights on the switches **A3** turning on and off.

In the event that you wish to use the convection heater in the frost-protection mode, set the temperature control knob **A4** to the position MIN. The convection heater will maintain the ambient room temperature above freezing point.

Always after finishing using the appliance, set the temperature control knob **A4** to the position MIN and set both the switches **A3** to the off position and disconnect the power cord from the power socket.

#### Using the timer

In order to use the timer function, it is necessary to set the power output and temperature using the temperature control knob **A4**.

It is necessary to set the clock before setting and turning on the timer. Turn the timer control knob **A5** clockwise until the arrow points at the current hour.

Then set the central switch in the middle of the timer control knob **A5** to position "I" (on).

There are a total of 96 pins in the inner part of the timer control knob **A5**, each representing 15 minutes. To turn on the timer function, switch the individual pins away from the centre. If you switch all the pins away from the centre, the convection heater will run continuously.

Example: If you need to turn on the timer function from 6:00 p.m. to 10 p.m., switch all the pins (total 16) between the numbers 18 and 22 away from the centre, and set the others towards the centre. The convection heater will automatically turn on and heat at the set power output level during the given time.

If you wish to turn off the timer function, set the central switch inside the timer control knob **A5** to position "O" (off).

If you need to reset the timer function, set the central switch inside the timer control knob **A5** to the middle position.

#### Thermal protection

The convection heater is equipped with double thermal protection – resettable and non-resettable thermal fuse. The resettable fuse is activated and turns off the convection heater in the event that it overheats.

In such an event, turn off the convection heater and disconnect the power cord from the power socket. Allow it to cool down properly. After it cools down, the resettable thermal fuse is deactivated and the convection heater can be put back into operation. For reasons of increased safety, the convection heater is furthermore equipped with a non-resettable thermal fuse as protection in the event that the first thermal fuse fails. In the event that the non-resettable thermal fuse is activated, the convection heater will turn off permanently. In such an event, please contact an authorised service centre.

### CLEANING AND MAINTENANCE

Disconnect the power plug from the power socket and allow the appliance to cool down before cleaning it.

For cleaning, do not use cleaning products with an abrasive effect, solvents, etc. that could damage the appliance.


**Warning:**

To prevent the risk of injury by electrical shock, do not submerge the appliance, power cord or power plug in water or any another liquid.

Keep the appliance in a clean condition. Clean the appliance regularly to ensure dust does not accumulate inside.

To clean the outer surface of the of the appliance, use a clean, dry cloth. To remove dust from the outer surface, you may also use a vacuum cleaner.

#### Storage

When not using the appliance for an extended period of time, disconnect the power plug from the power socket, allow the appliance to cool down and clean it according to the instructions provided above.

Before storing it, check that the appliance is clean, dry and cooled down.

Store the appliance in a dry, clean and well-ventilated location not exposed to extreme temperatures and out of children's reach.

### TECHNICAL SPECIFICATIONS

|                            |                |
|----------------------------|----------------|
| Rated voltage range.....   | 220 – 240 V~   |
| Rated frequency.....       | 50/60 Hz       |
| Rated power input.....     | 1800 - 2000 W  |
| Power output settings..... | 750 W / 1250 W |

We reserve the right to change text and technical specifications.

### INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

### DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

#### For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

#### Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.