

Instruction Manual
CONTACT GRILL

Návod k obsluze
KONTAKTNÍ GRIL

Návod na obsluhu
KONTAKTNÝ GRIL

Használati útmutató
KONTAKT GRILLSÜTŐ

Instrukcja obsługi
GRILL KONTAKTOWY

Руководство по эксплуатации
КОНТАКТНЫЙ ГРИЛЬ

Εγχειρίδιο οδηγιών
ΤΟΣΤΙΕΡΑ-ΨΗΣΤΙΕΡΑ



GR 7020

CONTACT GRILL

CONTENT

2	CATLER RECOMMENDS SAFETY FIRST
7	Know your contact grill GR 7020
9	Operating your contact grill GR 7020
12	Care and Cleaning

CATLER RECOMMENDS SAFETY FIRST

We understand the importance of safety and so from the initial design concept to production itself we focus primarily on your safety. Nevertheless, please be careful and follow the instructions below when using this appliance.

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- If the power cord is damaged, have an authorised service it in order to prevent hazards. It is forbidden to use the appliance if it has a damaged power cord.



CAUTION: Hot surface
The temperature of accessible surfaces may be higher if the appliance is in operation.

- User cleaning and maintenance must not be performed by children unless they are older than 8 years of age and under supervision.
- Children under 8 years of age must be kept away from the appliance and its power cord.
- Please clean all surfaces that come into contact with food according to the instructions in the “Care and Cleaning” section.
- Use the appliances according to the instructions in this user's manual. Otherwise, there is a risk of personal injury.
- Do not put the appliance on the edge of the countertop or table. Make sure that the surface the appliance is to be put on is flat, clean and dry.
- Do not place the appliance on a hot gas or electric stove or near it or in a location, where it would be in contact with a hot oven.
- During the appliance use, it's required that sufficient area for air circulation above the appliance and on all its sides should be provided.
- Do not use the appliance near or under walls, shelves, curtains and other flammable materials.

- This appliance is not intended to be operated with an external timer or a separate remote control.
- Do not use the appliance on any surface that could be damaged by heat. If the appliance is to be used on such surface, put a heat-resistant pad under the appliance.
- Make sure the appliance is correctly assembled before use.
- Do not leave the appliance without supervision while it is in operation.
- Do not put anything on the upper cover if it's closed, in operation or stored.
- If the appliance is not to be used or if you are about to clean, move or store it in its place, please always turn it off first, disconnect from the power supply and allow it to cool down.
- Keep the outer surface as well as the grill plates clean. Please strictly follow the care and cleaning instructions.
- This appliance is designed for household use only. This appliance is not designed for commercial use. Do not use this appliance in moving vehicles or on boats, outdoors,

or for any purpose other than it's intended. Otherwise, there is a risk of personal injury.

- Before connecting this appliance to a power socket, make sure the voltage stated on the product's rating label corresponds to the voltage in your power socket.
- Do not disconnect the appliance from the power socket by pulling the power cord. This could damage the power cord or the power socket. Disconnect the cord from the power socket by gently pulling the plug of the power cord.

IMPORTANT SAFETY INSTRUCTIONS FOR USING ELECTRICAL EQUIPMENT

- Fully unwind the power cord before use.
- Do not leave the power cord hanging over the edge of a table or countertop or allow it to touch a hot surface or to become tangled up. Do not put heavy objects on the power cord.
- For safety reasons, we recommend to connect the appliance in an independent electrical circuit separated from other appliances. Do not use adapter plugs or extension cords to connect the appliance to a power outlet.

- To prevent potential electric shock, do not submerge this appliance, its base or power cord in water or any other liquid.
- We recommend that you inspect the appliance regularly. Do not use the appliance if it is damaged in any way or if the power cord or plug are defective. All repairs or adjustments must be performed at the nearest Catler authorised service centre.
- Any maintenance other than standard cleaning must be performed at authorised Catler service centre.
- We recommend to install a residual current device (standard safety switches in your power outlet) to provide a higher level of protection when using the appliance. We recommend to install a residual current device (with a nominal residual operating current of no more than 30 mA) in the electric circuit in which your appliance is to be connected. For further expert advise, please contact your electrician.


KNOW YOUR CONTACT GRILL GR 7020

GRILL DESCRIPTION



1. Handle
2. Top plate release button
3. Top finned plate
4. Main switch (at the back of the grill)
5. Antiskid feet
6. Power cord storage space (in the grill bottom part)
7. Bottom plate release button
8. Control panel
9. Drip tray
10. Bottom finned plate

DESCRIPTION OF THE CONTROL PANEL

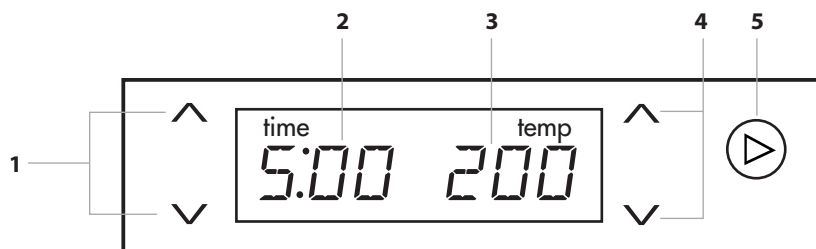

1. Cooking time setting buttons
2. Cooking time display
3. Set temperature display
4. Temperature setting buttons
5. On / off button

OPERATING YOUR CONTACT GRILL GR 7020

BEFORE FIRST USE

Before first use, remove all packaging and advertising labels / stickers from the appliance.

Make sure that appliance, power cord and the socket are not damaged.

Wipe grill plates, drip tray, probe, storage drawer and the grill's outer surface with a soft sponge lightly moistened in warm water. Wipe dry using a clean wiping cloth.

REMOVING AND ATTACHING THE GRILL PLATES

To remove the grill plates (bottom and top), please use the EJECT buttons located in the grill interior. Press the button to release the plate which will be slightly tilted to allow easy removal.

NOTE

Before removing or attaching the grill plates, always make sure that the grill plates have cooled down completely and the power cord is unplugged from the mains socket.

To be able to put the plate in position and secure in the grill body, position it at an angle of about 45° with the grill so that tabs at the back of the plate will engage in the grill body slots. Lower the plate slowly, then gently press the plate's outer edges until you hear a click.

NOTE

If any plate (top or bottom) is inserted incorrectly in the grill body, an error will be shown on the display. In such case, remove the plate and press EJECT to insert it again.

DRIP TRAY

The drip tray is embedded in the grill body and thanks to the construction design, the juice will drip directly into the tray.

The drip tray is secured in the grill body with a click mechanism. To easily remove the drip tray, press it gently inward and the tray will eject from the grill body.

Insert the drip tray in the grill body and press it gently until you hear a click.

NOTE

When handling the tray filled with hot juice or fat, take great care to avoid burning. Before grilling, make sure that the drip tray is correctly inserted and fixed in the grill body.

TURNING ON THE GRILL FOR THE FIRST TIME

1. Put the grill on a flat and firm surface with easy reach of a power outlet. Make sure that there is sufficient space around the grill to allow proper air circulation.

WARNING!
No not place the grill on or in the vicinity of flammable surfaces or materials.

2. Lift the top plate to open the grill.
3. Plug the power cord in the mains socket, press the power switch (located at the back of the grill) and an acoustic signal will be output. The control panel will light up. Default cooking time „5:00“ and temperature „200“ will be shown.
4. Press the grill On/Off button.
5. Leave the grill powered on for about 5 minutes. During this time, you may notice slight smoke and an unpleasant smell. This is a normal event which disappears during use.

NOTE

Before switching on for the first time, you can apply a small amount of quality vegetable oil on the grill plates with a kitchen cloth. You can repeat this process several times over the grill lifetime. This will improve the grilling result and prolong the grill plate lifetime.

USING YOUR CONTACT GRILL

1. Put the grill on a flat and firm surface with easy reach of a power outlet. Make sure that there is sufficient space around the grill to allow proper air circulation.

WARNING!
No not place the grill on or in the vicinity of flammable surfaces or materials.

2. Lift the top plate to open the grill.

WARNING!
Never heat the grill if it's completely closed. Otherwise the grilling surfaces and the heating element might be damaged.

3. Plug the power cord in the mains socket, press the power switch (located at the back of the grill) and an acoustic signal will be output. The control panel will light up. Default cooking time „5:00“ and temperature „200“ will be shown.
4. Press the temperature setting buttons to set the required temperature.

NOTE

You cannot set the cooking time while the preheating is in progress.

5. Press the grill On/Off button to start the set temperature preheating process.
6. While the grill is being warmed up, the temperature on the display is flashing. When it stops flashing, an acoustic signal will be output. The grill is now heated to the set temperature.
7. Put the raw materials to be roasted on the bottom grill plate and close the top plate as needed.

NOTE

To prepare crispy food such as a fish, leave the top plate open. A closed top plate could crush and destroy such food.

8. Press the cooking time setting buttons to set the required cooking time, then press the grill On / Off button again. The preset time countdown will start.
9. The temperature may be flashing while the cooking is in progress. This is a normal state when the bottom plate is being heated to the set temperature.
10. When the set cooking time has elapsed, an acoustic signal will be output and the cooking time display will show the last set time. If you press the On / Off button again, a new countdown will start.

11. When the cooking is finished, press the main switch to turn the grill off and unplug the power cord from the mains socket. Allow the grill to cool down completely before cleaning.

WARNING!
The grill plates and metal parts may get hot during cooking. There is a risk of burns. Avoid contact with heated parts.

NOTE

When using the handle, we recommend to wear kitchen gloves to avoid possible burning. Touch only the black central part of the handle. Use only wooden, plastic or silicone tools designed for contact grills. Do not use metallic tools as they might damage the grill plate surfaces.

CARE AND CLEANING

Before cleaning the appliance, always disconnect the plug of the power cord from the mains socket and let it to cool down properly.

We recommend that you lift the top plate to allow the grill to cool down faster.

WARNING!
DO NOT WASH THE APPLIANCE, MAINS CORD AND PLUG UNDER RUNNING WATER AND DO NOT IMMERSE IT IN WATER OR ANY OTHER LIQUID.

ATTENTION:

Do not use sharp objects, chemicals, thinners, petrol or other similar substances. Never clean the plate warmer with a steam appliance.

CLEANING THE OUTER SURFACE

Wipe the outer surface with a soft, lightly moistened sponge. To remove the deposits, you can also use considerate liquid detergents or sprayed solutions for stainless surfaces. Apply the cleaning agent on the sponge, not on the appliance surface. Wipe with a moistened sponge, then with a dry cloth.

Before plugging the power cord in the mains socket, make sure that all the surfaces are dry.

CLEANING THE DRIP TRAY

Remove the tray and clear the contents after each use. Wash the tray in warm water with a little washing-up liquid using a soft sponge. Rinse and dry thoroughly. After cleaning and before plugging the power cord in the mains socket, always make sure you have inserted the tray in the grill body.

WARNING!
Take great care when carrying the tray with hot fat or juice.

CLEANING GRILLING SURFACES

You can remove the grill plates from the grill body for easy cleaning. However, always first make sure that both grill plates have cooled down completely.

To remove the grill plates (bottom and top), please use the EJECT buttons located in the grill interior. Press the button to release the plate which will be slightly tilted to allow easy removal.

Wash the grill plates in warm water with a little washing-up liquid using a soft sponge. To remove the deposits, you can use considerate cleaning agent. Apply the cleaning agent on the sponge, not on the plate surface. To remove tough deposits, use a fine plastic spatula or a nylon wire brush.

ATTENTION:

Do not use rough force to clean the grill plates.

NOTE

Drip tray, bottom and top plate can be also washed in a dishwasher.

STORAGE

Before storing, make sure that the appliance is clean, dry and completely cooled down.

Make sure that the drip tray and the grill plates are properly inserted.

Wrap the power cord around the holder at the grill bottom.

Store it in a well-ventilated dry place out of reach of children and animals.

INSTRUCTIONS AND INFORMATION ON DISPOSING OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSING OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal and recycling, take these products to designated collection points. Or in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. Disposing of this product correctly helps save valuable natural resources and prevents damage to the environment by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This appliance meets all the basic requirements of the EU directives.

The text, design and technical specifications may be changed without prior notice and we reserve the right to make these changes.

The original version is in the Czech language.

Address of the manufacturer: FAST ČR, a.s., Černokostelecká 1621, Říčany CZ-251 01

