



Instruction Manual
TABLE BLENDER

Návod k obsluze
STOLNÍ MIXÉR

Návod na obsluhu
STOLOVÝ MIXÉR

TABLE BLENDER



TB 7010

TABLE BLENDER

CONTENT

- 2 Catler recommends safety first
- 10 Know your table blender TB 7010
- 12 Operating your table blender TB 7010
- 16 Care and Cleaning

CATLER RECOMMENDS SAFETY FIRST

We understand the importance of safety and so from the initial design concept to production itself we focus primarily on your safety. Nevertheless, please be careful and follow the instructions below when using this appliance.

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance must not be performed by children without supervision.
- If the power cord is damaged, have an authorised service it in order to prevent hazards. It is forbidden to use the appliance if it has a damaged power cord.
- Incorrect use may lead to the risk of injury. Take extreme care when handling the blending beaker, especially the knife unit, as the blades are very sharp. Mishandling the knives may lead to personal injury.
- Wash the blender parts that came into contact with food in warm water with a small amount

of washing-up liquid. Rinse and wipe dry.

- Always turn the blender off first. Then disconnect the blender's power cord from the power supply. Before moving, disassembling, cleaning or storing the blender or if you no longer want to use it, please make sure it's turned off and disconnected from the power supply and the motor and blades are at standstill.
- Before removing the lid, always turn the appliance off and unplug the power cord from the socket and wait until the blades have stopped. Avoid contact with moving parts.
- This appliance is not to be used by children. Keep this appliance and its power cord out of children.
- The appliances may be used by persons with physical or mental impairments or by inexperienced persons only if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers.
- Before using the appliance for the first time, please remove all packaging and ad stickers and discard them in an environmentally safe

manner. Check the appliance for any defects. Under no circumstances should you use a damaged appliance or an appliance with a damaged power cord etc.

- Before operating your appliance, read all the instructions carefully and store them in a safe place for possible future reference.
- To eliminate the risk of small children suffocating, remove the protective cover of the power plug from this appliance and dispose of it safely.
- Before first use, make sure that the voltage in your power socket matches the nameplate voltage at the unit bottom. In case of any doubt, please contact a qualified electrician.
- Do not operate the appliance on the edge of a desktop or a table. Make sure that the surface is flat, clean and free of water or other liquid stains.
- Do not place the appliance on a gas or electric stove or near it or in a location where it could come into contact with a hot oven.
- Do not use the appliance on a metal pad such as a drip sink.

- Before connecting your appliance to a power outlet and turning it on, make sure it's fully and correctly assembled. Follow the instructions provided in this user's manual.
- Make sure the appliance is placed on a flat, clean, dry and stable and heat-resistant surface. Do not operate the appliance on an inclined surface and do not move and/or handle it in any manner during operation.
- Use only accessories provided with the appliance. Otherwise, there is a risk of fire, electric shock or injury.
- Never turn the appliance on if the appliance itself or some of its accessories are damaged.
- Do not operate your blender continuously with large batches for longer than 1 minute. Allow the motor to rest for at least 2 minutes between each use. Always observe the maximum level line when filling.
- Do not blend carbonated drinks and they may run high.
- If the food gets stuck around the knife unit, press the main power switch to turn the blender off and wait until the knife unit has come to a complete stop. Then, unplug the

power cord from the socket and use a spoon or a spatula to remove the food from the knife unit. Never use your fingers because the knives are very sharp.

- Keep your hands, fingers, garments, spoons and other kitchenware out of the appliance during operation. Before removing the lid, always turn the appliance off and unplug the power cord from the socket and wait until the blades have stopped. Avoid contact with moving parts.
- During operation, do not remove the container from the body.
- Use your blender only for making food and/or drinks. Do not turn on the blender with empty container.
- Do not process hot or boiling food in the blender. Allow them to cool down before pouring into the blender.
- Do not expose the blending beaker to extreme temperatures such as by putting cold container in hot water or vice versa.
- Do not put any part of the appliance in a gas, electric or microwave oven or on a hot gas or electric range.

- A connected power outlet must be easily accessible for possible sudden disconnection.
- Do not use this appliance with a programmable switch, timer switch or any other device that automatically switches the appliance on.
- Do not use the appliance near water sources like a kitchen sink, bathroom, swimming pool etc.
- Do not touch the appliance with wet or damp hands.
- Do not leave the appliance unattended while in operation.
- Avoid spilling water or other fluid onto the mains cord and plug.
- Do not use rough abrasive or caustic detergents to clean the appliance.
- Keep your appliance clean. Follow the cleaning instructions provided in this user's manual.
- Do not store or use any explosive and/or flammable substances inside or in the vicinity of this appliance, such as flammable gas sprays.
- To disconnect the appliance from the power outlet, always hold the cord plug, not the cord itself while pulling.

IMPORTANT SAFETY INSTRUCTIONS FOR USING ELECTRICAL EQUIPMENT

- Fully unwind the power cord before use.
- Do not leave the power cord hanging over the edge of a table or countertop or allow it to touch a hot surface or to become tangled up.
- For safety reasons, we recommend to connect the appliance in an independent electrical circuit separated from other appliances. Do not use adapter plugs or extension cords to connect the appliance to a power outlet.
- Do not submerge the appliance, power cord or plug in water or any other liquid.
- This appliance is designed for household use only. This appliance is not designed for commercial use. Do not use this appliance in moving vehicles or on boats, outdoors, or for any purpose other than it's intended. Otherwise, there is a risk of personal injury.
- Any maintenance other than standard cleaning must be performed at authorised Catler service centre.
- We recommend to install a residual current device (standard safety switches in your power outlet) to provide a higher level of protection

when using the appliance. We recommend to install a residual current device (with a nominal residual operating current of no more than 30 mA) in the electric circuit in which your appliance is to be connected. For further expert advise, please contact your electrician.

- Keep this appliance and its power cord out of children.

THIS SYMBOL INDICATES THAT THE APPLIANCE HAS DOUBLE INSULATION BETWEEN THE DANGEROUS MAINS VOLTAGE AND THE PARTS ACCESSIBLE TO THE USER. IN THE CASE OF SERVICING, USE ONLY IDENTICAL SPARE PARTS.




KNOW YOUR TABLE BLENDER TB 7010

BLENDER DESCRIPTION



1. Measuring cup
2. Beaker lid with a handy moulding to facilitate the lid opening.
3. Handle
4. 2l Tritan blending beaker with a built-in knife unit
5. MODE button to select the operation mode
6. Blender base
7. Antiskid feet
8. Power cord storage space (at the kettle base bottom)
9. + button
10. - button
11. Display

DISPLAY DESCRIPTION

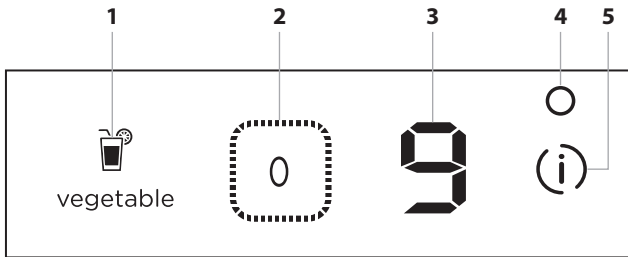

1. Operating mode icon
2. Cooking time icon
3. Selected speed icon
4. Power indicator light
5. Main power switch

OPERATING YOUR TABLE BLENDER TB 7010

BEFORE FIRST USE

Before first use, remove all packaging and advertising labels / stickers from the appliance.

Check the appliance and all the accessories for damage. Never use a damaged appliance and/or appliance with damaged accessories, damaged power cord or plug.

Wipe the blender base with a soft sponge slightly moistened in warm water.

Before first use, wash blending beaker, lid and measuring cup in warm water with a small amount of washing-up liquid. Rinse and wipe dry.

WARNING!
Be very careful when handling the blending beaker. The knife unit with very sharp edges is embedded in the bottom section.

WARNING!
Store the blending beaker in a safe location out of reach of children. To prevent serious injuries or amputation, NEVER insert your fingers or hands in the blending beaker while the blender is in operation.

NOTE

You can wash blending beaker, lid and the measuring cup in the dishwasher's top basket.

BLENDER COMPOSITION

1. Place the blender base on stable, firm and clean surface.
2. Place the raw materials that you wish to process into the blending beaker. Always observe the maximum and minimum level line.
3. Attach the lid. The lid is designed to follow the shape of the beaker's outer edge. The moulding on the lid should be positioned above the handle.

4. Insert the measuring cup in the lid and turn clockwise to secure it on the lid.
5. Put the blending beaker on the blender base. The blender is all set now.

NOTE

The blender won't stop unless the beaker is properly attached on the base.

USING

Your Catler TB 7010 blender is equipped with five preset programs and a manual mode. Each program has cooking time and speed defined and these parameters cannot be changed. If you need to modify a selected program, select "manual" operating mode a adjust the cooking time to your taste.

1. Insert the mains cord plug into a power socket.
2. An acoustic signal will sound, the indicator light will be lit and the display will show the default setting (operating mode: vegetable, cooking time: 0, speed: 9).
3. Press the main switch to start the default settings. The cooking time icon will count down the preset time while the light circle around the cooking time will turn on step by step.
4. When the cooking process is over, the cooking time icon will change into for a couple of seconds.

WARNING!
Before turning the blender on, please make sure that the lid is securely attached on the container. Otherwise, food might spring out when the blender is turned on.

SELECTING A PRESET PROGRAM

1. When the default setting is shown on the display, press MODE briefly.
2. Press + /- to select a preset program.
3. Press the main power switch to start the blender.

PROGRAM TABLE

Operating mode	Set time	Speed
Vegetable	120s	9
Smoothy	60s	9
Sauce	60s	9
Bisque	420s	9
Auto Clean	60s	9
Manual	5-420s	1-9

MANUAL MODE

1. When the default setting appears on the display, press MODE twice until the operating mode icon changes into “manual” and the cooking time icon is lit.
2. Press +/- to set the desired cooking time and press MODE to confirm.
3. The speed icon will be lit, then press +/- to set the desired speed. You can set the speed between 1 to 9 where “1” is the lowest and “9” is the highest speed.
4. Press the main power switch to start the blender.

NOTE

The display will turn off automatically when the blending beaker is removed from the base. When you put the beaker on the blender, it will light again.

STOPPING THE BLENDER OPERATION

Press the main power switch while the blender is in operation. The blender will stop. If you want to continue processing, it's necessary to select the preset program or cooking time.

ADDING RAW MATERIALS

If you need to add some items during mixing, carefully remove the measuring cup by turning counterclockwise and add the items through the lid hole. Nevertheless, we recommend to turn the blender completely off before removing the measuring cup to prevent food from springing out from the container.

NOTE

If the food gets stuck around the knife unit, press the main power switch to turn the blender off and wait until the knife unit has come to a complete stop. Then, unplug the power cord from the socket and use a spoon or a spatula to remove the food. Never use your fingers or hands because the knives are very sharp.

WARNING!
Never blend boiling or hot foods. This may lead to underpressure creation inside the beaker, causing the content to spring out when opening the lid. Otherwise, burns might occur. Always allow the food to cool down to about 45°C. Never start the blender without the lid and the measuring cup attached.

AUTO SHUT-OFF

The appliance will automatically turn off after about 3 minutes of inactivity. Press the main power switch to turn the blender on.

SAFETY THERMAL FUSE

Your blender is equipped with safety thermal fuse to protect the motor from damage. If you put excessive load on the blender, such as processing a higher amount of raw materials for a prolonged period of time, automatic safety thermal fuse will trip to stop the motor. In such case, turn the blender off by the main switch and unplug the mains cord from the power outlet. Allow the blender to cool down for about 15 minutes. Then insert the power plug into a power outlet and turn the blender on. If the blender malfunctions, stop using it and contact your authorized Catler service centre.

FOOD MAKING TIPS AND TECHNIQUES

Cut the food into same-sized pieces of approx. 2.5 cm. This will speed up the preparation process.

Pour the liquids first, then add solid raw materials.

Always observe the 2l maximum level line. If you need to process bigger amounts of food, always separate them to smaller portions.

NEVER mix any the following food in the blender: bones, large pieces of frozen food, thick and hard food, kernels, stones etc.

Otherwise, the blender might get irreparably damaged.

When processing the raw materials in the blender, do not exceed 7 minutes except for the Bisque program.

WARNING!
Follow the instructions provided in this user's manual. Otherwise, the blender might get damaged, leading to property damage or personal injuries.

WARNING!
Do not process dry food without liquids. This blender is not designed to process dry food only.

CARE AND CLEANING

Before cleaning the appliance, always disconnect the plug of the power cord from the mains socket and let it to cool down properly.

It is necessary to clean the blender immediately after each use to prevent possible drying of food residues in the beaker, on the knife unit, lid or inside the measuring cup. Regular maintenance will prolong the lifetime of your blender.

WARNING!
DO NOT WASH THE APPLIANCE, POWER CORD AND PLUG UNDER RUNNING WATER AND DO NOT IMMERSE IT IN WATER OR ANYOTHER LIQUID.

DISASSEMBLING THE MIXER

1. Unplug the power cord from the mains outlet and wait until knife unit has come to a complete stop.
2. Carefully remove the blending beaker from the blender base.
3. To remove the lid from the blending beaker, hold the handle with your hand and press the moulding on the lid with your thumb. This will release the lid and you can easily remove it from the beaker.

WARNING!
Be careful while handling the container with hot raw materials inside. Carefully remove the lid as hot steam may escape while opening. There is a danger of a burns.

CLEANING THE LID AND THE MEASURING CUP

Wash the lid and the measuring cup under warm running water after use to remove the dirt.

To clean more thoroughly, wash the lid and the measuring cup in warm water with a small amount of washing-up liquid. Rinse and wipe dry.

CLEANING HE BLENDING BEAKER

Wash the blending beaker under hot running water after use to remove the dirt.

Pour about 500 ml of warm water in the blending beaker with a small amount of washing-up liquid. Attach the lid and the measuring cup and then attach the assembly on the blender base.

Select the Auto Clean program and start with the main switch. Allow the blender to finish the program.

Rinse the beaker out in clean water then and wipe dry.

Handle the blending beaker with care.

Do not expose the beaker to extreme temperatures, pressure etc.

NOTE

You can wash blending beaker, lid and the measuring cup in the dishwasher's top basket.

ATTENTION:

Do not use sharp objects, chemicals, thinners, petrol or other similar substances. Never clean your table blender with a steam appliance.

STORAGE

Before storing, make sure that all parts are clean and dry. Store your blender in a horizontal position in a dry and well-ventilated place. Do not place any objects on your blender. Always make sure that the knife unit is stored out of children's reach.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

The original version is in the Czech language.

Address of the manufacturer: FAST ČR, a.s., Černokostecká 1621, Říčany CZ-251 01

