



# TOASTER

Instruction Manual  
TOASTER

Návod k obsluze  
TOASTER

Návod na obsluhu  
HRIANKOVAČ

Használati útmutató  
KENYÉRPIRÍTÓ

Instrukcja obsługi  
TOSTER

Руководство по эксплуатации  
ТОСТЕР



TS 4013

TS 4014

# TOASTER

## CONTENT

2	Catler recommends safety first
10	Know your TS 4013/TS 4014 toaster
11	Operating your TS 4013/TS 4014 toaster
14	Care and cleaning

## CATLER RECOMMENDS SAFETY FIRST

We understand the importance of safety and that's why we put your safety first from the initial design concept to the production itself. Nevertheless, please be careful and follow the instructions below when using this appliance.

### **IMPORTANT SAFETY INSTRUCTIONS FOR USING YOUR TS 4013/TS 4014 TOASTER**

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- User cleaning and maintenance must not be performed by children unless they are older than 8 years of age and work under supervision.
- Children under 8 years of age must be kept away from the appliance and its power cord.
- If the power cord is damaged, ask the authorised service for a replacement in order to prevent hazards. It is forbidden to use the appliance with the power cord damaged.

- As bread may catch fire, do not use this appliance in the vicinity of or under flammable materials such as curtains, drapes etc.
- Before using the appliance for the first time, please remove all packaging and ad stickers and discard them in an environmentally safe manner. Check the appliance for any defects. Under no circumstances should you use a damaged appliance or an appliance with a damaged power cord etc.
- Before operating your appliance, please read all the instructions carefully and store them in a safe place for possible future use.
- To eliminate the risk of small children suffocating, remove the protective cover of the power plug from this appliance and dispose of it safely.
- Before first use, make sure that the voltage in your power socket matches the nameplate voltage at the unit bottom. In case of any doubt, please contact a qualified electrician.
- Do not operate the appliance on the edge of a desktop or a table. Make sure that the surface is flat, clean and free of water or other liquid stains.



- Do not place the appliance on a gas or electric stove or near it or in a location where it could come into contact with a hot oven.
- Do not use the appliance on a metal pad such as a drip sink.
- Before connecting your appliance to a power outlet and turning it on, make sure it's fully and correctly assembled. Follow the instructions provided in this user's manual.
- During the appliance use, it's required that sufficient area for air circulation above the appliance and on all its sides should be provided.
- Make sure the appliance is place on a flat, clean, dry and stable and heat-resistant surface. Do not operate the appliance on an inclined surface and do not move and/or handle it in any manner during operation. Do not operate the appliance on a surface with cloth, near the curtains or other flammable materials.
- If the appliance is covered by or touches flammable materials like curtains, draperies, walls etc. during operation, this may lead to ignition.

- Curtains or other flammable materials may ignite if located near or over the appliance.
- Do not allow the appliance's hot surfaces to come into contact with kitchen desktop or table.
- Do not use the appliance under an upper kitchen cupboard.
- Make sure to provide a minimum clearance of 10cm from surrounding objects and 20cm above the appliance to guarantee safe operation.
- It is not recommended to place the appliance in confined spaces.
- Use only accessories provided with the appliance. Otherwise, there is a risk of fire, electric shock or injury.
- Never turn the appliance on if the appliance itself or some of its accessories are damaged.
- Do not put any part of the appliance in a gas, electric or microwave oven or on a hot gas or electric range.
- A connected power outlet must be easily accessible for possible sudden disconnection.



- Do not use this appliance with a programmable switch, timer switch or any other device that automatically switches the appliance on.
- Do not use the appliance near water sources like a kitchen sink, bathroom, swimming pool etc.
- Do not touch the appliance with wet or damp hands.
- Do not leave the appliance unattended while in operation.
- The appliance surface gets warm and may become very hot during operation. Do not touch hot surfaces. There a risk of burning is case of wrong handling. Pay close attention if children or animals move around the appliance.
- Do not put big pieces of pastry, pastry packed in aluminium foil or other protective cover as well as kitchen utensils in the appliance. In such case, there is a risk of short-circuiting the appliance, fire or electric shock.
- If the pastry gets jammed inside the appliance, first unplug the power cord from the mains socket and only then remove the jammed piece of pastry from the appliance.



- To turn the appliance off, please use the STOP button.
- If the appliance is to be left unused, before moving, removing bread or cleaning, always unplug the power cord from the mains socket. Allow the appliance to cool down completely before cleaning and storing.
- Avoid spilling water or other fluid onto the mains cord and plug.
- Do not use rough abrasive or caustic detergents to clean the appliance.
- Keep your appliance clean. Follow the cleaning instructions provided in this user's manual.
- Do not store or use any explosive and/or flammable substances inside or in the vicinity of this appliance, such as flammable gas sprays.
- To disconnect the appliance from the power outlet, always hold the cord plug, not the cord itself while pulling.

## **IMPORTANT SAFETY INSTRUCTIONS FOR USING ELECTRICAL EQUIPMENT**

- Fully unwind the power cord before use.
- Do not leave the power cord hanging over the edge of a table or countertop or allow it to touch a hot surface or to become tangled up.
- For safety reasons, we recommend to connect the appliance in an independent electrical circuit separated from other appliances. Do not use adapter plugs or extension cords to connect the appliance to a power outlet.
- Do not submerge the appliance, power cord or plug in water or any other liquid.
- We recommend that you inspect the appliance regularly. Do not use the appliance if it is damaged in any way, if it malfunctions or if the power cord or plug is defective. All repairs or adjustments must be performed at the nearest Catler authorised service centre.
- This appliance is designed for household use only. This appliance is not designed for commercial use. Do not use this appliance in moving vehicles or on boats, outdoors, or for any purpose other than it's intended. Otherwise, there is a risk of personal injury.

- Any maintenance other than standard cleaning must be performed at authorised Catler service centre.
- We recommend to install a residual current device (standard safety switches in your power outlet) to provide a higher level of protection when using the appliance. We recommend to install a residual current device (with a nominal residual operating current of no more than 30mA) in the electric circuit in which your appliance is to be connected. For further expert advise, please contact your electrician.
- Keep this appliance and its power cord out of children.



## KNOW YOUR TS 4013/TS 4014 TOASTER

### TS 4013



1. **Extra wide openings**
2. **Control lever with the High Lift function** makes it easier to take out smaller pastry products
3. **Bagel button** for toasting frozen pastry
4. **Reheat button** to heat pastry
5. **Defrost button** to unfreeze pastry
6. **STOP button** to stop the toasting process immediately

### TS 4014



7. **Rotary knob to set the toasting level** (6 toasting levels in total)
8. **Removable crumb tray** (at the appliance bottom, no illustration)
9. **Power supply cord** (no illustration)
10. **Pastry reheating attachment** (no illustration)



## OPERATING YOUR TS 4013/TS 4014 TOASTER

### BEFORE FIRST USE

Unpack the appliance and its accessories. Before environmental disposal of the packaging, make sure you have removed all parts and accessories from the package. Check the appliance and all the accessories for damage. Never use a damaged appliance and/or appliance with damaged accessories, damaged power cord or plug.

Before first use, wipe the appliance with a soft sponge slightly moistened in warm water.

Turn the appliance on with the highest toasting level without any pastry inserted. You may notice slight smoke coming from the openings or light smell. This is a normal event which disappears during use.

**WARNING!**  
Never submerge the appliance in water or in any other liquid.

**WARNING!**  
NEVER ATTEMPT TO REMOVE JAMMED PASTRY WITH A KNIFE OR OTHER TOOL WHILE THE APPLIANCE IS STILL CONNECTED TO THE MAINS. THIS COULD LEAD NOT ONLY TO THE APPLIANCE DAMAGE, BUT ALSO TO AN ELECTRIC SHOCK. ALWAYS DISCONNECT THE POWER CORD FROM THE POWER SOCKET.

## USING

### PASTRY TOASTING

1. Place the appliance on a flat dry surface. Make sure the crumb tray is properly installed in the appliance body.
2. Insert the mains cord plug into a power socket.
3. Insert bread, English pancakes or other pastry you wish to toast in the openings. Thanks to extra wide and long openings you will be able to toast even bigger bread slices.
4. Turn the rotary knob to set the toasting level: 1 (lightest) to 9 (darkest). When the appliance is used for the first time, it's recommended to use level 4.
5. Push the control lever down until it's fixed in the lower position. The toasting process will start automatically. The toasting time will be set automatically according to the selected toasting level.
6. As soon as the toasting process is finished, the appliance will turn off and the pastry is lifted automatically. You can stop the toasting process immediately at any time by pressing the **STOP** button.

### DEFROST FUNCTION

The defrost function is designed to unfreeze and toast the pastry.

1. Insert the pastry to be defrosted and toasted in the openings.
2. Turn rotary knob to set the toasting level.
3. Push the control lever down until it's fixed in the lower position.
4. Press the Defrost button. Button LED backlighting will light up to indicate the function to be active.
5. As soon as the defrosting and toasting process is finished, the appliance will turn off and the pastry is lifted automatically. You can stop the toasting process immediately at any time by pressing the **STOP** button.

### HEATING FUNCTION

The heating function is designed to warm up pastry without toasting.

1. Insert the pastry to be warmed up in the openings.
2. Push the control lever down until it's fixed in the lower position.
3. Press the **Reheat** button. Button LED backlighting will light up to indicate the function to be active.
4. As soon as the warming-up process is finished, the appliance will turn off and the pastry is lifted automatically. You can stop the toasting process immediately at any time by pressing the **STOP** button.

### BAGEL FUNCTION

This function is suitable for toasting thicker slices of pastry such as bagels, baguettes, muffins etc.

1. Insert the pastry to be toasted in the openings.
2. Push the control lever down until it's fixed in the lower position.
3. Press the **Bagel** button. Button LED backlighting will light up to indicate the function to be active.
4. As soon as the toasting process is finished, the appliance will turn off and the pastry is lifted automatically. You can stop the toasting process immediately at any time by pressing the **STOP** button.



## TIPS AND TRICKS

The toasting level depends on the water amount in the pastry as well as your personal taste. We recommend to set a lower toasting level and then make an adjustment.

For thin pastry slices, we recommend to set a lower toasting level while for thicker slices, we recommend to set a higher toasting level or use the **Bagel** function.

For fresh or wholegrain pastry, it's suitable to use a higher toasting level.

If you are about to toast sweet pastry, such as with raisins or nuts, we recommend to remove loose or cut pieces from the slice. This will prevent them from burning or getting jammed in the appliance.

Please half bagels, baguettes or muffins in two equal halves if possible before toasting. Both halves will be toasted uniformly then. Please always insert the pastry in the opening centre to ensure uniform toasting. Be very careful during the consumption if toasting stuffed pastry. The filling may warm faster and to a higher degree than the pastry surface. Do not leave the appliance unattended if warming such pastry.

Do not use force when inserting or removing the pastry.

Do not insert pastry with butter, spread etc., pastry with leaking filling, frozen pastry with pieces of ice etc. This could result in the appliance short-circuit and electric shock.

## CARE AND CLEANING

Before cleaning the appliance, always make sure that it's cooled down completely and the power plug is disconnected from the mains socket.

**WARNING!**  
**Do not immerse the appliance, power cord or plug in water or any other liquid.**  
**To clean the outer jacket, do not use wire brushes, abrasive cleaners, petrol, thinners or similar substances that could scratch or irreparably deteriorate the surface.**

Wipe the appliance outer jacket with a soft sponge slightly moistened in warm water.

### CLEANING THE CRUMB TRAY

1. The crumb tray is located at the appliance bottom.
2. To clean the crumbles, draw out the tray, empty it and then insert back for further use. Or you can wipe it with a dry cloth.

#### NOTE

The tray should be cleaned on regular basis. Avoid excessive gathering of crumbles in the tray.

To clean the interior, turn the appliance upside down over a sink or a litter bin and shake to remove the bakery leftovers.

**WARNING!**  
**DO NOT USE THE APPLIANCE WITHOUT THE CRUMB TRAY INSERTED.**

### STORAGE

Before storing, always turn your appliance off, disconnect from the mains and allow to cool down. Store your toaster in a horizontal position in a dry and well-ventilated place. Do not place any objects on the appliance.



## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

### **For business entities in the European Union**

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

### **Disposal in other countries outside the European Union**

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

The original version is in the Czech language.

Address of the manufacturer: FAST ČR, a.s., Černokostelecká 1621, Říčany CZ-251 01