



## EN ■ Electric Shaver

*Translation of the original manual*

**READ CAREFULLY AND STORE FOR FUTURE USE.****General warnings**

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the appliance in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.

**Warning:**

Keep the appliance dry.

- The parts of the appliance that need to be mounted or stood upright, must be mounted or stood upright in such a way that they cannot fall into water.

## ELECTRICAL SAFETY

- Before connecting the power adapter to a power socket, check that the voltage on its rating label corresponds to the voltage in the power socket to which you wish to connect it. Do not use an extension cord.
- Connect the power adapter only to a properly grounded power socket.



### Attention:

Only use the appliance with the original power adapter that came with it. In order to avoid a dangerous situation from arising, never use a different type of power adapter.

- Do not disconnect the power adapter from the power socket by pulling on the power cord. This could damage the power adapter or the power socket. Disconnect the power adapter from the power socket by pulling on the plug.
- Never use the power adapter supplied with this appliance for any other purposes.
- Keep the power adapter and its power cord dry.
- Do not place the power cord of the power adapter over sharp objects. Make sure that the power cord does not hang over the edge of a table and that it is not touching a heated surface.
- Do not wind the power cord of the power adapter around the handle of the appliance.
- Do not connect and disconnect the power adapter cord to and from the power socket with wet hands.
- Store, charge and use the appliance at an ambient temperature of 15 °C to 35 °C. Do not charge the appliance for longer than is necessary for it to fully charge. Once it is charged, disconnect it from the power source.
- Do not expose the appliance to temperatures higher than 50 °C. Otherwise, the built-in battery could be damaged.
- The appliance is equipped with a built-in long-life battery that can only be removed at a professional service centre. Never attempt to remove it from the appliance yourself.



### Attention:

Never disassemble the appliance for the purpose of removing the battery. Never short circuit the appliance or throw it into a fire. Incorrect use, risks releasing toxic substances or causing a fire or explosion.

- Do not charge, use or store the appliance or leave it lying in a bathroom or in locations where it could fall into a bath, wash basin or other containers filled with water.
- In the event that the appliance falls into water, under no condition reach for it, rather, immediately disconnect the power adapter from the power socket. Never use an appliance or power adapter that was submerged in water. Hand it over to an authorised service centre for inspection.



 
### Warning:

Do not use the appliance in the bath or shower. Do not clean any part of the appliance under a water tap, do not spray it with water or any other liquid or submerge it in water or any other liquid.  
The appliance is not intended for wet shaving.


## SAFETY DURING USE

- This electric shaver is intended for home use only and is designed for shaving and trimming beards or whiskers and facial hair. The electric shaver is not intended for commercial purposes or for trimming animal fur.
- Only use the electric shaver on dry, clean beards or whiskers. Do not use it on wet beards or whiskers on which a shaving foam or gel, etc. is applied.
- We do not recommend using the electric shaver on parts of the face where there are open wounds or lacerations, burns, blisters, etc.
- For hygiene reasons, the electric shaver should be used only by a single user.
- Use the electric shaver in accordance with the instructions contained in this user's manual.
- Use only the original accessories supplied with this electric shaver.
- The electric shaver and its power adapter must only be used in indoor areas. Do not use it outdoors.
- Do not use the electric shaver in rooms where aerosol sprays are used or where oxygen is administered.
- Do not expose the electric shaver to the outdoor environment, extreme temperatures, direct sunlight, excessive humidity or excessively dusty environments.
- Do not place the electric shaver near heaters, open fires or other sources of heat.
- Before every use, check the shaving head for damage. Never use an electric shaver with a damaged shaving head.
- The electric shaver may heat up during use or when it is being charged. This is completely normal.
- Keep the electric shaver at a safe distance from eyes.
- Always turn off the electric shaver and disconnect it from the power socket when not using it, when leaving it without supervision, before cleaning, maintenance or storage. Store the electric shaver and its power adapter in a dry environment.
- Keep the electric shaver clean. Perform cleaning and maintenance according to the instructions in chapter Cleaning and maintenance.
- Do not perform any maintenance on the electric shaver other than cleaning the individual components as described in chapter Cleaning and maintenance.
- Never use an electric shaver or power adapter that are damaged in any way.
- Do not use the electric shaver if it has fallen on the floor, if it was submerged in water, if it is not functioning correctly or if it is damaged in any other way.
- In order to prevent a hazardous situation from arising, do not repair the electric shaver or any of its accessories yourself or modify it in any way. For all repairs, contact an authorised service centre. By tampering with the product you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.


A

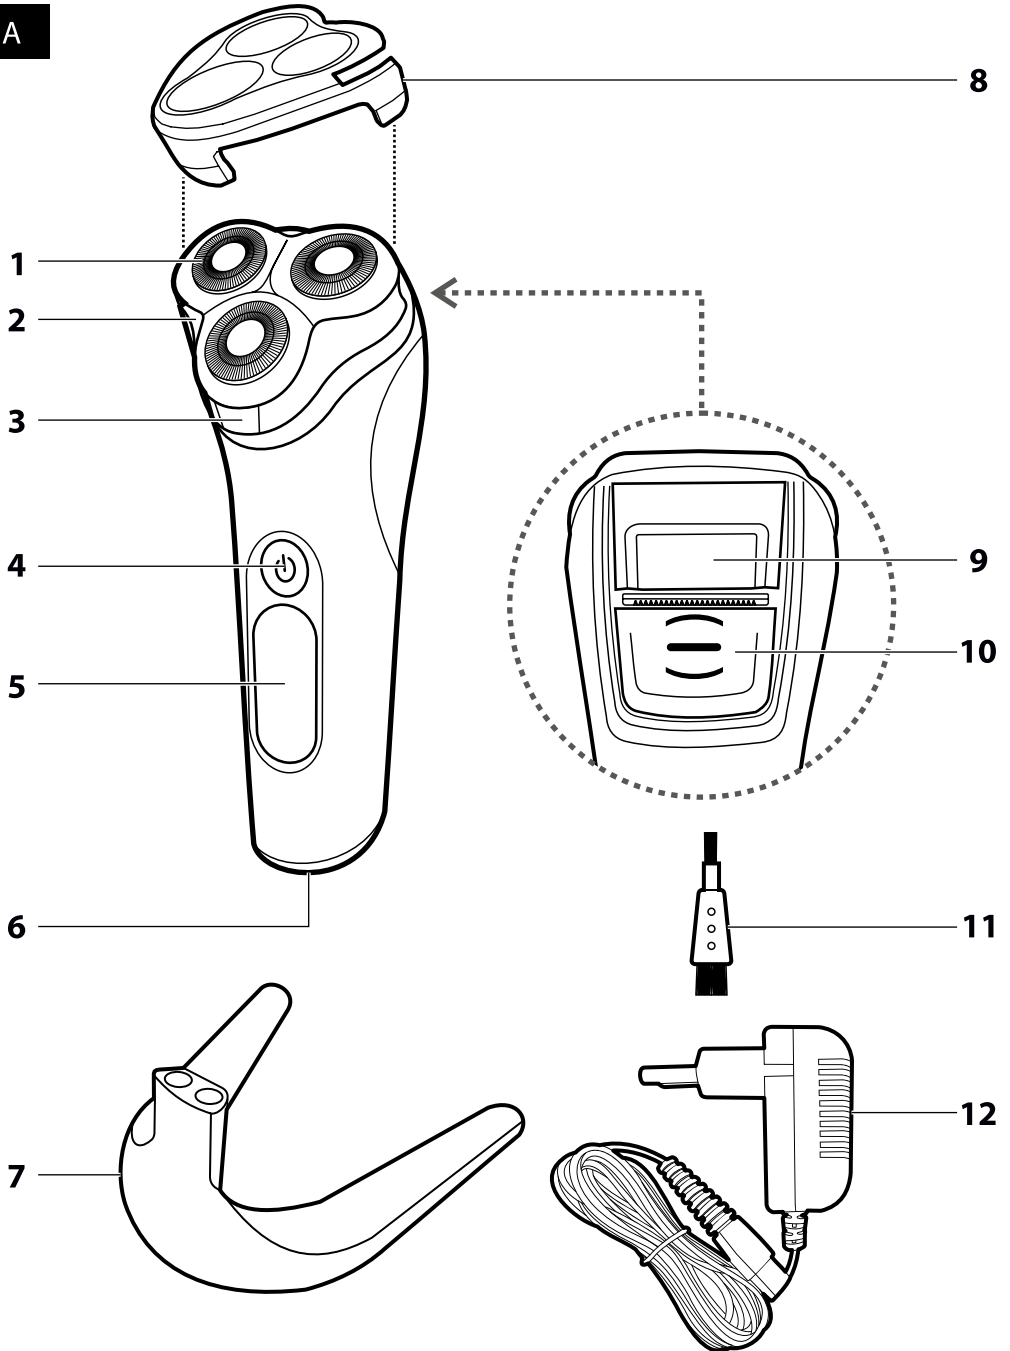


B

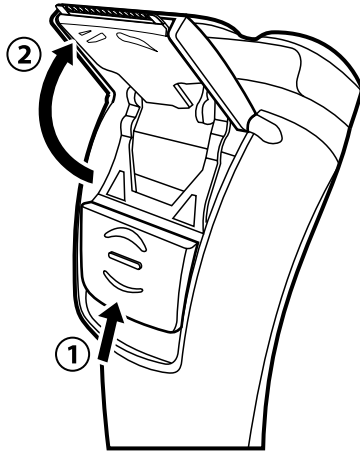 

C

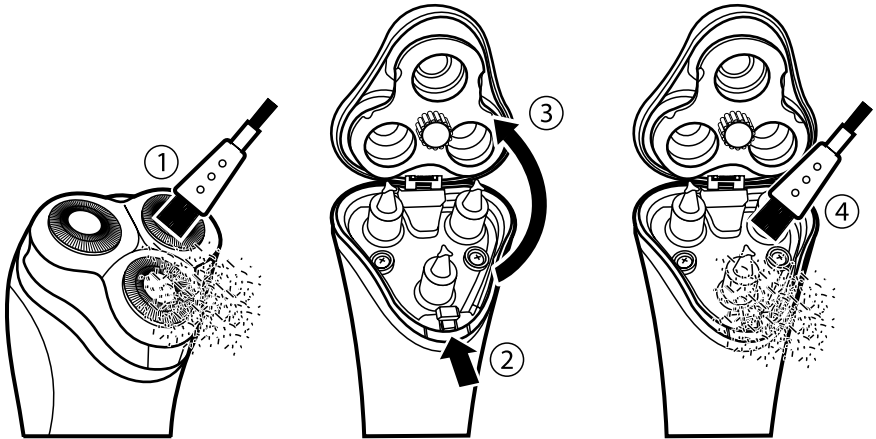 

D

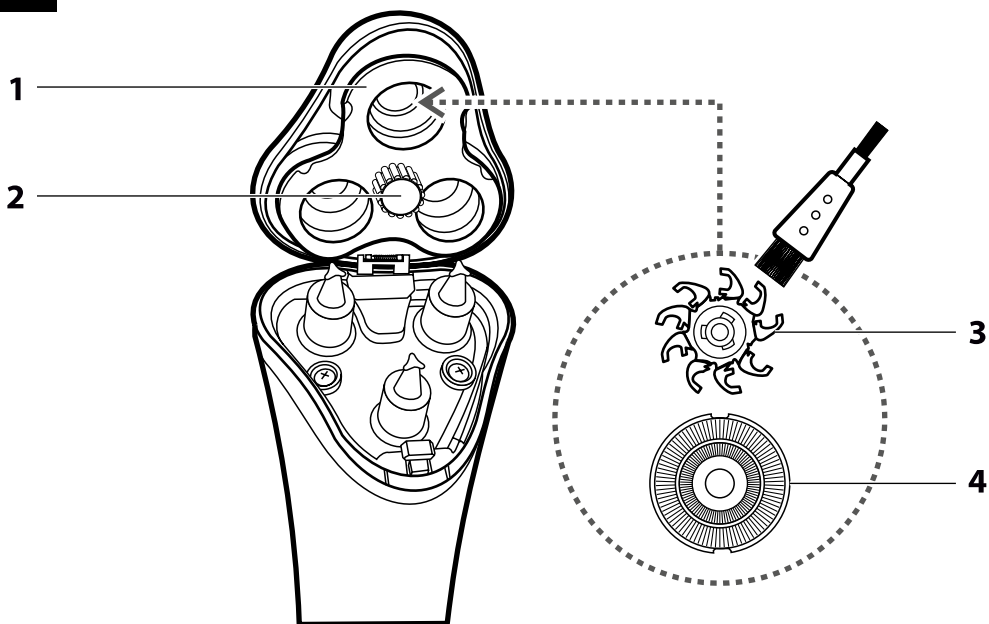

E



# EN Electric Shaver

## User's manual

- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use. In the event that you hand this appliance over to somebody else, make sure to also include this user's manual.
- Carefully unpack the appliance and take care not to throw away any part of the packaging before you find all its parts. We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

### DESCRIPTION OF THE ELECTRIC SHAVER AND ITS ACCESSORIES

<b>A1</b> Cutters	<b>A8</b> Shaving head protective cover
<b>A2</b> Shaving head with cutter holder	<b>A9</b> Trimming unit (rear side of the shaver)
<b>A3</b> Shaving head open button	<b>A10</b> Open/Close trimming unit button (rear side of the shaver)
<b>A4</b> On/Off switch	<b>A11</b> Cleaning brush
<b>A5</b> Display with battery capacity indicator	<b>A12</b> Power adapter
<b>A6</b> Power cord connection socket	
<b>A7</b> Storage stand	
<b>D1</b> Cutter holder	<b>D3</b> Cutter
<b>D2</b> Central wheel	<b>D4</b> Cutter cover

### PURPOSE OF USE

- The electric shaver is intended exclusively for dry shaving of beards and trimming of sideburns, moustaches or smaller whiskers. The electric shaver is not intended for wet shaving or for cutting synthetic hair or animal fur.
- The electric shaver is intended for domestic use and is not intended for business activities or other professional areas of use.

### CHARGING

- The electric shaver has a built-in battery that enables its cordless operation.



#### Note:

Before first use or after not using it for a long time, first allow the electric shaver battery to fully charge without turning it on.

- Check that the electric shaver is turned off. Insert the power adapter plug into the socket on the electric shaver and plug the power adapter into a power socket.
- The battery will start charging when connected to mains power. The respective number of lines will be lit on the display **A5** based on the current battery power level.
- The charging time differs depending on the current battery power level. If the battery is completely discharged (flat), the charge may take up to 2 hours.
- As soon as the battery is fully charged, all the lines will be lit on the display. Disconnect the fully charged electric shaver from the power adapter and disconnect the power adapter from the power socket.



#### Attention:

Do not leave the electric shaver connected to the power grid for longer than is necessary to charge it.

- A fully charged battery will provide up to 50 minutes of cordless operation. Then it is necessary to charge the battery again.

### DIRECT DRIVE TECHNOLOGY

- If the battery of the electric shaver is discharged (flat) or if it is discharged during cordless operation, the shaver can be plugged into mains power and can continue to be used. This is enabled by **DIRECT DRIVE** technology used on the electric shaver. Therefore, it is not necessary to wait for a minimum charge.

### RECOMMENDATIONS FOR EXTENDING THE LIFETIME OF THE BATTERY

- In order for the built-in battery to serve you as long as possible, charge, use and store the electric shaver in a dry environment at an ambient temperature of 15–35 °C. Lower or higher temperatures have a negative impact on the lifespan of the battery.
- Do not wait for the battery to become completely flat. It is better to charge the battery before it is completely flat.
- When the electric shaver is not used for an extended period of time, charge it at least once every 6 months.

### OPERATION

#### SHAVING

- Remove the protective cover from the shaving head.
- Turn on the electric shaver by pressing the switch **A4**.
- Hold the electric shaver at a right angle to the skin surface and in short circular motions glide the shaving head over the skin on the face, moving against the growth direction of facial hair. Apply appropriate pressure to the skin. Do not push too hard.
- Tension the skin with your free hand when shaving hard to reach places such as, for example, on the chin. In this way you will achieve better shaving results.



#### Note:

It may take your skin and facial hair two to three weeks to become accustomed to the new way of shaving. During this period, we recommend using the electric shaver every day.

- When you have finished shaving, clean the electric shaver according to the instructions in chapter Cleaning and maintenance. Place the protective cover on to the shaving head to prevent it and the cutters from becoming soiled.



#### Note:

In the event that the charging indicator starts flashing on the display while the shaver is used, this means that the battery is almost discharged (flat). If this happens, turn off the electric shaver, plug it into mains power and continue using it.

### TRIMMING

- For trimming sideburns or clipping moustaches or goatees, use the trimming unit **A9**.
- Push the button **A10** on the rear of the electric shaver upwards. This will release and open up the trimming unit (see fig. B).
- Turn on the electric shaver by pressing the switch **A4**. Hold the blades of the trimming unit at a right angle to the respective part of the skin.
- When you have finished trimming, clean the trimming unit according to the instructions in chapter Cleaning and maintenance. Close the trimming unit by pushing it downwards so that an audible click is made.

### CLEANING AND MAINTENANCE

- For hygiene reasons, clean the electric shaver after every use. Regular cleaning is also important to ensure the correct operation of the electric shaver and to extend the lifespan of the cutters.
- Turn off the electric shaver before cleaning it. Never clean the electric shaver when it is charging and connected to the power supply.



Do not clean any part of the electric shaver under a water tap, do not spray it with water or any other liquid or submerge it in water or any other liquid.

- The electric shaver unit can be cleaned using a clean dry cloth. In the event that it is very dirty, you can use a lightly dampened cloth. Then thoroughly wipe the cleaned surface dry.
- To clean the power adapter, use a clean, dry cloth.
- For cleaning, do not use brushes with hard bristles, cleaning products with an abrasive effect, solvents, etc. Otherwise, the cleaned surface may be damaged.

### CLEANING THE SHAVING HEAD

- Use the cleaning brush **A11** to remove all beard and whisker remains from the shaving head and cutters.
- Press button **A3** to open the shaving head. Use the cleaning brush to remove any soils or remaining whiskers from the inner area of the shaving head (see fig. C) and then close it.
- Turn the central wheel **D2** anticlockwise to release the cutter holder **D1**. Put the holder aside and carefully take the cutters out of the shaving head. The cutters consist of the internal blades **D3** and a cover **D4**. Remove the inner cutters from the cover and thoroughly clean all the parts including the inner area of the shaving head using the cleaning brush. Assemble the cutters and put them back in their place. Put the holder on to the cutters and secure in place by turning the central wheel clockwise. Close shaving head.



#### Attention:

When handling the inner cutters, be very careful not to injure yourself on their sharp blades.

- When you have finished cleaning it, put the protective cover on to the shaving head to prevent its damage.

### CLEANING THE TRIMMING UNIT

- Push up button **A10** to open the trimming unit. Use the cleaning brush to remove all beard and whisker remains from the trimming unit and the area under the unit (fig. E).
- Close the trimming unit by pushing the button downwards.

**Attention:**

The blade edges of the trimming unit are sharp, pay increased attention when handling them.

**STORAGE**

- When you have finished using it, you can store the electric shaver with all its accessories in a suitable location out of children's reach. Keep the electric shaver away from extreme temperatures, direct sunlight and excessive humidity. Do not use in an overly dusty environment.

**TECHNICAL SPECIFICATIONS****Electric Shaver**

Built-in battery .....	Li-Ion, 3.7 V, 700 mAh
Dimensions (width x depth x height) .....	160 x 60 x 75 mm
Weight .....	177 g
Noise level .....	72 dB(A)

**Power adapter**

Input .....	100–240 V AC, 50/60 Hz, 0.2 A
Output .....	5 V/DC, 1 A, 5W
Electrical shock protection class .....	II

The declared noise emission level of the appliance is 72 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

**EXPLANATION OF TECHNICAL TERMINOLOGY****Safety class for electrical shock protection:****Electric shock protection class:**

Class II – Electrical shock protection is provided by double or heavy-duty insulation.

Changes to text and technical parameters are reserved.

**INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS**

Dispose of used packaging material at a site designated for waste in your municipality.

**DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**

This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand these products over to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

**For business entities in European Union states**

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

**Disposal in other countries outside the European Union.**

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.