



EN ■ Milk frother

Translation of the original manual

READ CAREFULLY AND STORE FOR FUTURE USE.**General warnings**


- This appliance is intended to be used in household only.
- This product may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not play with the product.
- Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- Do not disassemble the product (with the exception of the battery compartment cover). There is a risk of injury if the appliance is incorrectly assembled.
- Do not place any objects into the product.
- Do not submerge the motor unit in water or in any other liquid. This could result in irreparable damage to the product.
- Prevent contact with hot surfaces.
- Use the product only in accordance to the instructions contained in this user's manual. The product is intended only for frothing milk. Do not use it for any other purposes than those intended. Never use this product for processing solid, frozen or other types of food.

Safety instructions related to batteries:


- Do not throw batteries into a fire. Do not charge batteries that are not intended for recharging. There is a risk of the appliance exploding.

- Never disassemble, solder or weld the battery. There is a risk of the appliance exploding.
- Regularly check the condition of the battery. Leaking electrolyte may damage the product.
- When not using the product for an extended period of time, remove the batteries. In the event that the electrolyte leaks, first put on a pair of protective gloves. Clean the battery compartment and contacts using a dry cloth.
- Keep the batteries out of children's reach. Children may put the battery in their mouth and swallow it. In the event that the battery is swallowed, immediately seek professional medical help.
- Never use old and new batteries at the same time.
- When inserting the batteries, heed correct polarity.
- Always insert only new batteries of the same type into the product.
- In the event that the batteries are flat, take them out of the product and dispose of them according to valid local legal codes. Do not throw the batteries into communal household waste.


A

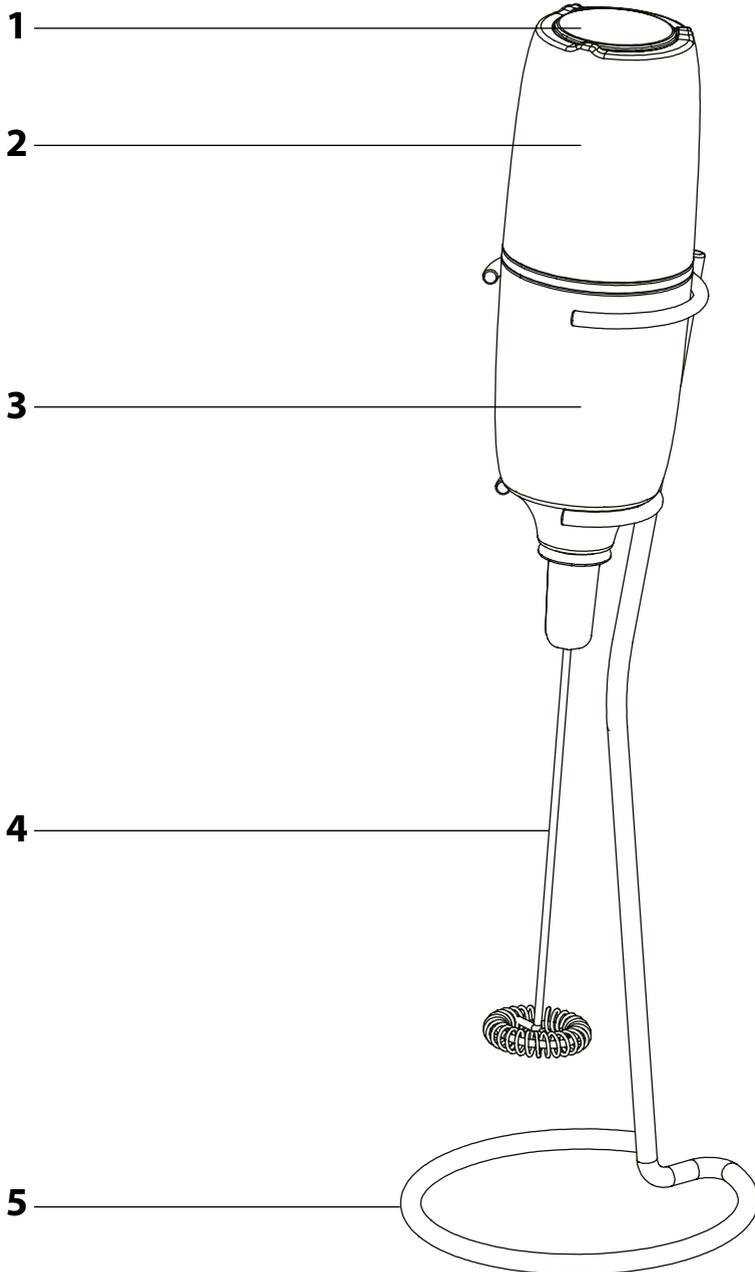

B

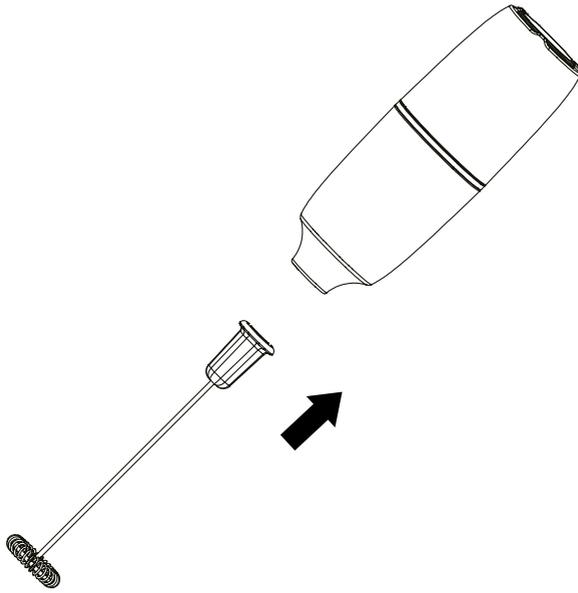

C

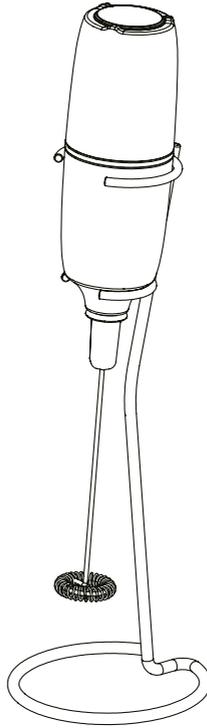

EN Milk frother

User's manual

- Prior to using this appliance, please read the user's manual thoroughly, even in cases where you have previously familiarised yourself with the operation of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

DESCRIPTION OF THE APPLIANCE

- | | |
|---|---------------------------------|
| A1 On/Off button | A4 Stainless steel whisk |
| A2 Battery compartment cover | A5 Stand |
| A3 Motor unit with battery compartment | |

BEFORE FIRST USE

- Before first use, take the product and its accessories out of the packaging material and remove all promotional labels and stickers. Check that neither the product nor any of its parts is damaged. Wipe the product using a clean, dry cloth.

Battery Installation

- Before first use or in the event of reduced performance, it is necessary to insert new batteries.
- Turn the battery compartment cover **A2** anticlockwise and pull it out upwards.
- Place two new type AA/LR6 batteries (2x 1.5 V) into the battery compartment. When inserting the batteries, heed correct polarity.
- Put the battery compartment cover **A2** on to the motor unit **A3**. Ensure that the tabs on the inner side of the battery compartment cover **A2** fit into the grooves on the motor unit **A3**. Then turn the battery compartment cover **A2** clockwise until you feel slight resistance.



Note:

When changing batteries, it is necessary to first remove the old batteries.

Assembly

- In order to use the milk frother, insert the stainless steel whisk **A4** into the hole in the motor unit **A3** – see fig. B.

Operation

- Before using it, check that the batteries are correctly inserted and that the milk frother is correctly assembled.
- 1. Fill a tall glass / cup to 1/3 with the milk that you wish to froth.
- 2. Insert the milk frother into the glass / cup so that the whisk **A4** is submerged just below the surface.
- 3. Press the On/Off button and the milk frother will start.
- 4. Carefully move the milk frother in circular motion just below the milk level.
- 5. Once bubbles start to form, slowly pull the milk frother upwards so that the whisk **A4** is submerged both in the milk and in the formed frothed layer.
- 6. When the milk is sufficiently frothed, press the On/Off button and wait for the whisk **A4** to come to a stop. Only then may you take it out of the frothed milk.

Tip:

To achieve a rich milky foam, it is recommended to use well cooled milk with a higher fat content.



Note:

Always wait for the whisk **A4** to come to a complete stop before removing it from the frothed milk. If you were to take it out sooner, milk would be splashed around.

Tip:

If you wish to froth hot milk, use milk with a maximum temperature of 60 °C. If the milk were to have a higher temperature, the result of the frothing may not be satisfactory.

Stand

- The milk frother is supplied with a practical stand **A5** into which the milk frother can be conveniently placed so that it is ready for use in an appropriate place, e.g. next to an espresso machine.
- Carefully place the milk frother into the stand **A5** – see fig. C.

CLEANING AND MAINTENANCE

- The milk frother must be cleaned after every use. Dried on milk residues may be very hard to remove.
- For cleaning any part of the product, do not use cleaning products with an abrasive effect, solvents, etc. that could damage the surface of the appliance. No part of this product is intended for washing in a dishwasher.



Warning:

Do not submerge the motor unit in water or in any other liquid. This could result in irreparable damage to the product.

Cleaning the whisk

The whisk **A4** must be cleaned after every use.

1. In order to properly clean the whisk **A4**, fill the glass / cup about half way with water and a small amount of dishwashing detergent, and insert the milk frother into the water so that the whisk **A4** is submerged in the water.
2. Press the On/Off button and allow the milk frother to run until all the milk residues on the whisk **A4** are removed. Press the On/Off button to turn off the milk frother.
3. Carefully take the whisk **A4** off the motor unit **A3** and rinse it under clean cold water. Dry it using a clean wiping cloth or leave it to dry naturally. Insert the clean whisk **A4** into the motor unit **A3** and put it into the stand **A5**.



Note:

In the event that dried milk residues remain on the whisk **A4**, you can use a brush with gentle bristles to remove them.

Cleaning the motor unit

- To clean the motor unit **A3**, you can use a soft cloth lightly dipped in lukewarm water. Prevent any water from entering into the motor unit **A3**.

Storage

- When not using the milk frother for an extended period of time, take the batteries out of it and clean it according to the instructions in chapter "Cleaning and maintenance".
- Put the milk frother into the stand. Store it in a dry and well-ventilated location.

RECIPES

Vienna coffee

- Pour 125 ml of strong black coffee into a cup.
- Froth up about 100 ml of milk and fill the cup up with milk froth up to its edge. Sweeten to taste.

Marocchino

- Warm up about one spoon of milk chocolate and pour out the inner sides of a glass with this warm chocolate.
- Pour one espresso into the glass. Froth up some milk and add 3 – 4 teaspoons of milk froth into the glass.
- Sprinkle the milk froth with cocoa.

Hot chocolate

- Froth up some hot milk and add cocoa or a hot chocolate mix into it. Mix thoroughly.
- You can add a liqueur to taste, e.g. Amaretto.

Ice chocolate

- Add a little hot chocolate mixture or chocolate syrup into cold milk.
- Froth up the milk with the chocolate mixture.
- Add a scoop of vanilla ice cream and pour over with a small amount of chocolate syrup.

Milkshake

- Add some fine jam or fruit syrup into cold milk. Froth up the milk into a smooth foam.

TECHNICAL SPECIFICATIONS

Voltage 2 x 1.5 V ---
Battery type 1.5 V; type AA (LR6)

Changes to text and technical parameters are reserved.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED BATTERIES



Batteries contain environmentally damaging compounds and, therefore, do not belong in standard communal waste. Hand over used batteries for proper disposal at locations intended for their collection.



This product meets all the basic requirements of EU directives related to it.