



EN ■ Kitchen scale


Translation of the original manual

READ CAREFULLY AND STORE FOR FUTURE USE.**General warnings**


- This appliance is designed for household use. Do not use it for commercial purposes, for weighing animals or for other purposes for which it is not intended.
- This appliance may be used by children and persons with reduced physical, sensory or mental abilities or with insufficient experience and knowledge if they are properly supervised.
- Children must be supervised to ensure that they do not play with the appliance.
- Do not use the appliance outdoors, do not locate it on unstable surfaces, on electric or gas cooktops, in the vicinity of an open flame or other sources of heat.
- Do not expose the appliance to direct sunlight or high humidity and do not use it in an excessively dusty environment.
- During use, it necessary to ensure that the appliance is located on an even, smooth, hard and stable surface. Otherwise, this may result in weighing inaccuracies.
- In the event that the maximum weighing capacity is exceeded, remove the excessively heavy food or item from the weighing platform to prevent possible damage to the appliance.
- Do not use the appliance as a place for placing items. It must be ensured that no items are placed on the appliance during storage.

- Always use new batteries of the same type. Never combine used and new batteries or various types of batteries. Never put the batteries in a fire, short circuit them or damage them in any way. Dispose of them ecologically at the end of their lifetime. Never throw batteries out with communal waste.
- If you will not be using the appliance for an extended period of time, remove the batteries. If the battery were to leak into the inner area of the appliance, this could damage it.
- Do not use rechargeable batteries to power this appliance.
- Keep the batteries out of children's reach as they may present a hazard to a child. In the event that a child swallows a battery, immediately seek medical help.
- Keep the appliance clean. When cleaning it, follow the instructions in chapter Cleaning and maintenance. Do not submerge the appliance under water or any other liquid and do not rinse it under running water.
- Do not repair the appliance yourself or make any adjustments to it. Have all repairs performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

A

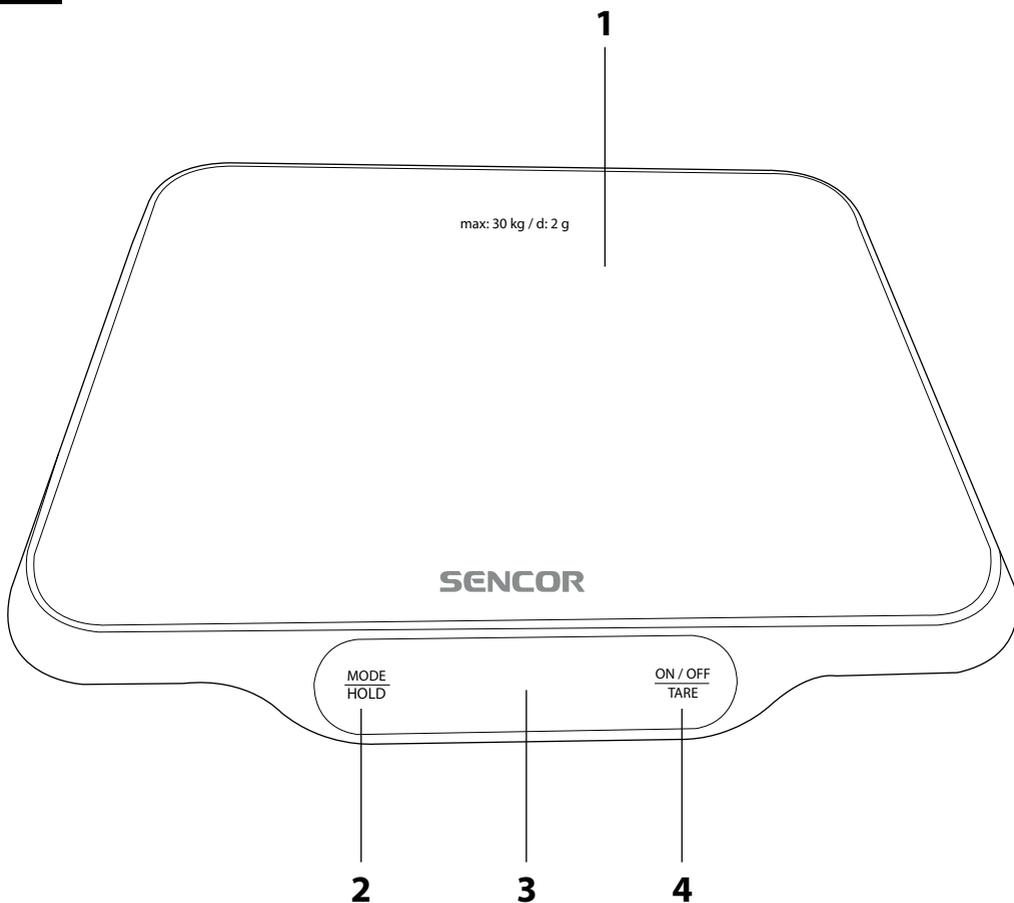

B

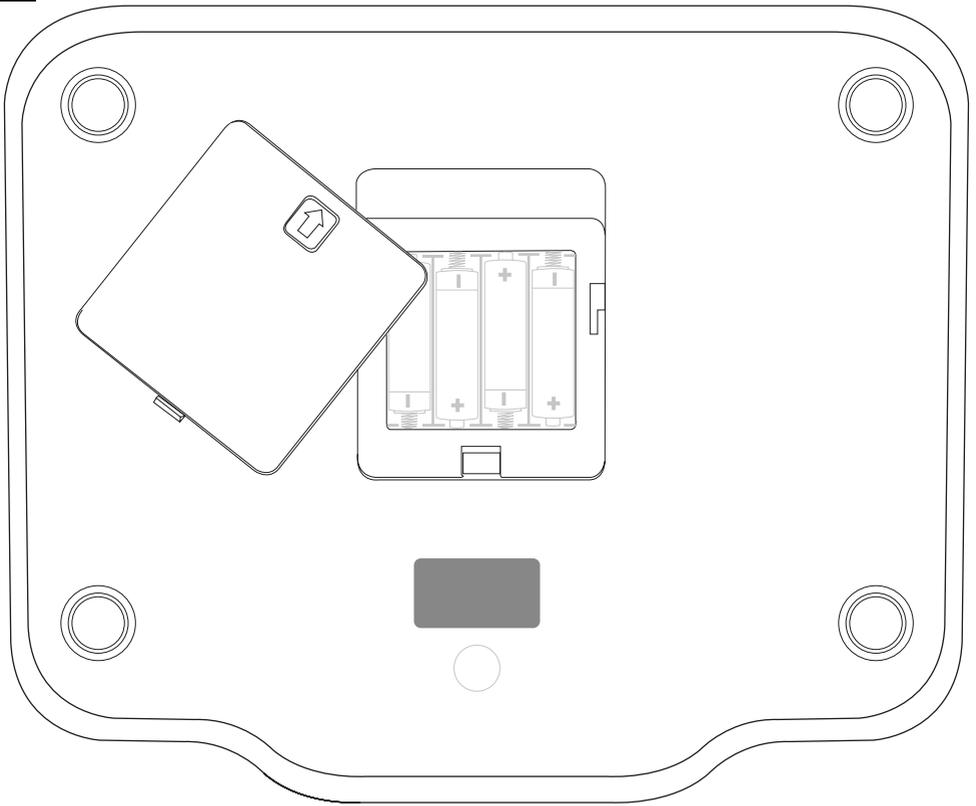

EN Kitchen Scale

User's manual

- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use. We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

DESCRIPTION OF THE SCALE

- A1** Weighing and measuring platform
 - A2** **MODE / HOLD** button – serves to toggle the units and to activate / deactivate the **HOLD** function
 - A3** Display
 - A4** **ON / OFF / TARE** button – serves to turn the scale on - off and to zero the values during the gradual weighing of ingredients
- Battery compartment (located on the underside of the scale)

Inserting and replacing batteries

- The scale is powered using 4x 1.5V type AA alkaline batteries.
- Remove the battery compartment cover. Insert new batteries of the same type – see figure B. Ensure correct polarity as shown at the bottom of the battery compartment. After inserting them, put the cover back on.
- When "Lo" appears on the display, the batteries are flat and it is necessary to replace them with new ones. When replacing them, proceed in the same manner as when inserting batteries.

Turning the scale on / off

- Place the scale on an even, dry surface. It is important that the scale stands on all 4 feet. Only in this way will accurate weighing / functionality of the scale be achieved.
- Short press the **ON / OFF / TARE A4** button and "HELLO" will temporarily appear on the display **A3** followed by "0" being displayed. Place the ingredients that you wish to weigh on the scale and the display **A3** will show their weight.
- When you have finished using the scale, hold down the **ON / OFF / TARE A4** button for approx. 2 seconds to turn the scale off.



Note:
The scale will automatically turn off after approx. 60 seconds of inactivity.

Unit selection

- Repeatedly press **MODE / HOLD A2** to switch between the metric and imperial units in the following order: g – kg – oz – lb:oz.

TARE function

- These functions are used for setting the weight of the container to zero when this weight is not intended to be added to the total weight of the ingredients, and for weighing additional ingredients.
- Place the container on to the scale and wait until the weight is shown on the display **A3**. Before placing another item on to the scale, press button **ON / OFF / TARE A4**. This will set the value shown on the display **A3** to zero. Now you may add another item and repeat the above described procedure.
- When the container is removed from the scale, the display **A3** will show a negative value. Press the **ON / OFF / TARE A4** button and the display **A3** will again show "0".

HOLD function

- This function makes it possible to retain the value of the weighed ingredients / items on the display **A3** even after they are taken off the scale, e.g. when the ingredients cover up the display **A3** during the weighing process.
- Hold down button **MODE / HOLD A2** for approx. 2 seconds and the symbol "⏸" will appear on the display.
- Place the container with the ingredients or the item that you wish to weigh on to the scale. The weight will appear on the display **A3** and the appliance will beep.
- The weighing result will appear on the display **A3** until you carry out further weighing with a weight greater than 5 g.
- To deactivate the HOLD function, hold down the button **MODE / HOLD A2** for approx. 2 seconds. The symbol "⏸" will disappear from the display **A3**.

Error messages

| Display | What to do |
|---------|---|
| Lo | Batteries are flat. Replace the batteries. More information in chapter "Inserting and replacing batteries". |
| EEEE | The maximum weighing capacity of the scale is exceeded. Remove the ingredients from scale to prevent damaging it. |

CLEANING AND MAINTENANCE

- To clean the scale, use a soft sponge lightly dampened in warm water. Wipe dry using a clean wiping cloth.
- For cleaning, do not use steel wool, cleaning products with an abrasive effect, solvents, etc. Otherwise, the surface of the appliance may be damaged.
- Do not submerge the scale under water or any other liquid and do not rinse it under running water.

TECHNICAL SPECIFICATIONS

Power source 4x 1.5V type AA batteries
 Weighing capacity 30 kg / 66 lb
 Weighing precision 2 g / 0.1 oz
 Unit selection g / kg / oz / lb:oz

We reserve the right to change text and technical specifications.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.



DISPOSAL OF USED BATTERIES

Batteries contain environmentally damaging compounds and, therefore, do not belong in standard communal waste. Hand over used batteries for proper disposal at locations intended for their collection.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic equipment, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.