

SENCOR®

SSM 4420SS



SANDWICH MAKER
Translation of the original manual




SENCOR®

SSM 4420SS



Diagram illustrating the front view of the device. The device is a rectangular unit with rounded corners and a handle on the left side. The handle has a strap with a buckle. The device is shown with a top cover and a base. The following components are labeled with numbers:

- 5: Top cover
- 6: Base
- 7: Handle/Strap assembly

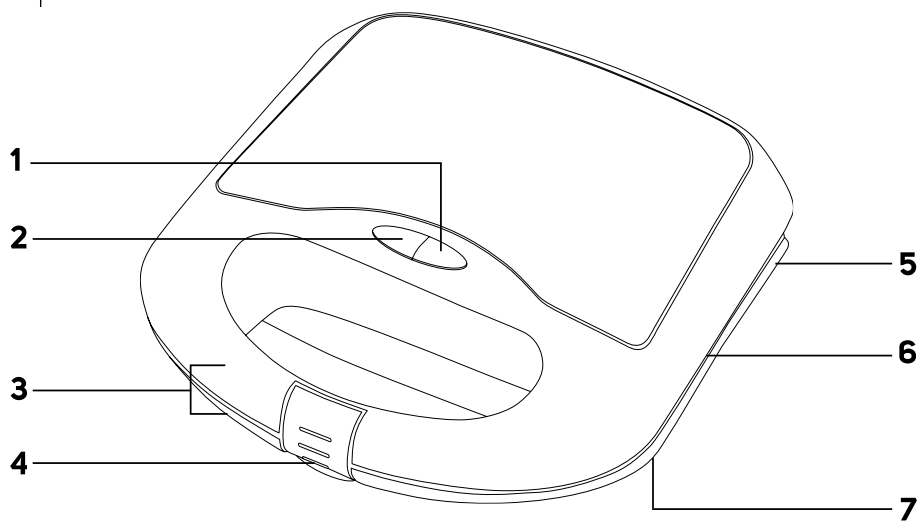

Important safety instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.
- Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision.
- Children younger than 8 years of age must be kept away from the appliance and its power cord.



Attention: Hot surface

The temperature of accessible surfaces may be higher if the appliance is in operation. Such surfaces may become hot during use. Do not touch the hot surface. This could cause skin burns. Use the handle to open and close the appliance.

- Food surfaces that come into contact with food, need to be cleaned regularly. Proceed according to the instructions in chapter Cleaning and maintenance.
 - This appliance is not designed to be controlled using a programmed device, external timer switch or remote control.
-
- Before connecting the appliance to a power socket, check that the technical specifications on the appliance's rating label match the electrical voltage in the socket.
 - Connect the appliance only to a properly grounded socket.
 - The appliance is designed for household use only. Do not use it for commercial purposes.
 - Do not use the appliance in industrial surroundings or outdoors.
 - Do not use the appliance for any other purposes than those intended.
 - Do not place the appliance on or near an electric or gas stove or other sources of heat.
 - Do not place appliances on the edge of a workbench or on unstable surfaces. The appliance must be located on a stable and even surface.
 - After connecting the appliance to a power socket, the baking surfaces and the outer surface of the appliance heats up. Do not touch the hot surface. To close and open the top baking plate use the thermally insulated handle and for removing the finished meal use a wooden or heat resistant plastic spatula.
 - During operation, leave sufficient space around the appliance for air circulation. Do not place any items on to the hot surface of the appliance.
 - Food may catch on fire during the cooking process, therefore check the sandwich maker regularly. If you notice smoke, disconnect the power plug from the socket and extinguish the fire.
 - Always turn off the appliance and disconnect it from the power socket when leaving it without supervision or when not using it or before cleaning.
 - Allow the appliance to fully cool down before moving, cleaning and storing it.
 - Clean the baking plates after each use, see chapter Cleaning and maintenance.
 - To avoid potential injury by electrical shock, do not clean the appliance under running water and do not submerge it in water or any liquid.
 - Ensure that the power cord does not come into contact with water or moisture or a heated surface.
 - Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the power socket.
 - Disconnect the cord from the power socket by gently pulling the plug of the power cord.
 - To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments of the appliance performed at an authorised service centre. Tampering with the appliance during the warranty period may void the warranty.

EN Sandwich maker

User's manual

- Thank you for purchasing a SENCOR brand product and we hope that you will be happy with it.
- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

DESCRIPTION OF THE APPLIANCE

- | | |
|--|--|
| A1 Baking plates heating up indicator | power cord (not shown), located on the underside of the appliance. |
| A2 Power indicator signals that the appliance is connected to a power socket. | A6 Baking plates with a non-stick surface |
| A3 Thermally insulated handles | A7 Anti-slip feet (not shown), located on the underside of the appliance. |
| A4 Latch for locking and releasing the handles | |
| A5 Space for winding up the | |

BEFORE FIRST USE

- Take the appliance out of the packaging material and remove all promotional labels and stickers from it.
- Wipe the baking plates with a lightly dampened cloth or sponge and then wipe it thoroughly dry.
- Before first use, run the appliance empty for 5 to 7 minutes to remove any potential odours.



Note:

Light smoke may be emitted when the appliance is started for the first time. This effect is caused by the inner components being heated up and it will disappear after a few moments.

OPERATING THE APPLIANCE

- Connect the sandwich maker to a power socket. Both indicators on the top panel will be lit. The red indicator signals a connection to an electrical power source. The green indicator indicates that the baking plates are heating up.
- Coat the baking plates with a little butter or cooking oil, and close the sandwich maker to help the baking plates heat up faster.
- Prepare your sandwiches before the plates heat up. For one sandwich you will need two slices of bread and the ingredients to go between them. Place the filling ingredients precisely between the sandwich bread slices. Putting in too many ingredients may prevent the sandwich maker from closing. In such a case, it is necessary to remove some of the ingredients. Do not attempt to close the sandwich maker using force as this could damage it.
- When the baking plates are heated to the set temperature, the green indicator will turn off.



Note:

The green indicator turns on and off intermittently during operation. This signals that the operating temperature is being maintained.

- Open the sandwich maker using the handle and place one or two sandwiches on to the bottom baking plate. Close the sandwich maker and use the latch to secure the handles to each other.
- After 3 to 5 minutes, release the latch and use the handle to tilt open the top plate, and check the sandwich. If it is sufficiently toasted, take it out. Otherwise, extend the toasting time. Use a wooden or another heat resistant spatula, etc. to remove the sandwich. Do not use a knife or fork or any other metal utensils. This could cause damage to the non-stick coating of the baking plates.
- Before toasting more food, close the sandwich maker and wait until the green indicator turns off.
- When you have finished using it, disconnect the power cord from the power socket. Allow the sandwich maker to cool down and clean it according to the instructions in chapter Cleaning and maintenance.



Note:

The toasting time depends on the type of bread, the ingredients and your taste.

- Before toasting more food, close the sandwich maker and wait until the green indicator turns off.
- When you have finished using it, disconnect the power cord from the power socket. Allow the sandwich maker to cool down and clean it according to the instructions in chapter Cleaning and maintenance.

SANDWICH MAKING TIPS

- As base ingredients for the sandwich filling, you may use meat, fish, cheeses, smoked goods, boiled egg slices, mushrooms or fruit and vegetables such as bananas, apples, pineapples or tomatoes. Do not use excessive amount of filling, to prevent it from spilling on to the baking plates.
- You may season the filling with spices, herbs, ketchup, etc.
- For the sandwiches to get a golden brown colour, you may spread a light layer of butter on the top side of the sandwich bread slice.

RECIPES

Ham, cheese and pineapple sandwich (2x)

4 slices of sandwich bread
2 slices of cheese
4 slices of ham
2 slices of pineapple

Allow the baking plates to preheat. Place two slices of ham, a slice of cheese and pineapple between two slices of sandwich bread. Prepare the second sandwich in the same way. Toasting of sandwiches takes approximately 3 to 5 minutes.

Tomato and cheese sandwich (2x)

4 slices of sandwich bread
1 medium-size sliced tomato
2 tablespoons of grated cheese
Preheat the baking plates

Allow the baking plates to preheat. Between the two slices of sandwich bread, place a few slices of tomato and sprinkle them with grated cheese. Season the filling with ground paprika and prepare the second sandwich in the same way. Toasting of sandwiches takes approximately 3 to 5 minutes.

Chocolate spread and banana sandwich (2x)

4 slices of sandwich bread
1/2 banana cut into thin slices
chocolate spread
Allow the baking plates to preheat. On to the two sandwich bread slices, apply a thin layer of the chocolate spread and add a few banana slices. With the spread side facing inward, put the two pieces of bread together, and in the same way prepare the second sandwich. Toasting of sandwiches takes approximately 3 to 5 minutes.

CLEANING AND MAINTENANCE

- Prior to cleaning the sandwich maker, disconnect it from the power socket and allow it to cool down.
- Clean the non-stick surface of the baking plates after each use. This will prevent baked on food remains from accumulating. For cleaning, use a lightly dampened, soft cloth. If some burnt food residue is left on the baking plates, sprinkle with water and mild dish detergent. After applying the kitchen detergent, wipe the grill plates with a clean damp cloth. Then wipe everything so that it is thoroughly dry.



Tip:
It will be easier to clean the baking plates while they are still slightly warm.

- Wipe the outer surface of the sandwich maker with a lightly dampened cloth and then wipe it dry.
- Do not wash the appliance under running water or submerge it in water or another liquid.
- For cleaning, do not use steel wool, cleaning products with an abrasive effect, solvents, etc. Otherwise, the cleaned surface may be damaged.

STORAGE

- When the baking plates are cold, close the top plate and use the latch to secure the handles to each other. Wind the power cord into the bottom of the sandwich maker.
- Store the sandwich maker in a clean, dry place that is out of reach of children.



Note:
Storing the sandwich maker in a vertical position saves space in your kitchen.

TECHNICAL SPECIFICATIONS

Rated voltage range	220–240 V
Rated frequency.....	50/60 Hz
Rated power input.....	700 W

We reserve the right to change text and technical specifications.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic equipment, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

