

# Kitchen Scale

User's manual

EN



## SENCOR®

SKS 5030WH / SKS 5031GR / SKS 5032BL  
SKS 5033OR / SKS 5034RD / SKS 5035VT  
SKS 5036YL / SKS 5037TQ / SKS 5038RS

Translation of the original manual

**CONTENTS**

SAFETY INSTRUCTIONS AND IMPORTANT NOTES .....	3
DESCRIPTION .....	7
INSTRUCTIONS FOR USE .....	7
OVERLOAD INDICATOR.....	8
REPLACING BATTERIES .....	8
CLEANING AND MAINTENANCE.....	9
DISPOSAL OF USED BATTERIES .....	9
TROUBLESHOOTING .....	9
TECHNICAL DATA.....	9
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS .....	10
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT .....	10

## **SAFETY INSTRUCTIONS AND IMPORTANT NOTES**

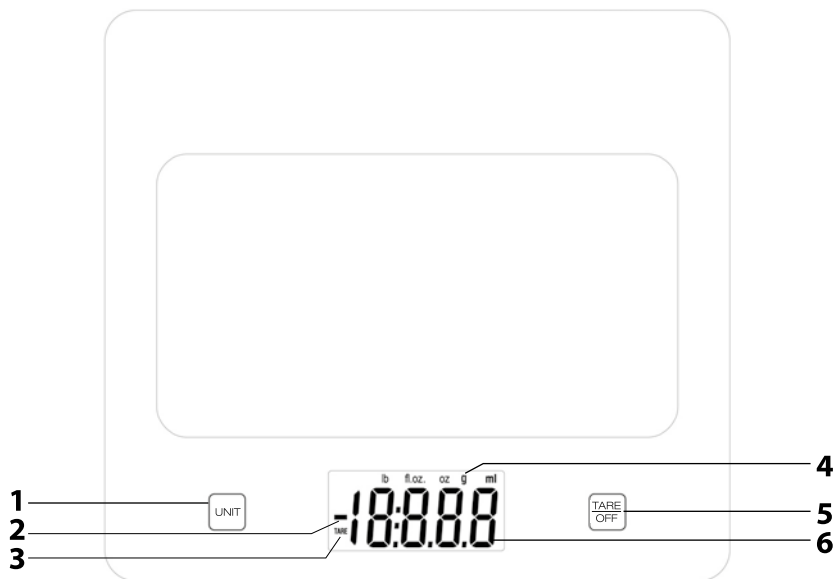
- This appliance is primarily designed for personal household use. Do not use it for commercial purposes, in industrial surroundings or for weighing animals.
- Do not use the appliance for any other purposes than those intended.
- Carefully unpack the appliance and take care not to throw away any part of the packaging before you find all the parts of the appliance.
- The appliance may be used by children and persons with reduced physical, sensory or mental abilities or with insufficient experience and knowledge only if they are supervised by competent persons. Ensure their safety.
- Children must be supervised to ensure that they do not play with the appliance.
- During use, it necessary to ensure that the appliance is located on an even, smooth, hard and stable surface. Otherwise, this may result in weighing inaccuracies.
- In the event that the maximum weighing capacity is exceeded, remove the excessively heavy food or item from the weighing platform to prevent possible damage to the appliance.
- Do not use the appliance as a place for placing items. It must be ensured that no items are placed on the appliance during storage.

- Keep the appliance away from extreme temperatures, direct sunlight and excessive humidity. Do not use it in an overly dusty environment.
- Do not place the appliance near heaters, open fires or other equipment or devices that are sources of heat. Use and store it away from flammable or volatile substances.
- If you will not be using the appliance for an extended period of time, remove the batteries. Otherwise they may leak inside the appliance and cause irreparable damage.
- Dispose of the batteries ecologically at the end of their lifetime. Never throw batteries out with communal waste.
- Do not use rechargeable batteries to power this appliance.
- Keep the batteries out of children's reach as they may present a hazard to a child. In the event that a child swallows a battery, immediately seek medical help.
- Keep the appliance clean. When cleaning, follow the instructions in chapter "Cleaning and maintenance".
- Do not submerge the appliance under water or any other liquid and do not rinse it under running water.
- The manufacturer takes no responsibility for damages caused by the incorrect use of the appliance.

- Under no circumstances should you repair or alter the appliance yourself. Have all repairs or adjustments of the appliance performed at a professional company or an authorised service centre. Tampering with the appliance during the warranty period may void the warranty.

# Kitchen Scale

SKS 5030WH / SKS 5031GR / SKS 5032BL / SKS 5033OR / SKS 5034RD / SKS 5035VT / SKS 5036YL / SKS 5037TQ / SKS 5038RS

**A**

Before first use, please read all instructions contained in this user's manual carefully, even if you are already familiar with using similar products. Only use this product in accordance with the instructions described in the user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.

Save the original packaging, including the internal packing material, warranty card and proof of purchase receipt, at least for the duration of the warranty. If you need to ship this product, pack it in the original cardboard box to ensure maximum protection during shipping or transport (e.g., when moving or when you need to send this product for repair).

## DESCRIPTION

- A1** "UNIT" button
- A2** Negative weight indicator
- A3** "TARE" indicator
- A4** Selected unit indicator
- A5** "TARE/OFF" button
- A6** Numerical digit display

## INSTRUCTIONS FOR USE

### Turning the scale on and off

**Attention:**

Prior to first use, open the battery compartment cover on the underside of the scale and remove the insulating strip that prevents the battery from discharging during transport.

- 1) The scale has an "Auto-On" function. To start the scale, use your hand to push down on the weighing platform or place the weighed item on it.

Note: We recommend starting the scale by pushing down on the weighing platform with your hand. The scale will only start automatically when a sufficiently heavy item is placed on it (usually approx. 0.5 kg). If you start the scale by placing an item on the weighing platform, the weight of 0 will be shown. This option is thus particularly suitable when you need to place a bowl in which the ingredients will be weighed on to the scale prior to weighing the actual ingredients.

- 2) Turn off the scale by pressing the "TARE / OFF" button.

**Attention:**

The scale turns itself off automatically after approximately 60 seconds after displaying "0.0" on the LCD display or in the event that it is idle. If you turn it off yourself after weighing using the "TARE / OFF" button you will save the battery.

### **Toggleing measuring units**

While weighing, you may toggle between the measuring units (g -> ml -> lb:oz -> fl.oz) by pressing the "UNIT" button.

### **Weighing procedure**

- 1) To start weighing, place the item that is to be weighed on the weighing surface. The scale will be started automatically.
- 2) If necessary select the measuring unit (g -> ml -> lb:oz -> fl .oz).
- 3) Place the food that you wish to weigh on the weighing surface.
- 4) The weight will be shown on the display in the selected units.

### **Additional weighing function (TARE)**

- 1) To start weighing, place the item that is to be weighed on the weighing surface. The scale will be started automatically.
- 2) If necessary select the measuring unit (g -> ml -> lb:oz -> fl .oz).
- 3) Place the food that you wish to weigh carefully on the plate.
- 4) As soon as the scale stabilises, press the "TARE / OFF" button. The current weight will be deleted and the display will be reset to zero.
- 5) Place other food on the scale. The display will only show the weight of the ingredients that are subsequently placed on the scale.
- 6) In this way you may continue to weigh additional ingredients by adding them step by step and repeating steps 4 and 5.

### **How to turn off the additional weighing function (TARE)**

Remove all ingredients from the scale. The weight will show a negative value. Press the "TARE / OFF" button to reset the scale to zero.

### **OVERLOAD INDICATOR**

If the scale is overloaded (max. capacity 5 kg), the display will show the symbol "EEEE". Remove the food from the scale immediately so as not to damage the scale.

### **REPLACING BATTERIES**

If the display shows the dead battery icon "Lo", it is time to change the battery.

- 1) Remove the battery compartment cover on the bottom part of the scale.
- 2) Remove the old battery.
- 3) Place one 3V type CR2032 lithium battery into the battery compartment. Pay attention to the polarity. The positive pole must always be facing upwards.



**Attention:**

- If you will not be using the scale for a long time, store it in a horizontal position. This position better protects the sensitive sensors located in the feet of the scale.
- Do not place or leave any objects on the scale that may place an unnecessary load on the sensors.
- Strong electromagnetic fields may negatively influence the weighing precision. Avoid using the scale in such areas.

## CLEANING AND MAINTENANCE

To clean the outside parts of the appliance use a fine cloth dipped in lukewarm water. Do not use aggressive cleaning agents, paint thinners or solvents. Using these solutions could damage the surface of the product.

## DISPOSAL OF USED BATTERIES

This product comes with one alkaline battery. Do not dispose of old batteries with regular household waste. Dispose of batteries at designated battery disposal points.

## TROUBLESHOOTING

If the scale displays random values or if it does not turn off automatically, you need to restart it. In such cases, remove the batteries for about 10 seconds and place them back again. The scale should function normally.

## TECHNICAL DATA

Power supply .....	1× 3V lithium battery (CR2032)
Max. measurable weight .....	5,000 g
Weighing increments.....	1 g
Toggling measuring units .....	g -> ml -> lb:oz -> fl.oz
Automatic shut off when idle .....	60 s
Dimensions (width × depth × height) .....	200 × 182 × 16 mm
Dimensions of the display (length × height).....	55 × 25 mm
Weight .....	0.48 kg

Changes to text and technical parameters reserved.

**INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS**

Dispose of used packaging material at a site designated for waste in your municipality.

**DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**

This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

**For business entities in European Union states**

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

**Disposal in other countries outside the European Union.**

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.