

# SENCOR®

## SHM 900WH



### CORDLESS HAND BLENDER

Translation of the original manual

 
 


**SENCOR®**



**SHM 9000WH**



**A**

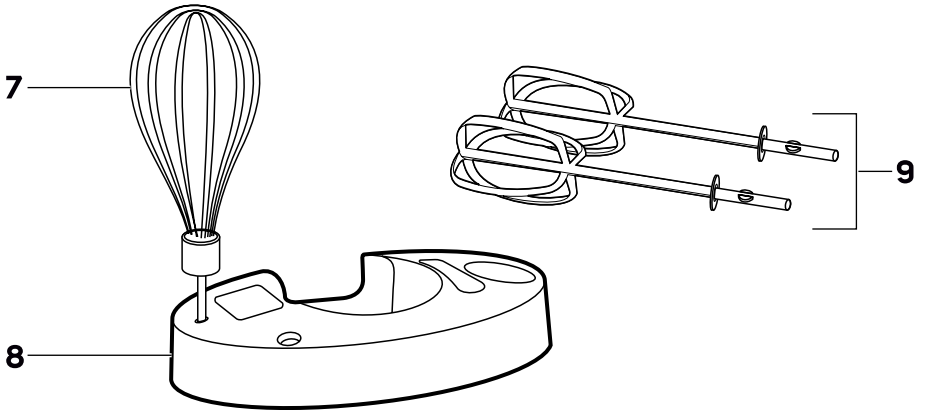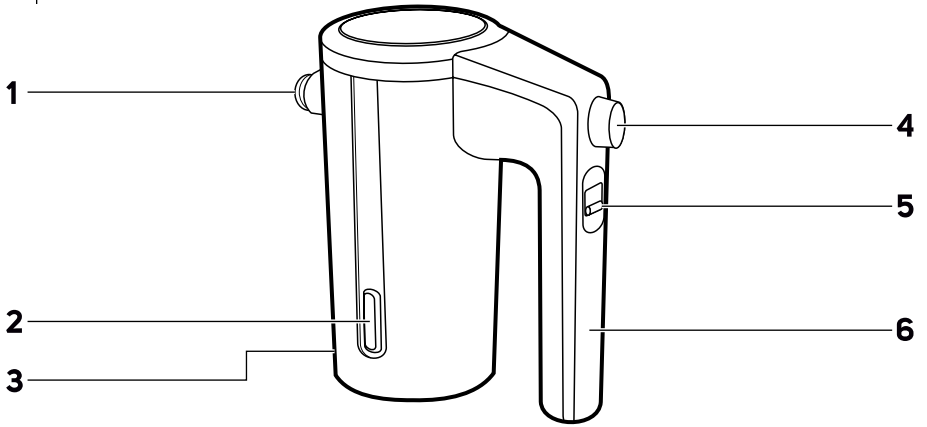

**B**

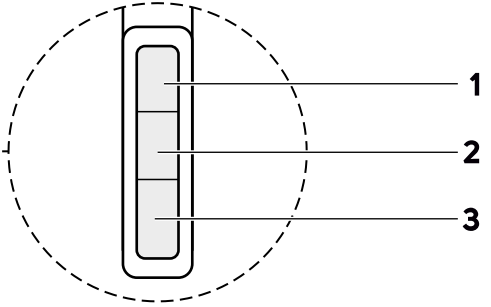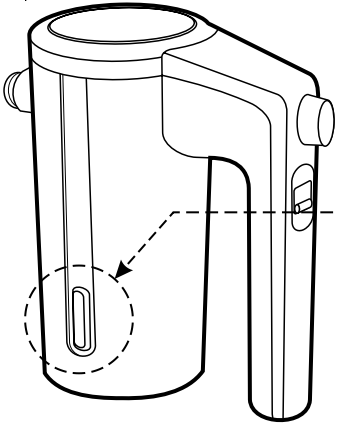  

# EN Cordless hand mixer

## Important safety instructions

### READ CAREFULLY AND STORE FOR FUTURE USE.

#### General warnings

- This appliance may not be used by children. Keep the appliance and its power cord away from children.
- The appliance may be used by persons with reduced physical, sensory or mental capabilities or with a lack of experience and knowledge, if they are supervised or have been instructed to use the appliance in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.



#### **Attention:**

Incorrect use may lead to injuries.

- Be careful when handling and cleaning the attachments.
- The surfaces of the appliance that come into contact with food must always be cleaned according to the instructions in this user's manual.

- Always turn off the appliance and disconnect it from the power supply if you will not be using it and if you will be leaving it without supervision, before assembly, disassembly, cleaning or moving it.
- Before replacing the accessories or accessible parts that move during use, turn the appliance off and disconnect it from the power supply.

#### Electrical safety

- Before connecting this appliance to an electrical power socket, make sure that the voltage stated on its rating label corresponds to the voltage in your power socket.
- Connect the appliance only to a properly grounded socket. Do not use an extension cord.
- Fully unwind the power cord before using it.
- Do not connect and disconnect the power cord and adapter to and from the power socket with wet hands.
- Ensure that the adapter plug contacts do not come into contact with water or any other liquid. If precisely this happens, carefully dry the power plug before using it again.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the power socket. Disconnect the power cord from the power socket by pulling on the plug.
- Do not place heavy items on the power cord. Make sure the power cord does not hang over the edge of a table or that it is not touching a hot surface or sharp objects.
- Keep the power cord and adapter dry.
- If the power cord or the adapter is damaged, it must be replaced by the manufacturer, its service technician or by a similarly qualified person, as this will prevent a dangerous situation from arising. It is forbidden to use a damaged power cord or adapter.
- Do not wind the power cord around the appliance.
- Always turn off the appliance and disconnect it from the power socket when not using it, when leaving it without supervision and before removing or replacing accessories, and before cleaning, maintenance or storage.
- The appliance is equipped with a built-in long-life battery that can only be removed at a professional service centre. Never attempt to remove it from the appliance yourself.



#### Attention:

Never disassemble the appliance for the purpose of removing the battery. Never short circuit the appliance or throw it into a fire. Incorrect use, risks releasing toxic substances or causing a fire or explosion.

- Do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments of the appliance performed at an authorised service centre. Tampering with the appliance during the warranty period may void the warranty.
- To prevent the risk of injury by electrical shock, never submerge the motor unit and its power cord in water or any other liquid, or wash these parts under running water.
- Always turn off the appliance and disconnect it from the power socket when you have finished charging it.
- If the appliance falls into water, under no circumstances continue using it, but rather hand it over to an authorised service centre for inspection.
- This appliance is designed for household use. Do not use it for commercial purposes or for other purposes for which it is not intended.

#### Safety during use

- This appliance is designed for household use and is intended for whisking/beating ingredients. It is suitable for whipping whipped cream, creams, mashed potatoes, spreads, egg whites and yolks etc.
- Do not use the appliance in an industrial environment or outdoors. Do not use it for any other purposes than those intended.
- The appliance is intended for domestic use and similar locations such as:
  - kitchens in stores; offices and other workplaces;
  - in agriculture;
  - for guests of hotels, motels and other similar locations;
  - in bed and breakfast establishments.
- This appliance is not intended to be operated using an external timer switch or a remote control system.
- Use the appliance and its accessories in accordance with the instructions contained in this user's manual.
- Only use the appliance with the original accessories that came with it.
- Before every use, check the selected accessory for damage. Never use the appliance with a damaged accessory.
- Do not place the appliance or its accessories on an electric or gas stove or in its vicinity, on the edge of a table or on an unstable surface. Only place the appliance on an even, dry and stable surface.
- Do not expose the appliance and its accessories to the outdoor environment, extreme temperatures, direct sunlight, excessive humidity or excessively dusty environments.
- Do not place the appliance and its accessories near heaters, open fires or other sources of heat.
- Make sure that the appliance is correctly assembled before putting it into operation.
- Do not touch moving rotating parts during operation. Otherwise, this could result in injury.

- Be especially careful when handling hot liquids and foodstuffs. Hot steam or splattering hot foods and liquids may cause scalding. For reasons of increased safety, allow hot foods and liquids to cool down to at least 45 °C before whisking them.
- The operating time of the appliance is 3 minutes. Before turning it on again, allow it to cool down for at least 10 minutes. When using the appliance to beat sticky or harder foodstuffs, interrupt operation already after 1 minutes.
- Do not turn on the appliance when it is empty. Incorrect use of the appliance may negatively affect its lifetime.
- Check that the motor unit is turned off and that the rotating parts have come to a complete stop before disassembling the appliance into its individual parts.
- Do not perform any maintenance on the appliance other than cleaning the individual components as described in this user's manual.
- Never use an appliance that is damaged in any way.
- Do not use the appliance if it has fallen on the floor, if it was submerged in water, if it is not functioning correctly or if it is damaged in any other way.
- Do not use the appliance when it is not functioning properly or showing signs of damage.
- In order to prevent a hazardous situation arising, do not repair the appliance yourself or modify it in any way. Have all repairs performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.
- Store the appliance in a dry environment.

- Thank you for purchasing a SENCOR brand product and we hope that you will be happy with it.
- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use. In the event that you hand this appliance over to somebody else, make sure to also include this user's manual.
- Carefully unpack the appliance and take care not to throw away any part of the packaging before you find all its parts. We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.
- Wash the base stand with warm water, then rinse with clean water and allow it to dry naturally or dry it out using a fine wiping cloth. The base stand is not intended to be washed in a dishwasher.
- Only clean the power cord and adapter using a dry wiping cloth, never wash with water.

### DESCRIPTION OF THE APPLIANCE

- |   |   |
|---|---|
| <b>A1</b> Holes for attaching removable attachments   | <b>A7</b> Stainless steel whisk<br>It is suitable for whipping whipped cream, creams, mashed potatoes, spreads, egg whites and yolks etc. |
| <b>A2</b> Battery power level indicators  | <b>A8</b> Base stand  |
| <b>A3</b> USB slot  | <b>A9</b> Set of chrome-plated beater attachments<br>These are suitable for beating milk cream, creams, mashed potatoes, spreads, etc.    |
| <b>A4</b> Attachment release button   | <b>A10</b> USB power cable  |
| <b>A5</b> Speed and On/Off switch<br>0 – Off<br>1 – low speed<br>2 – medium speed<br>3 – high speed | <b>A11</b> Power cable adapter  |
| <b>A6</b> Handle  |   |
| <b>B1</b> High battery capacity indicator   | <b>B2</b> Medium battery capacity indicator   |
|   | <b>B3</b> Low battery capacity indicator  |

### PURPOSE OF USE

- The hand mixer is intended for beating/whisking a standard amount of ingredients in the household.
- There are two beater attachments and a single whisk attachment for processing food. Both the beaters and the whisk are easily exchangeable and washable with water.
- The beater attachments are suitable for processing soft ingredients and liquids. They are used for effective blending of ingredients for smoothies, various types of cocktails, soups, sauces, spread, baby food, etc.
- After a complete charge, the battery enables 8-10 work cycles. The lifetime of the battery is up to 300 cycles.

### BEFORE FIRST USE

- Before first use, thoroughly wash the beaters and the whisk using warm water and neutral kitchen detergent. Then rinse everything with clean water and allow to dry naturally or wipe dry thoroughly using a wiping cloth. The whisk can also be washed in a dishwasher.
- Wipe the external part of the appliance itself using a dry or a lightly dampened wiping cloth. Ensure that no moisture or water enters into the appliance, especially into the speed control buttons. Never submerge the appliance in water, do not clean it under running water or wash it in a dishwasher.

### CHARGING THE BATTERY

- To ensure the best possible performance, we recommend to fully charge the appliance before first use. A complete charge takes up to 5 hours.
- Insert the smaller end of the power cord into the USB socket in the appliance and the larger end into the supplied power adapter. Then insert the power adapter into a power socket.
- During the charging process, indicators on the appliance may flash or be lit depending on the charge status. The meaning of the light signals is the following:

Indicator (Fig. B)	Battery capacity
All indicators are flashing	Low
Indicator <b>B3</b> is lit, and indicators <b>B2</b> and <b>B1</b> are flashing	Medium
All indicators are lit	The battery is fully charged

- After a complete charge, the battery enables 8-10 work cycles. The lifetime of the battery is up to 300 cycles. The actual number of cycles, however, will differ depending on the load placed on the appliance, the selected speed and the ingredients that are processed. For example, with frequent use of high speed, the battery will discharge faster.

### RECOMMENDATIONS FOR EXTENDING THE LIFETIME OF THE BATTERY

In order for the battery to serve you as long as possible, charge, use and store the appliance in a dry environment at an ambient temperature of 15-35 °C. Lower or higher temperatures have a negative impact on the lifespan of the battery.

When the appliance is not used for an extended period of time, charge it at least once every 6 months.

### ASSEMBLY



#### Attention:

Before attaching/removing the beater/whisk attachment/s, the appliance must be turned off and disconnected from the power cord.

- Select the attachment type suitable for the intended task and insert it/them into the holes in the appliance according to the following instructions:
  - Beater attachments: Their mounting parts are identical and it is thus possible to attach them to any of the holes in the appliance.
  - Whisk: Can be mounted in either of the two holes in the appliance.
- Push the selected attachments in until they safely click into position.



#### Attention:

Always only mount two attachments of the same function into the appliance – always either two beater attachments or the single whisk. Never insert two different types of attachments, otherwise the appliance will be damaged.



## OPERATION



### Attention:

Always keep fingers, hair, clothing, etc. at a safe distance from the moving attachments.  
Do not blend hot ingredients. Splattering hot liquids and ingredients may cause serious scalding. For reasons of increased safety, allow hot ingredients to cool down before blending them.



### Note:

You may detect a slight odour when the appliance is used for the first time. That is normal and this odour will go away with further use.

- Place the food and liquids that you wish to process into a sufficiently large container.
- Submerge the attachments into the container and then start the appliance by setting switch **A5** to the required speed level in the range from 1 to 3.
- We recommend to start at a lower speed and to increase it gradually. You can change the speed setting even while the hand mixer is running. We recommend that runny doughs and sauces are processed at lower speed levels; this will prevent ingredients from splashing out of the bowl.



### Attention:

The maximum continuous operating time of the appliance is 3 minutes. Then allow it to cool down for approximately 10 minutes. When using the appliance to beat sticky or harder foodstuffs, interrupt operation already after 1 minutes.

Items such as spoons, kitchen knives, forks, etc. must not be placed into the bowl with the ingredients while blending/whisking as this could result in injury or damage to the appliance.

## AUTOMATIC ANTI-OVERLOADING FUNCTION

- The appliance has an automatic anti-overloading function. In the event that the motor unit is overloaded, e.g. due to the ingredients being too tough or hard, all the indicators will simultaneously flash five times and then the appliance will turn itself off. If this happens, allow the appliance to rest for at least 10 minutes and adjust the amount and/or size of the ingredients. Only then continue using the appliance.

## BATTERY CAPACITY INDICATOR

- The battery will start discharging when the appliance is used. Its capacity is shown using indicators **B1** to **B3** as follows:

INDICATOR	BATTERY CAPACITY
All indicators are lit	High
Indicators <b>B2</b> and <b>B3</b> are lit	Medium
Indicator <b>B3</b> is lit	Low
Indicator <b>B3</b> is flashing	The battery is almost flat

## TURNING OFF AND REMOVING THE ATTACHMENTS

- After you have finished, set switch **A5** to position 0 (off). Make sure that the rotating parts have stopped rotating and remove the attachments from the container.
- Press button **A4** to release the attachments. The attachments can only be released when the switch is in position 0. When the switch is in positions 1–3, the attachments are locked in position against removal.
- Remove and clean the used attachments according to the instructions in chapter Cleaning and maintenance

## CLEANING AND MAINTENANCE



### Warning:

Before cleaning, the appliance must always be turned off and disconnected from the power cord.  
Do not use solvents, abrasive cleaning products, etc. for cleaning the appliance. Otherwise the surface coat of the appliance may be damaged.

- Remove the used attachments and thoroughly wash them in warm water with the use of neutral kitchen detergent. Then rinse all these parts with clean water and dry them thoroughly with a fine wiping cloth. The whisk can also be washed in a dishwasher.



### Attention:

When washing the attachments, do not leave them submerged in water for longer than 4 hours (for the purpose of soaking them), otherwise their surface will be damaged.

- Wipe the body of the appliance with a dry or slightly dampened cloth. Make sure that water does not enter into speed control buttons. Never wash the body of the appliance under running water or in a dishwasher.
- Only clean the power cord and adapter using a dry wiping cloth, never wash with water liquids or other liquids.
- Never dry parts of the appliance over heat sources such as wood stoves, electric or gas stoves, etc.

## STORAGE

- When you have finished using the appliance and have cleaned it, place it and its accessories in a clean, dry place out of children's reach. Keep the stored appliance and its accessories away from extreme temperatures, direct sunlight and excessive humidity and do not store it in an overly dusty environment.

## TECHNICAL SPECIFICATIONS

### Power Adapter:


Input..... 100-240 V ~ 50/60 Hz, 0.5A Max  
Output..... 5.0 V  $\overline{\text{---}}$  2.0 A, 10 W

### Unit:

Battery..... 7,4V Li-Ion, 2000 mAh  
Rated Input..... 5.0 V  $\overline{\text{---}}$  2.0 A  
Work Power..... 50 W  
Electrical shock protection class..... II  
Noise level ..... 85 dB(A)

The declared noise emission level of the appliance is 85 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 - pW.
 
## Explanation of technical terminology



### Safety class for electrical shock protection:

Class II – Electrical shock protection is provided by double or heavy-duty insulation.

Changes to text and technical parameters are reserved.

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

### DISPOSAL OF USED BATTERIES

Prior to handing over the appliance at a specialised collection facility, it is necessary to ensure that the built-in battery is removed. Battery removal will be performed at the authorised service centre. In the event that the product has been disassembled for the purpose of ecological disposal then it must not be reassembled.



This symbol indicates that the used battery does not belong in ordinary municipal waste. Hand over the used battery to designated collection points for proper disposal. Correct disposal of the battery will help prevent negative impacts on the environment and human health.



Disposal in other countries outside the European Union. This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.

---

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

### DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand these appliances over to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save

valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

#### For business entities in European Union states

If you want to dispose of electrical or electronic equipment, ask your retailer or supplier for the necessary information.

#### Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

