

SENCOR®

SFT 4207BK



 
 
TOWER FAN Wi-Fi SmartBreeze
Translation of the original manual




SENCOR®

SFT 4207BK

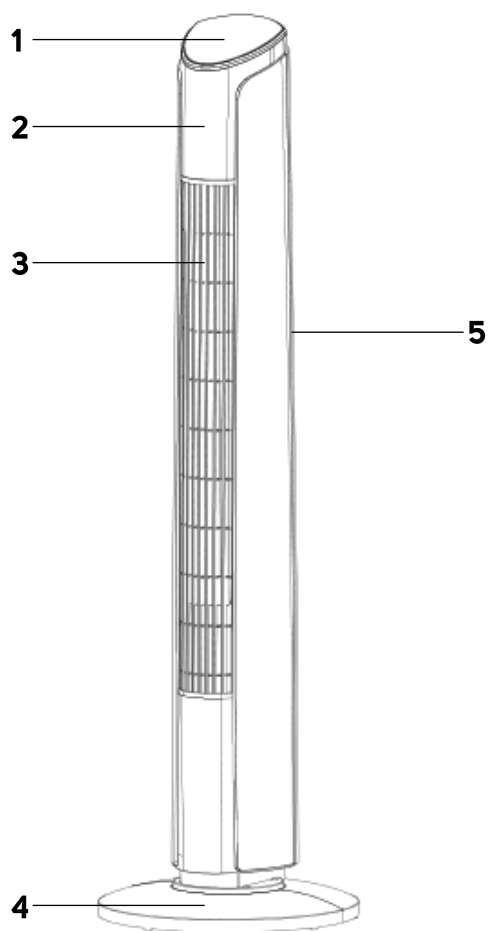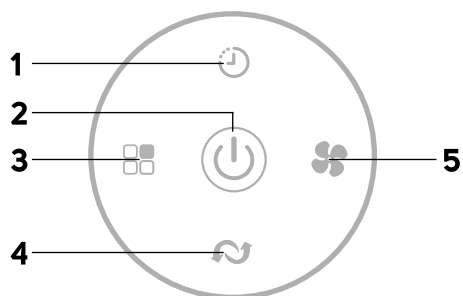


A**B**

 C

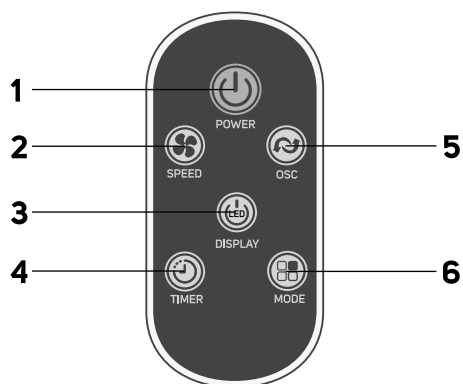


D1

 D2

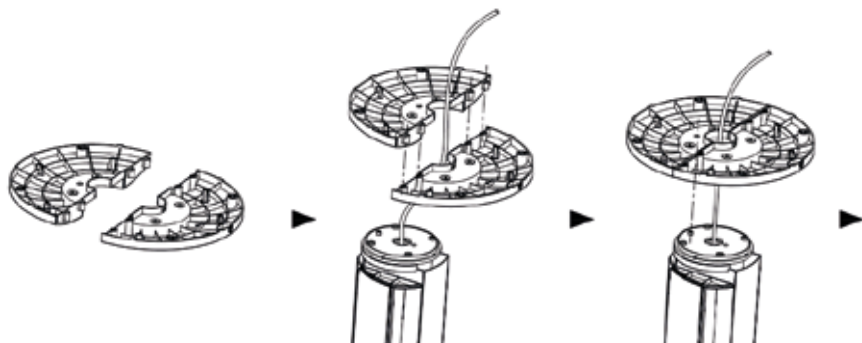

D3

 D4

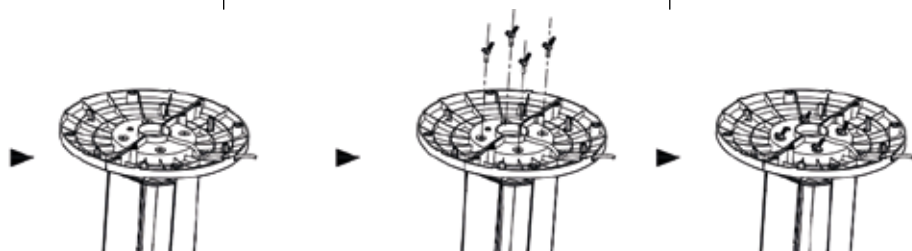

Important safety instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the appliance in a safe manner and understand the potential dangers.
- Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.
- The fan is not intended to be mounted on external windows or walls.
- Before connecting the appliance to a power socket, check that the rated voltage on its rating label matches the electrical voltage in the power socket.
- Connect the appliance only to a properly grounded socket. Do not use an extension cord.
- The power socket must remain easily accessible for the event of a need of sudden disconnection.
- The appliance is designed for use at home, in offices and similar types of areas. Do not use it in very dusty or humid rooms such as laundries or bathrooms, in areas where chemical or explosive substances are stored, in industrial surroundings or outdoors!
- Do not place the appliance in the vicinity of an open flame or appliances that are sources of heat.
- Prevent the fan, the power cord and the power plug from coming into contact with a hot surface.
- Do not use this appliance with a programmable switch, timer switch, a remote control system or any other component that would automatically switch the appliance on and off.
- To prevent injury by electrical shock, do not submerge the fan, the power cord or the power plug in water or any other liquid or rinse these under running water.
- Always turn off the appliance and disconnect it from the power socket when leaving it without supervision, when not using it and before assembling, disassembling or cleaning it.
- Do not touch the appliance with wet or damp hands or when standing on a wet floor.
- Do not carry the appliance by the power cord. Always hold the body of the appliance with both hands.
- Make sure that the appliance is correctly assembled before using it.

- Disconnect the appliance from the power socket by pulling on the plug, never pulling on the power cord. Otherwise, this could damage the power cord or the socket.
- Make sure that the power cord does not hang over the edge of a table or that it is not touching a hot surface. Do not place the appliance on unstable surfaces such as carpets with very long and thick fibres. Only place the the appliance on a clean, even, dry and smooth surface.
- Do not subject children, older persons or persons that are bed-bound to the effects of flowing cold air for an extended period of time.
- Do not cover the appliance with any items while it is running.
- Never insert your fingers or other items through the protective grille when the appliance is plugged into a power socket. This applies particularly when the appliance is in operation.
- Do not use the appliance if it is not working correctly, if it has been damaged or has been submerged in water. To avoid a hazardous situation arising, do not repair the appliance yourself or modify it in any way. Have all repairs performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

EN Tower Fan






User's manual

- Thank you for purchasing a SENCOR brand product and we hope that you will be happy with it. Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.







DESCRIPTION OF THE FAN

A1 Control panel	A4 Base stand
A2 Display	A5 Air inlet vents
A3 Air outlet vents	

DESCRIPTION OF THE CONTROL PANEL

B1 Button  - serves to set the timer	B4 Button  - serves to turn horizontal oscillation on / off
B2 Button  - serves to turn the appliance on / off	B5 Button  - serves to set the fan speed
B3 Button  - serves to select the operating mode	

DESCRIPTION OF THE REMOTE CONTROL

C1 Button  - serves to turn the appliance on / off	C4 Button  - serves to set the timer
C2 Button  - serves to set the fan speed	C5 Button  - serves to turn horizontal oscillation on / off
C3 Button  - serves to turn off the display	C6 Button  - serves to select the operating mode

INSTALLING THE BASE STAND



The fan is supplied from the factory with a disassembled base stand.

1. Take the body of the fan out of the packaging material and carefully turn it upside down.
2. Place both parts of the base stand against the bottom part of the fan body – see figure **D1**. Check that the power cord passes through the hole in the middle of the base stand – see figure **D2**.
3. Carefully push down on both parts of the base stand until they click into the fan body, and then pull the power cord through the groove in the base stand – see figure **D3**.
4. Using the supplied screws, secure the base stand in place – see figure **D4**.


 
 
USING THE FAN

- Place the fan on a horizontal, stable, dry and smooth surface within reach of a power socket. Connect the power cord to a power socket. The current room temperature is shown on the display.
- The functions of the buttons on the control panel and the remote control are identical.





 
 
Turning on / off






- Press button , to turn on the fan. The display will be lit. Press button  again to turn off the fan.

Speed setting

- Button  serves to set the fan speed. Repeatedly press button  to toggle the speed from low to high. Each time button  is pressed, a segment of the circular bar on the display is lit. At low speed, 1/3 of the circular bar is lit, at medium speed, 2/3 of the circular bar is lit, and at high speed the entire circular bar is lit.



Selecting an operating mode

   To select an operating mode, use button . Repeatedly press button  to select the required operating mode: **NORMAL**  (standard mode) – **NATURAL**  (natural air circulation mode) – **SLEEP**  (sleep mode) – **CHILD**  (falling asleep mode). Each time the button is pressed, the respective icon of the operating mode will be lit on the display.


 
1. Operating mode **NORMAL**  (standard mode) – this is the default mode of the fan. In this mode, the speed can be set according to your preferences.
2. Operating mode **NATURAL**  (natural air circulation mode) – this mode imitates natural air circulation by alternating the fan speed. The speed alternates as follows: low speed (5 seconds) – medium speed (5 seconds) – high speed (5 seconds) – low speed (5 seconds). This loop repeats continuously.
3. Operating mode – **SLEEP**  (sleep mode) – this mode is used to reduce night-time power consumption. Likewise, this mode ensures comfort during sleep, since the fan operation is quieter and the display automatically turns off after 30 seconds of inactivity.
 - If the initial speed is set to high then it will run for 30 minutes. Then the speed automatically switches to medium speed. This speed will run for 30 minutes and then the speed will switch to low speed. This speed will run until you switch the fan to a different mode, turn it off, etc.
 - If the initial speed is set to medium speed then it will run for 30 minutes. Then the speed will automatically switch to low speed. This speed will run until you switch the fan to a different mode, turn it off, etc.
 - If the initial speed is set to low speed, then this speed will run until you switch the fan to a different mode, turn it off, etc.
4. Operating mode **CHILD**  (falling asleep mode) – the fan speed as well as the operating time and oscillation will be set automatically. The display automatically turns off after 30 seconds of inactivity. The horizontal oscillation function can be disabled by pressing button . Selecting this mode will activate horizontal oscillation and the operating time will automatically be set to 3 hours. The fan will start at high speed. This speed will run for 15 minutes and then the

speed will automatically switch to medium speed. This speed will run for another 15 minutes and then the speed will automatically switch to low speed. The low speed will run until the fan turns off automatically.

Setting the timer

- Button  serves to set the timer. The timer can be set in the range from 1 hour to 12 hours. Repeatedly press button  to set the time for which the fan will run. The timer duration is shown on the display.
- The display automatically turns off after 30 seconds of inactivity.
- After the set time has elapsed, the fan will turn off automatically.



Setting horizontal oscillation

- Pressing button  will start the oscillation of the fan. Pressing button  again will turn off the oscillation. The fan will remain turned at the angle at which it was stopped.

Setting the vertical angle

- If the vertical air flow angle needs adjustment, carefully push the fan backwards and tilt it until it clicks in. If you need to return the fan back to the upright position, carefully push the fan forwards until it clicks in.

Display backlight

- The display automatically turns off after 30 seconds of inactivity.
- Nevertheless, you can also turn it off using button  **DISPLAY** on the remote control or hold down button  on the control panel for 3 seconds.
- Pressing any button will automatically turn the display on.
-

REMOTE CONTROL

Inserting and replacing batteries

- Push down the battery holder lock on the underside of the remote control and slide the battery holder out of the remote control. Insert a new CR2025 type battery into the holder and insert it back into the remote control until you hear a click.
- When inserting the battery, heed the correct polarity. When replacing batteries, first remove the flat battery and then insert the new one.



Note:

When not using the remote control for longer than 2 months, remove the batteries.

Using the remote control

- The functions and buttons on the remote control correspond to the control elements on the panel.
- Always point the remote control at the fan.



Attention:

Dispose of used batteries in accordance with valid local codes. Do not throw batteries out with communal waste. Do not use old and new batteries at the same time. Do not use alkaline, standard or rechargeable batteries in combination at the same time. Do not throw batteries into a fire. They could explode or electrolyte could leak out.



 

.....

CONTROL VIA THE SENCOR HOME APPLICATION

- The fan can be controlled via the SENCOR HOME application.
- Download the application to your smart phone, register yourself and control the fan via the application. If you already have the application installed, add the fan to your devices.





Adding the fan to the device list.

1. On the main screen, click on "Add device" or on the "+" in the top right hand corner.
2. A screen with appliance categories will appear together with a list of appliances.
3. Click on "Small home appliances" and from the list, select "Fan (Wi-Fi)".
4. On the next screen, you will be asked to select a Wi-Fi network. Select a network, enter the password and click on "Next". Ensure that the fan is ready for pairing. It is important that the fan is connect to a power source and is in stand-by mode. The Wi-Fi icon  will start quickly flashing on the display. If the icon does not appear, hold down button  for 5 seconds until the Wi-Fi icon  appears on the display and starts to flash quickly.
5. In the application, confirm that the Wi-Fi icon is quickly flashing and click on "Next".
6. The fan will automatically be added to the device list. The Wi-Fi icon  will be lit on the display.
7. In the device list on the main screen, click on the icon of the fan to enter the fan control.



 Note:

 The fan can also be added to the SENCOR HOME application using the QR code provided below. On the home screen of the application, click on the "+" icon and on the add device screen, click on the icon  in the top right hand corner.

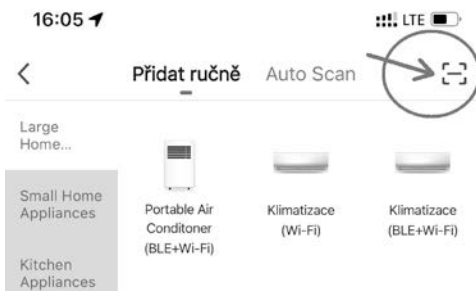

QR code of the fan



CLEANING AND MAINTENANCE

- Before cleaning it, make sure that the fan is turned off and disconnected from the power socket. Clean the fan regularly to ensure its long lifetime.
- For cleaning, do not use cleaning products with an abrasive effect, solvents, etc. that could damage the appliance.



Warning:
To prevent the risk of injury by electrical shock, do not submerge the appliance, power cord or power plug in water or any another liquid.

To clean the outer surface of the of the fan, use a clean, lightly dampened cloth. Then wipe everything so that it is thoroughly dry. Ensure that moisture does not enter through the air inlets or outlets into the fan. You can also remove any dirt inside the air inlet or outlet by using a vacuum cleaner with a bristle brush.



Note:
Regularly check that the screws on the base stand are securely tightened.

STORAGE

If you will not be using the fan for a longer period of time, store it in a clean, dry location that is out of reach of children.

TECHNICAL SPECIFICATIONS

Rated voltage range.....	220–240 V ~
Rated frequency.....	50–60 Hz
Rated power input.....	45 W
Noise level.....	42 dB (A) (low speed)
.....	48 dB (A) (medium speed)
.....	52 dB (A) (high speed)
Maximum air flow of the fan.....	26.11 m³/min
Operation value.....	0.75 (m³/min)/W
Maximum air flow speed.....	2.74 m/s
Norm for measuring the operating value.....	EN IEC 60879:2019
Contact for further information.....	FAST ČR, a.s., U Sanitasy 1621, 251 01 Říčany, Czechia

The declared noise emission level for fan model number SFT 4207BK is 58 dB (A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

We reserve the right to change text and technical specifications.



Safety class for electrical shock protection:
Class II – Electrical shock protection is provided by double or heavy-duty insulation.

SENCOR hereby declares that the radio device SFT 4207BK is in compliance with directive 2014/53/EU. The full wording of the declaration of conformity can be found at the website www.sencor.cz.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand over these products to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic equipment, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

DISPOSAL OF USED BATTERIES



Batteries contain environmentally damaging compounds and, therefore, do not belong in standard communal waste. Hand over used batteries for proper disposal at locations intended for their collection.

