

SENCOR®

SHP 5207CH



HAIR CLIPPER

Translation of the original manual

 
 
 
 


SENCOR®

SHP 5207CH



A

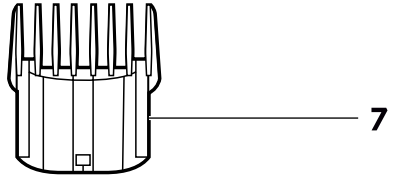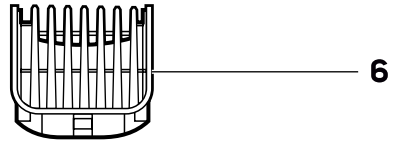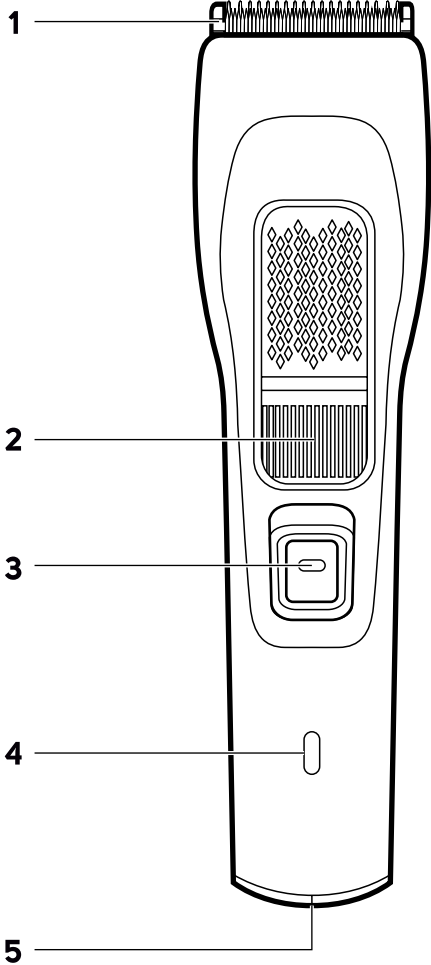

EN Hair Clipper

Important safety instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

General warnings

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cable is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cable.



Warning:

Keep the appliance dry.

- The parts of the appliance that need to be mounted or stood upright, must be mounted or stood upright in such a way that they cannot fall into water.



Do not use the appliance in the bath or shower. Do not clean it under a water tap, do not spray it with water or any other liquid or submerge it in water or any other liquid.

- Before connecting the USB cable to a power source or a power adapter, check that the voltage on its rating label corresponds to the voltage in the power socket to which you wish to connect it. Do not use an extension cord.
- Do not place the USB power cable over sharp objects. Make sure that the power cable does not hang over the edge of a table and that it is not touching a heated surface.
- Ensure that the USB power cable is not clamped or crimped.
- When pulling the USB connector out of a power source or the USB adapter out of a power socket, always pull on the connector or the adapter and never on the power cable itself.
- Do not connect and disconnect the USB cable to and from the power source with wet hands.
- Keep the USB power cable dry.
- Do not wind the USB power cable around the handle of the appliance.
- The appliance is equipped with a built-in long-life battery that can only be removed at a professional service centre. Never attempt to remove it from the appliance yourself.



Attention:

Never disassemble the appliance for the purpose of removing the battery. Never short circuit the appliance or throw it into a fire. Incorrect use, risks releasing toxic substances or causing a fire or explosion.

- Do not use or store the appliance or leave it lying in a bathroom or similar locations where it could fall into a bath, wash basin or other containers filled with water.
- In the event that the appliance falls into water during use, under no condition reach for it, rather, immediately disconnect the power cable from the power source. Never use the appliance if any part of it was submerged in water. Hand the appliance over to an authorised service centre for inspection.

SAFETY DURING USE

- This hair clipper is intended for home use only and is designed for cutting human hair, beards and nose and ear hair. The hair clipper is not intended for commercial purposes or for trimming animal fur.
- Only use the hair clipper on dry clean hair, beards or nose and ear hair. Do not use it on wet or just washed hair or on beards on which a shaving foam or gel, etc. is applied.
- Use the hair clipper and its accessories in accordance with the instructions contained in this user's manual.
- Use only the original accessories supplied with this hair clipper.
- Only use the hair clipper in indoor areas. Do not use it outdoors.
- Do not use the hair clipper in rooms where aerosol sprays are used or where oxygen is administered.
- Do not expose the hair clipper and its accessories to the outdoor environment, extreme temperatures, direct sunlight, excessive humidity or excessively dusty environments.
- Do not place the hair clipper and its accessories near heaters, open fires or other sources of heat.
- Before every use, check that the selected comb attachment is not damaged. Never use a hair clipper with a damaged comb attachment.
- The hair clipper may heat up during use. This is completely normal.
- Keep the hair clipper at a safe distance from eyes.
- Always turn off the hair clipper and disconnect it from the power source when not using it, when leaving it without supervision and before attaching, removing or replacing an attachment and before cleaning, maintenance or storage. Store the hair clipper in a dry environment.
- Keep the hair clipper clean. Perform cleaning and maintenance according to the instructions in chapter Cleaning and maintenance.
- Do not perform any maintenance on the hair clipper other than cleaning the individual components as described in chapter Cleaning and maintenance.
- Do not use the hair clipper if it has fallen on the floor, if it was submerged in water, if it is not functioning correctly or if it is damaged in any other way.
- Only use the cutting unit lubricating oil in accordance with the instructions in this user's manual and store it out of children's reach. Keep the oil at a safe distance from eyes and sources of heat.
- In order to prevent a hazardous situation from arising, do not repair the hair clipper or any of its accessories yourself or modify it in any way. For all repairs, contact an authorised service centre. By tampering with the product you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

EN Hair Clipper

User's manual

- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use. In the event that you hand this appliance over to somebody else, make sure to also include this user's manual.
- Carefully unpack the appliance and take care not to throw away any part of the packaging before you find all its parts. We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

DESCRIPTION OF THE APPLIANCE

A1 Cutting unit with stainless steel blades, width 40 mm	A6 Comb attachment size 10 mm
A2 Clipping height regulator with range 1 - 20 mm	A7 Comb attachment size 20 mm
A3 On/Off switch	A8 USB power cable (USB and USB-C connectors)
A4 Power/charging indicator	A9 Cleaning brush
A5 Power cable connection socket	Oil for lubricating the cutting unit

PURPOSE OF USE

- The hair clipper is intended for domestic use and is not intended for business activities or other professional areas of use.
- The hair clipper is suitable for cutting clean, dry or lightly dampened hair.
- The hair clipper can also be used to trim dry beards and whiskers to which no shaving gel or foam has been applied.
- The hair clipper is not intended for cutting wet, freshly washed hair, for clipping synthetic hair or hair on to which a gel, etc. has been applied.
- The hair clipper must not be used to clip animal fur.

OPERATION

Charging the hair clipper

- The hair clipper can be charged in two ways:
 - by means of an external device with a USB port (e.g. computer, USB hub, powerbank, etc.).
 - by means of a standard USB adapter connected to a power socket
- Insert the smaller USB connector (USB/C) into the socket at the bottom of the hair clipper and the larger connector into the selected power source.
- The charging indicator on the switch **A4** will be lit red during the charging process. The charging time differs depending on the current battery power level. If the battery is completely discharged (flat), a full charge will take approximately 2 hours.
- When the battery is fully charged, the indicator will be lit blue. Disconnect the power cable from the hair clipper and from the power source.
- A fully charged hair clipper battery will provide up to 90 minutes of cordless operation. Then it is necessary to charge the battery again.

Recommendations for extending the lifetime of the battery

- In order for the built-in battery to serve you as long as possible, charge, use and store the hair clipper in a dry environment at an ambient temperature of 15- 35 °C. Lower or higher temperatures have a negative impact on the lifespan of the battery.

- We recommend charging the battery only after leaving it to fully discharge.
- When the hair clipper is not used for an extended period of time, charge it at least once every 6 months.

Lubricating the cutting unit

- To ensure the correct movement of the cutting unit, it is recommended to lubricate the cutting unit before first use and several uses afterwards.
- Apply two drops of lubricating oil on to the cutting unit and spread it out evenly. Wipe off excess oil using a clean, dry cloth.



Attention:

Store the lubricating oil away from fire sources and out of children's reach. Do not ingest the lubricating oil and prevent it from coming into contact with the eyes. If contact with the eyes does occur, rinse them out with cold water and if necessary seek medical help.

Preparation before the haircut

- Only use the hair clipper on dry clean hair or lightly dampened hair. Do not use it on wet and freshly washed hair or hair with gel applied on to it, etc. Trim beards when they are dry without the use of shaving gels or foams.



Attention:

Do not use the hair clipper if you have open wounds, cuts or blisters on your skin.

- Before starting any styling of hair or beards, acquaint yourself with the operating instructions.
- You can use the hair clipper to clip your own or other people's hair. When clipping somebody else's hair, seat them so that their head is at the level of your chest. This will provide for a comfortable cutting position. Before cutting hair, thoroughly comb out the hair in the growth direction.
- Cover your neck and shoulders or that of the person whose hair you will be cutting with a towel to limit cut hair from falling on clothes.
- Prior to every use, check that the cutting unit is clean.
- Prior to every use, check the cutting unit and the comb attachment for damage. Never use a hair clipper with a damaged cutting unit or comb attachment.

Cutting without the comb attachment

- You may use the hair clipper without a comb attachment, for example, to trim beards very close to the skin or to trim the neckline or the area around the ears.



Attention:

The blades of the cutting unit will cut off all hair, beards or nose and ear hair that comes into contact with them, therefore be especially careful when handling the hair clipper while it is running.

- Set the regulator **A2** to the appropriate cutting height in the range 0.5-1 mm. If you are using the hair clipper for the first time, it is recommended to first try a longer cut and only thereafter adjust the setting to a shorter cut.
- Turn the hair clipper on and off using switch **A3**.
- When you have finished using the hair clipper, always clean it according to the instructions in chapter Cleaning and maintenance.

Cutting with the comb attachment

- The hair clipper comes with two comb attachments **A6** and **A7** for greater cutting variability.



Attention:

Put a comb attachment on to the cutting unit before turning on the hair clipper and always turn the hair clipper off before removing it.

- Insert the attachment from above into the grooves of the hair clipper. Always ensure that the attachment is properly attached.
- Set the appropriate cutting height by turning the regulator **A2**. If you are using the hair clipper for the first time, it is recommended to first try a longer cut and only thereafter adjust the setting to a shorter cut.
- Turn the hair clipper on and off using switch **A3**.
- When you have finished using the hair clipper, always clean it according to the instructions in chapter Cleaning and maintenance.

Advice and tips

- When using a comb attachment, start cutting with the largest cutting height and then gradually reduce the set hair cutting height.
- Record the used height setting for certain hairstyles so that you do not need to spend time adjusting it the next time.
- It is most effective to cut counter to the direction of hair growth.
- Because hair grows in various directions, it is also necessary to move the hair clipper in various directions (upwards, downwards or crosswise).
- Repeat individual passes so that you cut also the hair that you did not cut in the previous passes.
- Ensure that the flat part of the comb attachment is in full contact with the scalp. This will ensure an even haircut result.
- To achieve good results on curly, sparse or long hair, you can try using a comb to lead the hair towards the hair clipper.
- Trim beards by slowly moving counter to the growth direction of the beard, going from the bottom upwards. When trimming beards using a comb attachment, keep in mind that the comb attachment must be in constant contact with the skin in order to ensure an even cut. After reattaching an attachment on to the cutting unit, do not forget to set the cutting height again.
- Regularly clean away hair and whiskers from the cutting unit.

CLEANING AND MAINTENANCE

- Turn the hair clipper off prior to cleaning it. Never clean the hair clipper when it is charging and connected to the power source.
- Regular cleaning after every use will ensure its proper operation.



Attention:

This hair clipper is not designed to be washed under a water tap. Do not spray the hair clipper or its USB power cable with water or any other liquid or submerge it in water or any other liquid.

Cleaning the cutting units

- If the comb attachment is mounted on the cutting unit, remove it.
- Use the cleaning brush to remove all hair and whiskers from the cutting unit.
- Release the cutting unit by applying pressure on to the blades in the direction away from the handle, and take it off the hair clipper.



Attention:

The edges of the cutting unit are sharp, pay increased attention when handling them.

- Use a brush to remove all hair or whiskers from the cutting unit and from the inner area of the hair clipper underneath the cutting unit.
- After cleaning it, reattach the cutting unit on to the handle of the hair clipper. First insert the bottom side of the cutting unit into the handle of the hair clipper and then push down the top side of the unit until you hear an audible click.

Cleaning the comb attachment

- Clean a used comb attachment using a brush or rinse it under running lukewarm water. After washing it, carefully wipe it with a soft, dry cloth and then allow it to dry naturally.

Cleaning the body of the hair clipper

- The hair clipper unit can be cleaned using a clean dry cloth. In the event that it is very dirty, you can use a lightly dampened cloth. Then thoroughly wipe the cleaned surface dry.
- To clean the power adapter, use a clean, dry cloth.
- For cleaning, do not use brushes with hard bristles, cleaning products with an abrasive effect, solvents, etc. Otherwise, the cleaned surface may be damaged.

Lubricating the cutting unit

- To ensure correct movement of the cutting unit, it is recommended to regularly lubricate the cutting unit.
- If a comb attachment is mounted on the cutting unit, remove it. Apply two drops of lubricating oil on to the cutting unit and spread it out evenly. Wipe off excess oil using a clean, dry cloth.



Attention:

Store the lubricating oil away from fire sources and out of children's reach. Do not ingest the lubricating oil and prevent it from coming into contact with the eyes. If contact with the eyes does occur, rinse them out with cold water and if necessary seek medical help.



Note:

After using up the supplied oil, you can use an oil that does not contain acids, e.g. sewing machine oil.

STORAGE

- When you have finished using it, you can store the hair clipper with all its accessories in a suitable location out of children's reach. Keep the hair clipper away from extreme temperatures, direct sunlight and excessive humidity. Do not use in an overly dusty environment.

TECHNICAL SPECIFICATIONS

Hair clipper

Built-in battery	Li-ion, 3,7 V, 600 mAh
Input	5 V, 1000 mA
Dimensions (width × depth × height)	178 × 43 × 45 mm
Weight	137 g
Noise level	72 dB(A)

USB power cable


Input	5 V, 1000 mA
Electrical shock protection class	II
Safety class for electrical shock protection	IP20

The declared noise emission level of the appliance is 72 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

Explanation of technical terminology

Safety class for electrical shock protection:

 IP20 – The appliance is constructed in such a way that it is not possible for any dangerous live parts of the appliance to come into contact with the human body and at the same time the appliance is protected against the damaging effects of water that could enter into the appliance.



Electric shock protection class:

Class II – Electrical shock protection is provided by double or heavy-duty insulation.

Changes to text and technical parameters are reserved.

.....

DISPOSAL OF USED BATTERIES

Prior to handing over the hair clipper at a specialised collection facility, it is necessary to ensure that the built-in battery is removed. Battery removal will be performed at an authorised service centre. In the event that the product has been disassembled for the purpose of ecological disposal then it must not be reassembled.



This symbol indicates that used batteries do not belong in ordinary municipal waste. Hand over used batteries to designated collection points for proper disposal. Correct disposal of batteries will help prevent negative impacts on the environment and human health.



Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of used batteries, request the necessary information about the correct disposal method from the local authorities or from your **vendor**.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save



valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic equipment, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

