



User's Manual
GLASS ELECTRIC KETTLE

ELECTRIC KETTLE



KE 410

GLASS ELECTRIC KETTLE

TABLE OF CONTENTS

3	Catler recommends safety first
8	Know of your KE 410 kettle
9	Operating your KE 410 kettle
12	Care and cleaning



Congratulations

on the purchase of your new KE 410 electric kettle.

CATLER RECOMMENDS SAFETY FIRST

We understand the importance of safety and that's why we put your safety first from the initial design concept to the production itself. Nevertheless, please be careful and follow the instructions below when using the plate warmer.

- This appliance may be used by children aged 8 years and older, provided they are supervised or have been instructed in the safe use of the appliance and understand the potential dangers.
- User cleaning and maintenance must not be performed by children unless they are older than 8 years of age and kept under supervision.
- Keep the appliance and its supply out of the reach of children under 8 years of age.
- Appliances may be used by persons with reduced physical, sensory or mental abilities or lack of experience and knowledge, provided they are supervised or have been instructed in the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- If the power cord is damaged, have it replaced in a professional service centre in order to

prevent a dangerous situation. It is forbidden to use the appliance with the power cord damaged.

- This appliance is intended for use in the home. This appliance is also intended for personal use in similar areas such as:
 - kitchenettes in stores, offices and other workplaces;
 - agriculture;
 - by guests in hotels, motels and other residential areas;
 - bed and breakfast businesses.
- The appliance and its base must not be immersed in water during cleaning.
- If the kettle is overfilled, hot water may splash out.
- The appliance must only be used with its base.



WARNING:
AVOID SPILLING ON THE PLUG.
RINSE THE KETTLE WITH CLEAN
WATER OR WIPE WITH A DRY CLOTH.
FOLLOW THE INSTRUCTIONS IN THE
“CARE AND CLEANING” SECTION.



WARNING:
THERE IS A RISK OF POTENTIAL
INJURY IF USED INCORRECTLY.
THE SURFACE OF THE HEATING
ELEMENT CONTAINS RESIDUAL HEAT
AFTER USE.

- Before first use, make sure that the voltage in your power socket matches the nameplate voltage on the unit bottom. In case of any doubt, please contact a qualified electrician.
- Before operating your appliance, read **all** the instructions carefully and store them in a safe place for possible future reference.
- Before using the appliance for the first time, please remove **all** packaging and ad stickers and discard them in an environmentally safe manner. Check the appliance for any defects. Under no circumstances should you use a damaged appliance or an appliance with a damaged power cord etc.
- To eliminate the risk of small children suffocating, remove the protective cover of the power plug from this appliance and dispose of it safely.
- This appliance has been designed only for boiling drinking water. Never use the appliance to warm up other liquids or food. Use the appliance only for the purposes for which it has been designed. Do not use it outdoors.
- Always put the kettle on a stable, even and dry surface. Do not place the kettle on windowsills, sink drip tray or on unstable surfaces. Do not operate the appliance on the edge of a desktop or a table.
- Do not put the kettle on or the vicinity of any devices and equipment that generate heat.
- Never use the kettle in the near vicinity of a bath, shower or swimming pool.
- Do not place the appliance near walls, curtains or other substances sensitive to heat or steam. Please observe a minimum distance of 20 cm from such surfaces.

- Use the kettle only with the base designed for and supplied with this type of kettle. Do not use the base supplied with this kettle for other types of kettles.
- Do not use this appliance with a programmable switch, timer switch or any other device that automatically switches the appliance on.
- Always remove the kettle from its base before filling.
- When filling the kettle, make sure that the water level covers at least the minimum level mark but doesn't exceed the maximum level mark.
- Before turning the kettle on, make sure that the lid is closed properly. Do not open or otherwise handle the lid while water is boiling.
- To lift and/or carry the kettle, please use the handle.
- Do not put any subjects on the lid.
- Never touch the appliance with wet or damp hands.
- Do not leave the appliance unattended while in operation.
- Before removing the kettle from its base, make sure that it has been turned off.
- The kettle heats up during use and may remain hot after use. Therefore, take extra care to avoid burns or injuries.
- Take great care to avoid scalding with boiling water or steam while pouring out water from the kettle.
- Always turn the kettle off and unplug from the power socket if you leave it unattended, if it's not to be used or before moving or cleaning.
- When disconnecting the kettle from the mains socket, always pull the plug, not the power cord. Otherwise, damage to the power cord or the socket could occur.
- A connected power outlet must be easily accessible for possible sudden disconnection. Before connecting your appliance to a power outlet and turning it on, make sure it's fully and correctly assembled. Follow the instructions provided in this user's manual.
- Do not wash the kettle, base, mains cord and plug under running water and do not immerse them in water or any other liquid.
- Regularly check the condition of the glass kettle for damage, cracks or other signs of deterioration. Contact an authorised Catler service centre to replace it. It is forbidden to use a broken, cracked or otherwise damaged glass kettle.
- Handle the glass kettle with care. Do not expose it to mechanical influences or temperature fluctuations. Never fill a hot kettle with cold water and vice versa. Always wait a few minutes for it to cool down.
- Do not use harsh abrasive or caustic detergents to clean the appliance.
- Keep both inner and outer surface of the appliance clean. Follow the cleaning instructions provided in this user's manual.
- Do not store or use any explosive and/or flammable substances inside or in the vicinity of this appliance, such as flammable gas sprays.

IMPORTANT SAFETY INSTRUCTIONS FOR USING ELECTRICAL EQUIPMENT

- Fully unwind the power cord before use.
- Do not leave the power cord hanging over the edge of a table or countertop or allow it to touch a hot surface or to become tangled up. Do not put heavy objects on the power cord.
- For safety reasons, we recommend to connect the appliance in an independent electrical circuit separated from other appliances. Do not use adapter plugs or extension cords to connect the appliance to a power outlet.
- To prevent electric shock, do not immerse the appliance, its base or the power cord in water or other liquids.
- We recommend that you check your appliance regularly. Do not use the appliance if it is damaged in any way or if the power cord or plug is defective. All repairs or adjustments must be performed at the nearest Catler authorised service centre.
Any maintenance other than routine cleaning must be entrusted to an authorised Catler service centre.
- We recommend to install a residual current device (standard safety switches in your power outlet) to provide a higher level of protection when using the appliance. We recommend to install a residual current device (with a nominal residual operating current of no more than 30mA) in the electric circuit in which your appliance is to be connected. For further expert advice, please contact your electrician.

Instructions are also available at www.catler.eu.

KNOW OF YOUR KE 410 KETTLE



- 1. Lid
- 2. Spout
- 3. Glass kettle body with watermark
- 4. Base with space to store the mains cord

- 5. Open lid button
- 6. Handle
- 7. Power on/off switch

OPERATING YOUR KE 410 KETTLE

BEFORE FIRST USE

Before first use, remove all packaging and advertising labels / stickers from the appliance.

Before using the kettle for the first time, allow the kettle to boil clean water. Fill the kettle with clean water, bring to a boil and then pour the water out. Repeat this procedure 3 to 4 times. The kettle is then ready for use. Your kettle will only operate correctly if placed on its base connected to an electric outlet and if the power button is in the on position. As soon as the water boils, the kettle will switch off automatically.

USING YOUR KETTLE

1. To fill the kettle with water, remove it from the base and press the button to open the lid. Fill the kettle with the required amount of water. Do not fill the kettle below the minimum or above the maximum level mark. Lack of water would lead to turning the kettle off before boiling. If the kettle is overfilled, the boiling water might splash out.
2. Closed lid and make sure it's firmly secured. Place the kettle on its base. Insert the mains cord plug into a power socket.
3. Press the switch downwards to switch on the kettle.

NOTE

Never fill the kettle if it is located on the base. Do not fill the kettle below the minimum or above the maximum level mark. Lack of water would lead to turning the kettle off before boiling. If the kettle is overfilled, boiling water may splash out.

NOTE

This kettle should be used only with the supplied base. When pouring out water from the kettle, be careful to avoid scalding with hot water. Do not pour water too fast.

4. As soon as the water boils, the kettle will switch off automatically. Take the kettle from the base and pour water in cup, mug or other container. To boil water repeatedly, it's necessary to wait a few seconds for the heating element to cool down.

Do not start or use the kettle without water. Incorrect use of the appliance may negatively affect its lifetime.

WARNING!
HANDLE THE GLASS
KETTLE WITH CARE.
DO NOT EXPOSE
IT TO MECHANICAL
INFLUENCES
OR TEMPERATURE
FLUCTUATIONS.
NEVER FILL A HOT
KETTLE WITH COLD
WATER AND VICE
VERSA. ALWAYS
WAIT A FEW MIN-
UTES FOR IT TO
COOL DOWN.

If the kettle is not to be used, unplug the power cord from the socket. You may store the kettle on the base if it's not to be used.

WARNING!
THIS APPLIANCE
HAS BEEN DE-
SIGNED ONLY FOR
BOILING DRINK-
ING WATER. DO
NOT USE THIS AP-
PLIANCE TO COOK
OTHER LIQUIDS OR
FOODS. BEFORE
TURNING THE KET-
TLE ON, ALWAYS
MAKE SURE THAT
THE LID IS FIRMLY
CLOSED.
DO NOT OPERATE
THE LID RELEASE
BUTTON WHILE THE
WATER IS HEATING
OR AFTER IT HAS
FINISHED HEAT-
ING. THIS COULD
CAUSE THE WATER
TO SPLASH OUT. BE-
FORE OPENING THE
LID, PLEASE EMPTY
THE KETTLE.

PROTECTION AGAINST EMPTY OPERATION

The kettle is equipped with a safety device to protect it against damage by overheating and operating with insufficient amount of/ without water. If you turn the kettle on by mistake with insufficient amount of water/no water inside, the safety device will cut off the power supply circuit automatically and turn the kettle off when a certain temperature is reached. You cannot turn the kettle back on at this moment. Set the switch to the off position and allow the kettle to cool down before filling.

The kettle can be turned back on once it has cooled down. The safety device will reset automatically. In order to increase the safety, the kettle is equipped with an additional thermal fuse. Should the safety device fail with subsequent overheating, the kettle will automatically and irreversibly turn off to prevent further damage. Should such condition occur, please contact an authorised service centre.

CARE AND CLEANING

Before cleaning the appliance, always disconnect the plug of the power cord from the mains socket and let it to cool down properly.

WARNING!
DO NOT SPLASH
WATER OR ANY
OTHER LIQUID
ONTO THE
KETTLE OR ANY
OF ITS PARTS OR
ACCESSORIES.
DO NOT WASH
THE KETTLE, BASE,
MAINS CORD AND
PLUG UNDER
RUNNING WATER
AND DO NOT
IMMERSE THEM
IN WATER OR ANY
OTHER LIQUID.

NOTE

Do not use sharp objects, chemicals, thinners, petrol or other similar substances. Never clean the plate warmer with a steam appliance.

CLEANING THE OUTER CASE KETTLE

To clean the kettle's outer surface, please use a damp cloth; to polish, use a dry cloth.

NOTE

The base heating element is made of high grade stainless steel. Brown stains that may appear during use are mineral deposits from the boiled water. This is no corrosion in any case.

REMOVING MINERAL DEPOSITS

Tapped water may contain minerals that may deposit inside the kettle and water gauge and lead to colouration after some time. To remove the deposits, proceed as follows:

1. Fill your kettle to 2/3 of its level with 1 portion of vinegar and 2 portions of water. Boil the solution and leave stand in the kettle overnight.
2. Empty your kettle and then boil clean water twice. The kettle is then ready for further use.

STORAGE

Before storage, make sure that the kettle is turned off, clean and dry. Check that the lid is closed properly. Wrap the cord around the bottom of the base. Store your kettle in a vertical position and never put anything on the lid.

INSTRUCTIONS AND INFORMATION ON DISPOSING OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSING OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal and recycling, take these products to designated collection points. Or in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. Disposing of this product correctly helps save valuable natural resources and prevents damage to the environment by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, please consult your local authorities or your dealer for information on the correct method of disposal.



This product meets all the basic requirements of the applicable EU directives.

The text, design and technical specifications may be changed without prior notice and we reserve the right to make these changes.

The original version is in the Czech language.

Manufacturer's address: FAST ČR, a.s., U Sanitasu 1621, Říčany CZ-251 01

NOTE



ELECTRIC KETTLE

Because of continuous improvement of design and other properties, your product may slightly differ from the one shown on the pictures in this manual.



WWW.CATLER.EU

CUSTOMER SERVICE

INFO@CATLER.EU