

# SENCOR®

**SBG 4010SS**



**CONTACT GRILL**

Translation of the original manual




# SENCOR®

SBG 4010SS



**A**

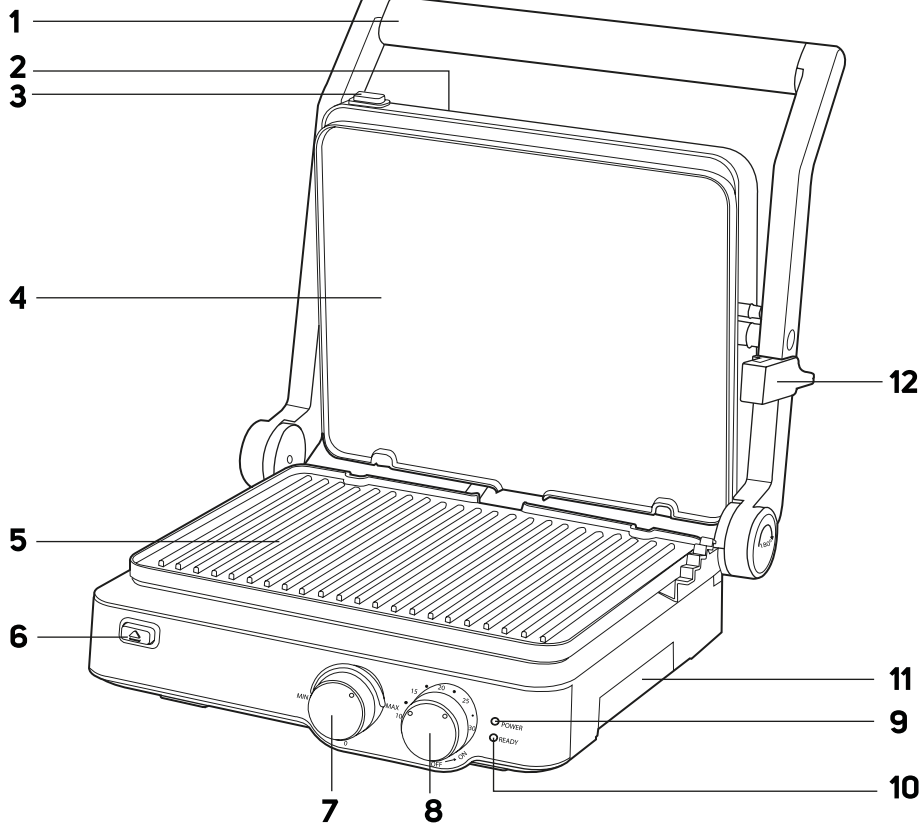

### **Important safety instructions**

#### **READ CAREFULLY AND STORE FOR FUTURE USE.**

- This appliance may be used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision.
- Children younger than 8 years of age must be kept away from the appliance and its power cord.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.
- Wipe the grill plates with a soft sponge lightly dampened in warm water. Follow the instructions found in section "Cleaning and maintenance".
- This appliance is not intended to be operated using an external timer switch or remote control.

- Before connecting the appliance to a power socket, check that the rated voltage stated on the appliance's rating label matches the electrical voltage in the socket to which you wish to connect the appliance.
- Connect the appliance only to a properly grounded socket. We recommend connecting the appliance to an independent electrical circuit. Do not use extension cords.
- Do not connect the appliance to a power socket unless it is properly assembled.
- Do not touch the power cord or the power plug with wet hands.
- The appliance is designed for household use only. Likewise, this appliance is intended for personal use in locations such as:
  - staff kitchens in stores, offices and other workplaces;
  - hotel or motel rooms and other living areas;
  - agricultural farms;
  - bed and breakfast establishments
- Do not use the appliance in an industrial environment or outdoors.
- The appliance is designed for cooking food. Do not use it for any other purposes than those intended.
- Do not place the appliance on window sills, kitchen sink drainboards or unstable surfaces. Always place it on a stable, even and dry surface.
- Do not place the appliance on an electric or gas stove or in its vicinity, do not place it in the vicinity of an open fire or an appliance that is a source of heat.
- Do not use the appliance in the vicinity of a bath, a kitchen sink, swimming pool or another water source.
- To prevent potential injury by electrical shock, do not submerge any part of the appliance in water or any other liquid.
- Before using this appliance, check that the drip tray is located in its place.
- During operation there needs to be sufficient area for air circulation above the appliance and on all its sides. Do not use the appliance near flammable materials such as curtains, kitchen towels, etc.
- The temperature of accessible surfaces may be higher if the appliance is in operation. Take care not to touch the hot grill plate or the top cover. The appliance may remain hot even after it is turned off. Prior to cleaning, maintenance or other handling, ensure that the appliance has cooled down completely.
- Be especially careful when grilling fatty food to avoid being burnt by spluttering fat.
- Do not touch the grill plate with sharp or metal objects. This may damage it.
- Always turn off the appliance and disconnect it from the power socket when leaving it without supervision, after finishing using it and before removing the grill plates, cleaning or moving it.
- Allow the appliance to fully cool down before removing the grill plates, moving, cleaning or storing it. Use the thermally insulated handle for carrying the appliance.
- Do not use the appliance as a place for placing items.
- Disconnect the power cord from the power socket by pulling on the plug, never pulling on the cord. Otherwise, this could damage the power cord or the socket.
- Make sure the power cord does not hang over the edge of a table and that it is not touching a hot surface.
- Do not use the appliance if it is not working correctly, if it was dropped on the floor, if it is damaged or has been submerged in water.
- To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

- Thank you for purchasing a SENCOR brand product and we hope that you will be happy with it.
- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

### DESCRIPTION OF THE APPLIANCE

<b>A1</b> Handle	<b>A9</b> POWER indicator light – indicates that the grill is turned on.
<b>A2</b> Top griddle plate cover	<b>A10</b> READY indicator light – indicates that the grill is ready for use.
<b>A3</b> Top griddle plate release button	<b>A11</b> Slide-out drip tray
<b>A4</b> Removable top griddle plate	<b>A12</b> Slider for setting the top griddle plate height and tilting open the grill
<b>A5</b> Removable bottom grill plate	
<b>A6</b> Bottom grill plate release button	
<b>A7</b> Temperature control knob	
<b>A8</b> Timer knob	

### TOP GRIDDLE PLATE OPERATING POSITIONS

- This contact grill can be used with the top griddle plate positioned in three different positions:
  1. top griddle plate is tilted down and it is possible to set its height above the bottom grill plate.
  2. top griddle plate is tilted out to the vertical position; or
  3. top griddle plate is tilted out completely to be horizontally flush with the bottom grill plate (i.e. at the same level, open grill).

#### Setting the height of the top griddle plate

- Lift the top griddle plate by the handle and move the slider on the right side backwards or forwards and set the required position of the slider between the "Low" (low position) and "High" (high position). Then carefully tilt down the top griddle plate. It will automatic stop at the required height.

#### Tilted out top griddle plate

- When using with the top griddle plate set to the vertical position, it is necessary to tilt it up fully.

#### Tilting open the grill

- Before tilting open the grill, make sure that the grill is turned off, cooled down and disconnected from the power socket.
- To tilt open the top griddle plate to be horizontally flush with the bottom grill plate, proceed as follows:
  1. When the top griddle plate is tilted down or lifted slightly above the bottom grill plate, use one hand to move the slider to the "Open" position and the other hand to tilt open the top griddle plate using the handle.
  2. Open the top griddle plate so that, when tilted out, the handle is resting on the table or kitchen countertop. This doubles the grilling area.

### REMOVING AND ATTACHING THE GRILL PLATES

- Prior to removing or attaching the grill plates, the grill must be turned off, disconnected from the power socket and have cooled down.
- Each grill/griddle plate has its own release button.

- To release the top griddle plate, we recommend to tilt the grill out entirely so that the top griddle plate and the bottom grill plate are horizontally flush.
- To release the top griddle plate, press the button on the left of the top cover. The griddle plate will be unlocked and released, and then carefully remove it from the top cover assembly.
- To release the bottom grill plate, press the button on the left of the bottom cover. The grill plate will be unlocked and released, and then carefully remove it from the base.
- To attach it, insert the top griddle plate into the top cover so that the tabs on the rear part of the cover slide into the rear edge of the top griddle plate. Then push the griddle plate against the cover until you hear a click. In the same way, attach the bottom grill plate to the base unit.



#### Attention:

Before mounting the grill/griddle plates on to the grill, make sure that they are completely dry.



#### Note:

The grill/griddle plates are mutually interchangeable.

### BEFORE FIRST USE

- Remove the contact grill from the packaging material and remove all promotional materials from it including labels which may be located on the grill/griddle plates.
- Wipe the grill plates using a clean dampened cloth and then wipe dry.
- Take the drip tray out of the base. Wash it in warm water with a small amount of kitchen detergent, rinse and then wipe it dry. Put it back in its place.
- Wipe the outer surface of the grill with a lightly dampened, soft wiping cloth and then wipe it dry.



#### Warning:

Do not rinse the grill or its power cord under running water or submerge it in water or any in other liquid.



#### Note:

We recommend that before first use, you turn the grill up to the highest temperature and leave it running for approx. 5 minutes to burn the grill and the grill plates in and to eliminate any possible unpleasant odour during first use. During this time a small amount of smoke may also be emitted. This is normal.

### USING THE CONTACT GRILL

1. Place the grill on an even, rigid and dry surface at a sufficient distance from the power socket.
2. Insert the power plug into a power socket and the POWER indicator light will be lit.
3. Turn the temperature control knob to set the required temperature in the range from MIN (lowest temperature) to MAX (highest temperature).
4. Set the timer knob to the ON position.
5. When the READY indicator light is lit, the grill is ready for use.



#### Note:

During use, the READY indicator light will intermittently turn on and off, which indicates that the grill plate is heating up to the operating temperature. This is normal.

6. Open the grill and place the food that you wish to grill on the bottom grill plate. If necessary, tilt down the top grill plate.
7. If you need to check the food, open the grill.
8. If you need to set a specific cooking time, turn the timer knob clockwise and set the desired cooking time. The countdown will start automatically. When the time elapses, the grill will beep.
9. When the food is sufficiently cooked, open the grill and using a metal or a heat-resistant, plastic kitchen utensil, remove the food from the grill plate.



**Warning:**

To open the grill, always use the thermally insulated handle.

10. When you have finished using it, turn the temperature control knob to position "O" and the timer to position "OFF". Then disconnect the power plug from the power socket.
11. Prior to cleaning, performing maintenance on or handling the grill, allow it to cool down.



**Warning:**

During use, the grill plates and the outer surface of the grill heat up and may reach high temperatures. The grill remains hot even after you have finished using it. Improper handling may result in serious burns. Be especially careful when handling the grill. We recommend using kitchen gloves. Always use the available heat-insulated handles.



**Note:**

Never use metal cooking utensils or knives as this could scratch the non-stick surface of the grill plates.

## TIPS FOR GRILLING MEAT AND SMOKED GOODS

- To achieve optimal results, cut the meat into equally thick slices.
- To prevent meat from becoming tough and dried out, it is recommended not to salt it prior to grilling it. It is recommended to salt and season the food with spices only after it has been cooked.
- Before grilling marinated meat, pat it down with kitchen paper towels to remove excess marinade. Certain types of marinades may have a large sugar content which may subsequently burn on.
- When grilling, do not puncture the meat so that juices do not run out of it, making it tough and dry.
- Do not dry out the meat by grilling it for too long.
- Always make sure that chicken meat is thoroughly cooked.
- You do not have to prick pre-cooked hot dogs before grilling them.
- We do not recommend using the contact grill for grilling meat with thick bones, such as bone-in pork chops.
- Food must be completely defrosted prior to being grilled.

## CLEANING AND MAINTENANCE

- Clean out the grill after every use. Before cleaning, the grill must be turned off, disconnected from the power socket and must have cooled down.



**Warning:**

To prevent the risk of injury by electrical shock, do not submerge the appliance, power cord or power plug in water or any another liquid.

### Grill plates

- To clean the grill plates, use a kitchen paper towel or a dampened soft wiping cloth.
- In the event of greater soiling, clean the grill plates using a lightly dampened cloth with the addition of a small amount of neutral kitchen detergent. After applying the detergent, thoroughly wipe the grill plates using a clean, lightly dampened cloth and wipe them dry.



**Note:**

It will be easier to clean the grill/griddle plates while they are still lukewarm. For better handling of the grill/griddle plates, you can remove them from the body of the grill before cleaning them. However, first make sure that they have cooled down completely.

### Drip tray

- Ensure that the contents of the drip tray have cooled down and then carefully remove it from the base.
- Empty out its contents and wash it in warm water with an addition of neutral kitchen detergent. Then rinse it out using clean water, dry it and put it back in its place.

### Exterior surface

- To clean the outer surface, use a dry or slightly dampened cloth. Then wipe everything so that it is thoroughly dry.
- For cleaning, never use steel wool, abrasive cleaning products, petrol, etc.

### Storage

- When not using the appliance for an extended period of time, disconnect the power plug from the power socket, allow the appliance to cool down and clean it according to the instructions provided above.
- Before storing it, check that the appliance and all its accessories are thoroughly clean and dry.
- Store the appliance in a dry, clean and well-ventilated location not exposed to extreme temperatures and out of children's reach.

## TECHNICAL SPECIFICATIONS

Rated voltage range.....220–240 V~  
 Rated frequency.....50–60 Hz  
 Rated power input.....2,000 W

We reserve the right to change text and technical specifications.

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save

valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

### For business entities in European Union states

If you want to dispose of electric or electronic equipment, ask your retailer or supplier for the necessary information.

### Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

