

SENCOR®

SES 7210WH



AUTOMATIC ESPRESSO MACHINE

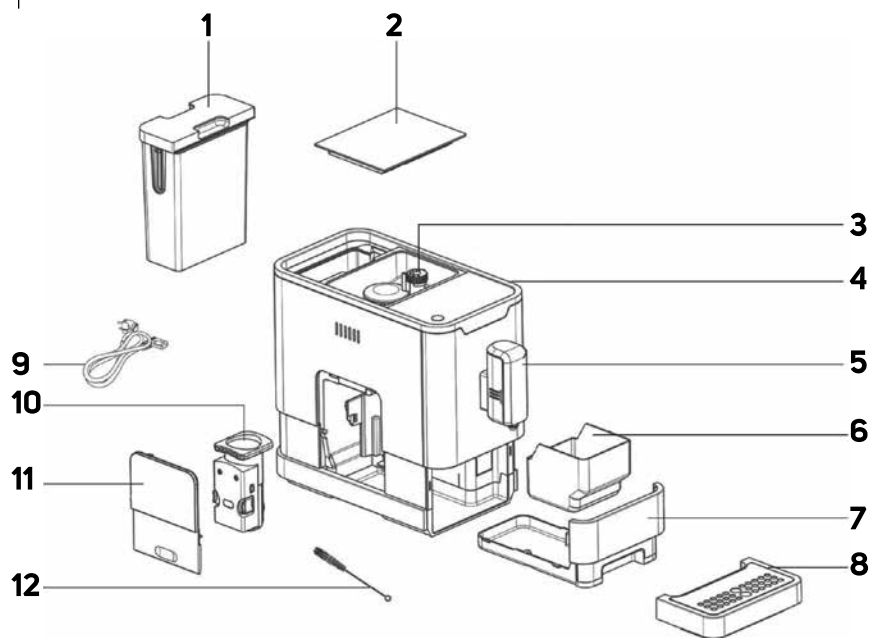
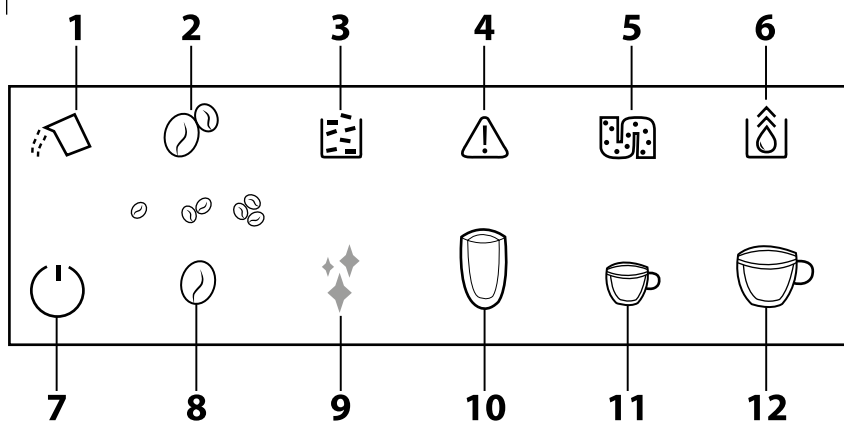
Translation of the original manual

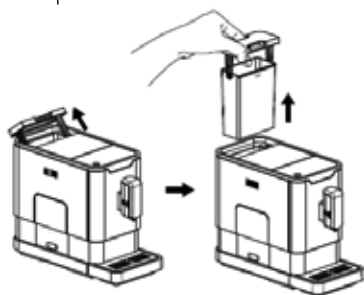
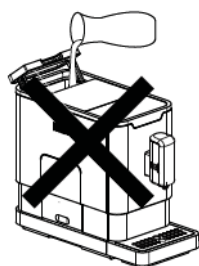
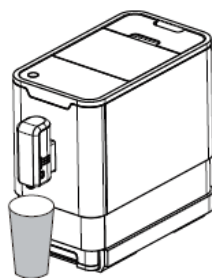
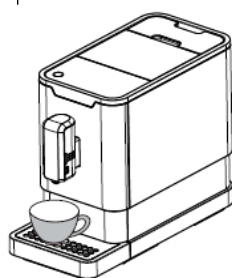
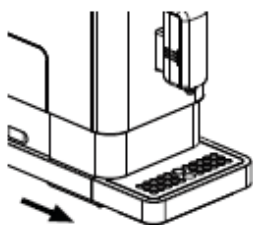
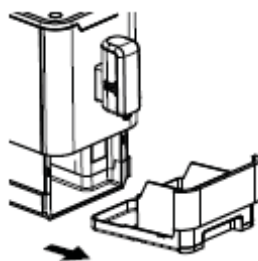
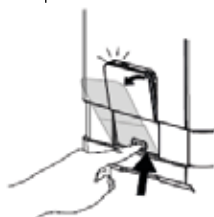
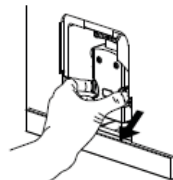
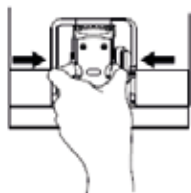
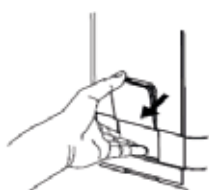


SENCOR®

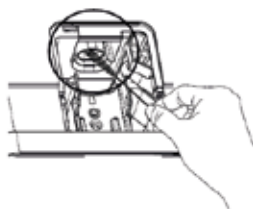
SES 7210WH



A**B**

C1**C2****C3****D****E****F1****F2****G1****G2**

H



EN Automatic Espresso Machine

Important safety instructions

READ CAREFULLY AND STORE FOR FUTURE USE

General warnings

- This appliance may not be used by children. Keep the appliance and its power cord away from children.
- The appliance may be used by persons with reduced physical, sensory or mental capabilities or with a lack of experience and knowledge, if they are supervised or have been instructed to use the appliance in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision.
- Keep the appliance and its power cord out of the reach of children younger than 8 years.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.
- This appliance is intended for home use. It is not intended for use in locations such as:
 - kitchens in stores; offices and other workplaces;
 - in agriculture;
 - guests of hotels, motels and other accommodation

locations;

- in bed and breakfast establishments.
- Do not submerge the power plug, the power cord or the appliance in water or in any other liquid.



WARNING:

The hopper must not be opened during use.



WARNING:

Do not spill anything on the power plug.

- Always clean the parts of the appliance that come into contact with food using warm water with a small amount of neutral dishwashing detergent, then rinse with clean water and wipe dry.



WARNING:

Incorrect use may result in a risk of injury.

- The exterior surface of the appliance heats up during use and may remain hot for a certain time afterwards. Be very careful.
- The appliance must not be located inside a cabinet when it is used.

- Before connecting the appliance to a power socket, check that the rated voltage on its rating label matches the electrical voltage in the power socket.
- Connect the appliance only to a properly grounded socket. For safety reasons, we do not recommend using multi-socket adapters or extension cords.
- Do not place the appliance on window sills, kitchen sink drainboards or unstable surfaces. Always place it on a stable, even and dry surface.
- Do not place the appliance on or near an electrical or gas stove, or in the vicinity of an open flame.
- Never use the appliance in the near vicinity of a bath, shower or swimming pool.
- Use the appliance only for the purposes for which it was designed.
- Use the appliance according to the instructions in the user's manual. Otherwise, injuries, damage to the appliance or a dangerous situation may result.
- Only use the appliance with the original accessories that came with it.
- To ensure sufficient air circulation, free space of at least 15 cm must be maintained around and above the appliance when it is running.
- Only use the top surface of the appliance for warming cups. Do not use it as a place for storing items.

- Fill the water tank with clean cold water. Do not pour hot water or other liquids into it or place any items inside it.
- Before turning on the appliance, check that:
 - the drip tray together with the grate is installed in position;
 - the water tank is filled with a sufficient amount of water and is properly installed in position. The water level must not exceed the water level mark.
- When operating the appliance, be especially careful to avoid scalding by boiling water or steam.
- The hot water function must not be used continuously, no more than one full water tank at a time.
- Regularly inspect the water level in the water tank when using the appliance. When the water level falls below the minimum water level mark, add water. Before adding water, first turn the appliance off and disconnect it from the power socket.
- Use the built-in coffee grinder only for grinding coffee beans. Do not use it for any other purposes.
- Ensure that no hair or other items enter the grinder while it is grinding. The coffee bean hopper lid should always be properly closed unless one is refilling coffee beans or setting the fineness of the grind.
- To protect the pump from damage, the appliance is equipped with a built-in thermal fuse that will disengage it when it runs empty. In the event that such a situation occurs, disconnect the power cord from the power socket and allow the appliance to cool down for at least 30 minutes. Then you may continue using it.
- Do not move the appliance with a coffee cup located on the drip tray grate or with cups located on the cup warming surface.
- Ensure that the power cord does not come into contact with water or a hot surface.
- Disconnect the appliance from the power socket by pulling on the plug, never pulling on the power cord. Otherwise, this could damage the power cord or the socket.
- The appliance is equipped with a removable power cord. If the power cord is damaged, it must be replaced with a new original power cord.
- Do not submerge the appliance, the power cord or the power plug in water or in any other liquid.
- Prevent the power cord and power plug from coming into contact with water or another liquid.
- Make sure that the removable power cord does not come into contact with water or moisture.
- To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

EN Automatic Espresso Machine

User's manual

- Thank you for purchasing a SENCOR brand product and we hope that you will be happy with it.
- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

DESCRIPTION OF THE ESPRESSO MACHINE

A1 11-litre water tank	A5 Coffee and hot water brew head, height adjustable.
A2 Coffee bean hopper lid	A6 Coffee grounds container
A3 Coffee bean hopper, capacity 150 g	A7 Inner drip tray
Inside the hopper there is a grinder with adjustable grinding fineness.	A8 Outer drip tray
A4 Touch control panel with display	A9 Removable power cord
	A10 Steaming unit
	A11 Service access door
	A12 Cleaning aid

DESCRIPTION OF THE TOUCH CONTROL PANEL

B1 Insufficient water in the water tank indicator light or water tank not installed in its location indicator light.	B5 light (indicator is flashing) Descaling required indicator light (indicator is lit) or descaling process is running indicator light (indicator is flashing)
B2 Insufficient amount of coffee beans in the coffee bean hopper indicator light	B6 Drain internal lines function is running
B3 Full coffee grounds container indicator light (indicator is lit) or the inner drip tray / coffee grounds container is not correctly installed indicator light (indicator is flashing)	B7 On/Off touch button
B4 Steaming unit not inserted/ installed correctly indicator light (indicator is lit) or service access door is open or incorrectly installed indicator	B8 Ground coffee amount adjustment touch button
	B9 Quick clean touch button
	B10 Dispense hot water touch button
	B11 Brew espresso coffee touch button
	B12 Brew lungo coffee touch button



Note:

The compartment contains three packets of descaling agent.

BEFORE FIRST USE OF THE APPLIANCE

1. Remove all packaging materials from the appliance and remove any protective film, promotional tags or labels.
2. Install the appliance on an even, dry and clean surface. Ensure that there is free space around the appliance of at least 35 cm above the top part and 15 cm around the sides.
3. Take out the water tank **A1**, rinse it out with clean water with the addition of a small amount of neutral dishwashing detergent. Then rinse it out thoroughly using clean water, dry it and put it back in its place.
4. Properly attach the outer drip tray **A8** to the appliance.

5. Wipe the outer surface of the appliance with a lightly dampened cloth and then wipe it thoroughly dry.
6. Fully unwind the removable power cord **A9** and connect it to the corresponding socket at the rear of the appliance.
7. To ensure optimal lifetime of the appliance, it is necessary to allow its internal components to be rinsed out several times with hot water prior to first use. For this purpose, use button **B10**, as described in chapter »Rinsing out the espresso machine«.

FILLING THE WATER TANK

1. Grasp the water tank **A1** by its lid. It also serves as a carry handle. Lift it up and remove it from the rear part of the appliance, see figure **C1**.
2. Fill the water tank **A1** with clean water up to the maximum water mark – see fig. **C2**, and insert it back into the appliance. Make sure that the water tank **A1** is properly installed in its place.



Note:

The water that you pour into the water tank **A1** should ideally be at room temperature (approximately 25 °C). Water that is too cold, could negatively affect the final taste of the coffee beverage.



Warning:

The water tank **A1** has a maximum capacity of 11 litres of water. Do not overfill it. Never fill the water tank **A1** with warm or hot water, sparkling water or other liquids such as, for example, milk. This could damage the appliance. Never fill the water tank **A1** by pouring in the water while it is inserted inside the appliance (see fig. **C3**). There is a danger of splashing the appliance or overfilling the water tank **A1**.

3. Do not leave water in the water tank **A1** for longer than one day. For brewing quality fresh coffee, it is necessary to always use fresh water. Otherwise, the flavour of the resulting beverage may be negatively affected.



Note:

When the indicator light **B1** is lit, it is necessary to refill the water tank **A1** with water. Fill the water tank **A1** with water according to the above instructions.

FILLING THE COFFEE BEAN HOPPER

1. Remove the coffee bean hopper lid **A2**.
2. Pour roasted coffee beans into the coffee bean hopper **A3** and close the lid **A2**. Do not leave the lid of the coffee bean hopper **A2** open, otherwise, the coffee beans will lose their aroma more quickly.



Warning:

The coffee bean hopper **A3** has a maximum capacity of 150 g of coffee beans. Do not overfill it. Never fill the coffee bean hopper **A3** with ground or instant coffee, caramelised or otherwise specially modified coffee beans, cocoa beans or other items that could result in damage to the appliance.

CONTROLLING THE FINENESS OF GROUND COFFEE

1. Use the grinding fineness regulator located inside the coffee bean hopper **A3** to set the grinding fineness of the coffee beans in 5 levels, see figure **D**.

- Turning the regulator towards the position marked with the plus symbol sets a coarser grind, and turning it in the opposite direction sets a finer grind.
- The fineness of the grind is set only while the grinder is running. Otherwise, you could damage your appliance. For darker coffee beans, we recommend setting a coarser grind, for lighter coloured coffee beans, we recommend a finer grind.
- If the brewed coffee is flowing out very slowly, it means that the coffee grains are too finely ground and it is necessary to set a coarser grind. On the other hand, if the brewed coffee is flowing out too fast, it means that the coffee grains are too coarsely ground and it is necessary to set a finer grind.

RECOMMENDATIONS FOR PURCHASING AND STORING COFFEE

- To reduce the storage time, purchase coffee beans in smaller packages.
- Use fresh roasted coffee beans with a marked roasting date and consume them within 3 weeks of the roasting date.
- Store coffee beans in a cool, dark and dry location, ideally in an air-tight container.

OPERATING THE ESPRESSO MACHINE

- Make sure that the power cord connector **A9** is connected to the appliance. Connect the power cord plug **A9** to a power socket. Make sure that the water tank **A1** is refilled with fresh water and that the coffee bean hopper **A3** is filled with a sufficient quantity of coffee beans and that the appliance is properly assembled.



Note:

When refilling water and coffee beans, always follow the instructions provided in chapter »**Filling the water tank**« and »**Filling the coffee bean hopper**«.

- To start the appliance, press button **B7**. The appliance will switch to the stand-by mode.
- When you have finished using the espresso machine, press button **B7** to turn it off.



Note:

The automatic espresso machine is equipped with an automatic shut-off function for when it is idle. Based on the selected mode, the automatic espresso machine will shut off after the preset time has elapsed. The automatic shut-off time can be found in section »**Setting the mode**«.

Rinsing out the espresso machine

- To ensure the optimal lifetime of the appliance, it is necessary to allow its internal components to be rinsed out several times with hot water prior to first use.
- Take out the outer drip tray **A8** and place a mug or bowl underneath the brewing head **A5**, into which the espresso machine will dispense water. Adjust the height of the brewing head **A5** based on the size of the cup.
 - Press button **B10**. The button's backlight will be lit and the espresso machine will start dispensing hot water.
 - The dispensing of hot water will stop automatically and the button's backlight will turn off.
 - To thoroughly rinse out the internal components, we recommend that the process is repeated 3 to 4 times.
 - When the rinsing process is finished, pour the water out of the mug or bowl. Be especially careful since the water is very hot. Install the outer drip tray **A8** back in place. Refill the water in the water tank **A1** as necessary.



Note:

Perform the rinsing process also when you have not used the espresso machine for an extended period of time. The pump will make a noise during the water dispensing process. This is normal.

Brewing coffee

- Place a cup, mug or glass underneath the brewing head **A5**. Set the height of the brewing head **A5** by sliding it up or down depending on the size of your cup, mug or glass – see figure **E**. If the cup or glass is too tall, you may remove the outer drip tray **A8**. After removing the cup or glass, return the drip tray **A8** to its place.
- Press button **B11** to brew espresso coffee or button **B12** to brew lungo coffee. Press button to confirm.
- The espresso machine will automatically start the coffee grinding, dosing and tamping process, and will dispense it.
- As soon as the espresso machine has finished dispensing the coffee, it will automatically switch to the stand-by mode.

Dispensing hot water

- Pod hlavicí **A5** postavte šálek, hrnek nebo sklenici. Nastavte výšku hlavičky **A5** posunutím směrem nahoru nebo dolů dle velikosti vašeho šálku, hrnku nebo sklenice – viz obrázek **E**. Pokud je hrnek nebo sklenice příliš vysoká, můžete vnější odkapávací tácek **A8** odejmout. Po odejmutí hrnku nebo sklenice vraťte tácek **A8** zpět na své místo.
- Stisknete tlačítko **B10** a tlačítko se podsvítí.
- Kávovar automaticky spustí výdej horké vody.
- Jakmile je proces výdeje vody dokončen, kávovar se automaticky přepne do pohotovostního režimu.

USER SETTINGS

Setting the amount of ground coffee

- Use the ground coffee amount adjustment when the brewed coffee is too strong or too weak.
- Button **B8** serves to adjust the amount of ground coffee.
- Based on personal preferences, select the amount of ground coffee by repeatedly pressing button **B8**: small (approx. 7 g), medium (approx. 8 g) or large (approx. 10 g).

Setting the dispensed coffee / hot water volume

- The espresso machine enables the amount of dispensed coffee or hot water to be adjusted based on your preferences in the range 25 ml – 250 ml. The settings you make will be saved to the memory of the espresso machine.
- Place a cup, mug or glass underneath the brewing head **A5**.
 - Turn on the espresso machine by pressing button **B7**.
 - Hold down button **B11** (to brew espresso coffee), **B12** (to brew lungo coffee) or **B10** (to dispense hot water). The espresso machine will start dispensing coffee or water.
 - When the button is released, the dispensing of coffee or water will stop. A beep is made and the set amount of coffee or water will be saved to the memory of the espresso machine.

Setting the mode



- The espresso machine can be set to an ECO mode, a fast mode or the default factory settings. In ECO mode, greater power savings are achieved. In the fast mode, the coffee is prepared faster than with the default factory settings.




	ECO mode	Fast mode	Default settings
Indicator light	Not lit	Lit	Lit
Pre-steam *	Yes	No	Yes
Automatic shut-off time	10 minutes	30 minutes	20 minutes
Option to set the dispensed coffee volume	Yes	Yes	Yes





*Note:

The pre-steam function means that the ground coffee is first steamed with a small amount of water. This will cause the coffee to swell and thereby

when it is subsequently fully steamed, its flavour will be developed fully, and its aromatic compounds and essential oils will be fully extracted.

1. In the stand-by mode, press and hold down button  **B7** for 5 seconds. Button  **B7** will start flashing and at the same time other buttons will also be flashing or lit depending on the mode that is set.

	Hot water button 	Espresso coffee button 	Lungo coffee button 
ECO mode	Lit	Bliká	Flashing
Fast mode	Flashing	Lit	Flashing
Default settings	Flashing	Flashing	Lit

2. To set the ECO mode, press button  **B10**, to set the fast mode, press button  **B11** and to reset to default settings, press button  **B12**. After setting a mode, 2 beeps will be made. In the event that you attempt to set a mode that is already set, the appliance will not react to the button being pressed.
3. If you do not wish to change the mode settings, press button  **B7** once more, or wait 5 seconds until the appliance automatically switches back to the stand-by mode.

CLEANING AND MAINTENANCE

- Disconnect the power plug from the power socket and allow the appliance to cool down before cleaning it.



Warning:



For cleaning, do not use cleaning products with an abrasive effect, solvents, etc. that could damage the appliance. No part of this appliance is intended for washing in a dishwasher.



Warning:

To prevent the risk of injury by electrical shock, do not submerge the appliance, power cord or power plug in water or any another liquid.

Quick clean

- The quick clean function is suitable for quickly removing dirty material from the brew head **A5** and the tubing lines.
1. Place a cup, mug or glass underneath the brewing head **A5**.
 2. Press button  **B9** once. The espresso machine will automatically start the quick clean function. Water will automatically start flowing out of the brew head **A5**.
 3. The quick clean process will automatically stop, however, it may also be stopped by again pressing button  **B9**.



Note:

We recommend starting the quick clean function after every use.

EVERYDAY CLEANING AND MAINTENANCE

- Timely cleaning and maintenance is very important for operating the appliance and extending its lifetime.
- Before cleaning, turn off the appliance, disconnect it from the power socket and allow it to cool down.


 
Drip tray and the coffee grounds container

- Remove the outer drip tray **A8** – see figure **F1**. Empty out all its contents over a sink, and wash it using clean water and then dry it thoroughly.
- Be careful not to burn yourself when handling the drip tray **A8**. It may contain hot water

- Slide out the inner drip tray **A7** with the coffee grounds container **A6** – see figure **F2**.
- Empty out the coffee grounds container **A6** and wash it with clean water. Then dry it thoroughly. Empty out the inner drip tray **A7** and if dirty, wipe it with a clean dampened cloth and then dry it thoroughly.
- Install the inner drip tray **A7**, coffee grounds container **A6** and the outer drip tray **A8** back in their place.



Note:



If the icon **B3**  lights up while the espresso machine is running, it means that the coffee grounds container **A6** is full and needs to be emptied out. If the icon **B3**  starts flashing, it means that the coffee grounds container **A6** is not inserted.

Steaming unit

- Slide out and remove the service access door **A11** – see figure **G1**. Press the steaming unit **A10** release buttons and take it out – see figure **G2**. Wash it under running water and dry it out thoroughly.
- Install the steaming unit **A10** properly in its place and attach the service access door **A11**.



Note:

If the icon **B4**  lights up, it means that the steaming unit **A10** is not inserted in its place or is not correctly installed. If icon **B4**  is flashing, the service access door **A11** is open or incorrectly installed.

Water tank

- Take out the water tank **A1**, rinse it out with clean water with the addition of a small amount of neutral dishwashing detergent. Then rinse it out thoroughly using clean water, dry it and put it back in its place.


Coffee bean hopper

- Only clean the coffee bean hopper **A3** with a clean, dry cloth or paper towel. Do not clean it with water.

Outer surface of the espresso machine

- To clean the outer surface of the appliance, use a clean, lightly dampened cloth. Then wipe everything so that it is thoroughly dry.

DESCALING



 

- If indicator **B5**  lights up during operation, it is necessary to start the descaling function.
- The appliance will work best when the descaling function is used regularly, at least once per month, or more frequently based on the hardness of the water that is used. This will extend its lifetime and improve power efficiency because timescale deposits negatively affect electricity consumption.

1. Fill the water tank **A1** all the way to the maximum water mark according to the instructions contained in chapter »**Filling the water tank**«.
2. Add descaling agents specially intended for descaling espresso machine type appliances into the water tank **A1**. This agent can be purchased in standard retail chains. Follow the instructions on the manufacturer's packaging when dosing the purchased descaling agent.



Warning:

 
For descaling, do not use vinegar, etc. Otherwise, the appliance could be damaged.

 
 

 
3. Insert the power plug into a power socket.
4. Place a sufficiently large container underneath the brew head **A5**.
5. In the stand-by mode, simultaneously press and hold down buttons  **B7** and  **B11** for 5 seconds. A beep is made and the indicator light **B5**  and button  **B11** will flash.

6. To start the descaling process, press button  B11.



Note:

In the event that you wish to return to the stand-by mode at this stage, press button  B7.

7. The indicator light  B5 will flash during the descaling process. Take care to prevent scalding by hot water or the escaping steam. Do not interrupt the process in this phase.
8. Once the water in the water tank **A1** is used up, the indicator light  B1 and button  B11 will start flashing. Empty out the remaining contents of the water tank **A1** and fill it up to the maximum water mark with clean water. When the filled water tank **A1** is inserted back into the appliance, indicator light  B1 will turn off. The descaling process will continue to run.

 





Note:

If necessary, empty out the container underneath the brew head **A5**. Nevertheless, be careful when handling the container since the water inside may be very hot.


9. When the self cleaning process is complete, the espresso machine will turn off automatically.

DRAINING THE INTERNAL LINES

- It is recommended to drain the internal lines when you plan on not using the appliance for an extended period of time, before transporting it, etc.
- In the stand-by mode, simultaneously press and hold down buttons  B7 and  B12 for 5 seconds.
 - The indicator light  B6 will start flashing.
 - Remove the water tank **A1** from the appliance. Indicator  B6 will be lit. This signals that the draining of the internal lines is running.



Note:

If you press button  B7 before taking out the water tank **A1**, you will return back to the stand-by mode.

4. When the internal line draining process is complete, the espresso machine will turn off automatically.

CLEANING THE GROUND COFFEE OUTLET


- During use, ground coffee may accumulate on the walls of the ground coffee outlet and therefore it is necessary to clean it regularly (depending on the frequency of use).
- Slide out and remove the service access door **A11** – see figure **G1**. Press the steaming unit **A10** release buttons and take it out – see figure **G2**.
 - Carefully tilt the espresso machine and using brush **A12**, carefully remove any dirty material from the walls of the ground coffee outlet – see figure **H**.
 - After cleaning it out, insert the steaming unit **A10** and the service access door **A11** back in their place.

Storage

- When not using the appliance for an extended period of time, disconnect the power plug from the power socket, allow the appliance to cool down and clean it according to the instructions provided above.
- Before storing it, check that the appliance and all its accessories are thoroughly clean and dry.
- Store the appliance in a dry, clean and well-ventilated location not exposed to extreme temperatures and out of children's reach.

TROUBLESHOOTING

- The following table lists potential problems that may be encountered during the use of the espresso machine. Nevertheless, if the problem persists, turn off the espresso machine, disconnect the power plug from the power socket and contact an authorised service centre.

Problem	Cause	Solution
The appliance is not working.	It is not connected to a power socket.	Connect it to a working power socket and press button  B7. Check that the power cord is properly connected to the socket in the appliance and that the plug is properly inserted in the power socket.
There is no response when a button is pressed or the response is delayed.	Electromagnetic interference of the appliance is occurring.	Turn off the appliance and turn it back on again after several minutes.
	The touch panel is soiled.	Turn off the appliance, disconnect it from the power socket and clean the panel using a clean, lightly dampened cloth and then thoroughly wipe it dry.
Coffee is not warm enough.	Cups have not been warmed up.	Warm up the cups.
	The steaming unit A10 is too cold.	Flush it out three times before brewing coffee.
Coffee is not flowing out the spout.	Prior to this you used the drain internal lines function.	Press the dispensing hot water button until water starts flowing from the spout.
The first cup does not taste particularly good.	There is an insufficient amount of ground coffee inside the steaming unit A10 .	Pour out of the first coffee that you brewed. The next cup will now be in order.
The coffee lacks froth.	The coffee beans are not fresh.	Use fresh coffee beans or try using a different brand of coffee.
Touch buttons do not function properly.	The touch buttons are not pressed properly.	It is necessary to use the appliance from the front. Press the bottom part of the icon of the touch button.
The appliance heats up for too long.	The appliance is soiled by limescale deposits.	Descalcate it according to the instructions contained in section " Descaling ".
The water tank A1 is removed or it is running out of water, but the respective indicator light is not signalling anything.	The area around the connector at the bottom of the water tank A1 is damp or wet.	Thoroughly dry out any moisture or water in the vicinity of the connector.
The inner drip tray A7 is filled with a large amount of water.	The coffee is ground too fine, which prevents water from flowing through.	While the coffee grinder is running, set a coarser grind level.
The coffee is dispensed too slowly or intermittently.	The coffee is ground too fine, which prevents water from flowing through.	While the coffee grinder is running, set a coarser grind level.
The insufficient coffee beans indicator light is flashing even though there is a sufficient amount of coffee beans in the hopper.	The internal ground coffee outlet is clogged.	Clean out the ground coffee outlet of the appliance according to the instructions in section " Cleaning the ground coffee outlet ".

The descaling process indicator is flashing continuously even after the descaling process is finished.	The descaling process is not yet finished.	Please be patient and wait for the process to finish. The appliance will turn off automatically, please do not turn off this appliance manually.
--	--	--

.....

TECHNICAL SPECIFICATIONS

Rated voltage range.....	220 – 240 V~
Rated frequency.....	50 – 60 Hz
Rated power input.....	1,235 – 1,470 W
Noise level.....	75 dB(A)

The declared noise emission level of the appliance is 75 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

We reserve the right to change text and technical specifications.

.....

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand over these products to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic equipment, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

