

SENCOR®

SKS 5330



KITCHEN SCALE
Translation of the original manual



SENCOR®

SKS 5330



Important safety instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- The appliance may be used by children and persons with reduced physical, sensory or mental abilities or with insufficient experience and knowledge only if they are supervised by competent persons. Ensure their safety.
- Children must be supervised to ensure that they do not play with the appliance.
- This appliance is primarily designed for personal household use. Do not use it for commercial purposes, in industrial surroundings or for weighing animals.
- Do not use the appliance for any other purposes than those intended.
- During use, it is necessary to ensure that the appliance is located on an even, smooth, hard and stable surface. Otherwise, this may result in weighing inaccuracies.
- In the event that the maximum weighing capacity is exceeded, remove the excessively heavy food or item from the weighing platform to prevent possible damage to the appliance.
- Do not use the appliance as a place for placing items. It must be ensured that no items are placed on the appliance during storage.
- Keep the appliance away from extreme temperatures, direct sunlight and excessive humidity. Do not use it in an overly dusty environment.
- Do not place the appliance near heaters, open fires or other equipment or devices that are sources of heat. Use and store it away from flammable or volatile substances.
- If you will not be using the appliance for an extended period of time, remove the batteries. Otherwise they may leak inside the appliance and cause irreparable damage.
- Dispose of the batteries ecologically at the end of their lifetime. Never throw batteries out with communal waste.
- Do not use rechargeable batteries to power this appliance.
- Keep the batteries out of children's reach as they may present a hazard to a child. In the event that a child swallows a battery, immediately seek medical help.
- Keep the appliance clean. When cleaning, follow the instructions in chapter "Cleaning and maintenance".
- Do not submerge the appliance under water or any other liquid and do not rinse it under running water.
- The manufacturer takes no responsibility for damages caused by the incorrect use of the appliance.
- Under no circumstances should you repair or alter the appliance yourself. Have all repairs or adjustments of the appliance performed at a professional company or an authorised service centre. Tampering with the appliance during the warranty period may void the warranty.

- Thank you for purchasing a SENCOR brand product and we hope that you will be happy with it.
- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of products. Use the appliance only as described in this manual. Keep this user's manual for future use.
- We recommend saving the original shipping cardboard box, packaging material, receipt and warranty card for the duration of warranty. In the case of transportation, pack the appliance using the original packaging materials only.

INSTRUCTIONS FOR USE

Turning on for the first time

- 1) Remove the battery compartment cover located on the underside of the scale.
- 2) Remove the transparent insulating strip that prevents the battery from discharging and close the cover again.
- 3) Place the scale on an even and dry surface.
- 4) The scale has an "Auto-On" function. To start the scale, use your hand to push down on the weighing platform or place the weighed item on it.



Note:

We recommend starting the scale by pushing down on the weighing platform with your hand. When an item is placed on the weighing surface, the scale will only start automatically when the item placed on it weighs at least 250 g. If you start the scale by placing an item on the weighing platform, the weight of 0 will be shown. This option is thus particularly suitable when you need to place a bowl in which the ingredients will be weighed on to the scale prior to weighing the actual ingredients.

- 5) „H!“ and „0g“ will appear on the display. Thereby, the scale is ready for use.

Settings the weight units

- This scale has a weight unit toggle switch. If you wish to toggle between the measuring units, repeatedly press the "UNIT" touch button (g --> oz --> lb:oz --> ml water --> ml milk --> fl.oz).



Attention:

The measuring units can only be toggled when the scale is set to zero and in an idle state.

Additional weighing function (TARE)

- 1) Place the container in which you wish to weight the individual ingredients on to the scale and press TARE/OFF. "0 g" and "Tare" will appear on the display.
- 2) Put the ingredient that you wish to weigh into a container. The weight of the ingredient will be shown on the display. If you wish to weigh multiple ingredients in a single container, press TARE/OFF again to reset the display to zero and then weigh the next ingredient. In this way you can continue until you have weighed all the required ingredients.



Attention:

When resetting the scale to zero with a container, the weight of which is less than 50 g, the display will show "0 g" and will not factor in the weight of the container. When resetting the scale to zero with a container, the weight of which is greater than 50 g, the display will show "0 g" and the "TARE" information indicator will appear in the top left part of the display.

Overload indicator

- If the scale is overloaded (max. capacity 5 kg), the display will show the symbol "EEEE".

Automatic shut-off function

- Your scale is equipped with an automatic shut off function. This function will turn the scale off if no activity is detected for 1 minute.

Manually turning off the scale

- Turn off the scale by pressing the "TARE / OFF" button.

Replacing batteries

- If the display shows the flat battery icon, it is necessary to replace the battery.
- 1) Remove the battery compartment cover located on the underside of the scale.
 - 2) Take out the old batteries.
 - 3) Place two 3V type CR2032 lithium battery into the battery compartment. Pay attention to the polarity. The positive pole must always be facing upwards.



Attention:

If you will not be using the scale for a long time, store it in a horizontal position. This position better protects the sensitive sensors located in the feet of the scale. Do not leave any objects on the scale that may place an unnecessary load on the sensors. Strong electromagnetic fields may negatively influence the weighing precision. Avoid using the scale in such areas.

CLEANING AND MAINTENANCE

- To clean the outside parts of the appliance use a fine cloth dipped in lukewarm water. Do not use aggressive cleaning agents, paint thinners or solvents. Using these solutions could damage the surface of the product.

DISPOSAL OF USED BATTERIES

- This products comes included with batteries. Do not dispose of old batteries with regular household waste.
- Dispose of batteries at designated battery disposal points.

TROUBLESHOOTING

- If the scale displays random values or if it does not turn off automatically, you need to restart it. In such cases, remove the batteries for about 10 seconds and place them back again. The scale should function normally.

TECHNICAL SPECIFICATIONS

Power supply	2x 3V lithium battery (CR2032)
Measurable weight:.....	5-5,000 g
Weighing precision:.....	1 g/0.1 oz/0.1 lb:oz/1 ml/ 0.1 fl.oz
Toggling between weight units:.....	g --> oz --> lb oz --> ml water --> ml milk --> fl.oz
Dimensions:.....	205 x 18 mm

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save

valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic equipment, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

