

SENCOR®

SVC 7315TI





TYČOVÝ VYSAVAČ 2 V 1
Návod k použití v originálním jazyce




SENCOR®

SVC 7315TI



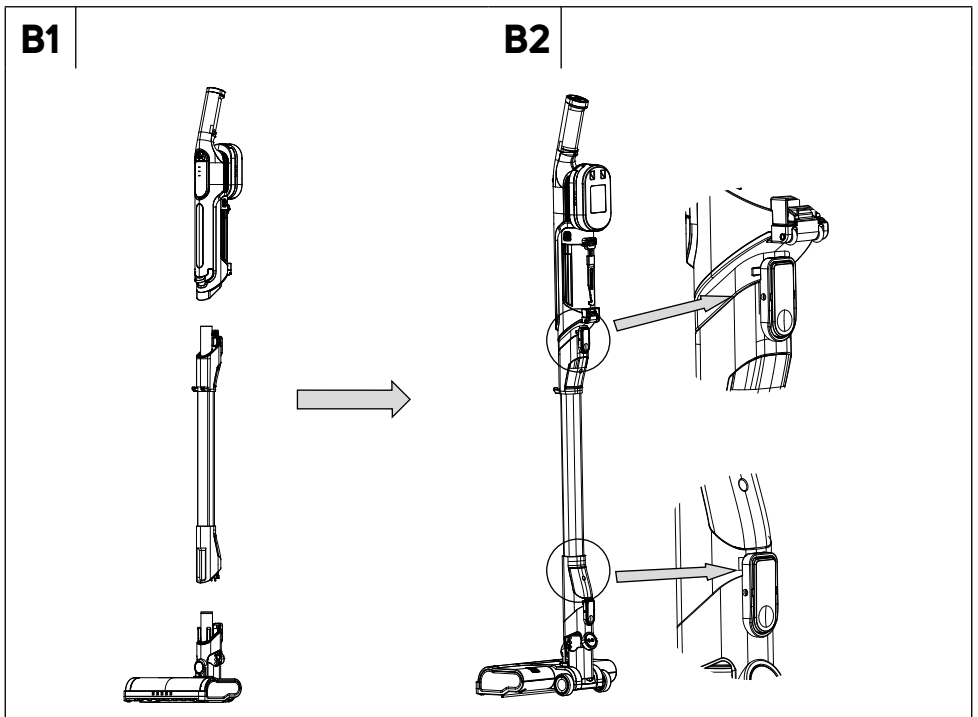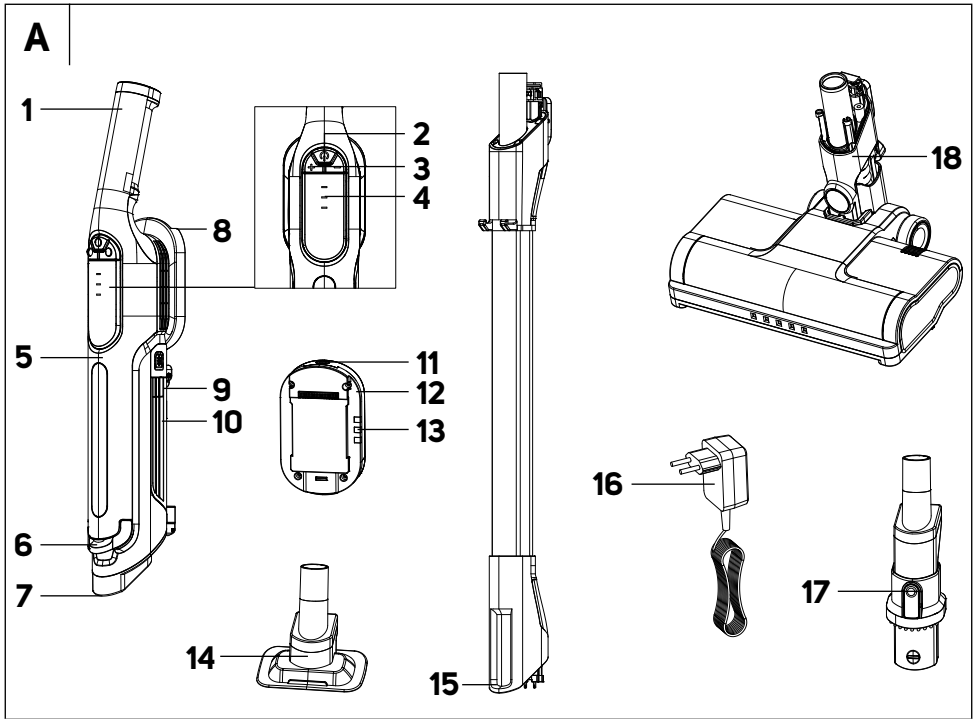

C

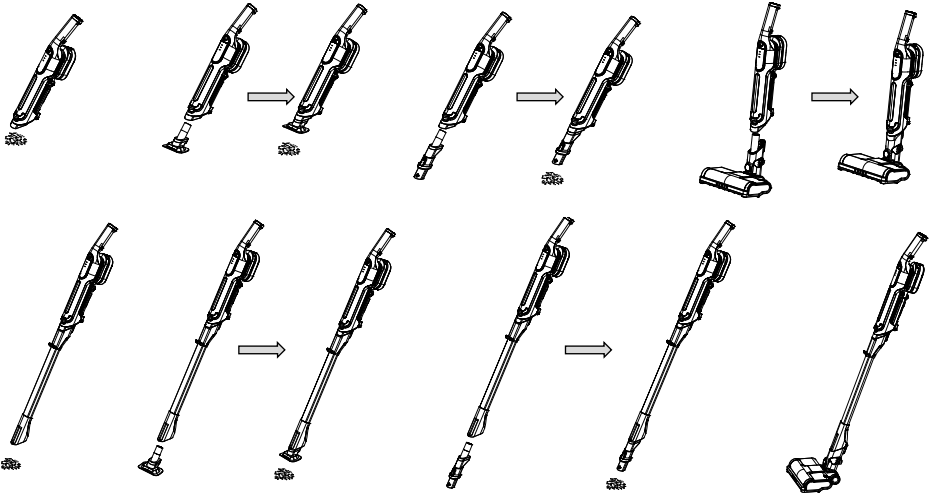


D1


D2

D3


D4

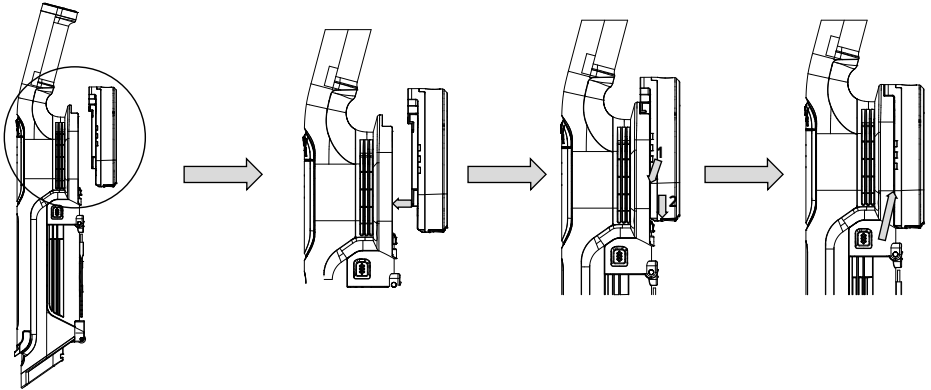


E



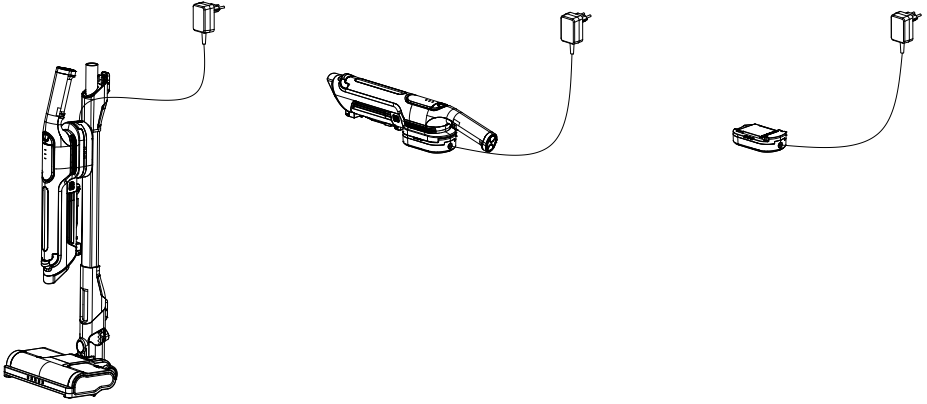


F1

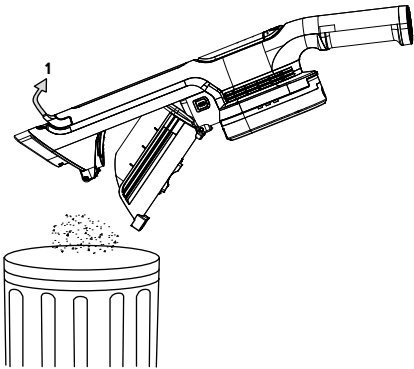


F2

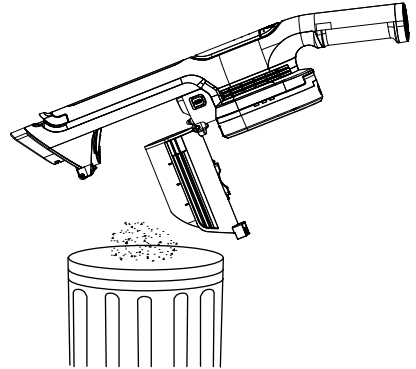


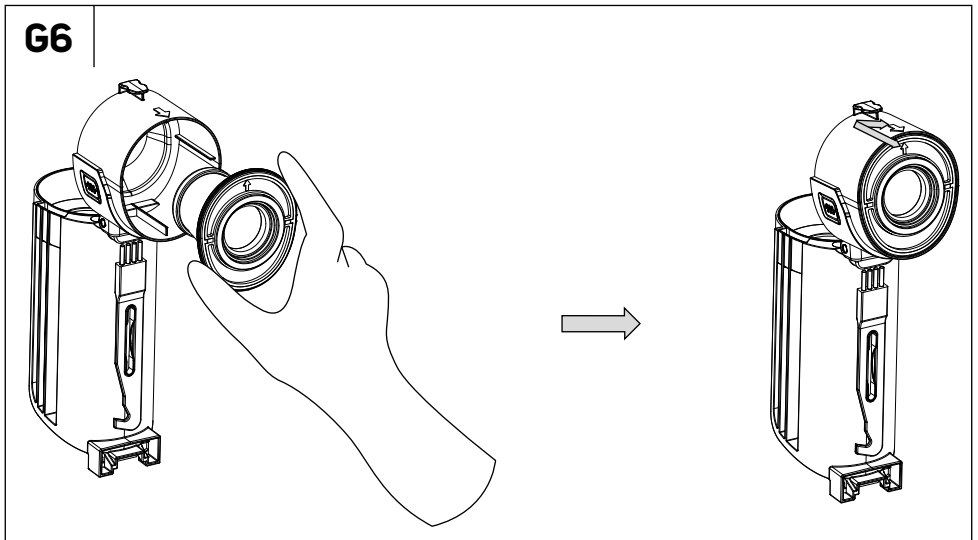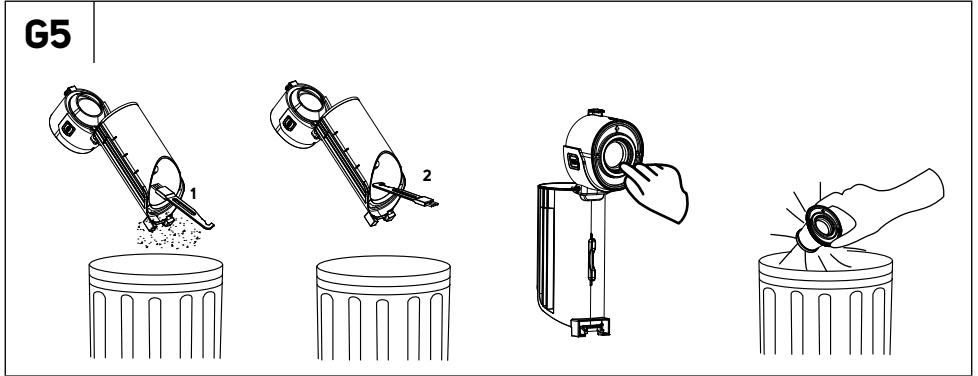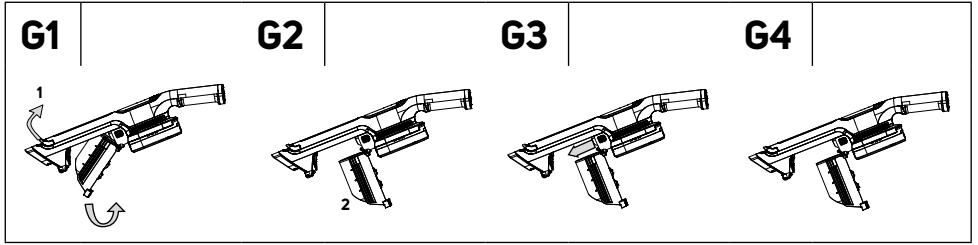


G7

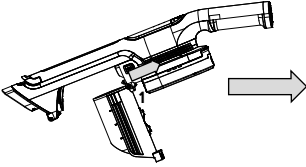








G8

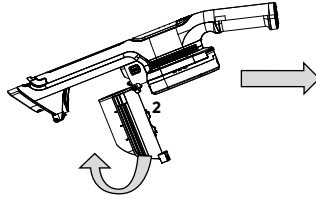

G9

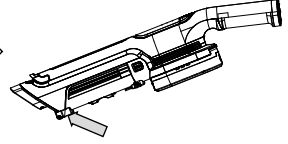

H

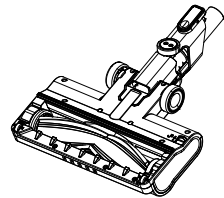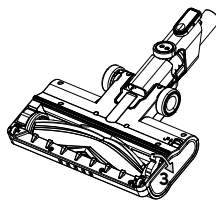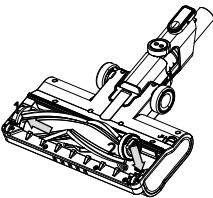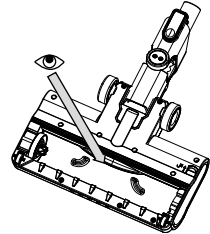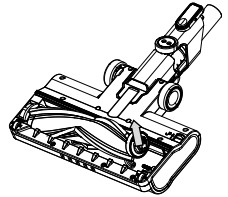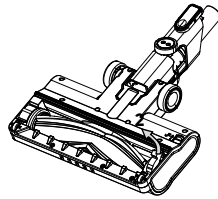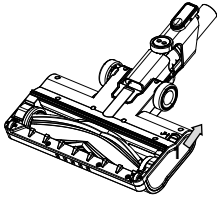

EN Cordless versatile vacuum cleaner 2 in 1

Important safety instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- This vacuum cleaner may be used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use this vacuum cleaner in a safe manner and understand the potential dangers.
- Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power adapter is damaged, it must be replaced with an original type. For a replacement power adapter, please contact an authorised service centre. It is forbidden to use the appliance if it has a damaged power adapter.



WARNING:

Avoid coming into contact with the rotating parts of the vacuum cleaner's hand accessories. There is a risk of getting caught on these parts and possible injury.

- Only use the vacuum cleaner with the original power adapter, charging base and accessories that were supplied with it.

- This vacuum cleaner is designed for use in households, offices and similar types of areas. Do not use in industrial surroundings.
- Do not expose the vacuum cleaner to direct sunlight and do not place it near an open fire or appliances that are a source of heat.
- Before connecting the adapter to a power socket, check that the technical details on its rating label match the electrical voltage in the power socket.
- Make sure the adapter power cord is not touching a hot surface or sharp objects. Position the adapter power cord so that it will not be tripped over.
- Never submerge the vacuum cleaner or the power adapter in water or any other liquid and do not wash it under running water.
- Before turning on the vacuum cleaner, make sure that it is correctly assembled and that all inflow and outflow filters are installed in their place.
- When the vacuum cleaner is running, ensure that the air outlets and the suction opening are not blocked.
- Do not use the vacuum cleaner to vacuum the following items:
 - smouldering cigarettes, burning items, matches or embers;
 - water and other liquids;
 - flammable or volatile materials;
 - sharp items, e.g. broken glass, needles, pins, etc.;
 - flour, wall plaster, cement and other building materials;
 - larger pieces of paper or plastic bags, which can easily block the suction hole.
- Vacuuming of some types of floors or floor surfaces can create an electrostatic discharge, which presents no danger to the user.
- Before using the vacuum cleaner on highly polished floors (e.g. wooden floor or polished floor tiles) check that the floor nozzle (particularly the position of the brush roll) is clean. Any foreign objects could scratch the floor surface.
- Always turn off the vacuum cleaner when leaving it without supervision, after finishing using it and before cleaning it.
- Disconnect the power adapter from the power socket before cleaning it and after it has finished charging.
- Disconnect the power adapter from the power socket by pulling on the plug, never pulling on the power cord. Otherwise, this could damage the power adapter or the socket.
- If the power adapter is damaged, it must be replaced with an original type. For a replacement power adapter, please contact an authorised service centre.
- Do not use the vacuum cleaner if it is not working correctly, if it has been damaged or has been submerged in water.
- Do not repair the vacuum cleaner yourself or make any adjustments to it. Have all repairs or adjustments performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

Thank you for purchasing a SENCOR brand product and we hope that you will be happy with it.
Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

DESCRIPTION OF THE VACUUM CLEANER

A1 Handle	A10 Dust container
A2 On/Off button	A11 Charging plug connection socket
A3 +/- buttons (power setting)	A12 Battery
A4 Power setting LED indicators	A13 Charging indicator
A5 Motor unit	A14 Upholstery nozzle
A6 Dust container release clip	A15 Metal tube
A7 Suction hole	A16 Power adapter
A8 Battery compartment	A17 Combination crevice nozzle
A9 Filtration unit (contains a holder and a HEPA filter)	A18 Floor nozzle

ASSEMBLING AND DISASSEMBLING THE VACUUM CLEANER

1. ASSEMBLING AND DISASSEMBLING THE UPRIGHT VACUUM CLEANER

Insert the tube into the outlet hole of the motor unit in such a way that the connectors in the rear part of the tube align with the opening inside the outlet hole – see figure **B1**. Correct attachment is indicated by a click – see figure **B2**.

Place the floor nozzle on an even, dry and stable surface. Slide the floor nozzle into the tube in such a way that the connectors in the rear part of the floor nozzle align with the opening inside the tube – see figure **B1**. Push the tube in until you hear a click – see figure **B2**. If you need to disassemble the cordless vacuum cleaner, press the motor unit release clip on the metal tube. Then press the floor nozzle release clip to release it.

2. ASSEMBLING AND DISASSEMBLING THE VACUUM CLEANER WITH ACCESSORIES

In order to perfectly clean your home, you can attach some of the supplied accessories to the motor unit outlet. For more comfortable use of the vacuum cleaner, it is also possible to attach the accessories to the metal tube. You can find the combinations of the individual accessories in figure **C**.

1. Floor nozzle

It is suitable for vacuuming smooth floor coverings, carpets with a low pile, mats, runners, etc.

2. Combination crevice nozzle

It is suitable for vacuuming hard-to-reach places (e.g. windows, corners, book shelves, spaces between mattresses, upholstery, etc.). Press and hold down the button on the nozzle and move it forward to extend the brush. Retract the brush by pressing the button and moving it backwards.

3. Upholstery nozzle

It is suitable for vacuuming upholstered furniture, couches, sofas, car seats and fine textiles, e.g. drapes.

INSERTING AND REMOVING THE BATTERY

1. Inserting the battery: Put the battery against the compartment in the rear part of the vacuum cleaner so that the contacts point at each other – see figure **D1**.

Insert the battery into the compartment so that the symbol "o" on the vacuum cleaner is aligned with the "+" symbol on the battery – see figure **D2**.

Move the battery downwards to insert it into the vacuum cleaner – see figure **D3**.

The correct insertion of the battery is indicated by a click and likewise by the "o" symbols on the vacuum cleaner and the battery being aligned – see figure **D4**.



Warning:

Never insert the battery in reverse or by using excessive force. This could damage it.

2. Removing the battery: If you need to take the battery out, press the button on the underside of the battery and slide it out upwards until the "o" symbol on the vacuum cleaner is aligned with the "+" symbol on the battery. Then take it out of the vacuum cleaner.



Warning:

When not using the vacuum cleaner for an extended period of time, take the battery out of it and store it in a cool, dry location. Regularly recharge the battery. Store it away from metal objects to prevent excessive discharging from occurring.

CHARGING THE BATTERY

The battery is partially charged from the factory and it needs to be charge to full capacity.

Connect the connector of the power adapter into the socket in the battery and the power adapter plug into a power socket.

The charging indicator will start flashing. As a rule, the first charge takes 3 hours.

When the battery is fully charged, all the battery charge level indicators will be lit.

When the battery is almost flat, the vacuum cleaner will stop running in order to prevent the battery from discharging fully.

It is possible to charge the battery both while it is inserted in the vacuum cleaner as well as when removed from the vacuum cleaner. Charging options are shown in figure **E**.



Note:

When you have finished cleaning, connect the battery to a power adapter so that it can recharge.

Keep the charging adapter plugged in permanently. The electronics in the appliance control the battery charging process and ensure that it is always optimally charged.

When the battery is fully charged, the electronics interrupt the charging process and resume it when it is necessary to charge it again. There is no need to worry about wasting electricity.

Disconnect the charging adapter from the power socket in the event of a long term absence. When you return, plug it back into the socket so that the vacuum cleaner is again ready for use.

USING THE UPRIGHT VACUUM CLEANER

1. Assemble the upright vacuum cleaner according to the instructions in section **"ASSEMBLING AND DISASSEMBLING THE UPRIGHT VACUUM CLEANER"**.
2. Press the On/Off button and the vacuum cleaner will start.
3. Use the +/- buttons to set the desired power level: low – medium – high. The corresponding number of LED indicators for the set power level will be lit.
4. When you have finished vacuuming, turn the vacuum cleaner off by pressing the On/Off button.



Note:

In the event that any rotating part jams, the vacuum cleaner will turn off automatically. Eliminate the cause of the jam and turn the vacuum cleaner on again and continue vacuuming.

In the event that the motor unit heats up excessively, the vacuum cleaner will turn off automatically. This is a normal event, where the thermal protection fuse is triggered, which serves as protection of the motor unit against damage due to overheating. Allow the vacuum cleaner to cool down and then turn it on again and continue vacuuming.

CLEANING AND MAINTENANCE

Always make sure that the vacuum cleaner is turned off before cleaning it. Remove the battery from the motor unit.

Cleaning the motor unit and accessories

To clean the outer parts of the vacuum cleaner, use a soft cloth dipped in lukewarm water. Do not use aggressive cleaning agents, paint thinners or solvents. Using these solutions could damage the surface of the appliance.

CLEANING THE UPRIGHT VACUUM CLEANER

Emptying the dust container

It is recommended to always empty out the dust container after every use. If, however, the level of dust and dirt reaches the MAX mark, it is necessary to immediately dump out the dust container.

1. Remove the attached accessory from the motor unit.
2. Take the motor unit over to a garbage bin so that the dust container points downwards.
3. To release the dust container, pull the dust container release clip towards the vacuum cleaner – see figure **F1**.
4. In this way, you will dump the contents of the container directly into the garbage bin – see figure **F2**.
5. Push the dust container into the motor unit by hand. The bottom of the dust container is securely locked in place when you hear a click.



Note:

For hygiene reasons, we recommend that you dump out the container away from living areas.

Cleaning the dust container

Regularly clean the dust container to prevent unpleasant odours from being created.

1. Remove the attached accessories from the motor unit and dump out the dust container according to the above mentioned instructions.
2. To release the dust container, pull the dust container release clip towards the vacuum cleaner – see figure **G1**.
3. Dump out the dust container – see figure **G2**.
4. Pull the HEPA filter holder out of the motor unit – see figure **G3**. Remove the dust container with the HEPA filter holder – see figure **G4**.
5. Remove the HEPA filter from the holder – see figure **G5**.
6. Tap out the HEPA filter and remove the dirt and dust from it using a fine brush or soft wiping cloth. In the event of heavy soiling, you can vacuum it out using a different vacuum cleaner with an attached brush nozzle. Do not wash the HEPA filter in water. This could damage it. In the event that the HEPA filter is already heavily soiled or deformed, replace it with a new one. We

recommend replacing the HEPA filter based on the frequency of use at least once every six months.

7. Remove dust and dirt from the tubular filter. If necessary, you can rinse it under clean running water. Then wipe them dry using a clean wiping cloth.
8. Wipe the inside walls of the dust container using a soft lightly dampened sponge. Wipe dry using a clean wiping cloth.



Warning:

Never install the HEPA filter if it is wet or damp, or if the dust container is wet. Make sure that all parts are completely dry before re-installing them.

9. Insert the HEPA filter into the holder so that the arrows on the HEPA filter and holder are pointing at each other – see figure **G6**.
10. Insert the holder with the HEPA filter into the motor unit and push it into the motor unit until you hear a click – see figure **G7**.
11. Push the dust container into the motor unit by hand. A click will indicate that the bottom is secured in place – see figures **G8** and **G9**.

Cleaning the floor nozzle

It is necessary to regularly clean the floor nozzle to ensure the required level of continuous suction power. The cleaning procedure is shown in figures **H**.

1. Take the floor nozzle off the vacuum cleaner and turn it upside down.
2. Release and take out the brush roll clip.
3. Carefully take out the brush roll.
4. Remove any wound on hair, fur and other dirt. To speed up the removal of wound on hair or fur, you can use scissors.
5. Wipe out the internal area of the floor nozzle using a dry wiping cloth.
6. Insert the clean brush roll back into the floor nozzle. Correct attachment is indicated by a click.
7. Insert the brush roll clip back in its place. The correct location is indicated by a click.



Warning:

Under no circumstances submerge or wash the floor nozzle in water or any other liquid.

Long term storage

When not using the vacuum cleaner for a long time, clean it according to the aforementioned instructions and take the battery out of the motor unit. Before storing it, check that the vacuum cleaner and all its accessories are thoroughly clean and dry.

Store the appliance in a dry, clean and well-ventilated location not exposed to extreme temperatures and out of children's reach.

In the event that the storage time exceeds 6 months, we recommend recharging the battery every 6 months.


TROUBLESHOOTING

Before contacting a service centre, please read through the following table:

Problem	Possible cause	Solution
The brush roll is not rotating.	The brush roll is blocked by a foreign object.	Turn off the vacuum cleaner, elimination the cause of the blockage and continue vacuuming.
Suction power is weak	The dust container is full or the filters are dirty.	Empty out the dust container and clean the filters.
	There is a large amount of hair and fur wound on to the brush roll.	Clean the brush roll.


**Attention:**

If you problem is not specified in the above table or the specified problem continues to persist, stop using the vacuum cleaner, turn it off and contact an authorised service centre.

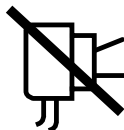


This symbol indicates that the appliance must not be used if the power plug is damaged.

TECHNICAL SPECIFICATIONS**Power adapter**

Input.....100–240 V~, 50/60 Hz, 0.5 A
Output.....18 V  0.8 A


Vacuum cleaner

Power input.....150 W
Power input of floor nozzle20 W
Battery.....Li-ion / 14.8 V  / 2 200 mAh
Time required for charging to full capacityapproximately 3 hours
Noise level.....≤ 86 dB(A)
Dust container capacity0.2 l

The declared noise emission level of the appliance is ≤ 86 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

Name of manufacturer	FAST ČR, a.s. U Sanitáru 1621 CZ - 251 01 Říčany
Model identification number	Power adapter for SVC 7315T1
Input voltage	100-240 V~
Input frequency	50/60 Hz
Output voltage	18 V
Output current	0.8 A
Output power	14,4 W
Average efficiency in the active mode	82.37 %
Efficiency at low load (10 %)	--%
Power consumption without load	0.078 W

Changes to text and technical parameters reserved.

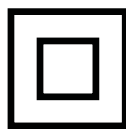**Double insulation symbol**

Safety class for electrical shock protection:
Class II – Electrical shock protection is provided by double or heavy-duty insulation.

**House symbol (domestic use)**

The product is intended for household use only. The product is not intended for outdoor use.

**Read user's manual symbol**

Safety class for electrical shock protection:
Thoroughly read the all the instructions before using the product.

DISPOSAL OF BATTERIES

Prior to disposing of the product or handing it over at a specialised collection facility, it is necessary to ensure that the battery is removed. Before removing the battery, it is necessary to start the vacuum cleaner and wait until it is completely flat. The battery contains environmentally damaging substances and therefore does not belong in standard household waste. Their correct disposal will be performed by the respective collection facility.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand these appliances over to determined collection points. Alternatively, in some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electrical or electronic equipment, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

