

SENCOR®

SMS 0900BK



ELECTRIC FOIL SHAVER

Translation of the original manual



 
SENCOR®

SMS 0900BK




A

1

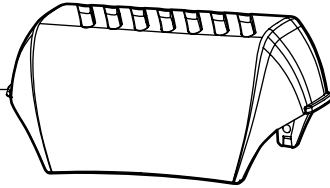


2

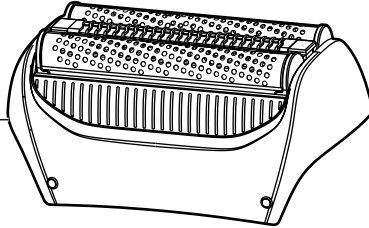 

3



 4




4

5




11

 12

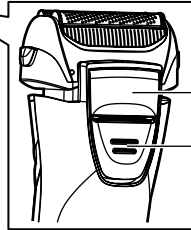

6

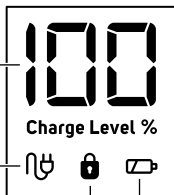 

7

 
8

9

10



13

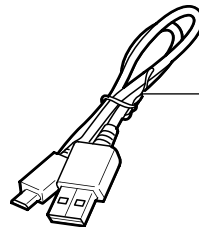

14



 
EN Electric foil shaver

Important safety instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

General warnings

- This appliance may be used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cable is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cable.



This appliance can be washed under a water tap.



WARNING

Prior to cleaning with water, **ALWAYS** disconnect the appliance from the USB power cable.

- The parts of the appliance that need to be mounted or stood upright, must be mounted or stood upright in such a way that they cannot fall into water.

ELECTRICAL SAFETY

- Before connecting the USB power cable to a power source or a USB power adapter, check that the voltage on its rating label corresponds to the voltage in the power socket to which you wish to connect it. Do not use an extension cable.
- Do not place the USB power cable over sharp objects. Make sure that the power cable does not hang over the edge of a table and that it is not touching a heated surface.
- Ensure that the USB power cable is not clamped or crimped.
- When pulling the USB connector out of a power source or the USB adapter out of a power socket, always pull on the connector or the adapter and never on the power cable itself.
- Do not connect and disconnect the USB power cable to and from the power source with wet hands.
- Keep the USB power cable dry.
- Do not wind the USB power cable around the handle of the appliance.
- The appliance is equipped with a built-in long-life battery that can only be removed at a professional service centre. Never attempt to remove it from the appliance yourself.



Attention:

Never disassemble the appliance for the purpose of removing the battery. Never short circuit the appliance or throw it into a fire. Incorrect use, risks releasing toxic substances or causing a fire or explosion.

- Do not use or store the appliance or leave it lying in a bathroom or similar locations where it could fall into a bath, wash basin or other containers filled with water.
- In the event that the appliance falls into water during use, under no condition reach for it, rather, immediately disconnect the power cable from the power source. Never use the appliance if any part of it was submerged in water. Hand the appliance over to an authorised service centre for inspection.

SAFETY DURING USE

- This electric shaver is intended for home use only and is designed for shaving and trimming beards or whiskers and facial hair. The shaver is not intended for commercial purposes, for shaving body hair and the hair on limbs or on sensitive parts of the body. It is also not intended for trimming animal fur.
- Only use the electric shaver on dry, clean hair, beards or whiskers. Do not use it on wet or just washed hair or on beards on which a shaving foam or gel, etc. is applied.
- Use the electric shaver and its accessories in accordance with the instructions contained in this user's manual.
- Use only the original accessories supplied with this electric shaver.
- Only use the shaver in indoor areas. Do not use it outdoors.
- Do not use the electric shaver in rooms where aerosol sprays are used or where oxygen is administered.
- Do not expose the electric shaver and its accessories to the outdoor environment, extreme temperatures, direct sunlight, excessive humidity or excessively dusty environments.
- Do not place the electric shaver and its accessories near heaters, open fires or other sources of heat.
- Before every use, check the shaving head for damage. Never use an electric shaver with a damaged shaving head.
- The electric shaver may heat up during use or when it is being charged. This is completely normal.
- Keep the electric shaver at a safe distance from eyes.
- Always turn off the electric shaver and disconnect it from the power source when not using it, when leaving it without supervision, before cleaning, maintenance or storage. Store the electric shaver and its accessories in a dry environment.
- Keep the electric shaver clean. Perform cleaning and maintenance according to the instructions in chapter CLEANING AND MAINTENANCE.
- Do not perform any maintenance on the electric shaver other than cleaning the individual components as described in chapter CLEANING AND MAINTENANCE.
- Do not use the electric shaver if it has fallen on the floor, if it was submerged in water, if it is not functioning correctly or if it is damaged in any other way.
- In order to prevent a hazardous situation from arising, do not repair the electric shaver or any of its accessories yourself or modify it in any way. For all repairs, contact an authorised service centre. By tampering with the product you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

- Thank you for purchasing a SENCOR brand product and we hope that you will be happy with it.
- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use. In the event that you hand this appliance over to somebody else, make sure to also include this user's manual.
- Carefully unpack the appliance and take care not to throw away any part of the packaging before you find all its parts. We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

- The charging time differs depending on the current battery power level. If the battery is completely discharged (flat), a full charge will take approximately 2 hours.

**Note:**

The electric shaver can be used while it is charging. It is not necessary to wait for a minimum battery charge.

- As soon as the battery is fully charged, disconnect the USB power cable from the power source.

**Attention:**

Do not leave the electric shaver connected to the power grid for longer than is necessary to charge it.

- A fully charged hair clipper battery will provide up to 90 minutes of cordless operation. Then it is necessary to charge the battery again.

DESCRIPTION OF THE APPLIANCE

A1 Protective cover	A9 Running / flat battery / charging indicator
A2 Shaving head with external foil	A10 Power cable connection socket
A3 Internal foil	A11 Extensible clipper
A4 Internal foil release buttons	A12 Clipper extension sliding button
A5 On/Off switch	A13 USB power cable (USB and USB-C connectors)
A6 Battery power level indicator	A14 Cleaning brush
A7 Connected to mains indicator	
A8 Lock function indicator	

PURPOSE OF USE

- The electric shaver is intended for home use and serves exclusively for the dry shaving of beards and trimming of sideburns, moustaches or smaller whiskers.

**Attention:**

The electric shaver is not intended for business activities or other professional areas of use.
The electric shaver is not intended for wet shaving or for cutting synthetic hair or animal fur.

CHARGING**Note:**

When charging the electric shaver for the first time after purchase or when it has not been used for more than three months, it is necessary to charge it for 2 hours. If you are charging the electric shaver for the first time or if you have not used it for a long time, it may take several minutes before the LED charging indicator lights up. The electric shaver may heat up during the charging process. This is normal and does not indicate a malfunction.

- The electric shaver has a built-in battery that enables its cordless operation.
- The electric shaver can be charged in two ways:
 - by means of an external device with a USB port (e.g. computer, USB hub, powerbank, etc.).
 - by means of a standard USB adapter connected to a power socket
- Insert the smaller USB connector (USB/C) into the socket at the bottom of the hair clipper and the larger connector into the selected power source. Charging will start and the indicator **A7** will be lit.

RECOMMENDATIONS FOR EXTENDING THE LIFETIME OF THE BATTERY

- In order for the built-in battery to serve you as long as possible, charge, use and store the electric shaver in a dry environment at an ambient temperature of 15–35 °C. Lower or higher temperatures have a negative impact on the lifespan of the battery.
- We recommend charging the battery only after leaving it to fully discharge.
- When the electric shaver is not used for an extended period of time, charge it at least once every 6 months.

OPERATION**SHAVING**

- Turn on the electric shaver by pressing the on/off switch.
- Hold the electric shaver at a right angle to the skin surface and in short circular motions glide the shaving head over the skin on the face, moving against the growth direction of facial hair. Apply appropriate pressure to the skin. Do not push too hard.
- Tension the skin with your free hand when shaving hard to reach places such as, for example, on the chin. In this way you will achieve better shaving results.

**Note:**

It may take your skin and facial hair two to three weeks to become accustomed to the new way of shaving. During this period, we recommend using the electric shaver every day.

- When you have finished shaving, clean the electric shaver according to the instructions in chapter CLEANING AND MAINTENANCE.

TRIMMING

- For trimming sideburns or clipping moustaches or goatees, use the extensible clipper.
- Using your thumb, move the slide button **A12** upwards, which will slide out the clipper.
- When you have finished trimming/clipping, turn off the electric shaver, clean the extensible clipper according to the instructions in chapter CLEANING AND MAINTENANCE and snap the clipper back.

LOW BATTERY POWER INDICATION

- In the event that the battery symbol **A9** starts flashing while the electric shaver is used, this means that the battery is almost discharged (flat). If this happens, turn off the electric shaver, plug it into a power source and continue using it.

TRAVEL LOCK

- The travel lock prevents the electric shaver from being turned on accidentally, e.g. while travelling.
- The travel lock is activated by pressing and holding down the On/Off switch for 3 seconds. Lock function indicator **AB** will be lit on the body of the electric shaver. The On/Off switch no longer reacts to being pressed.
- To deactivate the travel lock, again press and hold down the On/Off switch for 3 seconds. The lock symbol will turn off. Now the electric shaver is again ready for use.

CLEANING AND MAINTENANCE



Warning:

Before cleaning it, the electric shaver must always be turned off and disconnected from the power source. For cleaning the electric shaver and its parts, never use brushes with hard bristles, cleaning products with an abrasive effect, solvents, etc. Otherwise, its surface may be damaged.

No part of this electric shaver or the USB charging cable is intended for washing in a dishwasher!

- For hygiene reasons, clean the electric shaver after every use. Regular cleaning is also important to ensure the correct operation of the electric shaver and to extend the lifespan of the foils.
- Turn off the electric shaver before cleaning it. Never clean the electric shaver when it is charging and connected to the power supply.

CLEANING THE EXTERNAL FOILS/EXTENSIBLE CLIPPER



Attention:

Never clean the external foils of the shaving head using the supplied or any other brush! The foil is very fragile and there is a risk of damaging it.

- Apply a small amount of liquid soap and a little bit of water on to the external foil.
- Turn on the electric shaver (**ATTENTION: It must not be connected to an electrical power source!**) and allow it to run for a while. Then turn it off and rinse the shaving head or extensible clipper under running warm water until you remove all the remaining soils. Thoroughly rinse away all the foam and then turn on the electric shaver for a few seconds.
- Allow the electric shaver to dry out, ideally in a location away from direct sunlight.

CLEANING THE INNER FOIL

- Press the buttons **A4** on the sides of the electric shaver to release the shaving head, and remove it.
- You can clean the inner foil and its surroundings using the supplied brush or to rinse it out under running water and then let it dry out naturally.



Note:

If you clean the electric shaver under running water then apply a drop of fine machine oil (not included) on to the shaving foil and the clipper once per week.

CLEANING THE ELECTRIC SHAVER UNIT AND THE CHARGING CABLE

- The electric shaver unit can be cleaned using a clean dry cloth. In the event that it is very dirty, you can use a lightly dampened cloth. Then thoroughly wipe the cleaned surface dry.
- To clean the USB charging cable, use a clean, dry cloth.

REPLACING THE THE INNER FOIL

- Press the buttons **A4** on the sides of the electric shaver to release the shaving head, and remove it.
- Grasp the inner foil by the sides and pull it to slide it out of the electric shaver. Insert a new foil back in so that it clicks into place.

STORAGE

- When you have finished using it, you can store the electric shaver with all its accessories in a suitable location out of children's reach. Keep the electric shaver away from extreme temperatures, direct sunlight and excessive humidity. Do not use in an overly dusty environment.

TECHNICAL SPECIFICATIONS

ELECTRIC SHAVER

Built-in battery	Li-ion, 3,7 V, 600 mAh
Input.....	100-240 V, 50-60 Hz, 0.2 A
Output.....	5 V, 1000 mA
Power output	5 W
Weight	164 g
Noise level	70 dB(A)

USB POWER CABLE

Input.....	5 V, 1000 mA
Electrical shock protection class.....	II
Safety class for electrical shock protection.....	IPX6

The declared noise emission level of the appliance is 70 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

Explanation of technical terminology

Safety class for electrical shock protection IPX6:
IP is an international marking that provides information about how a resistant a given electrical device is against external damage by contact, ingress of a foreign object, dust or liquid. IPX6 specifies a resistance against a strong current of spraying water (for a period of 3 minutes at a distance of 3 m).



Electric shock protection class:
Class II – Electrical shock protection is provided by double or heavy-duty insulation.

Changes to text and technical parameters are reserved.

DISPOSAL OF USED BATTERIES

Prior to handing over the hair clipper at a specialised collection facility, it is necessary to ensure that the built-in battery is removed. Battery removal will be performed at the authorised service centre. In the event that the product has been disassembled for the purpose of ecological disposal then it must not be reassembled.



This symbol indicates that used batteries do not belong in ordinary municipal waste. Hand over used batteries to designated collection points for proper disposal. Correct disposal of batteries will help prevent negative impacts on the environment and human health.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of used batteries, request the necessary information about the correct disposal method from the local authorities or from your vendor.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand these appliances over to determined collection points. Alternatively, in some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product. Correct disposal of this product helps save

valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electrical or electronic equipment, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

