

SENCOR®

**SVC 308BK
SVC 309WH**



HAND VACUUM CLEANER

Translation of the original manual



SENCOR®

**SVC 308BK
SVC 309WH**



A

1

2

6

7

8

9

10

3

4

5

11

 
 
 
 
 
12

13



14

15


16

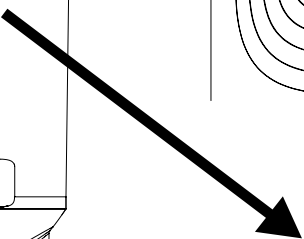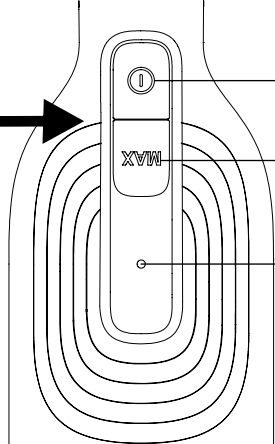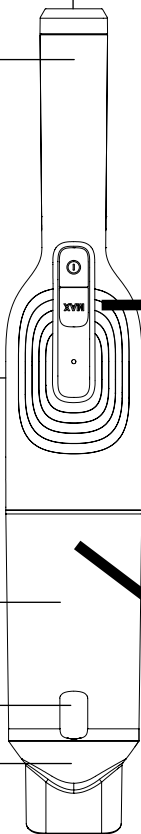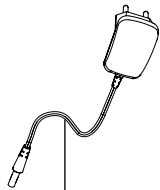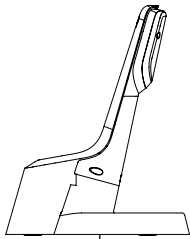


B1

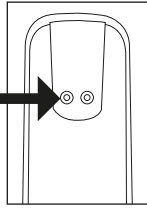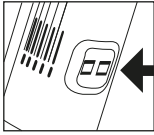  


B2

 


C1

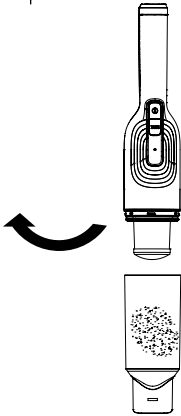 

C2

 

C3

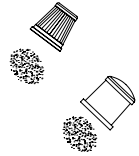 

EN Hand vacuum cleaner

Important safety instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- This vacuum cleaner may be used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use this vacuum cleaner in a safe manner and understand the potential dangers.
- Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power adapter is damaged, it must be replaced with an original type. For a replacement power adapter, please contact an authorised service centre. It is forbidden to use the appliance if it has a damaged power adapter.



WARNING:

Avoid coming into contact with the rotating parts of the vacuum cleaner's hand accessories. There is a risk of getting caught on these parts and possible injury.

Only use the vacuum cleaner with the original power adapter, charging base and accessories that were supplied with it.

- This vacuum cleaner is designed for use in households, offices and similar types of areas. Do not use in industrial surroundings.
- Do not expose the vacuum cleaner to direct sunlight and do not place it near an open fire or appliances that are a source of heat.
- Before connecting the adapter to a power socket, check that the technical details on its rating label match the electrical voltage in the power socket.
- Make sure the adapter power cord is not touching a hot surface or sharp objects. Position the adapter power cord so that it will not be tripped over.
- Never submerge the vacuum cleaner or the power adapter in water or any other liquid and do not wash it under running water.
- Before turning on the vacuum cleaner, make sure that it is correctly assembled and that all inflow and outflow filters are installed in their place.
- When the vacuum cleaner is running, ensure that the air outlets and the suction opening are not blocked.
- Do not use the vacuum cleaner to vacuum the following items:
 - smouldering cigarettes, burning items, matches or embers;
 - water and other liquids;
 - flammable or volatile materials;
 - sharp items, e.g. broken glass, needles, pins, etc.;
 - flour, wall plaster, cement and other building materials;
 - larger pieces of paper or plastic bags, which can easily block the suction hole.
- Vacuuming of some types of floors or floor surfaces can create an electrostatic discharge, which presents no danger to the user.
- Always turn off the vacuum cleaner when leaving it without supervision, after finishing using it and before cleaning it.
- Disconnect the power adapter from the power socket before cleaning it and after it has finished charging.
- Disconnect the power adapter from the power socket by pulling on the plug, never pulling on the power cord. Otherwise, this could damage the power adapter or the socket.
- If the power adapter is damaged, it must be replaced with an original type. For a replacement power adapter, please contact an authorised service centre.
- Do not use the vacuum cleaner if it is not working correctly, if it has been damaged or has been submerged in water.
- Do not repair the vacuum cleaner yourself or make any adjustments to it. Have all repairs or adjustments performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

- Thank you for purchasing a SENCOR brand product and we hope that you will be happy with it.
- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.
- When the battery is almost flat, the vacuum cleaner will stop running in order to prevent the battery from discharging fully.


Note:

When you have finished cleaning, allow the battery to recharge. Keep the charging adapter plugged in permanently. The electronics in the appliance control the battery charging process and ensure that it is always optimally charged. When the battery is fully charged, the electronics interrupt the charging process and resume it when it is necessary to charge it again. There is no need to worry about wasting electricity. Disconnect the charging adapter from the power socket in the event of a long term absence. When you return, plug it back into the socket so that the vacuum cleaner is again ready for use.

DESCRIPTION OF THE VACUUM CLEANER

A1 Power adapter connection socket	A8 Dust container release button
A2 Handle	A9 Dust container bottom
A3 On/Off button	A10 Suction hole
A4 MAX button (increase/decrease power)	A11 HEPA filter
A5 Charging indicator	A12 Fixed filter
A6 Charging contacts (at the back)	A13 Charging station
A7 Dust container	A14 Crevice nozzle
	A15 Brush nozzle
	A16 Power adapter


Warning:

The battery is not removable. It is fully built into the vacuum cleaner. Only qualified personnel are authorised to remove it.

ASSEMBLING AND DISASSEMBLING THE VACUUM CLEANER

1. ASSEMBLING AND DISASSEMBLING THE VACUUM CLEANER WITH ACCESSORIES

- In order to perfectly clean your home, you can attach some of the supplied accessories to the outlet hole of the hand vacuum cleaner or to the pole attached to the outlet hole. Simply attach the respective accessory by sliding it into the outlet hole and remove it by pulling it out.
 - 1) Crevice nozzle
 - 2) Brush nozzle

It is suitable for vacuuming dust and dirt from furniture, fragile items, from curtains, drapes, etc.

CHARGING THE BATTERY

- The battery is partially charged from the factory and it needs to be charge to full capacity. It is important that the vacuum cleaner is turned off when changing it.
- There are two methods for charging the vacuum cleaner:

1. Charging via the charging station

Insert the vacuum cleaner into the charging station so that the contacts at the back part of the vacuum cleaner are aligned with the contacts on the base – see figure **B1**. Connect the connector of the power adapter into the socket in the charging station and connect the power adapter plug into a power socket.

2. Direct charging of the vacuum cleaner

Connect the power adapter connector into the socket in the top part of the handle of the vacuum cleaner – see figure **B2**. Plug the power adapter plug into a power socket.

- The charging indicator flashes during the charging process. When it stops flashing, the battery is fully charged.

USING THE HAND VACUUM CLEANER

1. Assemble the cordless vacuum cleaner according to the instructions in section **"ASSEMBLING AND DISASSEMBLING THE CORDLESS VACUUM CLEANER"**.
2. Press the On/Off button and the vacuum cleaner will start.
3. Press the MAX button repeatedly to set the desired power of the: normal – maximum.
4. When you have finished vacuuming, turn the vacuum cleaner off by pressing the On/Off button.

CLEANING AND MAINTENANCE

- Always make sure that the vacuum cleaner is turned off before cleaning it.

CLEANING THE OUTER SURFACE

- To clean the outer parts of the vacuum cleaner, use a soft cloth dipped in lukewarm water. Do not use aggressive cleaning agents, paint thinners or solvents. Using these solutions could damage the surface of the appliance.

CLEANING THE VACUUM CLEANER

Emptying the dust container

 
It is recommended to always empty out the dust container after every use. If, however, the level of dust and dirt reaches the MAX mark, it is necessary to immediately dump out the dust container.

1. Remove the attached accessory from the vacuum cleaner.
2. Take the vacuum cleaner over to a garbage bin so that the bottom of the dust container points downwards.
3. Press the dust container release button and the bottom will open. The contents of the container will thereby be dumped directly into the garbage bin.
4. Use your hand to close the bottom of the container. The bottom of the dust container is securely locked in place when you hear a click.


Note:

For hygiene reasons, we recommend that you dump out the container away from living areas.



Cleaning the dust container

- Regularly clean the dust container to prevent unpleasant odours from being created.
- Remove the attached accessories from the vacuum cleaner and dump out the dust container according to the above mentioned instructions.
 - Use one hand to hold the vacuum cleaner and the other to hold the dust container. Turn the dust container clockwise until the arrow on the motor unit points to the  symbol on the dust container, which will release it and enable it to be removed – see figure **C1**.
 - Use one hand to hold the vacuum cleaner and the other to hold the fixed filter. Turn the fixed filter clockwise to release and remove it – see figure **C2**.
 - Remove the HEPA filter from the fixed filter – see figure **C3**.
 - Tap out the HEPA filter and remove the dirt and dust from it using a fine brush or soft wiping cloth. In the event of heavy soiling, you can vacuum it out using a different vacuum cleaner with an attached brush nozzle. Do not wash the HEPA filter in water. This could damage it. In the event that the HEPA filter is already heavily soiled or deformed, replace it with a new one. We recommend replacing the HEPA filter based on the frequency of use, at least once every six months.
 - Remove dust and dirt from the fixed filter. If necessary, you can rinse it under clean running water. Then wipe them dry using a clean wiping cloth.
 - Wipe the inside walls of the dust container using a soft lightly dampened sponge. Wipe dry using a clean wiping cloth.



Warning:

Never install filters if they are wet or damp, or if the dust container is wet. Make sure that they are completely dry before installing them.

- Insert the dry and clean HEPA filter into the fixed filter and put it on the motor unit of the vacuum cleaner and turn it anticlockwise to secure it in place.
- Now put the dust container on so that the arrow on the motor unit is aligned with the  symbol on the dust container and turn the dust container anticlockwise until the arrow on the motor unit is aligned with the  symbol on the dust container.



Warning:

Under no circumstances submerge or wash the nozzle in water or any other liquid.

Storage

- When not using the vacuum cleaner for a long time, clean it according to the aforementioned instructions and take the battery out of the motor unit.
- Before storing it, check that the vacuum cleaner and all its accessories are thoroughly clean and dry.
- Store the appliance in a dry, clean and well-ventilated location not exposed to extreme temperatures and out of children's reach.
- In the event that the storage time exceeds 6 months, we recommend recharging the battery every 6 months.

TROUBLESHOOTING

- Before you decide to contact an authorised service centre, please read through the following table:

Problem	Possible cause	Solution
Suction power is weak	The dust container is full or the filters are dirty.	Empty out the dust container and clean the filters.
	The suction hole is clogged.	Clean out the suction hole.
The vacuum cleaner turned off suddenly.	The battery is almost flat.	Allow the vacuum cleaner to fully recharge.




Attention:


If you problem is not specified in the above table or the specified problem continues to persist, stop using the vacuum cleaner, turn it off and contact an authorised service centre.

TECHNICAL SPECIFICATIONS

Power adapter

Input100–240 V~, 50/60 Hz, 0.3 A
Output..... 9 V , 0.9 A

Vacuum cleaner

Power input80 W
Battery..... Li-Ion /7.4 V  / 2 200 mAh
Time required for charging to full capacity approximately 3.5 hours
Noise level..... ≤ 80 dB(A)
Dust container capacity 0.16 l

The declared noise emission level of the appliance is ≤ 80 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

Name of manufacturer	FAST ČR, a.s. U Sanitsau 1621 CZ -251 01 Říčany
Model identification number	Adapter for SVC 308
Input voltage	100–240 V~
Input frequency	50/60 Hz
Output voltage	9 V
Output current	0.9 A
Output power	8.1 W
Average efficiency in the active mode	82.37 %
Efficiency at low load (10 %)	%
Power consumption without load	0.078 W

Changes to text and technical parameters reserved.

Double insulation symbol



Safety class for electrical shock protection:

Class II – Electrical shock protection is provided by double or heavy-duty insulation.



House symbol (domestic use)

The product is intended for household use only. The product is not intended for outdoor use.



Read user's manual symbol

Thoroughly read the all the instructions before using the product.



This symbol indicates that the appliance must not be used if the power plug is damaged.

.....

DISPOSAL OF BATTERIES



Prior to disposing of the product or handing it over at a specialised collection facility, it is necessary to ensure that the battery is removed. Before removing the battery, it is necessary to start the vacuum cleaner and wait until it is completely flat. The battery contains environmentally damaging substances and therefore does not belong in standard household waste. Their correct disposal will be performed by the respective collection facility.

.....

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand these appliances over to determined collection points. Alternatively, in some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product. Correct disposal of this product helps save

valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electrical or electronic equipment, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

