

SENCOR®

SFH 8990BK



CERAMIC TOWER HEATER

Translation of the original manual

This product is suitable only for well insulated spaces or occasional use!



SENCOR®

SFH 8990BK



A

1

 
 
2

3

 
4

5

 
6

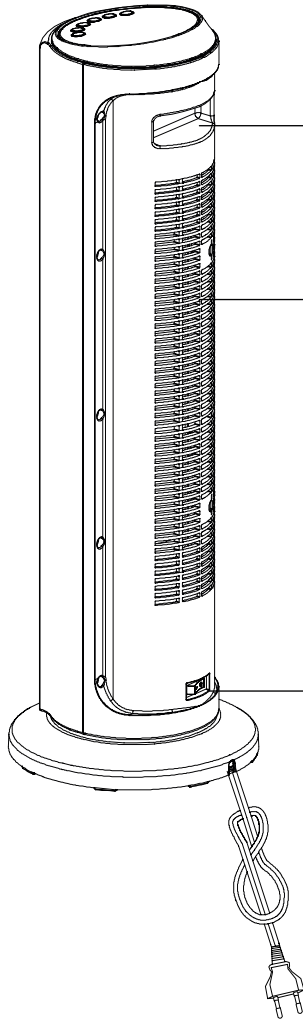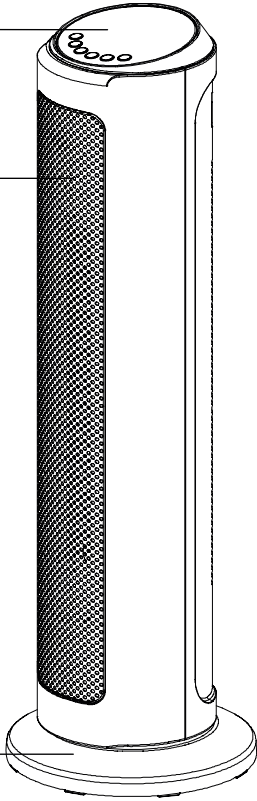

B

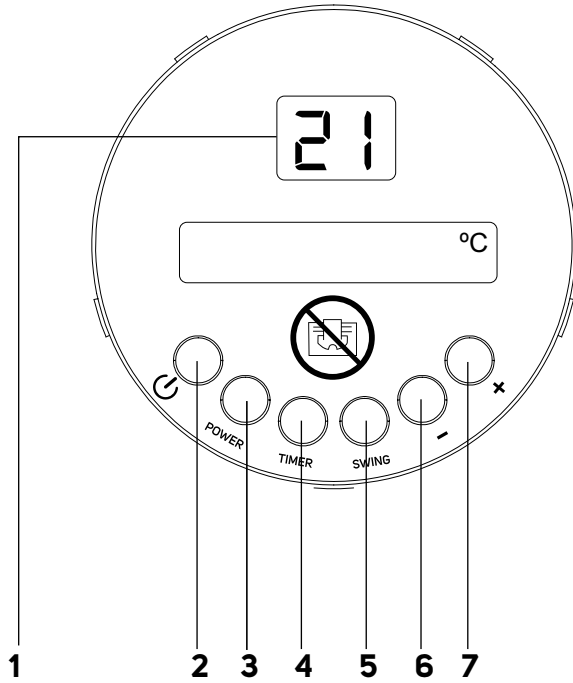

C

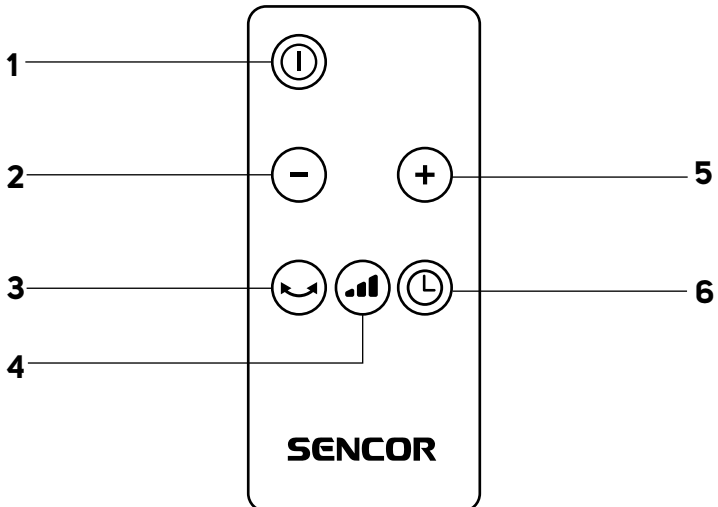

EN Ceramic tower heater

Important safety instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.
- Children younger than 3 years of age should be prevented from accessing the appliance unless they are under constant supervision.
- Children from 3 to 8 years of age must only turn this appliance on/off under the condition that it is located or installed in its intended normal operating position and that they are under supervision or were informed about the safe operation of the appliance and understand the potential hazards. Children from 3 to 8 years of age must

not insert the plug into the power socket, regulate or clean the appliance or carry out maintenance performed by the user.



ATTENTION:

Certain parts of this product may become very hot and cause burns. Special attention should be paid when children and handicapped people are present.



WARNING:

Do not cover. To prevent overheating, do not cover the heater.

- The heater must not be located directly underneath a power socket.
- Do not use this heater with a program, timer switch, a remote control system or any other device which switches the heater on automatically, because there is a danger of a fire if the heater is covered or incorrectly located.
- Do not use the appliance in the near vicinity of a bath, shower or swimming pool.
- Do not use the appliance if it has fallen down.
- Do not use the appliance if it shows visible signs of damage.
- Use the appliance on a horizontal and stable surface. Do not use mounted on a wall.

**WARNING:**

Do not use the appliance in small rooms if they are inhabited by persons that are incapable of leaving this room on their own unless they are under permanent supervision.

**WARNING:**

To limit the risk of a fire, keep textiles, curtains and any other flammable material at a distance of at least 1 m from the air outlet.


- Before connecting the appliance to a power socket, check that the rated voltage on its rating label matches the electrical voltage in the power socket.
- Do not connect the appliance to an extension cord or two way adapter.
- The appliance is designed for use in households, offices and similar types of areas.
- Do not use the appliance in very dusty or humid rooms such as laundries or bathrooms, in areas where chemicals are stored, in industrial surroundings or outdoors!
- This appliance is not intended to be mounted on a wall.
- Do not place the appliance on unstable surfaces such as carpets with very long and thick fibres.
- Free space of at least 100 cm in front of the appliance and 50 cm behind the appliance must be maintained while it is running to ensure sufficient air circulation.
- Do not subject people or animals to the direct flow of hot or cold air for an extended period of time. This could negatively affect their health.
- Do not insert any objects through the front air outflow grill or the back air inflow grill. This could lead to an electrical short circuit, fire or damage to the appliance.
- To avoid potential injury by electrical shock do not submerge any part of this appliance in water or any other liquid and do not touch the appliance with damp or wet hands.
- Always turn off the appliance and disconnect it from the power socket when not using it or before cleaning it.
- Do not leave the appliance in operation while sleeping.
- When cleaning the appliance, do not submerge it in water or wipe it with a wet cloth.
- To avoid damaging the power cord, do not excessively bend or twist it.
- Ensure that the power cord does not come into contact with hot surfaces or sharp objects.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the power socket.
- Disconnect the cord from the power socket by gently pulling the plug of the power cord.
- Do not use the appliance if it is not working correctly, if it has been damaged or has been submerged in water. To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments of the appliance performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.
- The manufacturer is not responsible for any damages caused by the incorrect use of this appliance.

- Thank you for purchasing a SENCOR brand product and we hope that you will be happy with it.
- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

 
**Note:**

A slight odour may be felt when the heater is first turned on or after an extended period where it has not been used. This will go away after a short while.

Turning off the heater

- When not using the heater, press the  button and the heater will turn off. Set the main switch (A6), that is located in the back at the bottom to the I (On) position. The heater will switch to the stand-by mode. In the stand-by mode, the ambient temperature will be shown on the display.


**Note:**

When the heater is turned off using the  button, the fan will continue to run for approximately 30 seconds in order to cool down the internal components. Then it will turn off. This is normal. Before disconnecting the power cord from the power socket, wait until the fan stops running.





DESCRIPTION OF THE APPLIANCE

| | |
|--|---|
| A1 Control panel | A4 Handle for easy carrying |
| A2 Protective front air outlet grille | A5 Rear protective grille of the air inlet |
| A3 Base stand | A6 Power switch |

DESCRIPTION OF THE CONTROL PANEL

| | |
|---|--|
| B1 Display | B5 SWING button for oscillating the heater |
| B2  On/Off button | B6 Button - |
| B3 POWER button for setting the power level | B7 Button + |
| B4 TIMER button for setting the timer | |

 
DESCRIPTION OF THE REMOTE CONTROL

| | |
|---|--|
| C1  On/Off button | C5 Button + |
| C2 Button - | C6  Timer setting button |
| C3  Button for oscillating the heater | |
| C4  Button for set the power level | |

 

BEFORE USING

- Before first use, take the appliance and its accessories out of the packaging material and remove all promotional labels and stickers. Check that neither the appliance nor any of its parts is damaged.



CONTROLLING THE HEATER**Locating the heater**

- Locate the heater on an even and rigid surface at a sufficient distance from the power socket.
- Insert the power plug into a power socket.
- Set the main switch (A6), that is located in the back at the bottom to the I (On) position. The heater will switch to the stand-by mode. In the stand-by mode, the ambient temperature will be shown on the display.
- Press the  button to turn on the heater.


Fan mode

- When the heater is turned on using the  button, it will run in the fan mode. The  indicator will light up on the display. Air is not heated in this mode. The flowing current of air will, therefore, be cold and the appliance can be used to cool down the room.


Setting the power level

- The **POWER** button serves to set the power level. Press the **POWER** button once to set the low power level. The  indicator will light up on the display.
- Press the **POWER** button again to set the high power level. The  indicator will light up on the display.
- Press the **POWER** level button again to stop heating.


Setting the temperature

- The temperature is set using the +/- buttons. Press them repeatedly to set the temperature in the range from 10 to 35 °C. The set temperature will be shown on the display.
- When the ambient temperature reaches the set temperature, or is higher, the heater will stop heating. The  indicator will light up on the display.
- When the ambient temperature fall 2 °C below the set temperature, the heater will automatically start running at half power; when the ambient temperature falls by 4 °C below the set temperature, the heater will automatically start running at full power. The indicator of the set power level will be lit on the display.

Setting the timer

- To set the timer, use the **TIMER** button. Press it repeatedly to set the time after which the heater will turn off. The  indicator will light up on the display. The duration of the timer can be set from 1 to 12 hours. The set time will appear on the display.

Swing (oscillation) function

- To turn on the side to side oscillation of the heater, press the **SWING** button. The  indicator will light up on the display. Press the **SWING** button to turn off the oscillation.

REMOTE CONTROL**Inserting batteries into the remote control**

1. Pull the battery holder out of the bottom part of the remote control.
2. Insert a CR2025 (3 V) battery into the holder. Ensure correct polarity. Battery is not provided.
3. Reinsert the holder with the battery into the remote control.

- If you wish to use the remote control, point it at the heater. The maximum signal range is 5 m. If the remote control is positioned in such a way that obstacles prevent the transmission of the signal, then the signal may not be transmitted at all.



Note:

When not using the remote control for an extended period of time, remove the batteries from the remote control. Never put the batteries in a fire, short circuit them or damage them in any way. Dispose of them ecologically at the end of their lifetime. Never throw batteries out with communal waste.

The principle for controlling the heater using the remote control is the same as described in the chapter "Controlling the heater".

AUTOMATIC SAFETY SHUT-OFF FUNCTION

- The ceramic heater is equipped with a safety mechanism that automatically turns it off when it is tipped over. This safety mechanism serves a safety function and prevents dangerous situations from arising.

OVERHEATING PROTECTION

- In the event that the temperature of the heater is too high due to an inappropriate environment in which it is used or as a result of incorrect use, the power supply to the heater will automatically be shut off and it will stop working. It is recommended to disconnect the power plug from of the power socket and allow it to cool down completely. Then you will be able to use the heater again.

THERMAL PROTECTION

- The ceramic heater is equipped with double thermal protection – a resettable and non-resettable thermal fuse. The resettable thermal fuse will turn the heater off when there is a danger of it overheating or malfunctioning. When the temperature of the heater falls, you will be able to use the heater again.
- The non-resettable thermal fuse is installed for the case, where the resettable thermal fuse fails. In the event of overheating, malfunction or if the heater stops working for any other reason, the non-resettable thermal fuse will completely turn off the heater and it will not be possible to turn it on. In such a case, contact an authorised service centre.
- The most frequent cause of overheating is the accumulation of dust or dirty material on the rear grille and on the the front grille. Regularly remove any dirty material using a vacuum cleaner. Always turn off the heater, disconnect the power plug from the power socket and allow the heater to cool down completely before cleaning it.
- The heater is not equipped with a precision temperature control sensor and, therefore, it cannot be used as an isolation device for storage or keeping animals or flowers.

MAINTENANCE AND CLEANING

- Ensure that the appliance is turned off and that it has cooled down before cleaning it.
- Wipe the appliance using a soft dry cloth. Regularly remove any dirty material from the front and rear grille. A vacuum cleaner can also be used for removing the dirty material. Nevertheless, always check that the heater is turned off, the power plug is disconnected for the power socket and that the heater has cooled down completely.
- Do not use chemicals or abrasive cleaning products for cleaning. Otherwise the surface of the appliance may be damaged.



Warning:

To prevent the risk of injury by electrical shock, do not submerge the appliance, power cord or power plug in water or any another liquid.

Long term storage

- When not using the appliance, store it in a dry, clean place out of children's reach. Allow the appliance to cool down before storing it.
- Remove the battery from the remote control.

TECHNICAL SPECIFICATIONS

| | |
|-------------------------------|-------------------|
| Rated voltage..... | 220–240 V ~ |
| Rated frequency..... | 50 Hz |
| Rated power input..... | 2,200 W |
| Noise level..... | max. 50 dB (A) |
| Power settings..... | 1 300 W/2 200 W |
| Temperature settings..... | 10 °C–35 °C |
| Dimensions of the heater..... | 22 × 22 × 69.3 cm |
| Weight of the heaters..... | 3 kg |

Declared noise emission level of this appliance is max. 50 dB(A), which represents a level A of sound power with respect to a reference sound power of 1 pW.



Safety class for electrical shock protection: Class II – Electrical shock protection is provided by double or heavy-duty insulation.

We reserve the right to change text and technical specifications.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand these appliances over to determined collection points. Alternatively, in some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product. Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electrical or electronic equipment, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

