



## **STICK BLENDER**

# **PHHB 6615**

User Manual

Dear Customer,  
Thank you for buying a PHILCO brand product. To ensure that this new appliance is well-used, please read all the instructions in this user manual.

# TABLE OF CONTENTS

PART 1: IMPORTANT SAFETY MEASURES.....	3
PART 2: DESCRIPTION .....	6
PART 3: BEFORE FIRST USE.....	7
PART 4: PURPOSE OF USE.....	7
PART 5: ASSEMBLING AND DISASSEMBLING .....	8
PART 6: OPERATING THE APPLIANCE .....	10
PART 7: QUICK GUIDE TO PROCESSING INGREDIENTS.....	11
PART 8: CLEANING AND MAINTENANCE .....	12
PART 9: TECHNICAL PARAMETERS.....	13

Important information for your safety is specially marked. Follow these instructions to avoid accidents and damage to the appliance:

**WARNING:**

It warns you of the dangers to your health and points out possible risks of injury.

**CAUTION:**

This refers to possible danger to the appliance or other objects.

**NOTE:**

This highlights tips and information.

## PART 1: IMPORTANT SAFETY MEASURES

- This appliance is not to be used by children. Keep this appliance and its power cord out of children.
- Appliances may be used by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance by the user must not be carried out by children.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cord damaged.
- Warning: Incorrect use may lead to injuries.
- Pay attention when handling the chopping blades, especially when removing the blades from the container, emptying the container and during cleaning.

- When cleaning food contact surfaces, follow the instructions in this manual. Use only clean water with a little neutral dishwashing detergent.
  - Always disconnect the appliance from the power socket if you are leaving it unattended and before assembly, disassembly or cleaning.
  - Before replacing the accessories or accessible movable parts, please turn the appliance off and disconnect it from the power supply.
- Before connecting this appliance to a power socket, make sure the rated voltage stated on the product's rating label corresponds to the voltage in your power socket.
  - The appliance is designed for home use and is used for blending, chopping, grating and whisking food. Do not use it to process food that are too hard, such as ice cubes, nutmeg, etc.
  - Do not use the appliance in an industrial environment or outdoors. Do not use it for any other purposes than those intended. Do not place the appliance on or near an electric or gas cooker, on the edge of a table or on an unstable surface. • Only place the appliance on an even, dry and stable surface.
  - Only use the appliance with the original supplied accessories.
  - Make sure that the appliance is correctly assembled before putting it into operation.
  - Do not touch rotating parts that are in motion during operation. Otherwise, injury may occur.
  - Take extra care when handling hot liquids and food. Hot steam or splashing hot liquids and food may cause scalding. For added safety, allow hot liquids and food to cool down to at least 45 °C before blending.
  - To push ingredients through the filling tube, always use the supplied pusher. Never use your hands or other items.
  - The continuous operating time of the appliance is 15 seconds. Allow it to cool for at least 3 to 5 minutes before turning it on again. If you are using the appliance to blend sticky or harder food, stop operation after 10 seconds.
  - Do not turn on the appliance when it is empty. Incorrect use of the appliance may negatively affect its lifetime.

- Always turn off the appliance and disconnect it from the power socket if you will not be using it or if you will be leaving it without supervision, before assembly, disassembly, cleaning or moving it.
- Before disassembling the appliance into individual parts, make sure that the motor unit is switched off, disconnected from the mains socket and that the rotating parts have stopped.
- Take extra care when handling the grater, stick blender blade unit or chopper, especially when removing the grater or blade unit, emptying the container and cleaning to avoid injury from the blade.
- Do not submerge the motor unit and power cord in water or any other liquids, and do not wash these parts under running water.
- Ensure that the power plug contacts do not come into contact with moisture. Do not place heavy items on the power cord. Make sure the power cord does not hang over the edge of a table or that it does not touch a hot surface.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the socket. Disconnect the power cord from the power socket by pulling the plug. Do not use the appliance if it is not working properly or shows signs of damage.
- To prevent dangerous situations, do not repair or modify the appliance yourself.

Have all repairs or adjustments performed at an authorised service centre.

## **DESIGNED FOR HOUSEHOLD USE.**

## PART 2: DESCRIPTION



- |   |  |
|---|--|
| 1. Speed setting button                   | 8. Serrated blade unit                                   |
| 2. Power on/off switch                    | 9. Mixing and whisking container<br>(volume max. 600 ml) |
| 3. Motor Unit                             | 10. Whisk  |
| 4. Removable stick blender attachment     | 11. Adapter  |
| 5. Lid of the chopper container           | 12. Milk frothing attachment                             |
| 6. Smooth blade unit                      |  |
| 7. Chopper container (volume max. 500 ml) |  |

## PART 3: BEFORE FIRST USE

- Before first use, remove the appliance and its accessories from the packaging and remove all promotional labels and tags. Check that neither the appliance nor any of its components is damaged.
- Thoroughly wash all removable food contact accessories with warm water and a little kitchen detergent. Then rinse them with clean water and dry thoroughly with a fine wiping cloth.
- Wipe the motor unit, the chopper lid and the adapter with a slightly damp cloth and wipe dry. Make sure that no water leaks inside these components. When cleaning the stick blender attachment, do not immerse the upper end, which attaches to the motor unit, in water.

### **WARNING:**

**Take extra care when handling the blade unit of the stick blender and chopper to avoid cutting yourself on the blade.**

## PART 4: PURPOSE OF USE

### **STICK BLENDER**

The stick blender is suitable for mixing soft ingredients and liquids. It is mainly used for the preparation of baby food, various types of cocktails, sauces, spreads, etc.

### **CHOPPER**

The chopper is suitable for chopping foods such as meat, semi-hard and hard cheese, raw fruit and vegetables, nuts, herbs, etc. It is equipped with two chopping blades. The smooth chopping blade is suitable for processing herbs, fruit or vegetables; the serrated chopping blade is suitable for chopping nuts, ice cubes, etc.

### **HAND MIXER**

It is suitable for preparing light batters or for whipping whipped cream, egg whites and creams. Do not use for whipping thick doughs.

### **MILK FROTHING ATTACHMENT**

It is suitable for whipping hot or cold milk and milk substitutes for further use, e.g. for making cappuccino or hot chocolate. Do not use it to whip creams, etc.

## PART 5: ASSEMBLING AND DISASSEMBLING

Before you start assembling or disassembling the appliance, make sure that the power unit is turned off, disconnected from the power socket and that the rotating parts are not in motion. Parts that attach to the motor unit must be dry and clean!

### STICK BLENDER

1. Attach the stick blender attachment to the motor unit so that the arrow on the attachment is aligned with the open lock symbol on the blade unit. Turn the attachment to the left until the arrow on the attachment is aligned with the closed lock symbol. Correct locking is indicated by a click.
2. Mix the food in the supplied container or other suitable container, which is intended for contact with food.
3. When removing, turn the attachment to the right until the arrow on the attachment is aligned with the open lock symbol. Disconnect the stick blender attachment from the motor unit.
4. When using the stick blender to blend food in the pot, always remove the pot from the hob first.
5. The food you put in the supplied container should not be boiling or too hot to avoid damaging the container. It is recommended to allow the food to cool down to about 50 to 60°C before using the stick blender.



### CHOPPER

1. Install the blade unit on the centre pin on the bottom of the container.
2. Fit the lid of the chopper container so that the projections on the sides of the container fit into the cut-outs in the lid and are aligned with the open lock symbol on the lid. Turn the lid to the left until the projections are aligned with the closed lock symbol and you feel resistance.
3. Place the motor unit in the hole in the lid so that the arrow on the lid is aligned with the open lock symbol on the blade unit. Turn the attachment to the left until the arrow on the lid is aligned with the closed lock symbol. Correct locking is indicated by a click.
4. When disassembling, turn the motor unit to the right until the arrow on the lid is aligned with the open lock symbol. Pull the motor unit upwards. Proceed in the opposite way to assembling the chopper.



### WARNING:

**When handling the blade unit, take extra care not to cut yourself on the blade.**



### HAND MIXER

1. Insert the end of the whisk into the hole in the adapter until you hear a click.
2. Attach the whisk adapter to the motor unit so that the arrow on the adapter is aligned with the open lock symbol on the blade unit. Turn the adapter to the left until the arrow on the adapter is aligned with the closed lock symbol. Correct locking is indicated by a click.
3. Whisk food in the supplied container or other suitable food contact container.
4. When removing, turn the adapter to the right until the arrow on the adapter is aligned with the open lock symbol. Disconnect the adapter from the motor unit. Next, proceed in the opposite way to assembling the hand mixer.



### MILK FROTHING ATTACHMENT

1. Insert the end of the milk frothing attachment into the hole in the adapter.
2. Attach the adapter with the milk frothing attachment to the motor unit so that the arrow on the adapter is aligned with the open lock symbol on the blade unit. Turn the adapter to the left until the arrow on the adapter is aligned with the closed lock symbol. Correct locking is indicated by a click.
3. Do not use the milk frothing attachment for more than 1 minute. Then let it cool down for 1 minute.
4. When removing, turn the adapter to the right until the arrow on the adapter is aligned with the open lock symbol. Disconnect the adapter from the motor unit. Pull the milk frothing attachment out of the adapter.

## PART 6: OPERATING THE APPLIANCE

Select the type of accessories you want to use and assemble the appliance according to the instructions in the chapter “Assembling and disassembling”.

Connect the power cord plug to a power socket.

Press the switch and use the speed setting buttons to set the desired speed. As long as the switch is pressed, the appliance will operate. When the switch is released, the appliance switches off.

Disconnect the power cord from the power socket when you have finished using it. Make sure that the rotating parts have stopped rotating and disassemble the appliance into its individual parts. Then clean all used parts according to the instructions in the chapter Cleaning and Maintenance.

### **WARNING:**

**The maximum continuous operation time of the appliance is 15 seconds. Then let it cool down for 3 to 5 minutes. If you are using the appliance to blend sticky or harder food, stop operation after 10 seconds.**

### **TIPS AND ADVICE ON USING THE APPLIANCE**

**Stick blender:** Keep the blade unit submerged while the appliance is in use to avoid splashing food. You can also prevent food splashing by not overfilling the container in which you process it. We recommend processing food in short bursts. Move the blade unit slowly up and down and in circles.

**Chopper:** Cut the food into pieces of the same size and distribute the food evenly in the container. Place the blade unit first and then the food that you wish to process. Do not fill the chopper container above the maximum mark. We recommend processing food in short bursts.

**Hand mixer:** Immerse the whisks in the container and then turn on the appliance. Keep the whisks submerged while the appliance is running to avoid splashing food. You can also prevent food splashing by not overfilling the container in which you process it.

**Milk frothing attachment:** Immerse the frothing attachment in milk and turn on the appliance. Move the attachment in the milk from the surface to the bottom to aerate the milk and create milk foam. Turn off the appliance before removing the attachment from the milk.

### **WARNING:**

**When assembling the chopper, place the food in the container only after placing the blade unit on the centre pin at the bottom of the container. Do not fill the container above the maximum mark.**

## PART 7: QUICK GUIDE TO PROCESSING INGREDIENTS

Attachment	Ingredients	Number	Speed setting	Processing time
<b>Stick Blender</b>	Fruit and vegetables (cooked)	240 g	Medium to maximum	Max. 15 s
	Spreads	240 g	Medium to maximum	Max. 15 s
	Baby food	200 g	Medium to maximum	Max. 15 s
	Soups	300 ml	Medium to maximum	Max. 15 s
	Shakes/Cocktails	300 ml	Medium to maximum	10 s
<b>Chopper</b>	Meat	250 g	Medium to maximum	Max. 15 s
	Fruit and vegetables (raw)	150 g	Medium to maximum	Max. 15 s
	Shelled nuts	100 g	Maximal	Max. 15 s
	Hard and semi-hard cheeses	100 g	Maximal	Max. 15 s
<b>Hand Mixer</b>	Egg whites	4 pcs	Minimum	Max. 15 s
	Cream for whisking	200 ml	Maximal	Max. 15 s
	Lightweight doughs	500 g	Medium to maximum	Max. 15 s
<b>Milk Frothing Attachment</b>	Milk	200 ml	Minimum to medium	Max. 15 s

### Note:

The above food processing times are indicative only. The actual processing time depends on the size of the food, its quantity and the desired final consistency. If the desired consistency is not achieved during the maximum period of operation of the appliance, after it has cooled down, you can continue processing the food again.

## PART 8: CLEANING AND MAINTENANCE

Before cleaning, unplug the power cord from the mains socket and allow the appliance to cool down. Do not use abrasive cleaning agents, solvents, or any substances to clean any parts of the appliance that could damage the surface of the appliance. None of the components of this appliance are dishwasher safe.

### **WARNING:**

**To prevent the risk of electric shock, do not submerge the appliance, plug or power cord in water or any other liquid.**

1. Disassemble the appliance into its individual parts. Wash used accessories thoroughly with warm water and a little kitchen detergent. Then rinse them with clean water and dry thoroughly with a fine wiping cloth.
2. Wipe the motor unit, the chopper lid and the adapter with a slightly damp cloth and wipe dry. Make sure that no water leaks inside these components. When cleaning the stick blender attachment, do not immerse the upper end, which attaches to the motor unit, in water.
3. The blade unit of the stick blender can also be cleaned by immersing it in warm water with added dishwashing detergent after use and briefly putting the appliance into operation. Then disconnect the appliance from the power socket, disassemble and rinse the blade unit with clean drinking water and dry thoroughly.

### **WARNING:**

**When cleaning the blade unit of the stick blender and the chopper blade units, take extra care not to cut yourself on the blades.**

### **STORAGE**

If you will not be using the appliance for an extended period of time, unplug the plug from the mains socket, allow the appliance to cool down and clean it according to the instructions in the chapter "Cleaning and Maintenance".

Before storing, ensure that the appliance and all accessories are thoroughly clean and dry.

Store the appliance in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

## PART 9: TECHNICAL PARAMETERS

Nominal voltage range	220–240 V~
Rated frequency	50–60 Hz
Rated power input	800W

Safety class for electric shock protection:

 Class II – Electric shock protection is provided by double or heavy-duty insulation.

We reserve the right to change the text and technical specifications.

### INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS


Take the packaging material to a designated municipal waste facility.

### DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste.

For proper disposal and recycling, take these products to designated collection points.

 Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

### For Business Entities in European Union States

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

### Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, please consult your local authorities or your dealer for information on the correct method of disposal.



This appliance complies with EU rules and regulations regarding electromagnetic and electrical safety.

The text, design and technical specifications may be changed without prior notice and we reserve the right to make these changes.

