

SENCOR®

SES 7300BK



FULLY AUTOMATIC ESPRESSO / CAPPUCCINO MACHINE



Translation of the original manual



SENCOR®

SES 7300BK

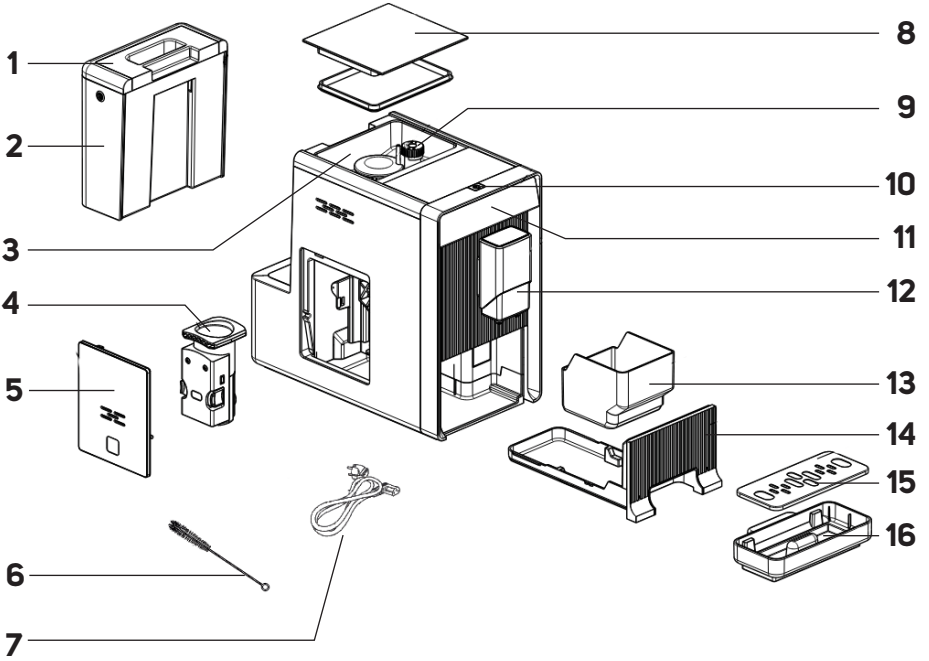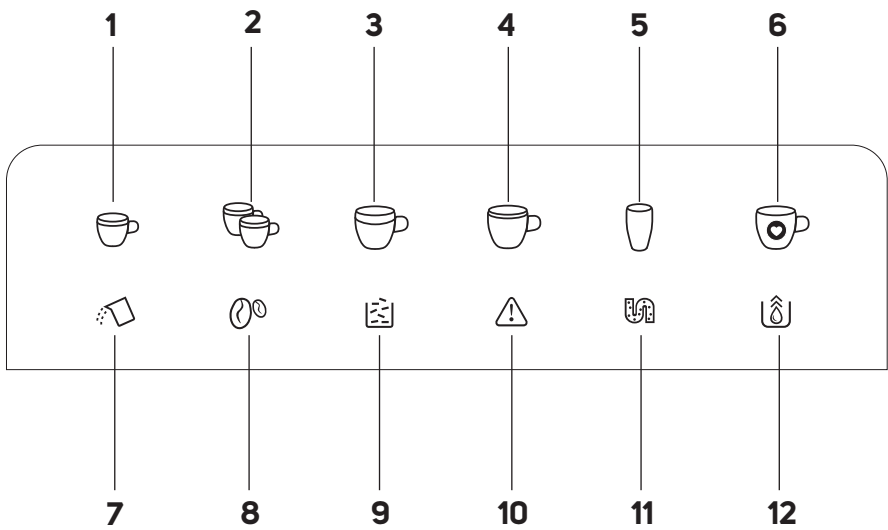

A**B**

EN Fully Automatic Espresso / Cappuccino Machine

Important Safety Instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance is not to be used by children. Keep this appliance and its power cord out of the reach of children.
- The appliance may be used by persons with reduced physical, sensory or mental abilities or lack of experience and knowledge, provided they are supervised or have been instructed in the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- Cleaning and maintenance by the user must not be carried out by children.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cord damaged.
- Always clean the parts of the appliance that come into contact with food with clean warm water and a little neutral dishwashing liquid, rinse them with clean water and wipe dry.

This appliance is intended for use in the home.



WARNING:

Incorrect use may lead to injury.

Always disconnect the appliance from the power supply when leaving it unattended and before assembly, disassembly or cleaning.

This appliance is intended for use in the home.

It is not intended for use in areas such as:

- kitchenettes in stores, offices and other workplaces;
- agricultural farms;
- hotel or motel rooms and other living areas;
- bed and breakfast establishments.



WARNING:

Avoid spilling on the plug.



WARNING:

The outer surface of the appliance heats up during use and may be hot for some time after use. Be very careful.

The appliance must not be placed in a cabinet when in use.



WARNING:

The filling hole must not be opened during use. Do not do submerge the power cord, plug or appliance in water or any other liquid.

Electrical Safety


- Before connecting the appliance to a power outlet, make sure that its nominal voltage indicated on the rating plate matches the electrical voltage of the socket.
- Connect the appliance only to a properly grounded socket. For safety reasons, we don't recommend using adaptor plugs or extension cords.
- Do not place the appliance on windowsills, sink drain trays or unstable surfaces. Always place the appliance on a stable, flat and dry surface.
- Do not place the appliance on an electric or gas stove or near an open flame.
- Never use the appliance in the immediate vicinity of a bath, shower or swimming pool.
- Use the appliance only for the purpose for which it has been designed.
- Only use the appliance with the original accessories supplied with it.
- During operation, a clear space of at least 15 cm must be left around and above the appliance to ensure sufficient air circulation.
- Only use the top surface of the appliance for warming cups. Do not use it to store items.
- Fill the water tank with clean, cold water. Do not pour hot water or other liquids into it or place any objects inside it.
- Before turning on the appliance, make sure that:
 - the drip tray with grid is installed in its place;
 - the water tank is filled with a sufficient amount of water and is properly installed in its position;

Safety in Use












 
- The water level must not exceed the maximum mark.
- Take extra care when operating the appliance to avoid scalding with hot water or steam.
- The hot water function may only be used continuously for a maximum of one emptying of the entire water tank.
- When using the appliance, check the water level in the water tank regularly. If the water level falls below the minimum mark, refill the water tank. Before adding water, first turn off the appliance and disconnect it from the power socket.
- Use the built-in coffee grinder only for grinding coffee beans. Do not use it for any other purposes.
- Ensure that no hair or other items enter the grinder area during the grinding process. The coffee bean hopper lid should always be properly closed unless you are refilling coffee beans or adjusting the grinding coarseness.
- The appliance is equipped with a built-in thermal fuse that shuts it off when the pump is idling to prevent damage. If such a situation occurs, unplug the power cord and allow the appliance to cool down for at least 30 minutes. Then you can use it again.
- Do not move the appliance with a cup of coffee placed on the drip tray grid or with cups placed on the surface designed to warm them up.
- Ensure that the power cord does not come into contact with a hot surface.
- Unplug the appliance from the power socket by pulling the plug, not the power cord. Otherwise, damage to the power cord or the socket may occur.
- Do not submerge the appliance, power cord or plug in water or any other liquid.
- Make sure that the power cord and plug does not come into contact with water or other fluid.
- To avoid the danger of injury by electrical shock, do not repair or modify the appliance yourself. Have all repairs or adjustments performed at an authorised service centre. By tampering with the appliance, you expose yourself to the risk of losing your legal rights regarding faulty performance or warranty for quality.

- Thank you for purchasing our SENCOR product; we hope you will be satisfied with it.
- Before using this appliance, please familiarise yourself with the user manual, even if you are already familiar with using similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference.
- For the duration of the legal rights regarding faulty performance or warranty for quality, we recommend keeping the original packaging, packaging materials, receipt, and proof of the seller's liability or warranty certificate. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.

DESCRIPTION OF THE COFFEE MACHINE

A1 Water tank lid	A10 Button  to switch the coffee machine on/off
A2 Water tank, capacity 1.5 l	A11 Control panel
A3 Bean hopper, capacity 150 g	A12 Coffee spout head (height is adjustable)
A4 Brewing unit	A13 Coffee grounds container
A5 Service door	A14 Inner tray
A6 Cleaning brush	A15 Drip tray grid
A7 Power cord	A16 Drip tray
A8 Bean hopper lid	
A9 Grinding coarseness regulator	

DESCRIPTION OF THE CONTROL PANEL

B1 Button  : start brewing espresso (1 cup)	container is full; warning light is flashing; coffee grounds container or inner tray is not inserted.
B2 Button  : start brewing espresso (2 cups)	
B3 Button  : start brewing lungo	B10 Warning indicator light  is on: the brewing unit not installed/improperly installed; flashes: service door open/improperly installed.
B4 Button  : start brewing Americano	B11 Indicator light  : warning indicator light on: descaling process must be started; flashing: descaling process in progress.
B5 Button  : hot water dispensing	B12 Warning light  : the internal circuit emptying function is in progress.
B6 Button  : start brewing favourite beverage	
B7 Indicator light  : warning for empty water tank	
B8 Indicator light  : warning for empty bean hopper	
B9 Indicator light  : warning light is on: coffee grounds	

BEFORE FIRST USE

- Before first use, remove the appliance and its accessories from the packaging and remove all promotional labels and tags. Check that neither the appliance nor any of its components is damaged.
- Install the appliance on an even, dry and clean surface.
- Remove the water tank and the brewing unit. Wash them with clean water and a small amount of neutral kitchen detergent. Then rinse them properly with clean water, dry them and put them back in place.
- Secure the drip tray properly to the appliance.
- Wipe the outer surface of the appliance with a slightly damp cloth and then wipe dry properly.
- Fully unwind the detachable power cord and connect it to the socket at the back of the appliance.

PREPARING THE COFFEE MACHINE BEFORE USE

Filling the Water Tank

1. Carefully open the lid of the tank. The lid serves as a handle.
2. Remove the water tank from the rear of the appliance.
3. Fill the water tank with clean water up to the maximum mark and insert it back into the appliance. Make sure that the water tank is properly installed in its place.



Note:

The water that you pour into the water tank should ideally be at room temperature (approximately 25°C). Water that is too cold can adversely affect the final taste of the coffee drink.



Warning:

The maximum capacity of the water tank is 1.5 l of water. Do not overfill it. Never fill the water tank with warm or hot water, sparkling water or other liquids such as milk. This could damage the appliance. Never fill the water tank by pouring water into it while it is inserted inside the appliance. There is a risk of spilling the appliance or overfilling the water tank.



Note:

Do not leave water in the water tank for more than one day. For brewing quality fresh coffee, it is necessary to always use fresh water. Otherwise, the taste of the resulting beverage may be adversely affected.

Filling the Bean Hopper

1. Remove the bean hopper lid.
2. Pour roasted coffee beans into the bean hopper and close the lid. Do not leave the lid of the bean hopper open, otherwise the coffee beans will lose their aroma more quickly.



Warning:

The maximum capacity of the hopper is 150 g of coffee beans. Do not overfill it. Never fill the bean hopper with ground or instant coffee, caramelised or otherwise specially treated coffee beans, cocoa beans or other items that may damage the appliance.

Grinding Coarseness Regulator



Use the grinding coarseness regulator to adjust the appropriate coarseness of the ground coffee. Only adjust the grinding coarseness when the grinder is running. The new coarseness will be reflected on the second or third coffee preparation since the grinding coarseness was changed.

1. You can adjust the coarseness of the grinding by using the grinding coarseness regulator, which is located inside the bean hopper.
2. Turn the regulator towards the "+" symbol to set a coarser grind, turn towards the "-" symbol to set a finer grind. Always adjust by one level. Try it out and then readjust as needed.
3. Only adjust the grinding coarseness when the grinder is running. Otherwise, damage to the appliance could occur.
4. If the brewed coffee flows out very slowly, it means that the beans are ground too finely and a coarser grind should be set. On the other hand, if the brewed coffee flows out too fast, it means that the grains are ground too coarsely and a finer grind should be set.


Brewing Head Height Adjustment

The brewing head can be moved up/down according to the height of the cup in which you will be preparing the coffee. First, place the cup under the brewing head and then adjust the height.

Brewing Unit

- Gently press on the bottom part of the service door where the indentation is located. The service door will swing open. Remove it and check if the brewing unit is properly installed in its place. The arrow on the brewing unit should be aligned with the arrow above the brewing unit compartment. After checking, reattach the service door.
- If you remove and reinsert the brewing unit and hear a click, it indicates that the brewing unit is properly installed.
- If the warning indicator light  is continuously on, the brewing unit is not installed correctly.
- If the warning indicator light  blinks, the service door is not closed properly.

Coffee Grounds Container and Inner Tray

- Gently press on the bottom part of the service door where the indentation is located. The service door will swing open. Remove it and check if the coffee grounds container and the inner tray are properly installed in their place.
- If the warning indicator light  flashes, the inner tray or coffee grounds container is not installed correctly.

Drip Tray

- Attach the grid to the drip tray.
- Place the folded drip tray against the lower front wall of the coffee machine and press it slightly into the machine.
- The tray must be securely in place to prevent the cup with hot beverage from tipping over during preparation.
- Water from the outlet flows into the drip tray during each rinsing, self-cleaning, and also coffee brewing, which may cause spills. Therefore, clean and empty the drip tray daily.

USING THE COFFEE MACHINE



- Place the coffee machine on a flat, dry and clean surface at a sufficient distance from the power socket. Ensure there is enough space around it for manipulation, at least 15 cm around the entire coffee machine.
- Make sure that the water tank is refilled with fresh water and that the bean hopper has an adequate amount of coffee beans and that the appliance is properly assembled.
- Plug the power cord connector into the socket in the coffee machine and connect the power cord plug to the power socket.



Note:


When refilling water and coffee beans, always follow the instructions provided in chapter "Filling the Water Tank" and "Filling the Bean Hopper".

Turning on the Coffee Machine, Rinsing and Preheating


- Press the  button to turn the appliance on. An audible alert sounds and the  button flashes.
- Place a cup or bowl under the coffee outlet.
- The coffee machine starts heating up, and the preparation process begins, during which water is pumped into the internal circuit, the grinder is checked, and the coffee spout is rinsed, with a small amount of water flowing into the cup. During this time, the grinder and pump will briefly operate. This is a normal occurrence.
- Once the control buttons light up, the coffee machine is ready to use.






Note:

You can cancel the rinsing of the coffee machine by pressing the button , while it flashes on the control panel.

Turning off the Coffee Machine

- When you have finished using the coffee machine, press the button  to turn it off. Unplug the power cord from the socket.

Coffee Preparation

1. Place a cup, mug or glass under the brewing head. Adjust the height of the brewing head by moving it up or down depending on the size of your cup, mug or glass. If the cup or glass is too tall, you may remove the drip tray. After removing the cup or glass, return the drip tray to its place.
 2. Press the , , or  button. The selected button will light up, the other buttons will turn off. The backlight under the coffee spout will also turn on.
 3. The coffee machine will automatically start the grinding, dosing, tamping and dispensing process.
 4. Once the coffee dispensing process is complete, an audible alert sounds and the control buttons on the control panel light up. The coffee machine is ready for the coffee preparation.
- Preparing 2 cups of espresso involves two consecutive preparations of 1 cup of espresso. Do not remove the cup from under the brewing head until the preparation of the second cup is complete.
 - Preparing Americano coffee consists of preparing 1 cup of espresso and adding hot water. Do not remove the cup from under the brewing head until the hot water dispensing is finished.
 - You can cancel the preparation of coffee by pressing the corresponding button.



Note:

During the coffee preparation process, you may hear the sound of the grinder and pump, and after preparation, the sound of used ground coffee being expelled into the coffee grounds container. These are normal sounds.





Note:

At the beginning of the coffee dispensing process, coffee may drip slowly (2 to 3 seconds after brewing), and then the full coffee dispensing will start. After the dispensing is complete, the coffee may drip from the outlet for about 6 to 8 seconds. This is a normal occurrence.

Tip

We recommend that you briefly dispense hot water before preparing your coffee to clean and heat the coffee spout.

Dispensing Hot Water

1. Place a cup, mug or glass under the brewing head. Adjust the height of the brewing head by moving it up or down depending on the size of your cup, mug or glass. If the cup or glass is too tall, you may remove the drip tray. After removing the cup or glass, return the drip tray to its place.
2. Press the  button and the coffee machine will start dispensing hot water. The  button will light up. The backlight under the coffee spout will also turn on.
3. Hot water dispensing will stop automatically, you will hear a sound alert, and control buttons will light up on the control panel. The coffee machine is ready for the coffee preparation.

You can cancel hot water dispensing by pressing the  button.



Warning:

The water is very hot and improper handling can cause serious burns. Be careful when handling hot contents.

Favourite Drink

With the favourite drink function, you can set and store the desired volume for espresso, lungo or americano in the machine's memory.

Follow these steps to set up:

1. Place a cup, mug or glass under the brewing head. Adjust the height of the brewing head by moving it up or down depending on the size

of your cup, mug or glass. If the cup or glass is too tall, you may remove the drip tray. After removing the cup or glass, return the drip tray to its place.

- Hold down the ☰ button for about 2 seconds. ☰, ☰ and ☰ buttons will flash. Press the button of the drink you want to adjust.
- The coffee preparation starts.
- Once the coffee is poured into the cup, press and hold the button of the selected beverage until the desired volume of coffee is poured into the cup.
- Release the button and an audible warning will sound twice. This confirms that the settings are saved to the memory of the coffee machine.
- When brewing Americano coffee, hold the ☰ button down until the desired volume of coffee is poured into the cup. An audible warning will sound twice. Once the hot water starts to flow, press and hold the ☰ button until the desired volume of hot water flows into the cup. An audible warning will sound twice.

To use the favourite drink function, do the following:

- Place a cup, mug or glass under the brewing head. Adjust the height of the brewing head by moving it up or down depending on the size of your cup, mug or glass. If the cup or glass is too tall, you may remove the drip tray. After removing the cup or glass, return the drip tray to its place.
- Short press the ☰ button.
- The coffee preparation starts according to the saved setting.
- Once the coffee dispensing process is complete, an audible alert sounds and the control buttons on the control panel light up. The coffee machine is ready for the coffee preparation.

USER SETTINGS

Adjusting the Volume of Coffee / Hot Water dispensed

The coffee machine allows you to adjust the volume of dispensed coffee / hot water according to your preferences. The settings you make will be saved to the memory of the coffee machine.

- Place a cup, mug or glass under the brewing head.
- Press the beverage button (☰, ☰, ☰ or ☰) for the drink you want to prepare. The pressed button will light up.
- When the coffee machine starts dispensing coffee / hot water, press and hold the button of the selected beverage until the desired volume of coffee / hot water is poured into the cup.
- Release the button and the volume of dispensed coffee / hot water will be saved to the appliance memory.

Setting the Mode

The coffee machine can be set to energy-saving ECO mode, fast mode or default factory settings. In ECO mode, greater energy savings are achieved. In fast mode, the coffee is prepared faster than the initial factory default setting.

	Eco mode	Quick mode	Default settings
Indicator light	Off	On	On
Pre-brew*	Yes	No	Yes
Automatic shutdown time	10 minutes	30 minutes	20 minutes
Possibility to adjust the volume of coffee dispensed	Yes	Yes	Yes

* The pre-brew function means that the ground coffee is first brewed with a small amount of water. This will cause the coffee to swell and the subsequent full brewing will develop its full taste, extraction of aromatic substances and essential oils contained in it.

- When the coffee machine is turned on and ready to use, press and hold the power button for 5 seconds.
- A sound will sound twice and the buttons on the control panel will flash/light up according to the selected mode – see table below.

	Espresso button	Lungo button	Button Hot water
Quick mode	On	Flashing	Flashing
Default settings	Flashing	On	Flashing
Eco mode	Flashing	Flashing	On

- To set the ECO mode, press the ☰ button, to set the fast mode, press the ☰ button and to return the default setting, press the ☰ button. Once the selected mode has been set, an audible warning will sound twice and all control buttons will light up. If you are trying to select a mode that is already set, the appliance will not respond to the push of a button.
- If you do not want to change the mode, wait about 5 seconds until all the control buttons on the control panel light up.



Note:

If you need to check which mode the coffee machine is in, press and hold the **power on** button for 5 seconds. The buttons on the control panel will flash/light up according to the selected mode – see table above.

CLEANING AND MAINTENANCE

Before cleaning, switch off the coffee machine and unplug the power cord from the mains socket and allow the appliance to cool down.



Warning:

Do not use abrasive cleaning agents, solvents, or any substances to clean any parts of the appliance that could damage the surface of the appliance. None of the components of this appliance are dishwasher safe.



Warning:

To prevent the risk of electric shock, do not submerge the appliance, plug or power cord in water or any other liquid.

DAILY CLEANING AND MAINTENANCE

- Regular cleaning and maintenance are crucial for the proper functioning and longevity of the appliance.
- Before cleaning, turn off the appliance, unplug it and allow it to cool down.

Manual Rinsing







- We recommend cleaning the coffee outlet after each use. This is also recommended when the appliance has not been used for an extended period of time.
- Press the ☰ button and let the hot water flow through the coffee outlet for several seconds. This will remove the remains of the coffee and impurities.

Drip Tray

- The drip tray should be emptied daily.
- Carefully pull out the drip tray from the coffee machine. Remove the grid. Empty its contents over the sink.
- Clean the drip tray and grid with warm water and a little dishwashing detergent. Rinse and wipe dry.
- Be careful not to scald yourself when handling the tray. It may contain hot water.
- Place the grid back onto the drip tray and insert into the coffee machine.

Coffee Grounds Container and Inner Tray

- Empty the coffee grounds container whenever the warning indicator light ☰ comes on.



- Remove the drip tray and pull out the inner coffee grounds container.
 - Empty the coffee grounds container into the municipal waste or compost.
 - Empty the contents of the drip tray over the sink.
 - Clean the inner tray and coffee grounds container with warm water and a little dishwashing detergent. Rinse and wipe dry.
 - Insert the coffee grounds container into the inner tray and slide the inner tray back into the coffee machine.
2. Place a bowl under the brewing head and switch on the coffee machine. Allow it to preheat until all the control buttons on the control panel light up.
 3. When the coffee machine is preheated, press and hold down the  and  buttons simultaneously for 5 seconds.
 4. The  button and the  indicator light will flash.
 5. Short press the  button to start the descaling process.
 6. The  indicator light will flash to indicate that the descaling process is in progress.

Brewing Unit

- We recommend cleaning the brewing unit at the same time as emptying the coffee grounds container.
- Gently press on the bottom part of the service door where the indentation is located. The service door will swing open. Remove it.
- Press both latches on the brewing unit and remove it from the coffee machine.
- Wash it under running water and then dry it properly.
- Put the brewing unit back into the coffee machine. A click indicates that the brewing unit is correctly installed.
- Reattach the service door.



Note:

If the warning indicator light  is continuously on, the brewing unit is not installed correctly.
If the warning indicator light  blinks, the service door is not closed properly.




Water Tank



- Remove the water tank, rinse it with clean water, dry it and put it back in its place.



Warning:

Be careful not to scald yourself with hot water, which will flow out through the outlet of the coffee.

7. When all the water from the tank has flowed through the outlet, the  indicator light and  button will flash.
8. Remove the water tank, pour the remaining contents. Rinse the tank and fill it with clean water. Insert the tank back into the coffee machine.
9. The  light will be off and the coffee machine will continue in the descaling process.
10. When the descaling process is complete, the coffee machine will turn itself off automatically.

If you need to cancel the descaling process, press the  button while the  light flashes.



Note:

The descaling process can take several minutes. Allow the coffee machine to finish. Do not turn off the coffee machine during the descaling process.

REGULAR MAINTENANCE

Perform regular maintenance on the coffee machine at least once a week.

Ground Coffee Dispensing Area

The ground coffee may settle on the walls of the dispensing area over time. We recommend cleaning it regularly to avoid clogging. When cleaning, proceed as follows.


1. Gently press on the bottom part of the service door where the indentation is located. The service door will swing open. Remove it.
2. Remove the brewing unit and rinse it under cold running water. Allow to dry.
3. Use a brush to clean the dispensing area of the ground coffee. Remove all debris from the dispensing area.
4. Wipe the inner space where the brewing unit is located with a soft sponge and wipe dry.
5. Put the brewing unit back into the coffee machine and reattach the service door.

Outer Surface of the Coffee Machine

To clean the outer surface of the appliance, use a clean, slightly damp cloth. Afterwards, wipe it dry thoroughly.

DESCALING


 

Mineral deposits from water can accumulate in the internal circuit of the coffee machine with regular use. It is a natural process. Therefore, regular descaling is necessary. Mineral deposits can adversely affect the taste of the coffee being brewed.


 
The coffee machine is equipped with a counter for the number of coffees prepared, and as soon as the  indicator light on the control panel comes on, the descaling process should be performed.

1. Fill the water tank with a solution of water and descaling agent. Use a descaling agent suitable for espresso-type machines and follow the instructions given in the descaling agent's accompanying documentation.

EMPTYING THE INTERNAL CIRCUIT

Empty the internal circuit in the event that you store the coffee machine for a long time, transport it or take it to an authorised service centre.


1. Place a bowl under the brewing head and switch on the coffee machine. Allow it to preheat until all the control buttons on the control panel light up.
2. When the coffee machine is preheated, press and hold down the  and  buttons simultaneously for 5 seconds.
3. The  indicator light will start flashing.
4. Remove the water tank from the coffee machine and the indicator light will light up and the internal circuit emptying process will start.
5. When the internal circuit is empty, the coffee machine will turn itself off automatically.

If you need to cancel the inner circuit emptying function, press the  button while the  light flashes.



Note:


 

 

After the inner circuit has been emptied, press and hold down the button until the water starts to drain out the next time it is turned on. This pumps water into the internal circuit.



 
After emptying the inner circuit, press and hold down the , button until the water starts to drain out the next time it is turned on. This pumps water into the internal circuit.

Storage

- If the appliance will not be used for an extended period, unplug it from the power socket, let it cool down, and clean it following the instructions provided above.
- Before storing, ensure that the appliance and all accessories are thoroughly clean and dry.
- Store the appliance in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

TROUBLESHOOTING

Problem	Cause	Solution
The indicator light  is flashing.	Insufficient water in the tank.	Refill the water tank.
The warning indicator light  is flashing.	Incorrectly inserted service door.	Properly insert the service door.
The warning indicator light  is on.	The brewing unit is not inserted correctly.	Insert the brewing unit correctly into the coffee maker.
The indicator light  is on.	Insufficient coffee beans in the hopper.	Add coffee beans to the hopper.
The indicator light  is on.	Coffee grounds container is full.	Empty the coffee grounds container and inner tray.
The coffee machine didn't turn on.	The power cord is not connected.	Insert the power cord into the socket at the back of the coffee machine and then insert the power cord into a power socket.
No or delayed response when the control button is pressed.	The coffee machine is disturbed by a magnetic field.	Disconnect the coffee machine from the power supply and plug it in again after a while.
	The control panel is dirty.	Wipe the control panel with a clean cloth.
The prepared coffee is cold.	Coffee cups are not preheated.	Pre-heat the coffee cups.
	The brewing unit is cold.	Start dispensing hot water for a few seconds.
Coffee is not dispensing.	Before starting the coffee machine, you have performed the function of emptying the internal circuit.	Press the hot water button until the water starts to flow through the spout.
The first cup of coffee is not of the right quality.	The first grinding of ground coffee may not be of the right quality and quantity.	Pour out the coffee and prepare another coffee.
Weak milk froth	The ground coffee is too coarse.	Turn the coarseness regulator clockwise to adjust the grinder setting.
	You are using unsuitable roasted coffee beans.	Use roasted coffee beans specially for espresso machines.
The control buttons are unresponsive.	You pressed them from the wrong direction.	The control buttons must be pressed from the bottom of the icon with the belly of the finger.
The coffee machine is being warmed up for a long time.	The coffee machine is clogged with limescale.	It is necessary to descale the coffee machine.

The water tank is removed / the water level in the water tank is too low, but the indicator light  has not come on.	The area around the water tank connector is damp.	Wipe the area around the water tank connector.
The inner tray is full of water.	The ground coffee is too fine.	Turn the coarseness regulator counterclockwise and adjust the grinder setting.
Slow or dripping coffee flow.	The ground coffee is too fine.	Turn the coarseness regulator counterclockwise and adjust the grinder setting.
The  indicator light is flashing, but the bean hopper is full.	The ground coffee dispensing area is clogged with ground coffee.	Clean the dispensing area of the ground coffee.
The  indicator light is flashing even when the descaling process appears to be complete.	The descaling process has not finished yet.	Wait for the coffee machine to complete the descaling process. It may take a few minutes.



Note:

If the problem is not listed in the table or if the problem persists, turn off the coffee machine, disconnect it from the power source, and contact an authorised service centre.

TECHNICAL SPECIFICATIONS

Rated voltage range	220–240 V~
Rated frequency	50–60 Hz
Rated power input	1420–1690 W
Noise level	75 dB(A)

The declared noise emission level of the appliance is 75 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

We reserve the right to change the text and technical specifications.

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSING OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste.

For proper disposal and recycling, take these products to designated collection points. Or in some European Union states or other European countries the products can be

returned to the local retailer when buying an equivalent new product. Disposing of this product correctly helps save

valuable natural resources and prevents damage to the environment by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For Business Entities in European Union States

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product complies with all the essential requirements of the EU directives that apply to it.

