

# SENCOR®

SSM 9310WH



## SANDWICH MAKER WITH REMOVABLE PLATES

Translation of the original manual

 
 
 
 


**SENCOR®**

**SSM 9310WH**



**A**

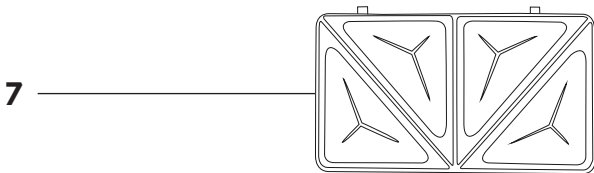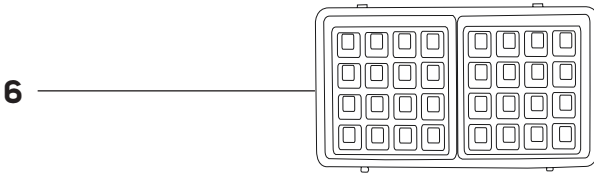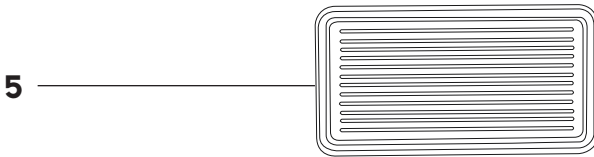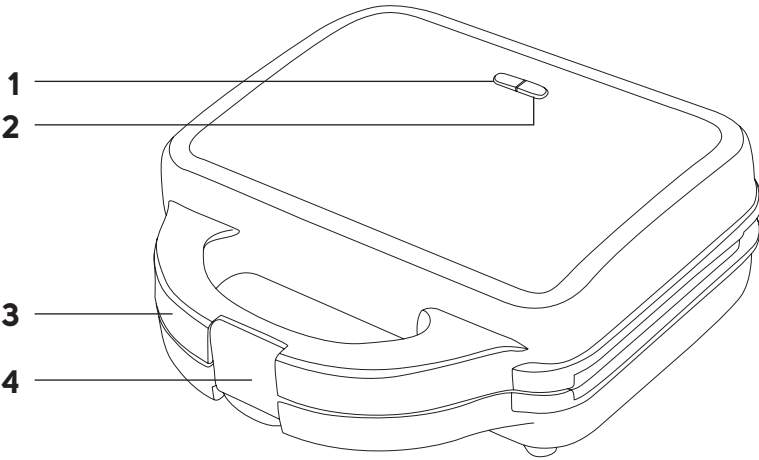

# EN Sandwich Maker with Removable Plates

## Important safety instructions

### **READ CAREFULLY AND STORE FOR FUTURE USE.**

- This appliance may be used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cord damaged.
- Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision.
- Children younger than 8 years of age must be kept away from the appliance and its power cord.
- Surfaces that come into contact with food should be cleaned regularly. Follow the instructions in the Cleaning and Maintenance chapter.
- This appliance is not designed to be controlled using a programmed device, external timer switch or remote control.



## Caution: Hot surface

The temperature of accessible surfaces may be higher if the appliance is in operation. Such surfaces can become hot during use. Do not touch hot surface. This could cause skin burns. Use the handles to open and close the appliance.

- Before connecting the appliance to a power socket check that the technical specifications on the appliance's rating label match the electrical voltage in the socket.
- Connect the appliance only to a properly grounded socket.
- This product is designed for household use only. Do not use this appliance for commercial purposes.
- Do not use the appliance in industrial surroundings or outdoors.
- Do not use the appliance for any other purposes than those intended.
- Do not place the appliance on or near an electric or gas stove or other sources of heat.
- Do not place the appliance at the edge of a workbench or on an unstable surface. The appliance must be located on a stable and even surface.
- This appliance is supplied with three pairs of removable baking plates. Only use the same pair of baking plates at any one time. Ensure that the baking plates are properly inserted in the appliance before turning it on.
- When the appliance is connected to the mains socket, the cooking surfaces and the outer casing of the appliance are heated. Do not touch hot surface. To close and open the top baking plate use the thermally insulated handle and for removing the finished meat use a wooden or heat resistant plastic spatula.
- Allow adequate air circulation around the appliance when in use. Do not place any objects on the heated surface of the appliance.
- Food may catch on fire during the cooking process, therefore check the sandwich maker regularly. If you notice smoke, disconnect the power plug from the socket and extinguish the fire.
- Always turn off the appliance and disconnect it from the power socket if you leave it without supervision or if you will not be using it and before changing the baking plates or cleaning it.
- Allow the appliance to fully cool down before changing the baking plates, moving, cleaning or storing it.
- Clean the grilling surfaces after each use, see the chapter Maintenance and cleaning.
- To avoid any injury by electrical shock, do not clean the appliance under running water and do not submerge in water or any liquid.
- Ensure that the power cord does not come into contact with water or moisture or a heated surface.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the power socket. Disconnect the cord from the power socket by gently pulling the plug of the power cord.
- To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments of the appliance performed at an authorised service centre. Tampering with the appliance during the warranty period may void the warranty.

### DESCRIPTION OF THE APPLIANCE

- A1** Red indicator light – indicates the connection to the mains socket
- A2** Green indicator light – indicates heating of the baking plates
- A3** Thermally insulated handles
- A4** Lock for easy locking and unlocking of handles
- A5** Removable grilling plates
- A6** Removable waffle plates
- A7** Removable plates for toasting sandwiches



### Note:

If you insert too much food or pieces that are too large into the sandwich maker, then it will not be possible to close it. In such a case it will be necessary to remove some of the food or to cut the food into smaller pieces. Do not force the sandwich maker shut, as this may damage it.

- After 2 to 3 minutes release the lock, open the top plate and remove the finished meal or continue cooking if necessary. To remove the meal use a wooden or heat-resistant plastic spatula. Do not use a fork, a knife or anything else made of metal. This may damage the non-stick coating.
- Before inserting further food into the sandwich maker close it and wait until the green indicator light turns off.
- After finishing using the sandwich maker, disconnect it from the power socket.

### BEFORE FIRST USE

- Before first use, remove the appliance and its accessories from the packaging and remove all promotional labels and tags. Check that neither the appliance nor any of its components is damaged.
- Wipe the baking surfaces of the removable plates with a slightly damp cloth and then wipe them dry with a dry cloth.
- We recommend you allow the sandwich maker to run empty for 5–7 minutes before first use for each pair of baking plates, so that any odours present are removed from the plates.



### Note:

When first turned on there may be light smoke emitted. This is due to the heating of internal components and it will pass in a moment.

### REPLACING THE BAKING PLATES

Unplug the sandwich maker from the power outlet and allow it to cool before replacing the baking plates.

- Removing the baking plates:** Move lock towards the handle to release the bottom baking plate and then remove it. In the same way release and remove the top plate.
- Inserting the baking plates:** Slide the bottom edge of the baking plate under the left or right hinge. Fold the plate down and push in towards the casing of the sandwich maker until you hear an audible click. Now the plate is secured in the correct position by locks. In the same way attach the top plate. Always use plate of the same type.

### USING THE SANDWICH MAKER

- Select a suitable type of plate for the type of food that you wish to prepare and insert it into the sandwich maker. Coat the baking plates with a little butter or cooking oil.
- Connect the sandwich maker to a power socket. Both indicator lights on the top panel will light up. The red indicator light indicates connection to a power source. Green indicator light indicates heating of the baking plates.
- Close the sandwich maker, for faster heating of the baking plates.
- Prepare the food you wish to cook before the plates heat up.
- When the baking plates are heated to the set temperature, the green indicator light is turned off.



### Note:

The heating indicator light turns on and off. This shows that the set temperature of baking plates is maintained.

- Open the sandwich maker and place the prepared food on the bottom plate. Using the handle, close and press the upper baking plate toward the lower one. Secure the handle with the lock.

### CLEANING AND MAINTENANCE

- Before cleaning, unplug the power cord from the mains socket and allow the appliance to cool down.
- Do not use abrasive cleaning agents, solvents, or any substances to clean any parts of the appliance that could damage the surface of the appliance. No part of this appliance is intended to be washed in a dishwasher or under running water.



### Warning:

To prevent the risk of electric shock, do not submerge the appliance, plug or power cord in water or any other liquid.

- Clean the non-stick surface of the baking plates after each use. This will prevent a build-up of burnt pieces of food residue. To clean, use a moist, soft cloth. If some burnt food residue is left on the baking plates, sprinkle with water and mild dish detergent. Wipe clean afterwards with a clean, moist cloth.
- The baking plates are easier to clean if lukewarm.
- Wipe outer surface of the sandwich maker with a soft wet cloth and dry completely off.

### Storage

- If you will not be using the appliance for an extended period of time, unplug the plug from the mains socket, allow the appliance to cool down and clean it according to the instructions in the chapter "Cleaning and Maintenance".
- Before storing, ensure that the appliance and all accessories are thoroughly clean and dry.
- Store the appliance in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

### TECHNICAL SPECIFICATIONS

#### Sandwich Maker with Removable Plates

Rated voltage range ..... 220–240 V~  
 Rated frequency ..... 50–60 Hz  
 Rated power input ..... 750 W

We reserve the right to change the text and technical specifications.

## **INSTRUCTIONS AND INFORMATION ON DISPOSING OF USED PACKAGING MATERIALS**

Dispose of used packaging material at a site designated for waste in your municipality.

### **DISPOSING OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**



This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste.

For proper disposal and recycling, take these products to designated collection points. Or in some European Union states or other European countries the products can be

returned to the local retailer when buying an equivalent new product. Disposing of this product correctly helps save

valuable natural resources and prevents damage to the environment by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

#### **For business entities in European Union states**

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

#### **Disposal in other countries outside the European Union**

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product complies with all the essential requirements of the EU directives that apply to it.

