

SENCOR®

SKS 8080



SMART BLUETOOTH KITCHEN SCALE 10 KG

Translation of the original manual




SENCOR®


SKS 8080



A

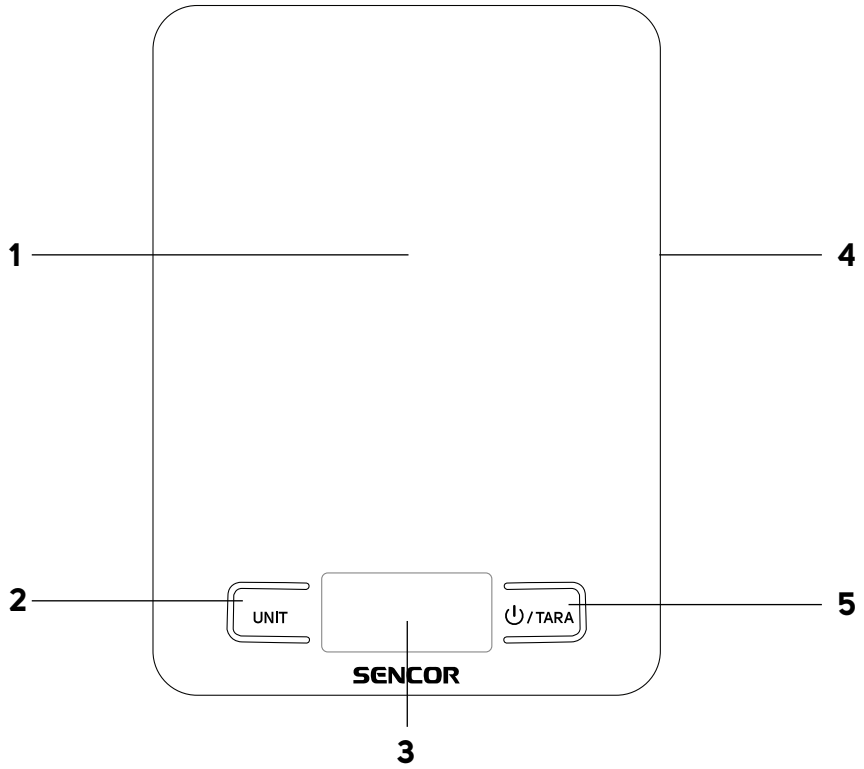

B

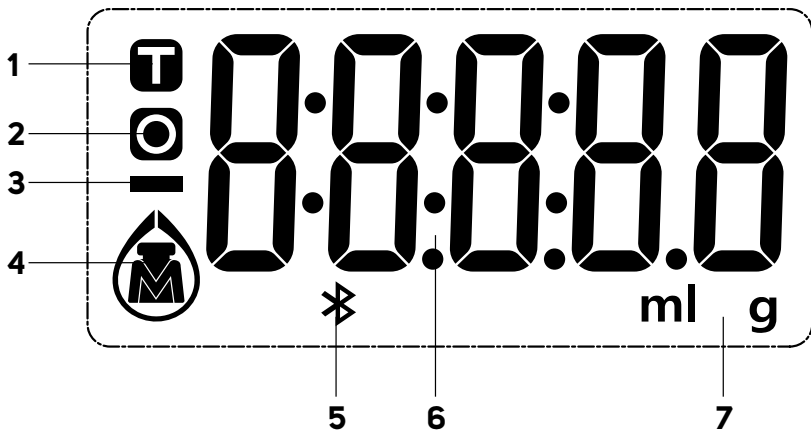

EN Smart Bluetooth Kitchen Scale 10 kg

Safety Instructions and Important Notices

READ CAREFULLY AND STORE FOR FUTURE USE.


- This appliance is designed for household use. Do not use it for commercial purposes, for weighing animals or for other purposes for which it is not intended.
- This appliance may be used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised.
- Children must be supervised to ensure that they do not play with the appliance.
- Do not use the appliance outdoors, place it on unstable surfaces, on an electric or gas stove, in the vicinity of an open flame or other sources of heat.
- Do not expose the appliance to direct sunlight or high humidity and do not use it in excessively dusty environments.
- In use, it must be ensured that the appliance is placed on an even, smooth, hard and stable surface. Otherwise, inaccuracies in weighing may occur.
- If the maximum weighing capacity is exceeded, remove the ingredient or object of excessive weight from the weighing area to avoid possible damage to the appliance.
- Do not use the appliance to support various items. When storing, it must be ensured that no objects are placed on the appliance.
- Always use new batteries of the same type. Never combine old and new batteries or batteries of various types. Never put batteries in a fire, short-circuit or damage them in any way. Dispose of them in an environmentally friendly manner at the end of their useful life. Never dispose of batteries in municipal waste.
- If you will not be using the appliance for an extended period of time, remove the batteries. If the battery were to leak into the interior of the appliance, the appliance could be damaged.
- Keep batteries out of the reach of children, because they may present a danger in their presence. If the child swallows the battery, immediately seek medical help.
- Keep the appliance clean. When cleaning, follow the instructions in the chapter "Cleaning and maintenance". Do not immerse the appliance in water or other liquids or rinse it under running water.
- Do not repair or modify the appliance yourself. Have all repairs or adjustments performed at an authorised service centre. By tampering with the appliance, you expose yourself to the risk of losing your legal rights regarding faulty performance or warranty for quality.

Smart Bluetooth Kitchen Scale 10 kg

User's Manual

- Thank you for purchasing our SENCOR product; we hope you will be satisfied with it.
- Before using this appliance, please familiarise yourself with the user's manual, even if you are already familiar with using similar types of appliances. Use the appliance only as described in this user's manual. Keep the manual for future reference.
- We recommend to keep the original packaging, packaging materials, receipt, and proof of the seller's liability or warranty certificate for a minimum of the duration of statutory right of faulty performance or warranty of quality. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.

DESCRIPTION OF THE SCALE

- A1** Weighing and measuring area
- A2** **UNIT** button for switching weighing and measuring units
- A3** Display
- A4**  **TARA** button for power on / reset
- A5** Battery compartment (located in the lower part of the scale)

DESCRIPTION OF THE DISPLAY

- B1** Tara function icon
- B2** Weight reset function icon
- B3** Negative sign
- B4** Weighing mode icon, water/ milk volume measurement mode icon
- B5** Bluetooth icon
- B6** Indication of weight or volume
- B7** Metric unit of volume (ml) and weight (kg)


POWER SOURCE

- Included in the package of this scale are 2x 1.5 V alkaline batteries, type AAA. The batteries are already installed in the battery compartment located at the bottom of the scale, however, they are protected by insulating tape during transport to prevent them from discharging before delivery to the end consumer and damaging the appliance. To use the scale, remove the insulation tape.
- As soon as the LCD display shows "LO", both batteries need to be replaced with new ones.
- Remove the battery compartment cover and remove the discharged batteries. Insert new batteries of the same type. Observe the correct polarity, which is shown on the bottom of the battery compartment, and fit the cover.

SELECTION OF MODE AND UNITS OF WEIGHT AND VOLUME

- Press the **UNIT** button repeatedly to select the desired weighing mode (in grams)/water volume measurement (in ml)/milk volume measurement (in ml). The setting of the mode and the selection of the unit are indicated by the display of the corresponding icons.

USING THE SCALE




 

 
 
 
- Place the scale on a flat and stable surface.
- Press the  button briefly to switch the scale on. Wait until "0" is shown on the display.
- Place the ingredients to be weighed / volume measured in the centre of the area. The weight/volume of the weighed ingredient will be displayed on the display.



Note:

If you will be weighing ingredients in a bowl, press the  **TARA** button to reset the weight of the bowl/pot on the scale.

TARA FUNCTION

- The TARA function is used when you want to gradually weigh several foods in one container without removing the container from the scale. This function will automatically subtract the weight of the container from the total weight of the food.
- Place the empty container on the scale. Its weight and  symbol are shown on the display. Pressing  **TARA** will reset the value to zero. The  symbol remains lit.
- Put the first food into the container. The display will show its weight. Pressing the  **TARA** button will reset the value and the  symbol lights up. The weight of the first food is stored in the memory and the scale is ready for further weighing.
- Put the second food in the container. The display will show its weight. Press the  **TARA** to display the sum of the weight of the first and second food. Pressing  **TARA** again saves the sum to memory and resets the display to zero. The  symbol remains lit.
- Add more food in the same way up to the maximum weight capacity (10 000 g).
- Once you remove the food container from the scale, a negative value will appear on the display.

TURNING OFF


- If the scale remains idle for several minutes, it will automatically switch off.

ERROR MESSAGES

Display	What to do
Lo	Batteries are flat. Replace the batteries. For more information, see the chapter "Power source".
Err	You have exceeded the maximum weighing capacity of the scale. Remove the ingredients from the area of the scale so as not to damage it.

LINKING THE SCALE AND THE SMART DEVICE

 - The scale is equipped with Bluetooth wireless technology, which in conjunction with the free **SenCor FOOD** app installed on your smart device offers direct access to a rich and regularly updated database of foods and their nutritional values.
- The **SenCor FOOD** app was developed in collaboration with the creators of the Calorie Tables / Dine4Fit app and is designed for smartphones running iOS (version 13 and above) or Android (version 5 and above). When using the app, the phone must be connected to the internet.

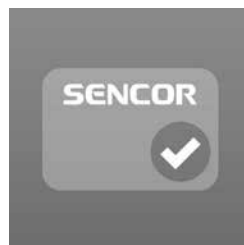



- The connection of the scale to the phone takes place automatically after starting the application. To pair, it is sufficient for the Bluetooth function to be turned on on the smart device. If the app does not find the scale, it will actively prompt you to try to reconnect the scale.
- When the scale is paired with the application, the Bluetooth icon is lit on the display. When the scale is not paired with the app or the connection has been broken, the Bluetooth icon will be extinguished.

**Note:**

The scale can only connect to one mobile device at a time. If you have problems with pairing, make sure that there is no other device within reach that is actually actively connected to the scale.

The app offers two weighing modes:

1. "On the Scale" Mode

Displays the weight of the currently weighed item. After you tell the scale what food you weigh using the "Search Food" field, it will display the nutritional values of the food in relation to the current weight.

2. "List" Mode

It allows you to determine the aggregate nutritional value of more food. This mode is useful, for example, when preparing a dish according to a recipe. Gradually add the food to the scale, using the "Search Food" field to enter what food it is. Once you have determined the weight and type of food, use the "+ Add food to list" button to add it to the total nutritional sum. Use the TARA button on the scale for adding to weight as needed during weighing. The scale continuously shows the total weight of the ingredients and calculates the weights of the individual nutritional components (for example, how many grams of carbohydrates the weighed food contains in total) throughout the weighing in the "List" mode.

**Entering/Searching for a Weighed Food**

You can find a summary of the nutritional values of a weighed food by entering the name of the food in the "Search Food" status bar. Click on the status bar and the cursor and keyboard will appear. Enter the name of the food or a keyword, the application will search for the relevant food or a list of foods with a keyword, and selecting a food will display its nutritional values.

You can find the nutritional summary more quickly, practically and accurately by scanning a unique EAN barcode from the food packaging. Click on the barcode icon to the right of the "Search Food" status bar and scan the barcode. A summary of nutritional values is displayed.

**Note:**

If you didn't allow the app to use the camera and video recording feature when you installed the app (or when adjusting the settings), enable the feature. Otherwise it will not be possible to scan the barcodes.

**Note:**

The SENCOR FOOD app is linked to the Calorie Tables app. At the end of the weighing, you can enter your food into your diet in the Calorie Tables with one click and keep a long-term overview of your food intake (ATTENTION: Some advanced features of the Calorie Tables app may be subject to a fee).

Possible Problems with the App and Their Solutions

The data from the scale cannot be displayed in the application.

- Check that you have enabled the Bluetooth feature on your phone/tablet.
- Check that you are within the range of the Bluetooth signal.
- Check that the batteries in the scale are not dead. Replace the batteries with new ones.
- Restart the app.
- Reset the operating system and the Bluetooth connection.
- The app does not search for the weighted food item.
- Please check your current internet connection.
- Bluetooth connection failed.
- Check that only one device is connected to the scale.
- Check that the Bluetooth version on your device is 4.0 and later.
- If you are near other devices transmitting in the same frequency band as Bluetooth (Wi-Fi router, DAB radio, microwave oven, other smart phone, etc.), interference may occur. Try moving the scale or smart device to a different location.

CLEANING AND MAINTENANCE

- Use a soft sponge slightly dampened in warm water to clean the scale. Wipe dry with a clean cloth.
- Do not use wire cloths, abrasive cleaners, thinners, etc. for cleaning. Otherwise the surface may be damaged.
- Do not immerse the scale in water or other liquid or rinse it under running water.

TECHNICAL SPECIFICATIONS

Power source..... 2x 1.5 V AAA batteries
 Weight capacity..... 10 kg
 Weighing accuracy..... 1 g
 Unit selection..... g/ml

We reserve the right to change the text and technical specifications.

SENCOR hereby declares that the radio device type SKS 8080 conforms to the 2014/53/EU directive. The full text of the EU Declaration of Conformity is available at: www.sencor.eu.

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSING OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste.

For proper disposal and recycling, take these products to designated collection points. Or in some European Union states or other European countries the products can be

returned to the local retailer when buying an equivalent new product. Disposing of this product correctly helps save

valuable natural resources and prevents damage to the environment by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For Business Entities in European Union States

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product elsewhere, request the necessary information about the correct disposal method from the local council or from your retailer.



This product complies with all the essential requirements of the EU directives that apply to it.

DISPOSAL OF USED BATTERIES



Batteries contain environmentally damaging compounds and therefore do not belong in standard municipal waste. Take used batteries for proper disposal at a designated battery collection point.

