

SENCOR®

SFN 9014SL



AIR COOLER

Translation of the original manual

 


SENCOR®


SFN 9014SL




A

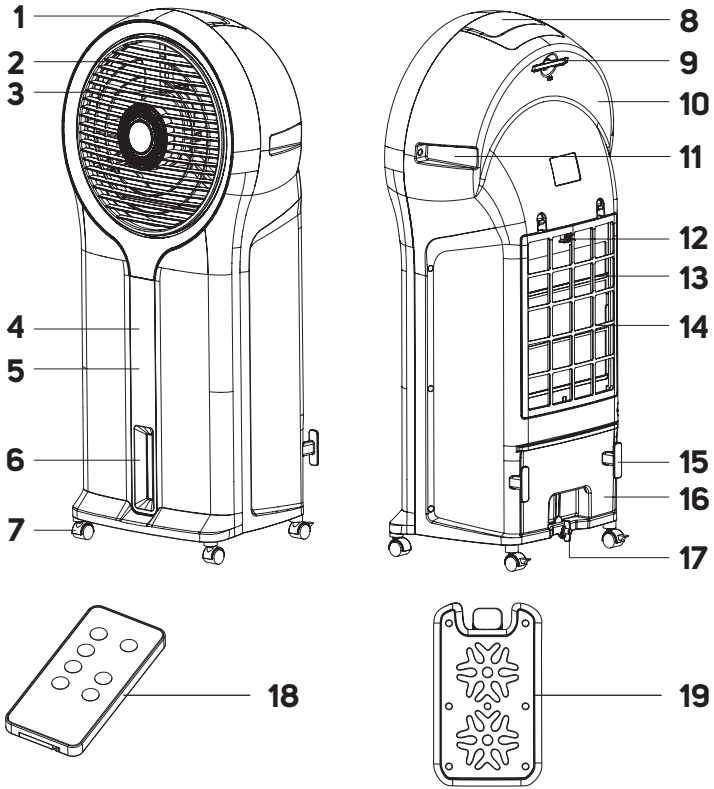


B

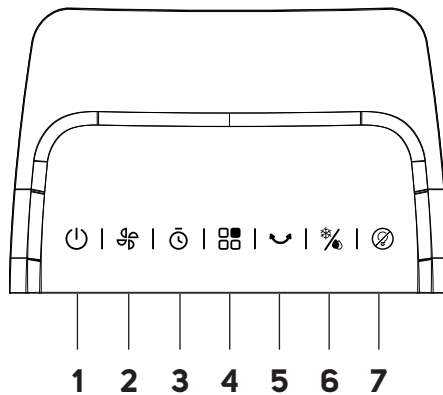 

C

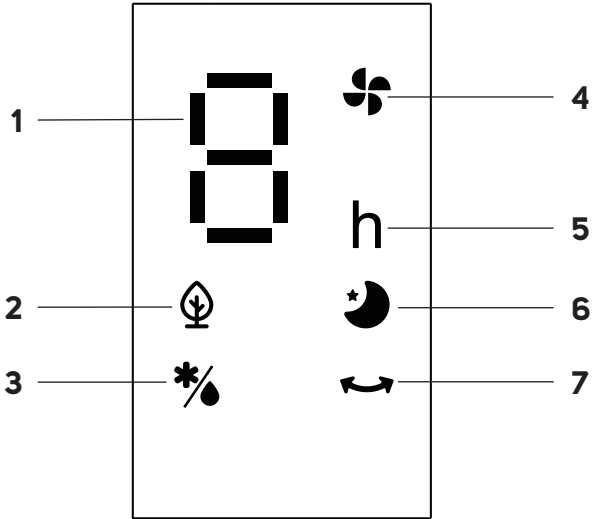 

D

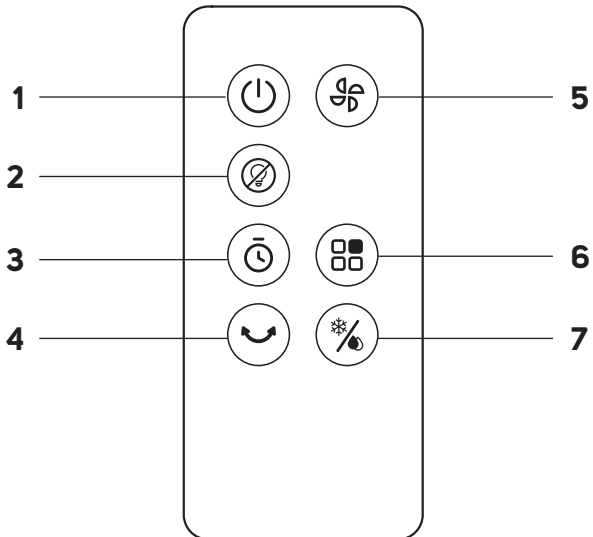 

Important Safety Instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cord damaged.
- The water tank is marked with minimum and maximum level lines. Always make sure that the water reaches at least the minimum mark. Never fill the tank over the maximum level line.
- Pay attention when using the appliance as it produces steam.
- When filling or cleaning, disconnect the appliance by pulling the plug out of the power socket.

- High humidity values can promote the growth of biological organisms in the environment.
 - Do not allow the area around the appliance to become damp or wet. If there is increased humidity (dew), switch the appliance to a lower power. If the power of the appliance cannot be reduced, use the appliance intermittently. Do not allow absorbent materials such as carpets, curtains, drapes or tablecloths to get wet.
 - Never leave water in the tank when the appliance is not in use.
 - Empty and clean the appliance before storing. Clean the appliance before further use.
 - The appliance is designed for use in household, office and similar types of areas. It is not intended for commercial purposes.
 - Do not use the appliance in rooms where flammable or explosive chemicals are stored, in industrial environments or outdoors.
 - Place the appliance only on a clean, flat, dry, smooth and stable surface. Do not place the appliance on unstable surfaces such as carpets with very long and thick fibres.
 - Do not place the appliance in the vicinity of an open flame or appliances that are sources of heat.
 - Do not use the appliance to support various items.
-
- Before connecting the appliance to a power socket, check that the nominal voltage on the appliance's rating label matches the electrical voltage in the socket.
 - Connect the appliance only to a grounded power socket. The power socket to which you connect the appliance must be freely accessible so that it is possible to quickly disconnect the power cord from the power source if necessary.
 - Install the power cord in such a way that it is not tripped over.
 - If the appliance is equipped with castors, take extra care when handling it, e.g. to prevent it from falling down stairs or sliding off a sloping surface. To avoid tipping the appliance over, do not try to roll the castors over the carpet.
 - Do not touch an appliance that is connected to the mains socket with wet hands.
 - Do not use the appliance near a shower, swimming pool, etc., do not spray water or any other liquid on it or submerge it in water or any other liquid.
 - Do not cover the air inlet or outlet openings or insert objects into them. This could damage the appliance.
 - Adequate space must be provided for air circulation around the appliance during operation.

- Do not use the appliance without the water or dust filter properly installed.
- Only fill the tank with clean, cold water. Do not add any other additives such as air fresheners, essential oils, etc. to the appliance. Otherwise damage to the appliance may occur. Do not fill the tank above the maximum level line.
- Before operating the appliance in cooling and humidifying mode, make sure that the water level in the tank is at least at the minimum level.
- Use the appropriate button on the control panel or remote control to switch off the appliance. Do not switch off the appliance by disconnecting the power cord from the socket.
- For health reasons, do not expose yourself or animals to direct cold air for long periods of time.
- Always switch off and unplug the appliance before assembling or disassembling it when not in use, before filling, cleaning or moving it.
- Perform the cleaning in accordance with the instructions in the Cleaning and maintenance chapter.
- Move, store and transport the appliance in an upright position.
- Do not attempt to remove the outer case of the appliance.
- Unplug the appliance from the power socket by pulling the plug, not the power cord. Otherwise, damage to the power cord or the socket may occur.
- Do not use the appliance if it is not working correctly, if it has been damaged or has been submerged in water. To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments performed at an authorised service centre. By tampering with the appliance, you expose yourself to the risk of losing your legal rights regarding faulty performance or warranty for quality.

EN Air Cooler








User's Manual

- Thank you for purchasing our SENCOR product; we hope you will be satisfied with it.
- Before using this appliance, please familiarise yourself with the user's manual, even if you are already familiar with using similar types of appliances. Use the appliance only as described in this user's manual. Keep the manual for future reference.
- We recommend to keep the original packaging, packaging materials, receipt, and proof of the seller's liability or warranty certificate for a minimum of the duration of statutory right of faulty performance or warranty of quality. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.







DESCRIPTION OF THE APPLIANCE

- | | |
|--|--|
| A1 Front cover | A10 Rear cover |
| A2 Front protective grille | A11 Handles (located on both sides) |
| A3 Fan | A12 Latch to release the rear grille |
| A4 Display | A13 Rear grille |
| A5 Remote control signal receiver | A14 Cooling insert |
| A6 Water level indicator with MIN and MAX lines | A15 Brackets for attaching the power cord |
| A7 Castors (rear castors are equipped with a brake) | A16 Removable water tank |
| A8 Control panel | A17 Water tank swivel lock |
| A9 Storage space for the remote control | A18 Remote control |
| | A19 Cooling boxes (2 pcs) |

DESCRIPTION OF THE CONTROL PANEL

- | | |
|--|---|
| B1 On/Off  button | B6  Cooling and humidifying mode selection button |
| B2 Button  to adjust fan speed | B7 Button  to switch off the display |
| B3 Button  to set the timer | |
| B4 Button  to select the operating mode | |
| B5 Button  to rotate the protective grille | |

DESCRIPTION OF THE DISPLAY

- | | |
|--|---|
| C1 Numeric display | C4 Fan indicator light  |
| C2 Natural breeze mode indicator light  | C5 Timer indicator light  |
| C3 Cooling and humidifying mode indicator light  | C6 Sleep mode indicator light  |
| | C7 Front grille rotation light  |

DESCRIPTION OF THE REMOTE CONTROL

- | | |
|--|---|
| D1 On/Off  button | D5 Button  to set the fan speed |
| D2 Button  to switch off the display | D6 Button  to select the operating mode |
| D3 Button  to set the timer | D7  Cooling and humidifying mode selection button |
| D4 Button  to turn the front grille | |

PURPOSE OF USE

- The air cooler is designed to cool the air in the room. The warm air is drawn in at the rear of the cooler, passes through a cooling insert that cools and humidifies it, and is then discharged into the surroundings via a fan at the front.

BEFORE FIRST USE

- Before first use, remove the appliance and its accessories from the packaging and remove all promotional labels and tags. Check that neither the appliance nor any of its components is damaged.
- Remove the water tank from the back of the air cooler. Wipe the tank with a soft sponge slightly dampened with warm water and neutral detergent. Wipe dry using a clean wiping cloth. Place the tank back into the air cooler.


INSTALLATION


- Locate the appliance on an even, dry and stable surface within reach of a properly grounded power socket.
- To ensure sufficient air circulation, leave a clear space of at least 30 cm on all sides of the appliance.

OPERATING THE APPLIANCE

Switching the Appliance On/Off

Insert the mains cord plug into a power socket. An audible warning sounds and the air cooler switches to standby mode.

 
Press the  button briefly to switch the air cooler on. It will start by default:

- Low fan speed (the fan mode indicator light  is on; "1" will appear on the numeric display)
- Normal operating mode (no operating mode indicator light on)
- Other indicator lights on the display are off.




Note:

If you turn on the air cooler for the first time, the fan speed will be medium speed for 3 seconds and then switch to low speed. If you switch on the air cooler from standby mode and the last set speed was slow speed, the fan speed will be medium speed for 3 seconds and then switch to low speed.




- To switch off the air cooler, press the  button. An audible warning sounds and the air cooler switches to standby mode. To switch off completely, disconnect from the mains socket.






Note:

When the air cooler is switched off with the  button and switched to standby mode, the last settings are stored in memory (except for the timer, sleep mode and drying function). If you disconnect the air cooler from the mains socket, it will start by default when you switch it on again.

Fan Speed Setting

- The  button is used to set the fan speed. Press the  button repeatedly to set the desired fan speed in the following order: 1 (low speed) – 2 (medium speed) – 3 (high speed).
- The indicator light  will light up on the screen regardless of the set speed.

Setting the Cooling and Humidifying Mode

- Before starting this mode, you need to fill the tank with water. To fill the water tank, follow the instructions in the "FILLING THE WATER TANK" section.
- Press the  button to turn on the cooling and humidifying mode. The indicator  will light up on the screen and the pump will start.
- Use the  button to adjust the fan speed. For the first 3 minutes after switching to cooling and humidifying mode, only two speeds will be available: 1 (low speed) – 2 (medium speed). After 3 minutes of operation, high speed will also be available.

- If you switch the cooler to cooling and humidifying mode at a high speed setting, this speed is maintained even after switching to the mode.
- Turn off the cooling and humidifying mode by pressing the button. The indicator light goes out and the pump goes off.



Warning:

If the air cooler detects a lack of water in the tank or you remove the water tank or the tank is not inserted, after a short while the cooling and humidifying mode will automatically switch off to avoid damaging the pump and an audible warning will sound (5 short beeps).



Note:

To increase the cooling efficiency, you can put the supplied cooling boxes in the water and let them cool in the freezer beforehand. Place the cooling boxes in the left side of the tank. Otherwise, the part of the water pump that is immersed in the water could be damaged.

Setting the Operating Mode

 
- Press the button repeatedly to select the operating mode in the following order: normal mode – natural breeze mode – sleep mode .
- For natural breeze and sleep modes, the corresponding indicator light will illuminate; for normal mode, no operating mode light will illuminate.

Normal Operating Mode


- In this mode, the fan speed is set by the user and the fan speed is constant.

Natural Breeze Operating Mode


- In natural breeze mode, the airflow speed is controlled automatically from high to low speed depending on the selected fan speed. This achieves a natural breeze effect.
- Mode progression at high fan speed setting:



 - Mode progression at medium fan speed setting:



 - Mode progression at low fan speed setting:



Sleep Operating Mode

Depending on the fan speed set by the user and the preset rules of this mode, the speed is regularly reduced, which reduces the uncomfortable feeling caused by the strong flow and increases comfort during sleep.

Fan settings	Sleep mode progression
High speed	The air cooler will run for 30 minutes in normal mode at high fan speed. After 30 minutes the high fan speed switches to the medium speed. After another 30 minutes the fan speed will be reduced to the low speed. The air cooler will remain running at a low fan speed.

Fan settings	Sleep mode progression
Medium speed	The cooler will run for 30 minutes in normal mode when the medium fan speed is set. After 30 minutes of the medium fan speed goes to the low speed. The air cooler will remain running at a low fan speed.
Low speed	The appliance will be in normal mode when the fan is set to low speed.

In sleep mode, the fan speed on the numeric display changes as the fan speed switches.

Timer Setting

- Set the amount of time that the air cooler will run, after which it will switch off and go into standby mode.
- Press the button to switch on the timer. "0" flashes on the numeric display and the indicator light comes on.
- Press the button repeatedly to set the timer time from 0 to 9 hours. The numeric display will show the timer value.
- Press any button (except the button) or wait about 5 seconds and the timer time will be stored in memory. The countdown will start and the numeric display will alternate between the timer time and the set fan speed.
- After the timer period has elapsed, the air cooler switches off and enters standby mode.

Front Grille Rotation

- Press the button and the front protective grille will start to rotate slowly. The indicator light comes on.
- To stop the front grille rotating, press the button, the rotation will stop and the indicator light will go out.

Drying Function

- The drying function is used to dry the cooling insert e.g. before storing the air cooler for a longer period of time.
- While the air cooler is on, press and hold the button for 3 seconds to activate the drying function. The fan speed will automatically change to high speed and the function will run for 20 minutes. The air cooler then automatically switches off and enters standby mode.
- It is not possible to change the air cooler settings during this time. Only the button will be functional. If you switch the air cooler off during the drying period and then switch it on, the appliance will start the drying function from the beginning.

Turning the Display Backlight On/Off

- While the air cooler is in operation, press the button to turn off the display backlight.
- If you need to turn the display on, press the button or any other button (the setting will not be switched).



Note:

Any button will dim its brightness (to 33% of its original brightness) after 1 minute of pressing it. If you press it again, it will light up again to its original brightness.

Automatic Shut-off Function

- The appliance is equipped with an automatic shut-off function after 15 hours of continuous operation. This means that after 15 hours of operation, when none of the control buttons are pressed, the appliance will turn off automatically.
- If you need to turn this function off, press and hold the button for 3 seconds, three short beeps will sound. To turn this function back on, press and hold the button for 3 seconds. Three short beeps will sound.

REMOTE CONTROL

- The functions of the buttons on the remote control and the control panel are identical. If you wish to use the remote control, point it at the signal receiver **at the front of the cooler under the display**. The maximum range of the signal sent from the remote control is 6 m.

**Note:**

If there are obstacles located between the remote control and the signal receiver, the signal may not be transmitted.

Inserting and Replacing Battery

- From the bottom part of the remote control pull out the battery compartment and insert the 3V CR2032 battery into it. When inserting the battery, make sure the polarity is correct.
- If the battery in the remote control is discharged, replace it with a new battery of the same type.
- If you will not be using the remote control for an extended period of time, we recommend removing the battery. If the battery were to leak into the interior of the remote control, it could be damaged.

**Note:**

Never put batteries in a fire, short-circuit or damage them in any way. Dispose of them in an environmentally friendly manner at the end of their useful life. Never dispose of batteries in municipal waste.

FILLING THE WATER TANK

Before filling the tank, turn off the air cooler, disconnect it from the power socket and secure the castors.

- Turn the lock on the tank to the horizontal position.
- Remove the water tank and refill it with clean, cold water. When filling, observe the minimum and maximum lines marked on the tank.
- Carefully insert the tank back into the air cooler.
- Turn the lock on the tank to the vertical position.

**Warning:**

Do not let the water stand in it for more than a day to prevent the growth of unwanted bacteria, microorganisms or mould. When filling, make sure that the water level reaches at least to the minimum line but does not exceed the maximum line.

CLEANING AND MAINTENANCE

- Disconnect the power plug from the power socket before cleaning.
- Do not use abrasive cleaning agents, solvents, or any substances to clean any parts of the appliance that could damage the surface of the appliance.

**Warning:**

To prevent the risk of electric shock, do not submerge the appliance, plug or power cord in water or any other liquid.

Cleaning the Water Tank

- After use, empty the tray and rinse it with clean water and wipe it with a clean cloth.
- At least once a month, wipe the reservoir with a soft sponge slightly dampened with warm water and a neutral detergent to remove calcium deposits and prevent the growth of unwanted bacteria, microorganisms or mould. Then rinse it properly with clean water, dry it with a clean cloth.

Cleaning the Outer Casing

- To clean the outer casing, use a cloth slightly dampened with lukewarm water and neutral detergent.

STORAGE

- If you will not be using the appliance for an extended period of time, unplug the plug from the mains socket and clean it according to the instructions in the chapter "Cleaning and Maintenance".
- Before storing, ensure that the appliance and all accessories are thoroughly clean and dry.

- Remove the battery from the remote control.
- Store the appliance in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

TECHNICAL SPECIFICATIONS

Rated voltage range	220–240 V~
Rated frequency	50 Hz
Rated power input	110 W
Noise level	≤57 dB (high speed); ≤55 dB (medium speed); ≤50 dB (low speed)
EER	5 WW
Maximum fan flow rate	7.2m ³ /min
Fan wattage	93.3 W
Operating value	0.1 (m ³ /min)/W
Standby power consumption	0.3 W
Seasonal energy consumption	30.2 kWh/year
Fan sound power level	65 (dB) A
Maximum air velocity	1.6 m/s
Dimensions	408 x 282 x 889 mm
Weight	7.3 kg
Water tank capacity	5.5 l
Standards for measuring operational value	(EU) No 206/2012 + (EU) 2016/2282 EN ISO 5801:2017 EN 50564:2011 EN IEC 60704-1:2021 EN IEC 60704-2:2020

Contact for further information: FAST ČR, a.s., U Sanitasy 1621, 251 01 Říčany, Czech Republic

The declared noise emission level of the appliance is 65 (dB) A, which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

**Safety Class for Electric Shock Protection:**

Class II – Electric shock protection is provided by double or heavy-duty insulation.

We reserve the right to change the text and technical specifications.

DISPOSAL OF USED BATTERIES

Batteries contain environmentally damaging compounds and therefore do not belong in standard municipal waste. Take used batteries for proper disposal at a designated battery collection point.

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSING OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste. For proper disposal and recycling, take these products to designated collection points. Or in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. Disposing of this product correctly helps save valuable natural resources and prevents damage to the environment by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For Business Entities in European Union States

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product complies with all the essential requirements of the applicable EU directives.

