

# SENCOR®

## SRV 1550WH



### ROBOTIC VACUUM CLEANER

Translation of the original manual




**SENCOR®**


**SRV 1550WH**




**A**

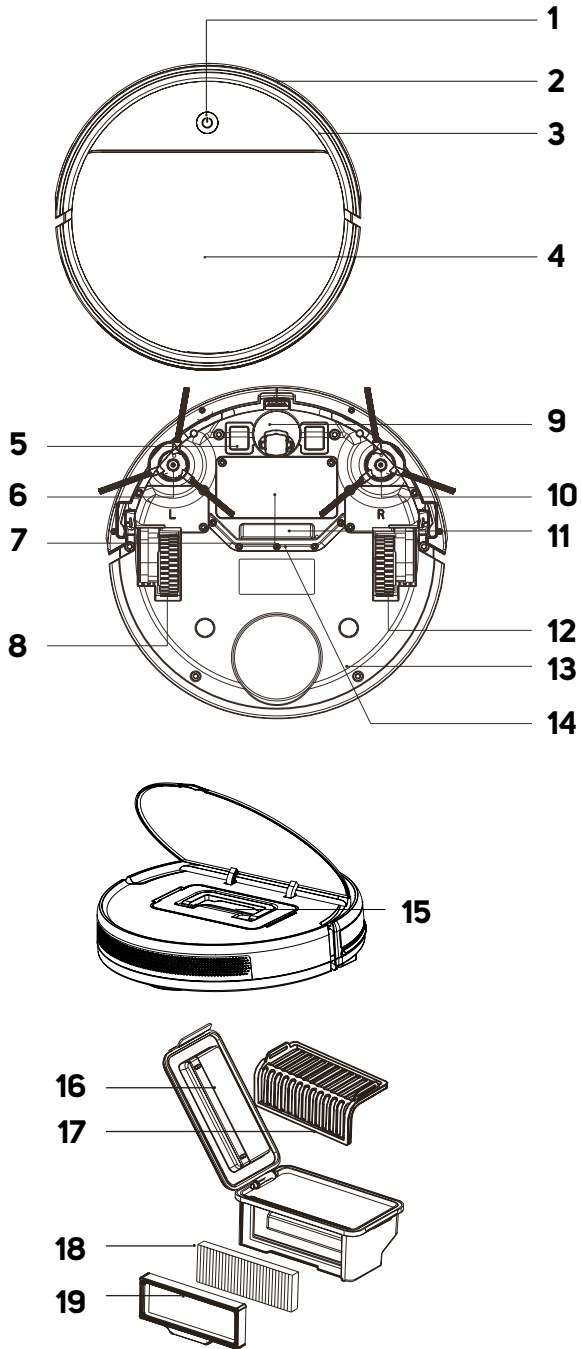


**B**

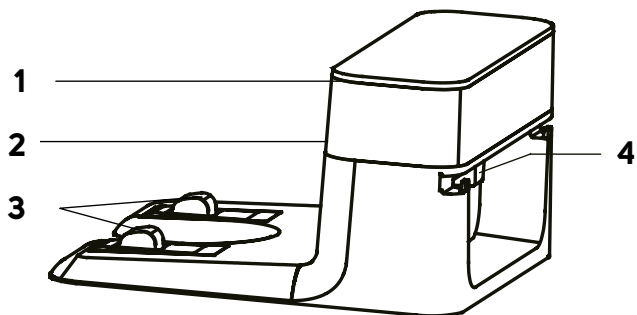

**C**

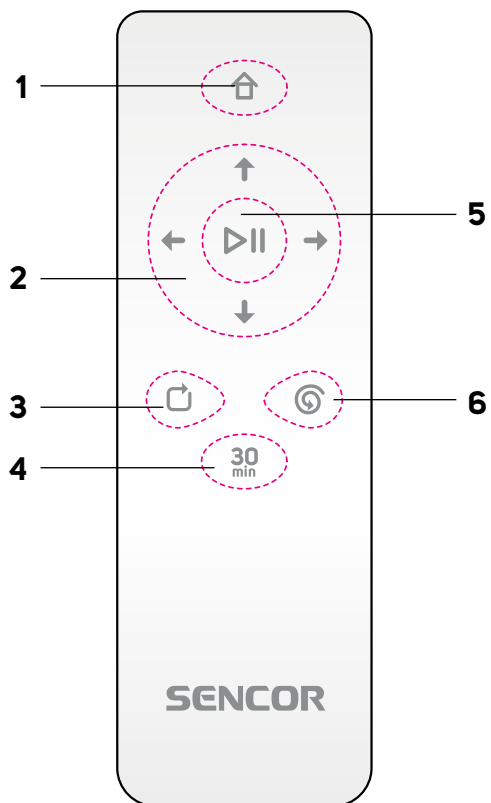


**D**

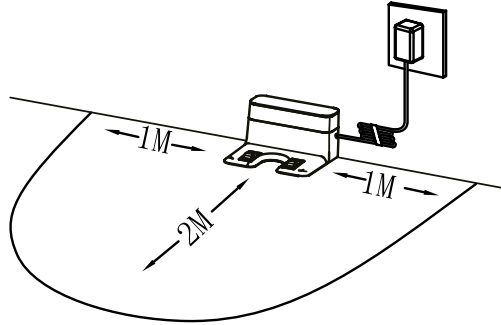

**E**


**E1**

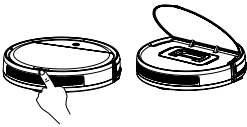


**E2**



 
**E3**




**E4**

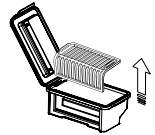


**E5**

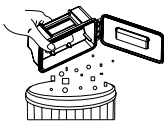

**E6**

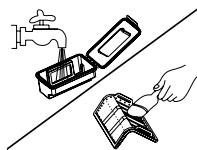

**E7**

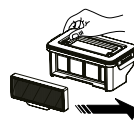

# EN Robotic Vacuum Cleaner

## Important Safety Instructions

### **READ CAREFULLY AND STORE FOR FUTURE USE.**

- This appliance may be used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- If the power adapter or charging station is damaged, have it replaced by a qualified service centre to avoid a dangerous situation. It is forbidden to use the appliance with a damaged power adapter or charging station.
- Prior to cleaning or maintenance, always disconnect the appliance from the power socket and turn it off using the power switch.
- The appliance must only be used with the charging station and power adapter supplied with the appliance.



## Warning:

- Do not use the charging station or power adapter to charge batteries or appliances that are not designed for this purpose.
- Connect the power adapter only to a power socket with a protective contact.

### Electrical Safety


- Before connecting the adapter to a power socket check that the technical details on the rating label match the electrical voltage in the socket.
- Connect the power adapter only to a properly grounded socket. Do not use an extension cord.
- Do not disconnect the power adapter from the socket by pulling on the power cord. This could damage the power adapter or the socket. Disconnect the power adapter from the power socket by pulling the plug.
- Do not lay the power adapter of the collection station over sharp objects. Make sure that the power cord does not hang over the edge of the table or touch a heated or hot surface.
- Keep the power adapter and its power cord dry.
- Do not connect or disconnect the power adapter to or from the power socket with wet hands.
- Do not uncover the electronic parts of the robotic vacuum cleaner or its battery. They do not contain any components repairable by the user. Have the appliance serviced by qualified persons.
- To prevent possible electric shock, do not spray the robotic vacuum cleaner, the power supply unit or the power adapter with water or immerse it in water or other liquids.
- Do not use the robotic vacuum cleaner when it is not working correctly, if it has been damaged or has been submerged in water.
- To avoid the danger of injury by electrical shock, do not repair the robotic vacuum cleaner yourself or make any adjustments to it. Have all repairs or adjustments performed at an authorised service centre. Tampering with the robotic vacuum cleaner during the warranty period may void the warranty.
- Prior to cleaning or maintenance, always disconnect the robotic vacuum cleaner from the power socket and turn it off using the power switch.

### Safety in Use

- This robotic vacuum cleaner is designed for use in households, offices and similar types of areas. Do not use it in industrial surroundings or outdoors.
- The robotic vacuum cleaner is not intended for vacuuming water and, therefore, must not be used in damp or wet areas, for example in laundries, bathrooms or around swimming pools. If it were to come into contact with water, the internal electronics of the vacuum cleaner would be destroyed.
- Do not use the robotic vacuum cleaner to vacuum the following items:
  - smouldering cigarettes, burning or flammable items, matches or ash;
  - water and other liquids;
  - sharp items, e.g. splinters, needles, pins, etc.;
  - flour, wall plaster and other building materials;
  - larger pieces of paper or plastic bags, which can easily block the suction opening.
- Do not expose the robotic vacuum cleaner to direct sunlight and do not place it near an open fire or appliances that are a source of heat.
- Do not use the robotic vacuum cleaner on narrow raised surfaces such as tables, wardrobes, etc. If the vacuum cleaner does not have sufficient space for manoeuvring, it may fall and be damaged.
- Only use the robotic vacuum cleaner with original accessories from the manufacturer.
- Ensure that the robotic vacuum cleaner has a dust filter correctly installed in the dust container before use.
- Before putting the robotic vacuum cleaner into operation, check that the entry door into your apartment or house is closed. From the floor surfaces remove clothing, paper, toys, power or extension cords and other items that the vacuum cleaner could suck in or catch. Lift curtains and drapes that reach to the floor so that they do not get caught in the vacuum cleaner.
- Do not place any items on to the robotic vacuum cleaner and do not step or sit on it.
- If the robotic vacuum cleaner is running, watch out for children and household pets.
- When the robotic vacuum cleaner is running, ensure that the air outlet openings are not covered and that the suction opening is not blocked. Otherwise, the robotic vacuum cleaner may be damaged.
- Follow the cleaning and maintenance instructions provided in this user's manual.

- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Use the appliance only as described in this user's manual. Keep the manual for future reference. In the event that you hand this appliance over to somebody else, make sure to also include this user's manual.
- Carefully unpack the appliance and take care not to throw away any part of the packaging before you find all its parts. It is recommended to keep the original shipping carton, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right of defective performance or quality guarantee. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.

### DESCRIPTION OF THE ROBOTIC VACUUM CLEANER






- |  |                                    |
|--|------------------------------------|
| <b>A1</b> Button  (to switch on and interrupt automatic cleaning) | <b>A10</b> Right side rotary brush |
| <b>A2</b> Bumper bar   | <b>A11</b> Suction hole            |
| <b>A3</b> Infrared sensors   | <b>A12</b> Right castor            |
| <b>A4</b> Hinged cover   | <b>A13</b> Bottom cover            |
| <b>A5</b> Charging contacts  | <b>A14</b> Squeegee                |
| <b>A6</b> Left side rotary brush   | <b>A15</b> Dust container          |
| <b>A7</b> Battery (located under cover)  | <b>A16</b> Dust container lid      |
| <b>A8</b> Left castor  | <b>A17</b> Coarse filter           |
| <b>A9</b> Front swivel wheel   | <b>A18</b> HEPA filter             |
|  | <b>A19</b> HEPA filter holder      |

**No illustration:** mop sleeve holder, mop sleeve

### DESCRIPTION OF THE CHARGING STATION

- |                                       |  |
|---------------------------------------|--|
| <b>B1</b> Signal communication window | <b>B3</b> Charging contacts              |
| <b>B2</b> Recharging indicator        | <b>B4</b> Connector for adapter terminal |

### DESCRIPTION OF THE REMOTE CONTROL

- |  |   |
|--|---|
| <b>C1</b> Button  to return to charging station      | <b>C4</b> Button  to start 30-minute cleaning                       |
| <b>C2</b> Directional buttons to move the vacuum cleaner forward/backward/left/right   | <b>C5</b> Button  to start automatic cleaning / interrupt cleaning |
| <b>C3</b> Button  to start cleaning along the walls | <b>C6</b> Button  to start local cleaning                          |

### INCLUDED CONTENTS

- Robotic vacuum cleaner
- Charging station
- Remote control
- Mop sleeve (3 pcs)
- HEPA filter (2 pcs: 1 pc installed on the vacuum cleaner; 1 pc spare HEPA filter)
- Side rotary brush (4 pcs: 2 pcs installed on the vacuum cleaner; 2 pc spare side rotary brushes)
- Power adapter
- AAA batteries for remote control (2 pcs)

### PURPOSE OF USE AND FEATURES OF THE ROBOTIC VACUUM CLEANER

- The robotic vacuum cleaner is intended for cleaning various types of hard floors such as wooden or laminate floating floors, tiles, vinyl, etc. and carpets with a low pile height. While vacuuming, it effectively combines various routes to optimally clean the entire floor area.
- The suction opening effectively removes hair, animal hair, etc. Side rotary brushes sweep dirt from hard-to-reach areas along walls and furniture and from corners. The motorised rubber castors protect sensitive floors against scratching and can travel over threshold strips up to a height of 1.3 cm and ride on to a 1.3 cm high carpet.
- The suspended bumper enables the vacuum cleaner to dampen the approach to an obstacle and to efficiently clean around it. The infrared sensors in the front bumper prevent the robotic vacuum cleaner from colliding with obstacles. Safe operation in rooms with stairs is made possible by the bottom anti-stair-fall sensors.
- The remote control is used for convenient operation, which allows the vacuum cleaner to be switched on and off, put into automatic cleaning mode, select an operating mode or send the robotic vacuum cleaner to the charging station.

### ROBOTIC VACUUM CLEANER CLEANING MODES

#### Automatic Cleaning (Sensor Smart Room)

- This is the main program of the vacuum cleaner. This is a smart program that selects the most efficient route to vacuum the maximum area. When the charge level drops to 15%, vacuuming stops and the vacuum cleaner will locate the charging station and docks in it.

#### 30-minute Cleaning Mode (Sensor Smart Room)

- The robot vacuum cleaner selects the most efficient route to vacuum the maximum area for 30 minutes. Vacuuming then stops and the vacuum cleaner locates the charging station and dock in it to recharge. This mode is suitable for smaller rooms or individual rooms.

#### Local Cleaning Mode

- The robotic vacuum cleaner will effectively clean an area about 1 m in diameter by vacuuming from a central point and spiralling outwards and then inwards back to the central point. This is a highly efficient cleaning of a certain area with increased suction power.

#### Cleaning Along the Wall Mode

- The robotic vacuum cleaner will vacuum along the walls, furniture legs, etc.



#### Note:

Prior to starting the robotic vacuum cleaner, always check that it is fully charged and that all obstacles, foreign objects, cables, etc. have been removed from the area.

### PREPARING THE ROBOTIC VACUUM CLEANER

- Take the robotic vacuum cleaner and all its accessories out of the packaging. Check that you have taken out all the parts.
- Check the robotic vacuum cleaner and its accessories for damage.
- Remove protective foils and advertising labels from the robotic vacuum cleaner and all accessories.

#### Installation of Side Rotary Brushes

- The side rotary brushes are intended for smooth floor surfaces and ensure effective cleaning in corners, along walls and furniture.




- Turn the vacuum cleaner upside down. Place the rotary brushes on the pins and push slightly until you hear a click. Turn the vacuum cleaner back over.
- When using the vacuum cleaner to clean rooms with carpets, remove the rotary brushes. To remove it, proceed in the reverse sequence.

## LOCATION OF THE CHARGING STATION

- The charging station is used to automatically recharge the battery and the vacuum cleaner must have good access to it.
- Place the charging station against a wall on a hard, horizontal and dry surface within reach of the power socket – see Figure D. Ensure that there are no steps or obstacles within 1 m to the left and right and 2 m in front of the station that would prevent the vacuum cleaner from locating the charging station and docking successfully.
- Connect the power adapter cable connector to the socket on the charging station and plug the male plug of the adapter into a power socket. Position the power cord so that it will not get tangled in the rotary brushes of the vacuum cleaner.
- If you will not be using the vacuum cleaner for a long time, disconnect the charging station from the power socket and store it in a dry, clean and cool place.

## CHARGING THE ROBOTIC VACUUM CLEANER

- The vacuum cleaner can be charged in the charging station, which the vacuum cleaner automatically seeks out when it has finished cleaning.
- Always make sure the vacuum cleaner is switched on with the  button.

### Charging the Vacuum Cleaner for the First Time

- Before first use, it is necessary to fully charge the robotic vacuum cleaner. Allow the robotic vacuum cleaner to charge for up to 12 hours.
- Grasp the vacuum cleaner and manually place it into the charging station so that the charging contacts on the underside of the vacuum cleaner and the charging contacts on the charging station are connected. When the contacts are connected, the charging process will start.



### Automatic Charging

- The robotic vacuum cleaner utilises the automatic charging function after 30 minutes of cleaning and when it detects a low battery during operation. The robotic vacuum cleaner starts actively searching for a charging station. It is thus important that it is always connected to a power source and is freely accessible for the vacuum cleaner so that it can dock in it.
- The robotic vacuum cleaner can be sent to be charged also by pressing the charging button on the remote control. In such a case, the operation of the robotic vacuum cleaner will stop and it will seek out the charging station.
- After docking in the charging station, the charging cycle will commence. A complete charge takes approximately 4 to 6 hours. The actual charging time depends on the power level of the battery at the start of the charging process.
- Full charge ensures up to 50 minutes of operation.
- In the event that the charging contacts are disconnected during the charging cycle, the vacuum cleaner will move away from the charging station and then re-dock itself to resume the charging process, unless it is prevented from doing so by an obstacle.
- In the event of a power outage, the charging cycle will be interrupted and will continue after the power supply is renewed.
- In the event that the maximum charging current is exceeded, the charging process will be automatically interrupted.
- If the robotic vacuum cleaner is completely discharged, e.g. due to the vacuum cleaner being unable to locate the charging station or dock in it, it must be manually positioned.

## CONTROLLING THE VACUUM CLEANER USING ITS BUTTON

- The buttons on the vacuum cleaner are used for basic controls. For advanced control, use the remote control.

### Turning the Robotic Vacuum Cleaner On/Off


- Press the  button to turn the robotic vacuum cleaner on. The robotic vacuum cleaner will switch to the stand-by mode.
- Press and hold down the  button for 3 seconds to turn off the robotic vacuum cleaner.





#### Note:

It is not possible to turn off the robotic vacuum cleaner during the charging process.

### Cleaning Mode Selection

- While the robotic vacuum cleaner is in stand-by mode, press the  button and the robotic vacuum cleaner will start automatic cleaning (Sensor Smart Room).

### Pausing the Cleaning Process

- If the  button is pressed during the operation of the robotic vacuum cleaner then the operation of the robotic vacuum cleaner will be paused. Pressing the  button again will resume its operation.

## CONTROLLING THE VACUUM CLEANER USING THE REMOTE CONTROL




 
- Push down the latch of the cover on the rear side of the remote control to release it and remove the cover.
- Insert two type AAA (1.5 V) batteries into the remote control. When inserting the batteries ensure the correct polarity as shown inside the battery compartment. Put the cover back on and click it into place.
- In the event that the batteries are flat, replace them with new ones. Do not combine various types of batteries or new and old batteries.
- The signal range of the remote control is approximately 6 m.
- When replacing batteries, first remove the flat batteries and then insert the new ones.




 
#### Note:

Never combine flat and new batteries nor various types of batteries.


### Starting Cleaning

- Press the  button to start automatic cleaning of the Sensor Smart Room/interrupt cleaning.
- Press the  button to start local cleaning.
- Press the  button to start cleaning along the walls.
- Press the  button to start the 30-minute cleaning.
- The robotic vacuum cleaner will start and begin vacuuming. After finishing the cleaning, the vacuum cleaner will turn off and the vacuum cleaner will search for the charging station and dock in it to recharge. In automatic cleaning, the vacuum cleaner will run until the battery is 15% empty, in 30-minute cleaning the robotic vacuum cleaner will switch off after 30 minutes.
- If the vacuum cleaner detects a low charge level during cleaning, it will interrupt cleaning and search for a charging station to recharge.





### Pausing the Cleaning Process

- While the vacuum cleaner is running, press the  button to stop its operation. Press the  button again to resume operation.

## Manual Cleaning Stop

- If you need to end the cleaning before it is complete, press the button ; the robotic vacuum cleaner will stop, end the cleaning process, seek out the charging station and dock in it.


## Robotic Vacuum Cleaner Movement

- The directional buttons are used to manually move the robotic vacuum cleaner. However, it is important that the robot vacuum cleaner is not in operation.
- The  button is used to move forward.
- The  button is used to turn the robotic vacuum cleaner by 180°.
- The  button is used to turn the robotic vacuum cleaner by 90° to the left and move it to the left.
- The  button is used to turn the robotic vacuum cleaner by 90° to the right and move it to the right.

## MOPPING

- The robotic vacuum cleaner is supplied with a mop sleeve. This allows the floor to be vacuumed and wiped at the same time.
- Before use, moisten the mop sleeve in clean and warm water, slightly wring it out by hand and attach it to the mop sleeve holder. Attach it to the bottom of the robotic vacuum cleaner.

## CLEANING AND MAINTENANCE

- Before cleaning, always turn off the vacuum cleaner with the  button.
- Never use abrasive cleaners, thinners, etc. for cleaning.
- Neglecting cleaning and maintenance may negatively affect the working order of the vacuum cleaner and lead to its reduced performance.

## ROBOTIC VACUUM CLEANER

### Emptying the Dust Container

1. To remove the dust container, open the top cover – see Figure E1; and pull the container out of the vacuum cleaner – see Figure E2.
2. Open the dust container lid and remove the coarse filter – see Figure E4.
3. Take the dust container over a garbage bin and turn it upside down so that the lid of the dust container points downwards. Dump the contents of the dust container into the garbage bin – see Figure E5.
4. Close the lid and gently push on it until you hear a click. This indicates that the lid is properly secured in place.
5. Place the coarse filter back in place and place the dust container back into the vacuum cleaner.



#### Note:

For hygiene reasons, we recommend emptying the container outside the living area.

### Cleaning the Dust Container

1. To remove the dust container, open the top cover – see Figure E1; and pull the container out of the vacuum cleaner – see Figure E2.
2. Remove the holder with the HEPA filter – see figure E3.
3. Open the dust container lid and remove the coarse filter – see Figure E4.
4. Take the dust container over a garbage bin and turn it upside down so that the lid of the dust container points downwards. Dump the contents of the dust container into the garbage bin – see Figure E5.
5. Shake the HEPA filter and remove the dirt with a soft brush or dry cloth. In the event of heavy soiling, you can vacuum them out using a different vacuum cleaner with an attached brush nozzle. Do not wash the HEPA filter in water. This may damage the lid. In the event that the HEPA filter is already heavily soiled or deformed, replace it with a new one. We recommend replacing the HEPA filter based on the frequency of use at least once every six months.

6. Rinse the coarse filter under running water and wipe dry with a clean wiping cloth.
7. Wipe the dust container out using a lightly dampened sponge and wipe dry using a clean wiping cloth. If necessary, you can pour a small amount of water into the dust container and wipe it out with a sponge – see Figure E6. Then thoroughly wipe it dry using a clean wiping cloth.
8. Return the coarse filter and the HEPA filter – see Figure E7.
9. Close the dust container lid. Gently push down on the lid until you hear a click. This indicates that the lid is properly closed.
10. Place the dust container back into the vacuum cleaner.



#### Warning:

Prior to inserting the filter into the dust container and closing the lid, always ensure that all the parts are clean and completely dry. Otherwise, there is a risk of damaging the robotic vacuum cleaner.

### Cleaning the Mop Sleeve

To prevent the formation of moulds and damaging microorganisms that may cause unpleasant odours and be damaging to health, it is necessary to clean the mop sleeve holder and the mop sleeve after every use.

1. Carefully snap the mop sleeve holder from the underside of the vacuum cleaner.
2. Carefully remove the mop sleeve from the holder.
3. Wipe the mop sleeve holder using a lightly dampened sponge and wipe dry using a clean wiping cloth.
4. Hand wash the mop sleeve in lukewarm water with a small amount of fine washing powder, wring it out by hand and allow it to dry naturally. Do not wash the mop sleeve in a washing machine or dry it in a clothes dryer.

### Cleaning the Side Rotary Brushes

1. Take the side rotary brush out of the vacuum cleaner by pulling it upwards.
2. Remove any dust and dirt from the location where the brushes were mounted.
3. Remove all dust and dirt from the brushes. If necessary you may wash the brushes under running water. If the bristles were deformed while the vacuum cleaner was running, dip them in warm water to allow them to return to their original shape. Allow the brushes to dry before reattaching to the vacuum cleaner.
4. Place the rotary brushes on the pins and push slightly until you hear a click.

### Cleaning the Sensors

- The sensors on the robotic vacuum cleaner are important for its proper control and safe operation. It is therefore important that you clean them regularly and keep them in good condition.
- Wipe the sensors using a soft dry wiping cloth or cotton bud.

### Cleaning the Outer Surface of the Robotic Vacuum Cleaner

- Regularly wipe the surface of the vacuum cleaner using a soft dry wiping cloth.
- Clean the front swivel wheel, motorised castors, suction hole, rotary brush and the bottom sensors at least once per week or more frequently.
- First remove any coarser dirt from the front swivel wheel and the motorised castors. Then clean them around their entire perimeter using a lightly dampened cloth and wipe them dry. Do not forget to also clean the area around the castors.

### Replacing the HEPA Filter

1. Take out the dust container and take out the HEPA filter holder.
2. Take the old HEPA filter out of the holder and insert the new HEPA filter.
3. Place the holder with the new HEPA filter back into the container and insert it into the vacuum cleaner.

### Replacing the Side Rotary Brushes

- The rotary brushes become worn out when used. After a certain time it is necessary to replace the used brushes with new ones. To order new brushes, please contact your vendor or an authorised service centre.

1. Take the old side rotary brushes out of the vacuum cleaner by pulling them upwards.
2. Place the new rotary brushes on the pins and push slightly until you hear a click.

## CLEANING THE CHARGING STATION

### Cleaning the Charging Station

- Wipe the outer surface of the collection station with a dry soft cloth.


### Cleaning the Sensors

- The sensors on the charging station are important for its operation. It is therefore important that you clean them regularly and keep them in good condition.
- Wipe the infrared sensors and charging contacts with a dry soft cloth or cotton swab.

## REPLACING THE BATTERY

Replacement battery model number: SRX1501

In the event that you need to replace the battery, proceed as follows:

1. Make sure that the vacuum cleaner is turned off using the  button. Turn the vacuum cleaner upside down.
2. Using a screwdriver, loosen the screws of the battery cover, remove it and carefully remove the battery.
3. Disconnect the battery connector and remove the battery from the inside of the vacuum cleaner.
4. Connect the new battery and insert it into the internal area. The battery can only be connected in one way. The connector is coded and cannot be turned around.
5. Put on the bottom cover and secure it in place using the screws. Turn the vacuum cleaner back to the operating position.
6. Place the vacuum cleaner into the charging station and allow the battery to charge to full capacity.



### Note:

The robotic vacuum cleaner is supplied with the battery already inserted.

## LONG-TERM STORAGE

- When not using the vacuum cleaner for an extended period of time, do the following:
  - Clean the vacuum cleaner as described in chapter CLEANING AND MAINTENANCE.
  - Disconnect the collection station from the power socket. Store the vacuum cleaner with all its accessories in a dry, clean and cool place.
  - It is recommended to charge the vacuum cleaner every 3 months as this will extend the lifetime of the built-in battery.
  - Remove the battery from the remote control.

## TROUBLESHOOTING

Problem	Cause	Solution
The vacuum cleaner is not charging itself.	The charging contacts are not touching.	Check that the contacts are touching when inserting the vacuum cleaner into the charging station.
	The charging station is disconnected from the power source.	Insert the power adapter into a power socket and keep the charging station permanently connected.

The vacuum cleaner is stuck in a single location.	The vacuum cleaner has become entangled in wires/cables lying on the ground, in curtains or other foreign objects on the carpet.	The vacuum cleaner will always attempt to free itself on its own, however, we recommend to remove it by hand from the stuck location.
The vacuum cleaner returned to the charging station without completing the cleaning process.	The vacuum cleaner detected a low battery charge level and automatically returned to the charging station to recharge.	This is a normal occurrence. Allow the vacuum cleaner to recharge.
The remote control doesn't work. (Recommended distance is 5 m.)	Batteries are flat.	Replace the batteries in the remote control.
	The vacuum cleaner battery is almost flat.	Allow the vacuum cleaner to recharge.
	The remote signal receiver on the vacuum cleaner or the signal transmitter on the remote control is blocked or soiled.	Wipe the signal receiver and transmitter using a clean wiping cloth.
	The remote control signal is being interfered with by another device in its vicinity.	Do not use the remote control in the vicinity of devices with an infrared signal.
Dirt remains on the floor after cleaning is finished.	Suction opening is blocked.	Clean the suction opening.
	The dust container is full or the HEPA filter is clogged.	Empty the dust container or clean the HEPA filter.
It is not possible to turn on the vacuum cleaner.	The battery is flat.	Allow the battery to fully recharge.
The vacuum cleaner has problems with movement on the floor.	Front swivel wheel is blocked.	Clean out the front swivel wheel and move the robotic vacuum cleaner into an open area.
The vacuum cleaner will seek out the charging station but does not dock in it.	The charging station is blocked or is too far away, it is not connected to a power source; foreign objects are caught on the mop sleeve holder or the mop sleeve is rolled up.	Place the charging station into an open area and place the robotic vacuum cleaner into its vicinity and turn it on; insert the plug of the power adapter into a power socket; clean out the mop sleeve holder and straighten out the mop sleeve.
The vacuum cleaner is not behaving normally.	Internal fault.	Turn off the robotic vacuum cleaner and then turn it on again and start it. If the problem persists, turn off the vacuum cleaner and contact an authorised service centre.
Abnormal sounds are made during the cleaning process.	A foreign object has become stuck to the central castor.	Turn off the robotic vacuum cleaner and remove the foreign object.

## Error messages

Status	Meaning	Solution
The red and white indicator lights are blinking simultaneously, beeping sounds.	Ground control error	Place the vacuum cleaner on the floor again.
	Charging error	Remove and insert the adapter back into the power socket.
The red indicator light flashes slowly.	Side brush fault	Check the side brush.
The red indicator light flashes slowly and beeps.	Castors fault	Check the castors.
The red and white indicator lights flash alternately, beeping sounds.	Forward movement fault	Check the front bumper for blockages.



### Note:

If the problem is not listed or the problem persists, turn off the robot vacuum cleaner and contact an authorised service centre.

## TECHNICAL SPECIFICATIONS

### Robotic vacuum cleaner

Power input of the robotic vacuum cleaner.....	19 V DC current 0.6 A
Rated power.....	18 W
Battery.....	Li-ion / 11,1 V / 1,500 mAh
Dimensions (diameter x height).....	290 x 70 mm
Weight.....	1.9 kg
Operating time per single charge.....	50 min
Dust container capacity.....	200 ml

### Power adapter

Rated voltage range.....	100–240 V-
Rated frequency.....	50/60 Hz
Output.....	19 V DC current 0.6 A

### Charging station

Input voltage.....	19 V DC current 0.6 A
Output voltage.....	19 V DC current 0.6 A
Rated power.....	15 W
Dimensions.....	132 x 130 x 72 mm

Name of manufacturer	FAST ČR, a.s. U Sanitasu 1621 CZ-251 01 Řitčany
Model identification number	Power adapter for SRV 1550WH
Input voltage	100–240 V-
Input frequency	50/60 Hz
Output voltage	19 V
Output current	0.6 A
Output power	11.4 W
Average efficiency in active mode	83.95%
Efficiency at low load (10%)	70.99%
No load power consumption	0.075 W

Amendments to text and technical parameters are reserved.

### Original Consumable Accessories

SRX 1504	HEPA filter
SRX 1503	Side rotary brush
SRX 1502	Mop sleeve



The product is intended for household use only. The product is not intended for outdoor use.



Safety class for electric shock protection:  
Class II – Electric shock protection is provided by double or heavy-duty insulation.



This symbol indicates that the appliance must not be used if the power plug is damaged.

### BATTERY DISPOSAL



Prior to disposing of the product or handing it over at a specialised collection facility, it is necessary to ensure that the battery is removed. Before removing the battery, it is necessary to start the vacuum cleaner and wait until it is completely flat. The battery contains environmentally damaging compounds and therefore does not belong in standard household waste. Its proper disposal shall be ensured by the relevant collection point.

### DISPOSAL OF USED BATTERIES



Batteries contain environmentally damaging compounds and therefore do not belong in standard municipal waste. Take used batteries for proper disposal at a designated battery collection point.

### INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at a site designated for waste in your municipality.

### DISPOSING OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste. For proper disposal and recycling, take these products to designated collection points. Or in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. Disposing of this product correctly helps save valuable natural resources and prevents damage to the environment by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

### For Business Entities in European Union States

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

### Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product elsewhere, request the necessary information about the correct disposal method from the local council or from your retailer.



This product complies with all the essential requirements of the applicable EU directives.

