

lamart
by Pierre Lamart

OLYMPIA

EN Dear customer,

you are now holding a cast aluminium casserole dish with a glass lid with dimensions of 39,5 × 22 cm and an anti-adhesive surface that prevents food from burning on. The casserole dish is 11 cm high (16,5 cm high together with the lid), in black colour, wall thickness is 2.5 mm and base thickness is 5.0 mm. Non-stick material without the use of PFOA and PTFE (no toxic substances are emitted when overheated). The volume of the casserole dish including the lid is 7.5L. The volume of the casserole dish without the lid is 5.5L. Volume of the lid is 2L. Dishwasher safe.

The casserole dish is made from a quality aluminium cast, which delivers heat very quickly and retains its shape, while being light to handle. An important indicator of quality is the surface inside the casserole dish, which is made from a durable material.

Instructions for use:

- 1.) The products are resistant against temperatures of up to 250 °C – however excessively high temperatures may damage the product.
- 2.) Always wash the cookware in hot water using detergent in order to remove all food residues. Rinse and dry the product. Then wipe with a drop of oil to maintain the quality surface. Use a paper towel to remove excess oil (treat your product in this way to keep it in perfect condition).
- 3.) Ensure that the size of the hotplate on the stove corresponds to the size of your product and that it is not wider than the edge of the cookware. This will prevent the exterior surface from overheating – it is always sufficient to use a gentle flame for cooking.
- 4.) The **Xylan Plus** layer is resistant against high temperatures; however we recommend that you do not overheat it when the cookware is empty. Never leave the cookware on a hotplate without supervision. Allow the cookware to cool down before cleaning it.
- 5.) To remove light stains after cooking (baked on stains), leave the cookware to soak in hot water with detergent and then wipe dry using a soft cloth. If the pot or pan becomes stained, heat up some white vinegar and then wash as usual. These stains have no effect on the properties of the product.
- 6.) Do not use metal cooking utensils on the anti-adhesive surface or cut food using sharp objects inside the cookware.
- 7.) Cookware with the **Xylan Plus** Non-Stick layer is easy to maintain and clean. When cleaning by hand use only soft wipes and sponges that will not scratch the surface. Do not use aggressive chemical products. It is possible to wash the cookware in a dishwasher – however avoid hard water and excessively aggressive cleaning agents, which could lead to the loss of the cookware's non-stick property.
- 8.) To ensure that the product serves you for a long time, treat the cookware with care and try not to scratch its surface.
- 9.) The same conditions for cleaning with soft materials apply for the glass lid, as well as avoiding the use of chemical agents. Avoid large thermal shocks – when removing the casserole dish with the lid from the oven, always allow it to cool to room temperature before cleaning the lid or putting it away.
- 10.) For safety reasons, always use mittens or wiping cloths when handling hot cookware.

Safety notice:

High temperatures (**above 250 °C**) may damage the plastic handle or lid of the cookware, e.g. when the handle is placed near the burner, glowing filament, oven wall, etc. The use of sharp metal utensils may damage (scratch, pierce) the surface (e.g. knife, fork). The use of coarse or aggressive cleaning agents can damage the surface (e.g. caustic pipe cleaning agents). Negligent handling (e.g. of the lid) may lead to surface damage (chipping). **These „footprints“ do not have the slightest effect on the quality of the prepared food nor on the lifetime of the cookware, they only affect its aesthetic appearance.** Through the effect of high temperature of the heat source, the surface may be damaged (burned).

Ecology:

Depending on the size of the product, all products have marks printed on them denoting the material used for the production of the packaging, component and accessories, as well as their recycling. Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste. **Keep plastic bags out of the reach of children, danger of suffocation.**

The purchaser was informed about the function and handling of the product.