

lamart
by Pierre Lamart

WAVE

EN Dear customer,

you are now holding: a durable multi-function plastic container that is also intended for heating in a microwave oven; the container includes a tight-fitting lid with a steam vent and steam grill. The container is suitable for use in refrigerators and freezers.

Description:

1. Lid
2. Steam outlet
3. Steam plate
4. Dish

Tip: Smaller food pieces cook faster than larger ones. Cut food into pieces of the same size to ensure even heating.

Important safety information:

- 1) Use the steamer only with the models for which it has been designed.
- 2) Only use the steamer with the microwave heating mode
- 3) Under no condition should you use the steamer in combination mode with a grill or hot air – risk of the steamer melting or catching on fire
- 4) Do not use the steamer and microwave oven when there is no water in the dish and without the food inserted
- 5) Before using the steamer, pour at least 200 ml of water into the dish. If you pour less than 200 ml, the food may not cook completely, a fire may result or you may seriously damage the steamer attachment and microwave oven
- 6) Do not use the steamer for purposes other than those for which it was designed
- 7) Do not use the microwave oven if the steamer is damaged
- 8) Do not use the steamer in a microwave oven without the guide and glass plate installed.
- 9) Do not use the steamer without the lid or dish.
- 10) Before turning on the microwave oven, make sure that the steamer is correctly assembled and the lid correctly seated.
- 11) Do not touch hot surfaces on the attachment, water in the dish may be very hot just like the steam and the food. To take the steamer out, use kitchen gloves or a wiping cloth
- 12) Do not use the steamer outdoors
- 13) Eggs or chestnuts may explode, therefore, do not heat them in the steamer
- 14) Follow the instructions in this guide

Care and maintenance:

For cleaning, do not use abrasive cleaning products, solvents, petrol, thinners or any other similar substances. For cleaning, use only clean water with a little kitchen detergent. Do not use the steamer on any type of stove or oven or in their vicinity.

Safety notice:

High temperatures may damage the container or the lid. The use of sharp metal utensils (e.g. knives, forks) may damage (scratch) the surface. The use of coarse or aggressive cleaning agents can damage the surface (e.g. caustic pipe cleaning agents). Negligent handling (e.g. of the lid) may lead to surface damage (chipping). **These “footprints” do not have the slightest effect on the quality of the prepared food or beverages nor on the lifetime of the flask, they only affect its aesthetic appearance.** Through the effect of high temperature of the heat source, the surface may be damaged.

Ecology:

Depending on the size of the product, all products have marks printed on them denoting the material used for the production of the packaging, components and accessories, as well as their recycling. Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste. **Keep plastic bags out of the reach of children, danger of suffocation.**

The purchaser was informed about the function and handling of the product.