

# SENCOR®

## SLA 200



**User's manual**

**Návod k obsluze**

**Návod na obsluhu**

**Használati útmutató**

**Instrukcja obsługi**

**A4 Laminator**

**Laminátor A4**

**Laminátor A4**

**A4-es felületbevonó**

**Laminator A4**

**EN CZ SK HU PL**



**READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THE LAMINATOR.  
PLEASE KEEP FOR FUTURE REFERENCE.**

## **Instruction Manual**

**Thank you for choosing a Sencor laminator. We aim to supply quality machines that create excellent results. Before operating the laminator – please read and keep the user instructions for reference.**

When using electrical appliances, basic precautions should always be followed to reduce risk of injury or electric shock, including the following:

1. Always unplug the appliance when not in use.
2. This appliance is not intended for use by persons, (including Children), with reduced physical, sensory or mental capabilities or lack of experience or knowledge. They should be given supervision and instruction in the use of the appliance, by a person responsible for their safety.
3. The laminator will become very hot in use and care should be taken when handling the machine.
4. Protect against the risk of electrical hazards. Do not immerse the power cord, plug or appliance in water or other liquids, or use near water.
5. Do not insert any metal objects or other foreign objects such as jewellery, hair, fingers or clothing into the appliance.
6. Remove paper clips and staples before laminating.
7. Do not operate the appliance with a damaged plug or power cord or after the appliance has malfunctioned or become damaged in some manner.
8. If the Power Cord is damaged, it must be replaced by a qualified Engineer in order to avoid a hazard,
9. The appliance should be installed near the outlet socket and the socket should be easily accessible.
10. Only laminate paper or board. Do not laminate unusual objects.
11. Do not use aerosol dusters or cleaners.
12. Do not spray anything into or lubricate the appliance.

## **Setup**

1. Operate the machine on a flat and stable surface.
2. Ensure there is enough clear space at the rear of the machine for the laminated pouch to exit the machine.
3. The SLA 200 operates with laminating pouches 100 (2 × 50) micron – 160 (2 × 80) micron thick, (Credit card size to A4 size).

## **Operating the laminator**

The SLA 200 is operated by a rocker switch, located at the right hand side of the appliance. There are 2 positions **ON (I)** and **OFF (O)**.

1. Plug the machines cable into a convenient 13 Amp domestic supply outlet.
2. To Laminate select the ON (I) setting, laminating can begin when the Green "Ready" light comes on, which indicates the Laminator is hot enough to laminate, (Allow approx 3-5 minutes for the Laminator to warm up).
3. Prepare the laminating pouch for inserting into the machine. **See "How to load a laminating pouch below". Do not use pouches thicker than 160mic (2×80 mic per side).**

4. When the machine has reached operating temperature, you may insert the pouch, (sealed edge first), squarely into the machine until it engages with the rollers.  
Never insert a pouch open edge first into the machine.
5. The pouch will move through the machine and exit at the rear.
6. During the process the **READY** light may go out as heat is absorbed by the laminating pouch.  
This is normal.
7. Do not cut down Laminating Pouches to Laminate smaller sizes of Paper, smaller sizes of Pouches are available, see below, please use these.
8. Turn the laminator to **OFF (O)** after use.
9. Always remove the plug from the power supply, when the Laminator is not in use.

### **IMPORTANT!**

Do not touch the top of the machine during use, as it will get very hot and take approximately 3–4 hours to cool down. Do not place items on top of the machine at any time.

## **Laminating Pouch Sizes**

A4 – 303 × 216 mm

A5 – 216 × 154 mm

A6 – 154 × 110 mm

A7 – 80 × 111 mm

ID Card – 90 × 60 mm

Credit Card – 86 × 54 mm

## **Laminating capacity**

The SLA 200 is a personal laminator designed for hot lamination so is only suitable for home and small office use only. Do not use the appliance with pouches thicker than 160 microns in thickness. Maximum Lamination thickness is 0.45mm, excluding the pouch.

## **How to load a laminating pouch**

The laminating pouch is sealed along one side. Open the pouch and place the paper to be laminated centrally inside the pouch as close to the sealed edge as possible.

Ensure there is an equal border all round the paper (e.g.: A4 paper should have a 3mm border).

The sealed edge (not the open edges) is placed into the entry slot to start the lamination process.

Always watch the pouch during the Laminating process to ensure it comes out the other side of the Laminator.

It may wrap around the rollers if not placed squarely and centrally in the entry slot.

In the unlikely event the pouch becomes jammed in the Laminator, please switch off, do not open the appliance. Only a qualified service engineer should repair the appliance.

## **Warranty & service**

Never service the product yourself. The appliance is guaranteed for 12 months from date of purchase, subject to normal use. If the laminator is under warranty then return it to the point of purchase for replacement or repair.

# SLA 200 Laminator Specification

Rollers:	2 Roller (hot shoe)
Entry width:	236 mm
Min lamination thickness:	100 (2×50) micron
Max lamination thickness:	160 (2×80) micron
Min pouch size:	Credit card size (54×86 mm)
Max pouch size:	A4 size (303 × 216 mm)
Max lamination Thickness:	0.45 mm, excluding the Pouch.
Lamination speed:	25 cm / min
Warm-up:	3–5 minutes
Power consumption:	220 Watts
Input:	AC 220–240 V, 1.0 amp
Dimensions:	330 × 118 × 88 mm (L × D × H)



Fast ČR, a.s. declares that the product conforms to the basic requirements and other relevant provisions of the directive 1999/5/ES. The device can be operated in the EU without restriction. The declaration of conformity is a part of the user's manual or can be found at the website [www.sencor.eu](http://www.sencor.eu).

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

### For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

### Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.



Visit our website at [www.sencor.eu](http://www.sencor.eu) to see our full range of products.

UK: Waste Electrical products/batteries should not be disposed of with household waste. Facilities exist, for your nearest facilities see [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or in store for details.

Address of the manufacturer: FAST ČR, a.s., Černokostelecká 1621, CZ 251 01 Říčany

# SENCOR®

## EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

### **This warranty is void especially if apply as follows:**

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

### **Authorized service centers**

Visit [www.sencor.eu](http://www.sencor.eu) for detailed information about authorized service centers.