

SENCOR®

Let's live!

Tablet

ELEMENT 10.1D102

QUICK GUIDE

EN



Important safety instructions

If you want to use this product correctly, carefully read this user's manual and store it for future reference. If you give (sell) the device to somebody, please also include all the documentation together with this device, including this user's manual.

Due to the fact that the device is in continuous development, the user's manual may not completely correspond to the current version of your device. We reserve the right to make changes without prior notice.

We recommend that you backup important data. Neither the distributor nor vendor is responsible for such loss of data.



This symbol indicates that there is dangerous voltage inside this device, which presents a risk of injury by electrical shock.



This symbol indicates important operating or repair instructions in the device's documentation.

General safety instructions

- Read this user's manual. Follow the instructions contained in this user's manual.
- Heed all warnings.
- Adhere to all instructions.
- Use only accessories determined by the manufacturer.
- An open flame must not be placed on the device, e.g. burning candle.
- Use the device in a temperate climate zone.
- Neither the manufacturer nor the seller of the device under any condition takes responsibility for any direct or indirect damages caused by not adhering to instructions for installation, setup, use, service or cleaning of this device as described in this user's manual.
- Protect the device against being knocked, dropped, hit, shaken and against vibrations, humidity and dust.
- Do not use excessive force/pressure on any part of the device, namely the buttons, connectors, touchscreen surfaces.
- Before allowing children to use the device, they must be appropriately to their age, informed about the correct and safe use of the player.

Practical use

- Protect the device against falls and impacts and protect it against being hit by blunt or sharp objects. Depending on your typical use of the device, use a suitably rigid or otherwise soft case/cover.

- Protect the touchscreen surface against scratching and excessive pressure
- Only install software with the power adapter connected as this will prevent potential installation errors or damage to the device resulting from an incomplete installation due to a weak power supply
- Do not use the radio function of the device (Wi-Fi, etc.), or completely turn off the device in places where it is required by general or special regulations, for example in aeroplanes, medical surgeries.
- When using personal medical aids (pacemakers, hearing aids), please inform yourself about possible restrictions relating to the operation of electronic equipment in their vicinity and modify your tablet operating mode if necessary.
- In the event of problems with the operation of the device, fully charge the batteries and perform a factory reset (renew factory settings). Attention: This factory reset will delete all your personal data, entered accounts, user-installed applications and will renew the system to the same condition as when it left the factory.

Safe operation

- Install the device according to the instructions in the user's manual.
- Do not install the device in direct sunlight or near sources of heat, such as heaters, heat exchangers, stoves or other appliances (including amplifiers) producing heat. High temperatures may reduce the lifetime of electronic components in the device. Do not use or leave the device in the vicinity of an open fire.
- The device must not be exposed to dripping or running water and objects filled with water must not be placed on it, e.g. vases. Protect the device against rain, spray or contact with any other liquid, do not leave or install the device outdoors. Do not use the device outdoors. Not adhering to these instructions creates a risk of electrical shock or fire hazard.
- Do not use this device near water.
- Before connecting the device's power adapter to a power socket, check that the voltage in your power socket corresponds to the voltage on the rating label on the power adapter.
- Make sure that the power cord is not stepped on or compressed, particularly near the power plug, power socket and at the point where it exits the device or the adapter. The power plug (adapter) is used as a disconnection device and must be easily accessible.
- Remember to always disconnect the power plug (adapter) from the power socket before disconnecting the power cable from the back side of the device.
- Disconnect the device from the power socket during storms or if you will not be using it for a longer time.
- Avoid moving the device from a cold environment to a warm one or vice versa, or when using the device in a very humid environment. Air humidity may condense on some components inside the case of the device and the device may stop working temporarily. If this occurs leave the device in a warm and well ventilated place and wait 1 – 2 hours until the moisture evaporates and the device can once more be used as usual. Take care especially during the first use of the player immediately after its purchase during a cold season.

- Do not use the headphones with a high volume level over the long term so as to prevent hearing damage.
- Do not use the device during activities requiring concentration, for example driving transport vehicles, walking on footpaths and other travel ways (roads, railway lines, escalators, etc.), or work with tools that could cause injuries.
- To achieve the maximum battery lifetime, fully charge the batteries if you will not be using the device for an extended period of time.
- Neither the manufacturer nor the seller of the device under any condition takes responsibility for any direct or indirect damages caused by not adhering to instructions for installation, setup, use, service or cleaning of this device as described in this user's manual.
- Protect the device against being knocked, dropped, hit, shaken and against vibrations, humidity and dust.

Repairs and maintenance

- To prevent risk of injury through electrical shock or the creation of a fire, do not take the device out of the case - there are no parts inside the case repairable or adjustable by the user without relevant equipment and qualifications. Should the device require adjustment or repair, contact a professional service centre.
- Have old batteries replaced at a professional service centre in order to maintain the full functionality of the device and for the ecological disposal of old parts.
- In the case of any unusual events occurring during the use of the device, e.g. if there is a distinct smell of burning insulation or smoke comes out of the device, immediately turn off the device, disconnect the device from the power source and do not use the device until you have received the results of an inspection by the employees of the professional service centre.
- Have all repairs carried out by qualified personnel. Repairs are necessary if the device has been damaged in any way, for example if the power cord is damaged, liquid was poured on the device, foreign objects have entered the device, the device has been exposed to rain or moisture, if the device is not working as usual or if it has fallen.
- Before cleaning, carrying, taking discs and memory cards out of the device or other maintenance, disconnect the plug (adapter) from the power socket.
- Backup your data before an any intervention (maintenance, etc.).
- Clean the device only with a dry cloth.
- For cleaning do not use petrol, thinners or any other solvents or use any abrasive cleaning agents, steel wool or any sponges with steel wool.

Notes on the USB connector:

USB flash drives must be inserted into the device directly. To prevent data transmission failure or its interference do not use USB extension cables. Electrostatic discharges may cause the device to malfunction. In such an event the user must restart the device.

Before using a USB flash drive test its ability to communicate with the device and its data reading and writing speed.

To achieve maximum reading speed we recommend that you keep disk space defragmented. Use the FAT32 file system, a single partition, without protection. If reading and writing on the USB flash disk is not continuous, undesirable effects may occur such as partial image loss (distortions/checkering effects) or complete image loss, audio defects, and in extreme cases the operation will be stopped. Unexpected behaviour of the connected flash drive, or the presence of viruses or other damaging software may cause the functions of the device to stop working, necessitating a restart.

The USB connector is the standard type and is not able to power a USB device with a high power usage (e.g. hard disk drives HDD). Use devices with independent power supplies and power them from their own power supplies.

The device was designed to achieve maximum compatibility with flash drives. With respect to the variety of devices on the market it is not possible to guarantee compatibility with every USB device. In the event of difficulties, try formatting the flash drive directly in the appliance. If problems persist, use a different flash drive.

Due to the wide range of microSD cards / USB devices available on the market it is not possible to guarantee the compatibility of the device with all microSD cards / USB devices.


Serial number of the device

The serial number of the device is unique and unequivocally identifies your device. Enter the serial number of your device together with other details necessary for the definite identification of your device below.

Serial number: _____

Date of purchase: _____

1. Description of the device

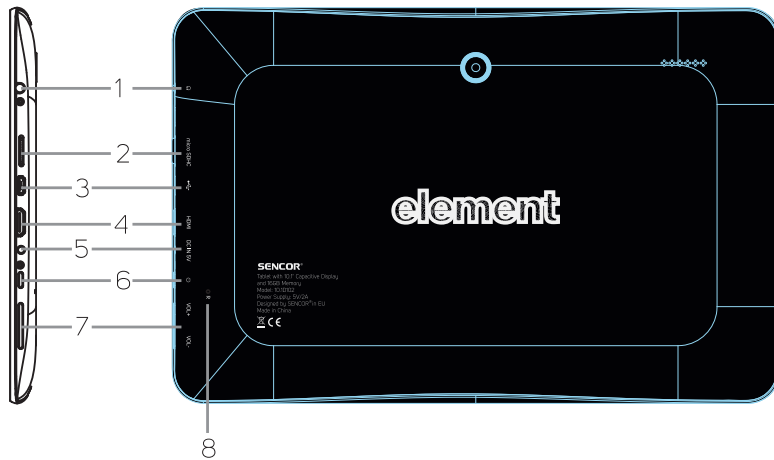

1. Headphone socket
2. microSD card slot
3. USB HOST /OTG port
4. HDMI port
5. Power adapter jack
6. Main power switch
7. Decrease volume button
8. Increase volume button
9. RESET button

2. Basic controls

2.1 Turning on/off

Turning on the device: When the device is turned off, hold down the main power button to turn it on. It may take a short time for the device to turn on, so wait until the device turns on.

Turning off the device: During use, press and hold down the power button for about 3 seconds and a dialogue box for turning off the device will appear. Confirm that you wish to turn it off and the tablet will turn itself off.

2.2 Charging

The charging time for the battery pack may be several hours, especially for the first charge. Use **only the power adapter supplied** for charging the device.

The charging indicator will be lit during the charging process. You can also monitor the battery power level on the battery indicator shown on the screen (depending on the model).

Note:

If the tablet has been inactive for a long time and the battery discharges completely, allow it to charge for several minutes before turning it on. The tablet cannot be turned on with a completely flat battery as it is necessary to wait for the voltage to reach a minimum level to perform a successful system start up.

The battery will charge faster if you do not use the tablet during the charging process. While charging, some of the power from the adapter is used for running the device and the charging time is extended.

A new battery will reach full capacity after being charged and discharged several times, usually three times.

For optimal battery use, charge without interruption until it reaches 100% (Charged) and start charging only after being prompted by the system (15%). If the device will be turned off for an extended period of time, first fully charge the battery.

Attention:

For charging the tablet, USE the supplied power adapter and USB cable, and do not charge using a computer USB connector due to the high power load. When connected to the computer via USB, power is taken to cover the operation of the tablet in order to prevent losing the connection due to a low battery capacity. The energy from a standard USB port is not sufficient to satisfactorily charge the tablet battery. When charging, the tablet draws up to 1.5 A, which modern computers can provide, inform yourself about the parameters of the USB slots on your computer.

Adhere to the following instructions for the protection of the lithium battery.

- Do not recharge during extremely high temperatures or in direct sunlight.
- The adapter and the device may heat up during the recharging process. This is normal.

2.3 Connecting to a computer and transferring files

Use the supplied USB cable to connect the tablet to a PC to transfer data. When connected to a computer, the system will inform you of this fact and will permit you to switch to the Storage mode, in which you can access the internal memory of the tablet from the computer. Now you will be able to transfer and manage data in the tablet. Turn off the Storage mode before disconnecting the USB cable.

Attention:

Be careful when working in the tablet's memory. Through careless handling you could damage a part of the system or your data.

2.4 Using microSD cards

Insert a microSD card into the microSD card slot. When inserting it, make sure it is facing the correct way so as to prevent damaging the card. After inserting it correctly you will hear a click. After insertion, the system identifies the contents of the card. In menu – File manager – SD card you can display the files saved on the microSD card. Before removing the card first enter the Menu – Settings – Storage and unmount the microSD card from the system. Now you can safely remove the microSD card. To physically remove the card, first gently press the card into the tablet and then carefully take it out.

Attention:

Do not insert or remove the card using force.

Do not subject the card to direct sunlight or other effects of heat.

Do not subject the card to dripping or running water and objects filled with water must not be placed on it, e.g. vases. Protect it against rain, spray or contact with any other liquid, do not leave or install it outdoors. Do not use it outdoors.

Backup the data stored on the card.

Do not take the card out while it is being used, i.e. data is being read from or written to it. Otherwise, you may lose parts of file or complete files. Recovering them may be difficult or impossible.

APK files (applications, games, etc.) are installed into the memory of the device. If you wish to make room, APK files can be moved to the inserted card unless system requirements or the application's properties prevent it.

2.5 WIFI connection

Tap on Settings – Wi-Fi to activate the Wi-Fi function. Available Wi-Fi networks will be shown on the right.

Select the required wireless network and the system will either connect automatically or request that you enter a valid password, all based on the parameters of the network being connected to. Find out the password from the network administrator.

For reliability and speed of the connection ensure a sufficient Wi-Fi signal level. This level is indicated by a set of four circular sectors (the more sectors displayed, the stronger the signal). If the signal is weak, the Wi-Fi router reduces the transmission speed, which may then be insufficient for certain uses.

Note:

An activated internal Wi-Fi module consumes power even when it is not transferring data. If you wish to extend the operating time of the battery, deactivate Wi-Fi in the tablet's settings.

3. Technical specifications

Model		Element 10.1D102
Basic specifications	Operating system	Android 4.2
	Processor	Rockchip RK3168 (Cortex A9) dual core 1.2GHz
	Screen size	10.1" multi-touch capacitive screen
	Resolution	1280 x 800 IPS panel
	Memory	1GB DDR3
	Storage	16 GB
	External memory	MicroSDHC (up to 32 GB)
	Camera	Front: 0.3 MP, rear: 2.0 MP
	G-sensor	3D G-sensor /16-bit data output
	WiFi	802.11b/g/n
	Bluetooth	V 4.0
	Battery	6000 mAh Li-Polymer
Video	Format	MOV, MKV, AVI, RM, TS, TP, M2TS, VOB, DAT, MPEG, MP4, PMP, 3GP, FLV, H.264, MPEG4, Xvid, Divx, H.263, VP8
	Output	Mini HDMI, type C (supports 1080p and 720p)
Audio	Format	MP3, WMA, WAV, (APE, FLAC, AAC, OGG are only supported by 3rd party software)
Other functions	Language	English, Czech, Slovak, Hungarian, Polish
	Clock	Yes
	Recording	Yes
Input/Output	USB2.0	1 x Micro USB 2.0, OTG support
	Headphones	3.5mm stereo headphone jack
	TV output	Mini HDMI output port
Operating temperature		-20 - + 65°C
Power adapter	Input	100 – 240 V~ 50 / 60 Hz
	Output	5 V = 2 A
Size		264 x 172 x 13 mm
Weight		0.6 kg
Accessories		Power adapter, microUSB cable, USB OTG cable, quick guide

The full version of the user's manual is available at the website www.sencor.eu.

The technical specifications provided above may change without prior notice.

The CE symbol displayed on the unit, the user's manual and on the packaging shows that the unit meets the basic requirements of the R&TTE directive, 1995/5/EC, and the Low voltage directive 73/23/EEC. The declaration of conformity can be found at www.sencor.cz.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.



DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these products to determined collection points. Or as an alternative in some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product. Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives that apply to it.

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make these changes.

SENCOR®

EN Warranty conditions

A warranty card is not included with this product.

The seller provides to the buyer a warranty on the product for a period of 24 months from the acceptance of the product by the buyer. The warranty is provided under the conditions contained below. The warranty applies only to new consumer goods sold to the consumer for standard domestic use. The rights and responsibilities for defects (complaints) can be claimed either at the vendor, where the product was purchased or at the authorised service centre listed below. The buyer is obliged to lodge the complaint without undue delay so that the defect is not worsened, but no later than by the end of the warranty period. The buyer is obliged to provide cooperation during the complaint procedure necessary for the verification of the claimed defect. Only a complete and due to hygiene regulations unsoiled product will be accepted into the complaint procedure. In the case of a justified complaint the warranty period is extended by the time from the moment the complaint was lodged to the moment the repaired product was received by the buyer, when the buyer is obliged to accept the product after it has been repaired. The buyer is obliged to prove the right to the complaint (proof of purchase of the product, warranty card, documentation about putting the product into operation)

The warranty does not cover, in particular:

- defects for which a discount was given;
- wear and damage arising from standard use of the product;
- damage to the product resulting from unprofessional or incorrect installation, the use of the product in contradiction to the user's manual, legal regulations in force and generally known and usual methods of use, resulting from the use of the product for a purpose other than for which it was designed;
- damage to the product arising from neglected or incorrect maintenance;
- damage to the product arising from it being soiled, by an accident or by the occurrence of force-majeure (natural event, fire, flooding);
- functional defects of the product caused by inappropriate signal quality, interfering electromagnetic field, etc., mechanical damage to the product (button is broken off, it was dropped);
- damage caused by the use of inappropriate media, refills, consumables (battery) or inappropriate operating conditions (e.g. high ambient temperatures, high humidity in the environment, shocks);
- damage, modification or other tampering with the product performed by an unqualified or unauthorised person (service centre);
- cases, where the buyer does not prove the grounds for his rights (when and where the claimed product was purchased);
- cases, where the information on the presented documentation differs from the information shown on the product;
- cases when the claimed product cannot be identified as the product in the documentation with which the buyer proves his right to complaint (e.g. damaged serial number or warranty seal of the device, overwritten details in documentation);

Service coordinator for the Czech Republic:

FAST ČR, a.s., Černokostelecká 1621, 251 01 Říčany; tel: 323 204 120

FAST ČR, a.s., Cejl 31, 602 00 Brno; tel: 531 010 295

You can find other authorised service centres for the Czech Republic at www.sencor.cz.