

SENCOR®

Let's live!

Tablet
ELEMENT 10.1D103

USER'S MANUAL
EN



**ATTENTION:**

THE USER PROPERTIES OF THIS TABLET MAY BE AFFECTED BY THE SOFTWARE THAT IS INSTALLED. THIS USER'S MANUAL MAY DESCRIBE FUNCTIONS AVAILABLE ONLY IN DESIGNS DIFFERENT TO YOUR SPECIFIC MODEL.

CONTENTS

| | |
|---|----|
| Important safety instructions | 3 |
| 1. Included contents | 8 |
| 2. Description of the device..... | 9 |
| 3. Basic controls..... | 10 |
| 3.1. Turning on/off..... | 10 |
| 3.2. Lock mode..... | 10 |
| 3.3. Charging..... | 11 |
| 3.4. Connecting to a computer and transferring files..... | 12 |
| 3.5. Switching inputs..... | 12 |
| 3.6. Using microSD cards | 13 |
| 3.7. Default screen..... | 13 |
| 4. WIFI connection | 15 |
| 5. Applications | 16 |
| 5.1. Application manager..... | 18 |
| 5.2. Telephone | 19 |
| 5.3. Messages..... | 19 |
| 5.4. Contacts | 19 |
| 5.5. Voice dialling..... | 20 |
| 5.6. Voice search..... | 20 |

| | |
|-----------------------------------|----|
| 5.7. Clock | 20 |
| 5.8. Play store..... | 21 |
| 5.9. Internet..... | 22 |
| 5.10. Calendar..... | 22 |
| 5.11. Camera..... | 23 |
| 5.12. Calculator..... | 24 |
| 5.13. Email..... | 24 |
| 5.14. File manager..... | 25 |
| 5.15. Music player | 26 |
| 5.16. Video player..... | 26 |
| 5.17. Gallery | 27 |
| 5.18. Gmail..... | 28 |
| 5.19. Maps, Locations, GPS | 29 |
| 5.20. Talk..... | 30 |
| 5.21. Google..... | 30 |
| 6. Technical specifications | 31 |

Important safety instructions

If you want to use this product correctly, carefully read this user's manual and store it for future reference. If you give (sell) the device to somebody, please also include all the documentation together with this device, including this user's manual. The software installed by the manufacturer and the user may significantly affect the properties of the device. Follow the instructions and manuals for the installed software.

We reserve the right to make changes leading to improvements in the properties or operation of the device without prior notice.

We recommend backing up important data on a regular basis as well as before changing software in any way. Neither the distributor nor vendor is responsible for such loss of data.



This symbol indicates important operating or repair instructions in the device's documentation.

General safety instructions

- Read this user's manual. Follow the instructions contained in this user's manual.
- Heed all warnings.
- Adhere to all instructions.
- Use only accessories determined by the manufacturer.
- An open flame must not be placed on the device, e.g. burning candle.
- Use the device in a temperate climate zone, in domestic conditions, unless expressly instructed otherwise.
- Under no condition does the manufacturer or the vendor of the device take responsibility for any direct or indirect damages caused by not adhering to instructions for installation, setup, use, repair or cleaning of this device as described in this user's manual.
- Protect the device against being knocked, dropped, hit, shaken and against vibrations, humidity and dust.
- Do not use excessive force/pressure on any part of the device, namely the buttons, connectors, touchscreen surfaces.
- Before allowing children to use the device, they must be appropriately to their age, informed about the correct and safe use of the player.

Practical use

- Protect the device against falls and impacts and protect it against being hit by blunt or sharp objects. Depending on your typical use of the device, use a suitably rigid or otherwise soft case/cover.
- Protect the touchscreen surface against scratching and excessive pressure.
- Only install software with the power adapter connected as this will prevent potential installation errors or damage to the device resulting from an incomplete installation due to a weak power supply

- Do not use the radio function of the device (Wi-Fi, etc.), or completely turn off the device in places where it is required by general or special regulations, for example in aeroplanes, medical surgeries.
- When using personal medical aids (pacemakers, hearing aids), please inform yourself about possible restrictions relating to the operation of electronic equipment in their vicinity and modify your tablet operating mode if necessary.
- **In the event of problems with the operation of the device, fully charge the batteries and perform a factory reset (renew factory settings).** Attention: This factory reset will delete all your personal data, entered accounts, user-installed applications and will renew the system to the same condition as when it left the factory.

Safe operation

- Install the device according to the instructions in the user's manual.
- Do not install the device in direct sunlight or near sources of heat, such as heaters, heat exchangers, stoves or other appliances (including amplifiers) producing heat. High temperatures may reduce the lifetime of electronic components in the device. Do not use or leave the device in the vicinity of an open fire.
- The device must not be exposed to dripping or running water and objects filled with water must not be placed on it, e.g. vases. Protect the device against rain, spray or contact with any other liquid, do not leave or install the device outdoors. Do not use the device outdoors. Not adhering to these instructions creates a risk of electrical shock or fire hazard.
- Before connecting the device's power adapter to a power socket, check that the voltage in your power socket corresponds to the voltage on the rating label found on the power adapter.
- Make sure that the power cord is not stepped on or compressed, particularly near the power plug, power socket and at the point where it exits the device or the adapter. The power plug (adapter) is used as a disconnection device and must be easily accessible.
- Firmly insert the power plug into the power socket on the device until it is fully pushed in. Do not use excessive force to insert the plug.
- Do not handle the tablet while it is charging to prevent mechanically damaging it – breaking out connectors or breaking cables.
- Remember to always disconnect the power plug (adapter) from the power socket before disconnecting the power cable from the rear side of the device.
- Disconnect the device or the adapter from the power socket during storms or if you will not be using it for a longer period of time.
- Avoid moving the device from a cold environment to a warm one or vice versa, or when using the device in a very humid environment. Air humidity may condense on some components inside the case of the device and the device may stop working temporarily. If this occurs leave the device in a warm and well ventilated place and wait 1 – 2 hours until the moisture evaporates and the device can once more be used as usual. Take care especially during the first use of the player immediately after its purchase during a cold season.
- Do not use the headphones with a high volume level over the long term so as to prevent hearing damage.

- Do not use the device during activities requiring concentration, for example driving transport vehicles, walking on footpaths and other travel ways (roads, railway lines, escalators, etc.), or work with tools that could cause injuries.
- To achieve the maximum battery lifetime, fully charge the batteries if you will not be using the device for an extended period of time.
- Under no condition does the manufacturer or the vendor of the device take responsibility for any direct or indirect damages caused by not adhering to instructions for installation, setup, use, repair or cleaning of this device as described in this user's manual.

Repairs and maintenance

- To prevent risk of injury through electrical shock or the creation of a fire, do not disassemble the device or the adapter - there are no parts inside that are repairable or adjustable by the user without relevant equipment and qualifications. Should the device require adjustment or repair, contact a professional service centre.
- Have old batteries replaced at a professional service centre in order to maintain the full functionality of the device and for the ecological disposal of old parts.
- In the case of any unusual events occurring during the use of the device, e.g. if there is a distinct smell of burning insulation or smoke comes out of the device, immediately turn off the device, disconnect the device from the power source and do not use the device until you have received the results of the inspection performed by the employees of the professional service centre.
- Have all repairs carried out by qualified personnel. Repairs are necessary if the device has been damaged in any way, for example if the power cord is damaged, liquid was poured on the device, foreign objects have entered the device, the device has been exposed to rain or moisture, if the device is not working as usual or if it has fallen.
- Before cleaning, carrying, taking discs and memory cards out of the device or other maintenance, disconnect the plug (adapter) from the power socket.
- Backup your data before any intervention (maintenance, etc.) is performed.
- Clean the device only with a dry cloth.
- For cleaning do not use petrol, thinners or any other solvents or use any abrasive cleaning agents, steel wool or any sponges with steel wool.

Notes on the USB connector:

USB flash drives must be inserted into the device directly or using the supplied cable. To prevent data transmission failure or its interference do not use a different USB extension cable. Electrostatic discharges may cause the device to malfunction. In such an event the user must restart the device.

Before permanent use of a USB device, test its ability to communicate with the device and its data reading and writing speed. The performance of the memory device (e.g. speed and available space) may, apart from the properties of the memory hardware, also depend on the software that is used. Find out the properties and hardware demands of the software that is used.

The USB connector is the standard type and is not able to power a USB device with a high power usage (e.g. hard disk drives HDD). Use devices with independent power supplies and power them from their own power supplies.

The device was designed to achieve maximum compatibility with flash drives. With respect to the variety of devices on the market it is not possible to guarantee compatibility with every USB device. In the event of difficulties try formatting the flash drive directly in the appliance. If problems persist, use a different flash drive.

Due to the wide range of microSD cards/USB devices available on the market it is not possible to guarantee the compatibility of the device with all microSD cards/USB devices.

Serial number of the device

The serial number of the product is unique and unequivocally identifies your device. Enter the serial number of your device together with other details necessary for the definite identification of your device below.

Serial number: _____

Date of purchase: _____

Supplement to LCD

Measures to take when a static image is displayed; red/blue/green pixels on the screen

A static image can permanently damage the display part of the television

- Do not leave a static image on an LCD screen for longer than 2 hours, because this could damage the screen. This type of damage is known as "screen burn-in".
- Similar damage to the LCD screen can be caused by a statically located TV channel logo.
- Watching television in 4:3, 16:9 formats or similar (formats not covering the entire area of the screen) for a long time may leave marks on the right or left side, or possibly in the middle of the picture as a result of the differences in light emission. Similar damage may also occur when watching a DVD or playing games.
- The display of a static image from video games or computers for an extended period of time may cause a partial effect of a "persistent image". To prevent this effect from occurring, lower the brightness and contrast when displaying a static picture.
- Damage to the screen resulting from the above mentioned causes is not covered by the warranty!



Red/blue/green/black pixels may appear on the screen

- This is a characteristic feature of liquid crystal displays and does not represent a problem. LCD screens are manufactured using a very precise technology in order to achieve a very fine picture resolution. From time to time several inactive pixels may appear on the screen as a permanently red, blue, green or black pixel (up to 0.001% of the total number of pixels on the screen). This does not in any way affect the features and performance of your television.

 
1. Included contents

1x tablet
1x micro USB cable
1x quick guide
1x power adapter

Note:

Accessories may change without prior notice.

2. Description of the device

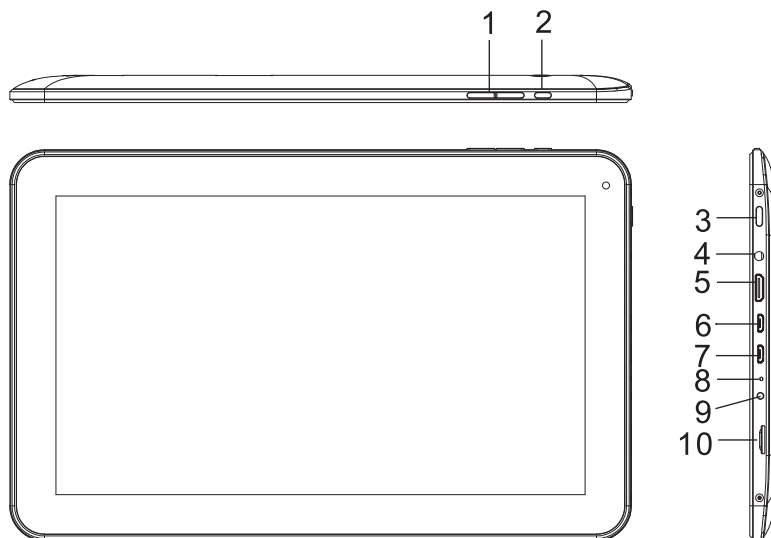

1. **VOL +/- button: increase or decrease the volume**
2. **Back button**
3. **Main switch**
4. **Headphone socket**
5. **HDMI port**
6. **USB HOST port**
7. **USB OTG port**
8. **RESET button**
9. **Power adapter jack**
10. **microSD card slot**

3. Basic controls

3.1. Turning on/off

Turning on the device: When the device is turned off, hold down the main power button for approx. 3 seconds to turn it on. It may take the device some time to turn on after the button is released. Wait until the device turns on and until the main screen appears.

Turning off the device: During use, press and hold down the power button for about 3 seconds and a dialogue box for turning off the device will appear. Confirm that you wish to turn it off and the tablet will turn itself off.

3.2. Lock mode

Unlocking the screen

When the device is turned on or the screen is turned back on from the energy saving mode, it is necessary to unlock the device. When the closed lock icon appears, touch and drag it with your finger to the open lock icon.

Locking the screen

While the screen is unlocked, briefly press the main power button and the system will automatically activate the energy saving mode and at the same time lock and turn off the screen.

Note:

The system does not stop running in the energy saving mode, only the LCD screen is turned off and applications enter a low power consumption mode. Nevertheless, even this small level of consumption uses up battery power, but more slowly. If you wish to extend battery life in the sleep mode, do not leave too many applications and system components (most frequently the Wi-Fi module) running and close them in the appropriate way.

Setting a password for unlocking

To increase the level of protection of your personal information, you can set a password for unlocking the screen. Enter the menu Settings – Security – Screen lock and here set the password (a pattern usually), which then needs to be confirmed once.

3.3. Charging

The charging time for the battery may be several hours, especially for the first charge. Use **only the power adapter supplied** for charging the device.

During the charging process, the charging indicator light will be lit (depending on the model). The battery power level and the charging process can be monitored on the display on the battery indicator.

Notes:

- If the tablet has been inactive for a long time and the battery discharges completely, allow it to charge for several minutes before turning it on. The tablet cannot be turned on with a completely flat battery as it is necessary to wait for the voltage to reach a minimum level to perform a successful system start up.
- The battery will charge faster if you do not use the tablet during the charging process. While charging, some of the power from the adapter is used for running the device and the charging time is extended.
- A new battery will reach full capacity after being charged and discharged several times, usually three times.
- For optimal battery use, charge without interruption until it reaches 100% (Charged) and start charging only after being prompted by the system (15%). If the device will be turned off for an extended period of time, first fully charge the battery.

**ATTENTION:**

For charging the tablet USE the supplied power adapter and USB cable, and do not charge using a computer USB connector due to the high power load. When connected to the computer via USB, power is taken to cover the operation of the tablet in order to prevent losing the connection due to a low battery capacity. The energy from a standard USB port is usually not sufficient to satisfactorily charge the tablet battery. When charging, the tablet draws current, which modern computers can provide, inform yourself about the parameters of the USB slots on your computer.

Adhere to the following instructions for the protection of the lithium battery.

- **Do not recharge during extremely high temperatures or in direct sunlight.**
- **The adapter and the device may heat up during the recharging process.**

This is normal.

3.4. Connecting to a computer and transferring files

Use the supplied USB cable to connect the tablet to a PC to transfer data. When connecting to a computer, the system will inform you about this and allow you to switch to the Storage mode (i.e. effect reading in: Settings > Developer options > Tuning USB), in which you can access the internal memory of the tablet via your computer. Now you will be able to transfer and manage data in the tablet (e.g. photographs or media files). Turn off the Storage mode before disconnecting the USB cable.

**ATTENTION:**

Be careful when working in the tablet's memory. Through careless handling you could damage a part of the system or your data.

3.5. Switching inputs

The device supports handwriting, numbers and letters and special characters. Tap anywhere in the text field and a keyboard will appear. The keyboard is used similarly to a computer keyboard. An erroneously written character can be deleted using the delete button (bold left arrow with a highlighted "x")

Tap on the  icon and the screen for changing the input method will appear. Select the respective entry method.

Note:

After newly installing an input method, it is necessary to select "Settings – Language&inputs – Keyboard & Input method.

3.6. Using microSD cards

- Insert a microSD card into the microSD card slot. When inserting it, make sure it is facing the correct way so as to prevent damaging the card. After inserting it correctly you will hear a click. After insertion, the system identifies the contents of the card. In menu – File manager – SD card you can display the files saved on the microSD card.
- Before removing the card first enter the Menu – Settings – Storage and unmount the microSD card from the system. Now you can safely remove the microSD card. To physically remove the card, first gently press the card into the tablet, a spring will eject the card slightly, then carefully take it out.



CAUTION

- **Do not insert or remove the card using force.**
- **Do not subject the card to direct sunlight or other effects of heat.**
- **Do not subject the card to dripping or running water and objects filled with water must not be placed on it, e.g. vases. Protect it against rain, spray or contact with any other liquid, do not leave or install it outdoors. Do not use it outdoors.**
- **Backup the data stored on the card.**
- **Do not take the card out while it is being used, i.e. data is being read from or written to it. Otherwise, you may lose parts of file or complete files. Recovering them may be difficult or impossible.**
- **APK files (applications, games, etc.) are installed into the memory of the device. If you wish to make room, APK files can be moved to the inserted card unless system requirements or the application's properties prevent it.**

3.7. Default screen

Normally, the following icons are shown on the default screen:

- Go back
- Home
- Launched program display
- Time
- Wi-Fi signal
- Network strength (depending on the model)
- Battery power level

3.7.1. Screen gestures

You can control the screen by tapping, holding, swiping or dragging with just your fingers. The tablet is also equipped with a G-sensor, which automatically rotates the picture to portrait or landscape orientation depending on the rotation of the tablet.

Tap – a brief touch launches applications or selects functions inside applications (activates/deactivates a tick box, selects something from a list, activates the keyboard for text entry, etc.)

Hold – a longer press, namely on application icons, which launches a secondary function if one is designed by the creator of the application (e.g. moving objects, opening an additional menu)

Swipe – it is a faster movement without designating an object. Usually for scrolling through longer text on multiple pages or moving. The speed with which the finger is swiped across the screen has an effect on the speed and distance of the shift.

Drag – it is used to, for example, move objects, icons, etc. Touch and hold down a given object until the drag function is activated (usually the colour or size of the object changes) and drag it to a new location. There, lift your finger.

Zoom in/out – in applications that support zooming in/out of a picture using fingers such as photo viewers, internet browsers, email clients, maps, etc. you can use your fingers, ideally thumb and index finger, to zoom in and out of a picture by simultaneously touching the screen with both fingers and sliding them towards or away from one another.

Rotating – in applications that support zooming in/out of a picture using fingers such as photo viewers, internet browsers, email clients, maps, etc. you can use your fingers to rotate pictures, pages, etc. by simultaneously touching the screen with both fingers and sliding them in the required rotation direction.

Display settings – in the menu Settings – Display you can set the brightness/wallpaper/automatic rotation/automatic shutdown/font size.

3.7.2. Home panel

The system contains several panels on which the user can place their applications, a clock, widgets, information windows, etc. The house symbol will move you to the Home panel, which has two additional panels on the left and right. You can access them by quickly pulling the panel to the left or right.

Changing the background – tap on any place on the home panel of the screen and a background change menu will appear. Select your favourite background and confirm.

Moving application icons on the home panel – tap and hold an icon for a few seconds, the icon will be marked for moving (it will become larger) and now you can move it to your desired location.

Moving application icons from panel to panel – tap and hold an application icon for a few seconds and drag it to the left or right.

Removing application icons – tap and hold an icon for a few seconds and drag it towards the "x" (usually located in the bottom part of the screen).

4. WIFI connection

Tap on Settings – Wi-Fi to activate the Wi-Fi function. Available Wi-Fi networks will be shown on the right.

Select the required wireless network and the system will either connect automatically or request that you enter a valid password, all based on the parameters of the network being connected to. Find out the password from the network administrator.

 
For reliability and speed of the connection ensure a sufficient Wi-Fi signal level. This level is indicated by a set of four circular sectors (the more sectors displayed, the stronger the signal). If the signal is weak, the Wi-Fi router reduces the transmission speed, which may then be insufficient for certain uses.

Note:

An activated internal Wi-Fi module consumes power even when it is not transferring data. If you wish to extend the operating time of the battery, deactivate Wi-Fi in the tablet's settings.

5. Applications

Certain applications are already pre-installed when the device is purchased. Normally, they include:

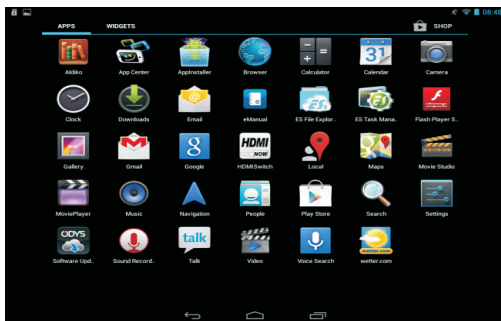

To launch an application – tap on the selected application to open and launch it.

To close an application – tap on the icon or ESC to close the running application or program. You can also select an application that you wish to close in the application manager.



Telephone

Voice communications



Messages

Send SMS or MMS



Contacts

Store information about contact persons



Voice search

Search using a voice input



Voice dialling

Dial numbers using a voice input



Clock

Show the current time and alarm clock



Play store

Fast and easy downloading of applications



Internet

Access to the internet and internet search



Calendar

Calendar with stored events



Recorder

Voice recording





 

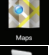 

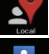 








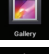


Camera

Take photographs



Calculator


| | | |
|---|--------------|---|
|  | Email | Send/receive email messages |
|  | File manager | Display and manage files and applications, incl. installation |
|  | Music player | Playback and manage music files |
|  | Video player | Playback and manage video files |
|  | Gallery | Display and manage photos |
|  | Gmail | Send/receive email messages from Gmail |
|  | Maps | Show locations and a map based on Google Maps |
|  | | Add, play or identify gestures |
|  | Locations | Shortcuts for locations found using GPS |
|  | GPS | Determine a location on a map and share position information |
|  | Settings | Personal device settings |
|  | ApkInstaller | Program for the installation of Android applications from a microSD card or NANDFLASH |
|  | Google | Search for information on the Google server using voice or text |
|  | Chrome | Access to the internet and internet search |
|  | Downloads | Show applications downloaded from the web |
|  | Film studio | Playback and manage video files |
|  | Search | Search for an application |
|  | Talk | Online chat with Gmail friends |

5.1. Application manager

5.1.1. Installing an application from a microSD card or USB device


You can install a purchased or freely downloaded application on to your tablet using **Apk Installer**.



1. Copy the application with an **.apk** extension on to a microSD card or USB device and then insert it into the tablet.
2. Click on the  **Apk Installer** icon.
3. Click on the **Install (Install)** icon and select the storage location (internal memory or microSD card), where the application is to be stored.
4. Click on the application with an **.apk** extension and then select **Install (Install)**. The application will be downloaded and stored in the selected storage location.
5. Tap **Open (Open)** to launch the application or tap **Done (Done)** to return to the **ApkInstaller** screen.

5.1.2. Installation of an application downloaded directly from a website

Certain applications can be downloaded directly from a website.

1. Tap on the Internet  icon.
2. Open the respective web page and tap on the download link for the selected application.
3. After the download has finished, drag to **Open (Open)** and then **Install (Install)**.

5.1.3. Installation of applications from Play Store


You will find more information further in the user's manual.

5.1.4. Uninstalling an application

There are two ways to uninstall an application.

1. Tap on **Settings (Settings)** and select **Applications (Applications)**.
2. Select the application that you wish to uninstall and select **Uninstall (Uninstall)**.
3. Tap on **OK** to confirm.

Or

1. Tap on  **Apk Installer**.
2. Select **Manage (Manage)**.
3. Select the application that you wish to uninstall and select **Uninstall (Uninstall)**.
4. Tap on **OK** to confirm.

Note:

If you wish to install an application from an unverified source (this is considered to be every card or the internet) it is necessary to authorise this installation from Unknown sources in Settings/Security. In such a case, it is up to you to verify the safety of the application and the absence of viruses.

5.2. Telephone

Tap on the  icon. A screen with the numerical digits will appear:

Contacts – person icon – shows all the displayed contacts, contact and information management options.

Import/Export – transfer from/to a storage device/share visible contacts

Account – select the automatic synchronisation function

Settings – select the ring tone and other settings

5.3. Messages

5.1.3. Open messages


Tap on the  icon and here select the option to either create a new message or to open a received message.

5.3.2. Sending a message

1. Tap on "New message" (New message) in the top part of the screen.
2. Tap on "to" (To) to enter a telephone number of a person to whom you want to send an sms message.
You can enter a number directly using the keypad or select a contact person from the contacts list.
3. Tap on "Type message" (Write message) and write a message in the new window using the displayed keyboard. Likewise, you can insert objects such as pictures or videos for creating an MMS.
4. Tap on the arrow icon to send the message.

5.4. Contacts


5.1.4. Opening contacts


Tap on the contacts  icon to open the contacts. In the top part of the screen, you can sort the contacts according to GROUPS (Groups), ALL (All), FAVOURITE (Favourites). Icons in the top part of the screen will make it easier to control.

5.4.2. Displaying details

Enter the contacts menu and select a contact whose details you wish to display. Tap in the left part of the screen to display the details, these will appear on the right.

5.4.3. Adding contacts

- To add a group, tap on GROUPS (Groups) and then . Type in the name of the group and the name of a new contact.


- To add a contact manager, tap on ALL (All) and then . Type in the name of the contact, telephone number, email, etc.
- You can also add a contact from applications such as Google, Microsoft Exchange ActiveSync or using other applications enabling similar synchronisation.
- If you are sending a message or email to a person that is not stored in the contacts list, the system will automatically add this contact as a new contact after the message is sent. This process can also be managed manually.

Note: If you enter names using national character sets, check that you have this installed and authorised in Settings/Language. Otherwise the correct display of the names or other functions (search, etc.) may be limited or disabled.

5.5. Voice dialling

Tap on the icon  to start the voice dial a number or contact.

5.6. Voice search


- Tap on the icon  to launch the voice search function.
- On the displayed window, highlight the microphone icon and after it is highlighted you can search using the voice search. If the system recognises the word, the search will be launched automatically.

5.7. Clock

5.1.7. Alarm

You can use the device as an alarm and set several alarms at once.

Setting the alarm

- Tap on the icon .
- Select "Set Alarm" (Set an alarm).
- Set the alarm and tap on "Turn on alarm" (Turn on alarm) to turn on the alarm.
- Then select "Done" (Done) or "Revert" (Back) to cancel the alarm.

Note:

When an alarm is set, a clock icon appears on the screen indicating that one or more alarms have been set.


To add another alarm, proceed according to the instructions provided above or select "Settings" (Settings) and select one of the repeat modes.

At the same time you can set the ring tone, vibrations and name of the alarm

5.8. Play store

- The Play Store application has many applications, which you can quickly and easily download on the device.
- Prior to launching an application, check that you have internet access and that it is activated.

5.1.8. Downloading an application

1. Tap on the  icon and then tap on "Accept" (Accept) in the bottom part of the screen.

Note:

- If you are logging in to the Play store for the first time, it is necessary to register. Tap on "New" (New).
- If you are already registered, tap on "Existing" (Existing) and enter your registration details. Then tap on "Done" (Done).
- After logging in for the first time you will be requested to enter your credit card details. Tap on "Set up credit card" (Set up credit card) and enter the information about your credit card.
- If you do not wish to use a credit card, tap on "Not now" (Not now) and enter directly into the store.

2. Select an application that you wish to download from default groups or Applications/ Games in the bottom part of the screen. Likewise, you can search for applications based on their name using the magnifying glass icon.
3. Select an application that you wish to download, tap on "Download" (Download), then "Accept&Download" (Accept and download). As soon as the downloading process starts, the download results information window/bar will appear. As soon as the application is downloaded, a confirmation symbol will appear on the information bar.
4. Select the information bar and tap on "Successfully installed" (Successfully installed). Then tap on "Open" (Open) or on "Uninstall" (Uninstall).
5. Tap on the back icon to return to the Play store to download more applications.

5.8.2. Functions menu

Press the MENU button or call up the main menu to display the function menu of the Play store application. Here you will find the following functions:

- a) Search – search for an application based on a phrase.
- b) My applications – here you will find the installed applications
Uninstall apps (Uninstall applications) (the installed application will be shown on the right) – select an application that you wish to uninstall and select Uninstall (Uninstall). Then confirm by tapping on OK.

Update apps (Update applications) (from the freely displayed on the right side of the screen) – select an application that you wish to update and select "Download" (Download) and then "Accept&Download" (Accept and download).

- c) Settings – here there are various functions, e.g. filters, etc.
- d) Help – here you will find help if you are having problems.


Note:

Prior to download and installation, the application provides information about how it will affect the device or your privacy and whether any payments are required for its use. Read this information carefully before confirming the action.

5.9. Internet

This application is used to access the internet and to browse internet pages.


5.1.9. Starting the internet

Tap on the  icon to display the home page www.google.com.

5.9.2. Options

- Refresh/stop icon (Google) – serves to refresh the currently displayed page/to stop loading the page that is being opened.
- New tab icon (Google, Chrome) – serves to insert the last added tab.
- New incognito tab icon (Google, Chrome) – serves to insert an incognito tab.
- Share page icon (Google) – serves to share pages with friends.
- Search on page icon (Google, Chrome) – serves to search for a phrase on the currently displayed page.
- Page information icon (Google) – serves to show information about the currently displayed page.
- Settings icon (Google, Chrome) – serves to display various settings.
- Bookmark icon (Chrome) – serves to store and quickly display favourite pages.
- Other device icon (Chrome) – serves for contact with other devices.
- Help icon (Chrome) – useful advice and tips about controls.

5.10. Calendar

Tap on the  icon to enter the calendar mode. If you are turning on the calendar for the first time, you will be requested to enter an Exchange or Google account. Enter the account's address and password and tap on "Next" (Next). Follow the information on the screen.

5.10.1. Open the calendar

Entered events are displayed in this application. You can sort the entered events according to: entered agenda, day, week, month, etc.

5.10.2. Creating a new event

- In the displayed menu, open the menu (by pressing a button or tapping on the display), select "More" (More) and then "New event" (New event).
- Enter the data and then tap on "Done" (Done).




5.10.3. Managing the calendar

- To edit an entered event, hold down the selected event and when the menu appears, select "Edit event" (Edit event). After editing, select "Done" (Done).
- To delete an event, hold down the selected event and when the menu appears, select "Delete event" (Delete event).
- To view an event, hold down the selected event and when the menu appears, select "View event" (View event).





5.11. Camera

Tap on the  icon to enter the camera mode.





5.11.1. Taking photos

- In the camera application, tap on the  icon to enter the camera mode and then tap on the  icon to switch between the front and rear camera.
- To take a photo, tap on .
- The photo will be saved automatically. Tap the bottom right corner to enter a gallery of the taken photos.
- Tap on back to return back to the camera mode. Here, tap on back again to leave the camera application and to return to the home page.

5.11.2. Recording

- In the camera application, tap on the  icon to enter the video mode for making recordings.
- Tap on the  icon to start recording and tap on the  icon to end it.
- The recording will be saved automatically. Tap the bottom right corner to enter the recordings list.
- Tap on back to return back to the recording mode. Tap on the  icon to go to the camera mode. Here, tap on back again to leave the camera application and to return to the home page.

5.11.3. Panoramic shots

- In the camera application, tap on the  icon to enter the panoramic shot mode.
- Tap on the  icon to start taking panoramic photos and tap on the  icon to end it. While taking a panoramic shot, slowly move the tablet horizontally. The progress of the photograph is shown in the bottom part of the screen. If you move too fast, the progress of the photograph will not appear or will be shown in red.
- The photo will be saved automatically.
- Tap on the  icon to go to the camera mode. Here, tap on back again to leave the camera application and to return to the home page.


5.12. Calculator

Tap on the  icon to enter the calculator application.




5.13. Email

POP3 and SMTP accounts are supported.

5.13.1. Adding a new email account

1. Tap on the  icon to enter the email application.
2. On the "Your account" (Your account) screen, tap on "Next" (Next).
3. Tap inside the field for entering the email address and enter an email addresses.
4. Tap on "Done" (Done).


5.13.2. Inbox

1. Tap on the  icon. If you have one email account set up, then this one will appear. If you have several accounts, select the one that you wish to open.
2. After selecting an account, tap on "Inbox" (Delivered email).
 - a) Opening an email: In the inbox, tap on the email that you wish to open. To open an attachment, tap on "Open" (Open) or on "Save" (Save). If you wish to reply to the email, select "Reply" (Reply) or "Reply All" (Reply to all). Type in the content of the email and then tap on "Send" (Send), "Save draft" (Save draft) or "Delete" (Delete). To delete an email, tap on "Delete" (Delete).
 - b) Writing a new email: In the inbox, tap on the  icon. Tap inside the "To" (To) field to enter the email address of the recipient, or you can search for the recipient in the address book. Into the "Subject" (Subject) field, enter the title of the email message. Then tap inside the "Compose Mail" (Compose mail) field and write the body of your email. If you need to add an attachment, tap on the  icon and select the file that you wish to add. Once the email ready to be sent, tap on "Send" (Send).

5.13.3. Editing an account


1. Tap on the  icon.
2. In the inbox, select settings. Set the respective menus on the displayed page.

5.13.4. Removing an account

1. Tap on the  icon.
2. In the inbox, select settings.
3. Select the account that you wish to remove.
4. If the right part of the screen, select "Remove account" (Delete an account).
5. Then select OK.

If you delete an account that was set as the default email account, the email account following it in the list will automatically be set as the default account.

5.13.5. Setting a default account

1. Tap on the  icon.
2. In the inbox, select settings.
3. Select an account that you wish to designate as the default account.
4. Tap on "Default Account" (Default account).

5.14. File manager

Displaying and managing files and applications, it is used for installing Android applications and backing them up on to a microSD card.


1. "Home" (Home) – show the main directory of the file manager
2. "LevelUp" (Level up) – Displays the higher level of the directory
3. "Multi" – perform a multi-selection of the displayed items with a single tap.
4. "Editor" – management of the selected folder, directory, item (copying, deleting, moving, inserting, renaming)
5. "NewFold" (New folder) – create a new folder
6. "Back" (Back) – display the previous page
7. "Next" (Next) – display the following page

5.14.1. Deleting files

By tapping and holding down a file/folder you will call up a window, here select "Delete" (Delete) to delete the given file/folder.

5.14.2. Installing Android applications

You can also use this application for installing applications on to your tablet. Prior to installation, it is necessary to copy the file with an .apk extension on to the device or a microSD card.



1. Tap on the  icon.
2. Tap on the application that you wish to install, and proceed according to the information on the screen.

5.15. Music player



To play music files, it is necessary to save the files on to a memory card/USB device. Then insert the memory card/USB device into the device.

5.15.1. Transferring files

To transfer files to a memory card/USB device, it is necessary to connect these to the computer. Using the copy/paste method or by dragging them across, copy the files that you wish to playback on the tablet on to the memory card/USB device.

1. Connect the memory card/USB device to the tablet. The icon  will appear on the screen of the tablet.
2. Tap on the  icon, information will appear about the external device and a dialogue box will appear when you tap on this information.
3. Select "Turn on USB storage" (Turn on USB storage).
4. Tap on OK to confirm. Now you will be able to play the stored files.
5. If you wish to disconnect the memory card/USB device, select, in the dialogue box in which you turned the device on, the option "Turn off USB storage" (Turn off USB storage).

5.15.2. Playing music

1. Tap on the  icon.
2. Select the album/artist/track/list for playback.
3. To end playback, tap on the .
4. To leave the music player and to return to the previous screen, press the Back (Back) or Home (Home) button.

Note:

There are several other function available, e.g. show song lyrics, pause and continue playback, skip to the previous or next track, slow-motion playback, random order playback, etc.

5.16. Video player

Playback and manage video files.

5.16.1. Playback of video

1. Tap on the  icon.
2. Select a video that you wish to play from the list and launch its playback.

Note:

There are several other functions available: volume settings, change screen size, fast forward or fast rewind, playback in small window, add bookmark, etc.

5.17. Gallery




To open the gallery, tap on the  icon on the home page, e.g. open the gallery from the camera application.

Note:

If there are too many images or videos stored on the memory card/USB device, the gallery may take some time to open. So please be patient, this is normal.

5.17.1. Controlling albums

After opening the gallery, tap on the album that you wish to view. Images and video will be displayed in chronological order. The name of the file will appear in the top part of the screen. To view the image or video, tap on the given file.

Tap on the selected file and allow the necessary information about the selected file to appear. To delete the file, tap and hold the selected file and when a dialogue box appears, select the  icon.

5.17.2. Handling images

- Display an image by tapping on it in the gallery.
- To play a slideshow of the images, after the list of images appears, select settings and then select "Slideshow" (Slideshow).
- To edit and copy images, select an image and then tap on settings. Here select "Edit" (Edit) or "Copy" (Copy).
- To view more information about the images, select an image and then tap on settings. Here select "Details" (More information).
- To set an image as a wallpaper, select an image and then tap on settings. Here select "Set picture as" (Select image as) and then select "Wallpaper" (Wallpaper).

5.18. Gmail

Send/receive email messages from Gmail.

5.18.1. Opening a Gmail mailbox and entering the inbox

1. Opening a Gmail mailbox



Tap on the  icon. When opening the Gmail mailbox, the Google account will appear in the top part of the inbox. If you have multiple accounts, tap on the current account to switch accounts.

2. Opening the inbox with the Gmail mailbox running.

The Gmail interface is divided into two parts. In the left part there is a list of all the delivered emails. In the right part there is the body of the selected delivered email.

3. Switching between accounts

To view the incoming mail, tap on the account number in the top part of the screen. Every account contains information about the number of unread messages. Select an account the contents of which you wish to view.

4. Reading messages

- Tap on the conversation that contains the message which you wish to read. The heading of the message will show the sender, when and to whom the message was addressed and other information if necessary. The icons show whether the message contains an attachment. You can use the icon at the top of the screen to save the entire conversation.
- Tap on the next message to view its contents.

5. Attachments

Attachments may be a part of the incoming message. Tap on the attachment to open/save it to a memory card/USB device.

Note:


The downloading, viewing and storing of various types of attachments depends on the installed version of an application. It is not guaranteed that all file types will be supported by all types of devices.

5.18.2. Writing and sending messages

1. In the displayed inbox, select settings and then "Compose" (Compose).
2. Enter the recipient, subject and body of the message and then tap "Send" (Send).

Note:

To compose a message, icons are also used on the incoming message, i.e. reply, reply all or forward.


3. To attach an attachment, tap on the  icon and select the respective attachment from the displayed dialogue box.

5.19. Maps, Locations, GPS

5.19.1. Maps

Google maps for Android contain applications such as maps, locations, a GPS system, etc. Prior to launching one of these applications, check that you are connected to the internet.

1. Opening a map

To open a map, tap on the  icon.

2. Moving the map

Use your fingers to move the map.

3. Zooming in/out of a map

To zoom in or zoom out of a map, you can use the +/- icons, or double tap a location that you wish to zoom into or zoom in or out by moving your fingers closer together or farther apart.

5.19.2. Finding friends using Google Locations

This applications makes it possible for you and your friends to show your location on a map and to share experiences with one another by means of messages.

1. Add a location

On the displayed map select "Join Latitude" (Add a location). If you are logging in for the first time, you will be requested to accept the personal data protection conditions of Google.

2. Opening a location

After adding a location, you can open a location and find your friends and to display the latest news. With the map displayed, tap on settings and then Location.

3. Inviting friends

After adding a location, you can start sharing your experiences from a place with your friends. Only friends who have been "invited" may share in on your messages.

1. After opening the location, tap on "Add friends" (Add friends).
2. Select a contact from the list or from email. If you select "Select from Contacts" (Select from Contacts), a list of all the persons stored in the Contacts application will appear. If you select "Add via email address" (Add via email address), enter the individual email addresses separating them with a comma.
3. After finishing, tap on "Add friends" (Add friends). If your friends are already using the Location application, they will be informed about your presence via a message. If however, they do not yet use Location, they will receive an invitation on their Google account.

4. Response to the invitation

If your receive an invitation from a friend to share a Location, you can respond to the invitation in the following ways:

1. Accept and share – You and your friend will see each other in the Location application.
2. Accept but hide my location – You will be able to view the location of your friend but he/she will not see your location.
3. Reject – reject the invitation and no information will be shared.

5. Viewing the locations of your friends

You can view the locations of your friends on the map or in a list. The locations of your friends will appear as soon as you open the maps. Every friend is shown with their profile (picture) and with a picture of their approximate location. If one of the friends has selected "share city", his/her profile (picture) will not be shown and there will only be an arrow pointing to the centre of the given city.

6. Connection management

Tap on contact friend on the map or in the list to open his/her profile. Using the displayed window, you will be able to communicate with friends.


1. View on map – view the locations of your friends on the map.
2. Chat via Google Talk – view the dialogue window for communicating with friends, sending emails using an open Gmail account.
3. Hide – end sharing information with friends. To be seen again, select "Show me".
4. Share city – you will share only the location of the city and not your actual location. Your friends will only see an arrow pointing towards the centre of the city, without your profile.
5. Remove – remove friends from the list and stop sharing information.

7. Controlling shared information

You can set up a control over shared information. Only the last saved location information in the Google account. If you turn off the application or you hide yourself, no information will be saved.

1. Location identification – location automatically changes when moving. The location refresh frequency is influenced by a number of factors such as battery power level, how often the location is changed, etc.
2. Setting a location – setting a location shared with friends using an email address or from contacts.
3. Ending a position – end the position and sharing of information. But you can always reconnect.

5.20. Talk

Tap on the  icon to enter the Google Talk application. If you are connecting for the first time, it is necessary to fill out a Google account. After entering an account you will enter the application for communicating with friends.

5.21. Google

This pre-chapter has the same or similar controls as 5.9. provided in a preceding part of this user's manual.

6. Technical specifications

| | | |
|-----------------------|------------------|---|
| Model | | Element 10.1D103 |
| Basic specifications | Operating system | Android 4.2 |
| | Processor | Amlogic 8726 MXS(Cortex A9) dual core 1.5 GHz |
| | Screen size | 10.1" multi-touch capacitive screen |
| | Resolution | 1024 x 600 TN panel |
| | Memory | 1GB DDR3 |
| | Storage | 8 GB |
| | External memory | MicroSDHC (up to 32 GB) |
| | Camera | Front: 0.3 MP, rear: 2.0 MP |
| | G-sensor | 3D G-sensor /16-bit data output |
| | WiFi | 802.11b/g/n |
| | Bluetooth | V 4.0 |
| | Battery | 6000 mAh Li-Polymer |
| Video | Format | MOV, MKV, AVI, RMVB, RM, TS, TP, M2TS, VOB, DAT, MPEG, MP4, PMP, 3GP, FLV, WMV, ASF, H.264, MPEG4, RMVB, Xvid, Divx, H.263, VP8 |
| | Output | Mini HDMI type C (supports 1080p and 720p) |
| Audio | Format | MP3, WMA, WAV, (APE, FLAC, AAC, OGG are only supported by 3rd party software) |
| Other functions | Language | English, Czech, Slovak, Hungarian, Polish |
| | Clock | Yes |
| | Recording | Yes |
| Input/Output | USB2.0 | 1 x Micro USB 2.0, OTG support |
| | Headphones | 3.5mm stereo headphone jack |
| | TV output | Mini HDMI output port |
| Operating temperature | | -20 - + 40 °C |
| Power adapter | Input | 100 – 240 V~ 50/60 Hz |
| | Output | 5 V --- 2 A |
| Size | | 264 x 171 x 9.9 mm |
| Weight | | 0.6 kg |
| Accessories | | Power adapter, microUSB cable, USB OTG cable, headphones, quick guide |

The technical specifications provided above may change without prior notice.
The original version is Czech.

The CE symbol displayed on the unit, the user's manual and on the packaging shows that the unit meets the basic requirements of the R&TTE directive, 1995/5/EC, and the Low voltage directive 73/23/EEC. The declaration of conformity can be found at www.sencor.cz.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.



DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these products to determined collection points. Or as an alternative in some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product. Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives that apply to it.

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make these changes.

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers

Visit www.sencor.eu for detailed information about authorized service centers.

SENCOR®

Let's live!



www.sencor.cz

Designed in Europe by Sencor®, Made in China

