# OPERATION MANUAL

## SENCOR SEC 332 T / SEC 333 T

DESK TOP CALCULATOR
DUAL POWER SYSTEM
BIG NUMBER

### TAX CALCULATOR

## 1. KEY OPERATIONS:

ON : Power ON/Clear/Error

AC : All Clear

: Square root

: Right shift key (Shifts the displayed value to the right deleting

the right most digit.)

00 : Fast addition of "0" (Displays two "0" when pressed once.)

: Percent key

SET: Tax Setting key

STORE : Price with tax key to store tax rate when pressing [ SET ] & [

TAX+ ] keys

RECALL: Price without tax keys to recall tax rate when pressing [ SET ] &

TAX- [TAX-] keys

#### 2. SWITCH DESCRIPTION:

1. Press ON OR AC to clear all values.

 Press the ON key to clear the "ERROR" but the value on the display still can be effective.

#### 3. HOW TO CHANGE THE BATTERY:

- This machine uses 2 power sources:
- ① Solar energy
- ② 1 pc AG-13 or 1 pc CR2032 or equivalent button type battery
- When the display becomes blur, it indicates the battery power is low.
   You can use the solar panel for power or replace the battery to make the display clear again.
- (1) Loosen the screw from the back cover, and carefully remove it.
- (2) Use a screwdriver or other tool to push out the battery.

(Note: follow exit direction in pushing out).

\* Don't damage the circuit.



- (3) Push in the new battery in the opposite direction (Note:the ⊕ polarity is faced up).
- (4) Put the cover back and tighten the screw (do not overdo).
- (5) Auto Power-off: After approximately 8 minutes.

Example	Operation	Display	
	ONIC	0.	
100+50-30	100 ± 50 - 30 =	120.	
\$12.34 34.56 - 56.78 78.90 \$69.02	12 • 34 + 34 • 56 - 56 • 78 + 78 • 90 =	12.34 46.9 -9.88 69.02	
1234567890 x 66666=	1234567890 × 6666 = OWCCE AC	ERROR(E) 82.3037029547 82.3037029547 0.	
• 10% z 1500	15 00 × 10 %	150.	
(1500+5%=)	15 00 + 5 %	1'575. 1'425. 4.(%)	
(1500-5%=)	15 00 - 5 %		
Percentage of 20 against 500	20 ÷ 5 00 %		
368+97+97=	368 + 97 = =	562.	
839-47-47-47=	839 - 47 = = =	698.	
5-4 =	5 ÷ = = = =	0.0016	
22.53 =	22.5 🗓 = =	11'390.625	
123478 + 5	123456 • • • 78 + 5 =	123'456. 1'234. 123'478. 123'483.	
456 + 378	456 <b>÷</b> 478 Œ 378 ≡	0. 834.	

Setting 5% Rate (tax)	C 5 SET TAX+		0. TAX% 5. TAX% 5.
Checking rate	SET TAX-		TAX% 5.
At what price and amout of tax must one sell to include 5% tax rate when cost is 1000	1000 TAX+ TAX+	TAX+ TAX	0 1050 50
When, s price must one sell to exclude 5% tax rates when cost is 1000	1000 TAX- TAX-	TAX- TAX	952.3809 47.61904

<sup>\*</sup> This user manual is only for reference, the actual operation is subject to the actual unit.



This symbol on the product, its accessories or packaging indicates that the device conforms to European requirements for low voltage devices and requirements for electromagnetic compatibility.

## **Disposal of Used Electrical & Electronic Equipment**



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources.

Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Manufacturer: Fast ČR, a. s., Černokostelecká 1621, CZ 251 01 Říčany