

SENCOR®

SLA 302



User's manual

Uživatelská příručka

Používateľská príručka

Felhasználói kézikönyv

Instrukcja obsługi

Korisnički priručnik

Korisnički priručnik

Εγχειρίδιο Χρήστη

A3 Laminator

Laminátor A3

Laminátor A3

Lamináló A3

Laminator A3


A3 laminator

A3 plastifikator

Πλαστικοποιητής A3

EN CZ SK HU PL SR HR GR

Description of machine components

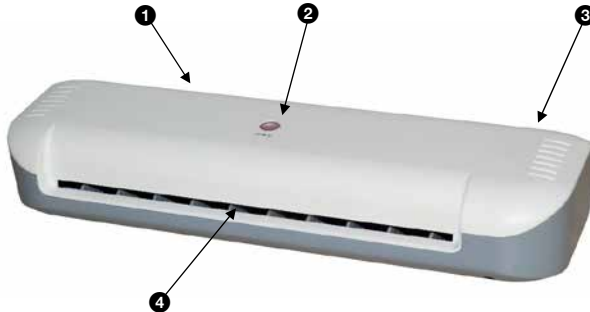

- ❶ Exit for laminating pouches
- ❷ "Ready" indicator
- ❸ ON/OFF switch
- ❹ Pouch entry

Thank you for choosing our laminator. We aim to supply quality machines that create excellent results. Before operating the laminator – please read and keep the user instructions for reference.

When using electrical appliances, basic precautions should always be followed to reduce risk of injury or electric shock, including the following:

1. Always unplug the appliance when not in use.
2. The laminator will become very hot in use and care should be taken when handling the machine.
3. Protect against the risk of electrical hazards. Do not immerse the power cord, plug or appliance in water or other liquids, or use near water.
4. Do not insert any metal objects or other foreign objects such as jewellery, hair, fingers or clothing into the appliance.
5. Remove paper clips and staples before laminating.
6. Do not operate the appliance with a damaged plug or power cord or after the appliance has malfunctioned or become damaged in some manner.
7. If the Power Cord is damaged, it must be replaced by a qualified Engineer in order to avoid a hazard,
8. The appliance should be installed near the outlet socket and the socket should be easily accessible.
9. Only laminate paper or board. Do not laminate unusual objects.
10. Do not use aerosol dusters or cleaners.
11. Do not spray anything into or lubricate the appliance.

Setup

1. Operate the machine on a flat and stable surface.
2. Ensure there is enough clear space at the rear of the machine for the lamination to exit the machine.
3. The SLA 302 operates with laminating pouches 150 (2×75) micron - 250 (2×125) micron thick (A8 to A3 size).

Operating the laminator

The SLA 302 is operated by rocker switch, located at the back of the appliance.

1. Plug the machines cable into a convenient domestic supply outlet.
2. Switch the machine on using the ON/OFF switch Choose a laminating temperature – 75 mic or 125 mic. After setting the switch to the appropriate position, the device will start to heat up, adjusting the temperature to the settings, depending on the laminating pouches.
3. Waiting for 2-4 minutes and the color of 'Ready' indicator will turn from dark black to red once the laminator has reached the proper temperature for lamination.
4. Prepare the laminating pouch for inserting into the machine. **See How to load a laminating pouch below** Do not use pouches thicker than 2×125 mic.
5. When the machine has reached operating temperature, you may insert the pouch (sealed edge first) squarely into the machine until it engages with the rollers. Never insert a pouch open edge first into the machine. Device could be broken and remember that improper use is not subject to the conditions of the warranty
6. The pouch will move through the machine and exit at the rear.
7. Turn the laminator to **OFF** after use.
8. Remove the plug from the power supply.

IMPORTANT!

Do not touch the top of the machine during use, as this gets very hot. The Intermittence Operation on this machine is 30mins On and 30mins Off.
Do not place items on top of the machine at any time.

Laminating capacity

The SLA 302 are a personal laminators designed for hot lamination. The minimum laminating thickness is 150 (2×75) microns and the maximum thickness is 250 (2×125) microns.

How to load a laminating pouch

The laminating pouch is sealed along one side. Open the pouch and place the paper to be laminated centrally inside the pouch as close to the sealed edge as possible. Ensure there is an equal border all around the paper (eg: A4 paper should have a 3mm border). The sealed edge (not the open edges) is placed into the entry slot to start the lamination process.

Warranty & service

Never service the product yourself. The appliance is guaranteed for 24 months from date of purchase, subject to normal use. If the laminator is under warranty then return it to the point of purchase for replacement or repair.

Specifications

Entry width	330 mm
Laminating pouches	150-250 (2x75 - 2x125) Micron
Warm-Up time	2-4 min
Laminating Speed	Approx 300 mm/min
Power	230 V/50 Hz; 160 W
Dimensions	430x110x66 mm
Weight	1,2 kg

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



The product meets EU requirements.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

Manufacturer: Fast ČR, a.s., U Sanitasu 1621, CZ 251 01 Říčany

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers

Visit www.sencor.com for detailed information about authorized service centers.