





FIELDMANN[®]
Home & Garden Performance



FZC 1001-A

English5-12
 Čeština 13-20
 Slovenčina21-28
 Polski29-38
 Magyarul39-46
 Lietuvių47-54
 Русский 55-63



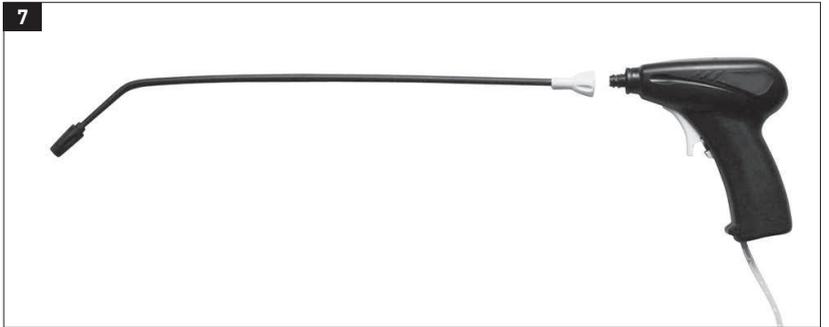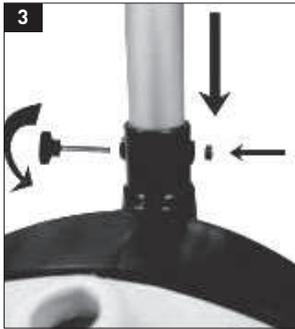

Cordless Garden Sprayer

INSTRUCTION MANUAL

Thank you for purchasing this cordless sprayer. Before you start using it, please, carefully read this user's manual and save it for possible future use.

CONTENTS

ILLUSTRATED ATTACHMENT.....	5
1. GENERAL SAFETY INSTRUCTIONS	6
2. EXPLANATION OF SYMBOLS	6
3. MACHINE DESCRIPTION AND INCLUDED CONTENTS	7
4. ASSEMBLY	8
5. OPERATING INSTRUCTIONS	8
6. INSTRUCTIONS FOR PROPER USE	9
7. MAINTENANCE / STORAGE.....	11
8. TECHNICAL SPECIFICATIONS	11
9. DISPOSAL	12

1. GENERAL SAFETY INSTRUCTIONS

IMPORTANT SAFETY NOTICES

- ☼ Carefully unpack the product and take care not to throw away any part of the packaging before you find all the parts of the product.
- ☼ Store the sprayer in a dry place out of reach of children.
- ☼ Read all warnings and instructions. Not following warnings or instructions may lead to injury by electrical shock, a fire and/or serious injuries.

PACKAGING

The product is packed in a package that prevents damage during transport. This package is a resource and so can be handed over for recycling.

USER'S MANUAL

Before you start working with the garden sprayer, read the following safety and usage instructions. Understand the operating elements and the correct use of the device. Keep the user's manual in a safe place where it can be easily retrieved for future use. Save the original packaging, including the internal packing material, warranty card and proof of purchase receipt, at least for the duration of the warranty. If you need to ship this machine, pack it in the original cardboard box to ensure maximum protection during shipping or transport (e.g. when moving or when you need to send this product for repair).

 **Note:** If you hand over the machine to somebody else, do so together with the user's manual. Following the instructions in the included user's manual is a prerequisite for the proper use of the sprayer. The user's manual also contains operating, maintenance and repair instructions.

The manufacturer takes no responsibility for accidents or damages resulting from not following the instructions in this manual.

2. EXPLANATION OF INSTRUCTION LABELS ON THE MACHINE

	Warning notice
	Read the instruction manual.
	Do not expose the tool to rain.
	Only use the battery charger indoors.
	Battery charger contains a safety transformer.

3. MACHINE DESCRIPTION AND INCLUDED CONTENTS

MACHINE DESCRIPTION (see pic. 1)

1	Handle	12	Safety Lock
2	Telescopic Tube	13	Cap
3	Spray Gun	14	Pick up Tube
4	Fill Cap	15	Spring Tube
5	Tank	16	Extension Wand Nozzle
6	Bracket	17	Battery Charger
7	Holster	18	Charge-Control Indicator
8	Wheel	19	Charging Inlet
9	Knob Screw and Nut	20	Plug Connector for Charger
10	Nozzle	21	Clip
11	Trigger	22	Filter

SUPPLIED CONTENTS

Carefully remove the tool from its packaging and check that the below contents are included:

- ✿ Tank assembled with bracket, filling cap, etc
- ✿ Spray gun assembled with tubes
- ✿ Telescopic tube
- ✿ Handle
- ✿ Extension misting wand
- ✿ Battery charger
- ✿ Instruction manual

If there are parts missing or they are damaged, please contact the retailer from whom you bought the machine.

4. ASSEMBLY

1. Fitting telescopic tube to the machine body

Insert the telescopic tube into the hole on the machine body fix it with nut and screw (9) (Fig.1).

2. Assembly handle

Fit handle to the telescopic tube, make sure the 2 holes on the handle Match 2 holes on the telescopic tube (Fig 2), fix handle to the telescopic with 2 screws and nuts. (Fig.3)

3. Assembly extension misting wand

Twist off the nozzle counterclockwise (Fig.4), Twist on the Extension wand nozzle in clockwise (Fig.5)

4. Fit spray gun set to the machine body.

Unscrew the fill cap, Put pickup tube into Tank through the fill hole, screw the fill cap on (Fig.6)

Put the spray gun to the holster (Fig.7), tighten the fixing tape (Fig.8)

5. Fit nozzle to the telescopic tube

Two different nozzles supplied. To avoid nozzle lost, we suggest to fit the nozzle on telescopic tube when the other on spray gun.

a. Screw the nozzle clockwise (Fig.9) on telescopic tube.

b. Fit wand nozzle to telescopic tube (Fig.10)

⚠ Warning: Using accessories or attachments that are not recommended in this user's manual may increase the risk of injury.

5. OPERATING INSTRUCTIONS

- 🌀 The battery should be fully charged before using for the first time. The charging time is about 3~5 hours.
- 🌀 The battery charger supplied matches the lithium battery installed in the Garden sprayer and you must not use any other charger to recharge the garden sprayer.
- 🌀 To protect the lithium battery against deep discharging, when the battery is flat, the tool will automatically switch off via a protective circuit.

⚠ Warning: If the trigger is used continually, the lithium battery can be damaged.

CHARGING PROCEDURE (see pic. 1 and 2)

⚠ Warning: The tool do not function during the charging process.

1. Insert the charger cable (20) into charging inlet (19) on the tool.
2. Making sure the wall outlet in your home is normal household voltage (AC 230V 50Hz); insert the battery charger plug into the mains power supply.
3. The red LED charging indicator (18) lights up to tell you that the battery pack is on charge. The battery is fully charged when the red LED charging indicator (18) is no longer light.

- 🌀 During the charging process, the body of the tool will warm up, but this is perfectly normal.
- 🌀 When not using the tool for extended periods, disconnect the battery charger from the socket.

- ✿ When the garden sprayer is charging, you must not use them.
- ✿ Use the battery charger only in dry conditions and an ambient temperature of 10–40 °C.
- ✿ After prolonged use, allow battery to cool down first before recharging.

OPERATION

1. Starting: Push in the trigger (11)
2. Stopping: Release the trigger (11), keep the safety lock (12) in lock position when not in use
3. Adjust Nozzle: Twist the nozzle to get stream or spray functions.

6. INSTRUCTIONS FOR PROPER USE

SAFETY PRECAUTIONS

- ✿ Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.
- ✿ Read, understand and follow original chemical manufacturer's directions, specifications and warnings.
- ✿ Only use with chemicals that are approved and recommended for spray applicable for battery operated sprayer.
- ✿ Never use flammable solvents, combustibles, extremely caustic solutions or oils.
- ✿ This sprayer should be used only by adults, keep away from children.
- ✿ Do not spray towards yourself, other people, pets, electrical outlets or flames.
- ✿ The user is responsible for any accidents involving other people or anyone's property.
- ✿ Save all warnings and instructions for future reference.
- ✿ The term "power tool" in the warnings refers to your battery operated (cordless) garden sprayer

INTENDED USE

- ✿ This cordless garden sprayer is only intended for domestic watering, fertilizing, insect/pest killing in your private domestic and hobby gardens. The cordless garden sprayer are not suitable for commercial purposes, and any such use will void the guarantee.

WORK AREA

- ✿ Keep the work area clean and well lit, as cluttered and dark areas can result in accidents.
- ✿ Power tools create sparks, which may ignite dust or fumes. For this reason, do not operate the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.
- ✿ While operating the power tool, keep children and bystanders away as distractions can cause you to lose control.

ELECTRICAL SAFETY

- ✿ Make sure the power rating on the plug matches the outlet.
- ✿ Never modify the plug in any way.
- ✿ Do not use any adaptor plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- ✿ To prevent the risk of electric shock, when operating the tool avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges, refrigerators and never operate the tool in the rain. You must also never expose the tool to moisture.

Personal safety

- ✿ Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- ✿ To maintain full control of the tool, keep a proper footing at all times with your weight evenly balanced over both feet and never overreach.
- ✿ To maintain full control of the tool, keep the handle dry, clean and free from oil and grease.
- ✿ Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

POWER TOOL USE AND CARE

- ✿ Do not force the power tool to do jobs for which it was not intended. The correct power tool will do the job better and safer at the rate for which it was designed.
- ✿ Do not use the power tool if the power switch is faulty. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- ✿ Power tools are dangerous in the hands of untrained users. When not in use store the tool out of the reach of children, and do not allow persons unfamiliar with the tool (or these instructions) to operate it.
- ✿ To prevent the risk of accidents, periodically check the tool for misalignment, binding of moving parts, breakage of parts and any other condition that may affect the operation of the power tool. If the tool is damaged in any way, take it to your local hardware store for repair.
- ✿ To ensure that the power tool is safe, have it serviced at your local hardware store using only identical replacement parts. .
- ✿ Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

BATTERY/BATTERY CHARGER SAFETY WARNINGS

- ✿ To prevent the risk of electric shock, protect the battery charger from rain and moisture.
- ✿ Recharge the battery only with the charger provided. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- ✿ The supplied battery charger is only suitable for charging the trimming shears and, to prevent the risk of fire and explosion must not be used for charging any other tool.
- ✿ Before each use, check the battery charger, cable and plug for signs of damage. If the battery charger is damaged, do not use it or attempt to repair it. Instead take it to your local hardware store for repair, as damaged battery chargers, cables and plugs increase the risk of electric shock.
- ✿ To prevent the risk of fire, do not operate the battery charger on flammable surfaces (e.g. paper, textiles, etc.) or in combustible environments.
- ✿ If the trimming shears are dropped, or subjected to a hard impact, liquid can be ejected from the battery. Should this liquid accidentally contact your skin, immediately flush the area with water as it can cause irritation and even burns. Should the liquid contact your eyes you will also need to seek medical attention.
- ✿ To prevent the risk of short circuit, do not open the battery yourself.
- ✿ To prevent the risk of explosion, protect the battery from heat, such as continuous sunlight or fire.
- ✿ To prevent the risk of explosion, do not short-circuit the battery.
- ✿ If the battery becomes damaged due to improper use, vapour may be emitted. Should this happen get fresh air and consult a doctor should any respiratory complaint develop.

7. MAINTENANCE / STORAGE

MAINTENANCE

- ✿ Keep the safety switch in the lock position when not in use.
- ✿ Do not switch sprayer head between different types of chemicals without proper cleaning.
- ✿ Do not store liquids in the tank, follow chemical manufacturer's directions for storage and disposal.
- ✿ Make sure cap of Tank are tight and secure at all times
- ✿ Clean the filter periodically to guarantee good performance.

STORAGE

- ✿ After use rinse out sprayer and tank with clean water. Run water through the sprayer for 30 seconds while pressing trigger. If necessary you may remove both nozzles for cleaning if clogged.
- ✿ Charge the battery 3–5 hours before storing.
- ✿ During storage, charge the battery at least once every three months to protect it from damage.
- ✿ Store the machine in a dry, secure place out of reach of children.
- ✿ Do not place any other objects on top of the machine.
- ✿ The machine must not be stored over 35 °C or under direct exposure to sunlight.
- ✿ Do not store the machine in places with static electricity.

8. TECHNICAL SPECIFICATIONS

Item.....	FZC 1001-A
Battery pack voltage.....	DC 3.6V
Battery pack capacity	1500mAh
Battery type	Lithium-Ion
Tank capacity.....	11L/3 gallon
Charger (adaptor) input.....	AC230V 50Hz
Battery Charging time	3~5 hours
Sound pressure level	67dB(A) K=3dB(A)
Sound power level.....	78dB(A) K=3dB(A)
Vibration	2,1m/s ² K=1,5m/s ²

9. DISPOSAL

The sprayer and its accessories are manufactured from various materials, e.g. metal and plastic. Take damaged parts to a recycling centre. Inquire at the relevant government department.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

LIKVIDACE POUŽITÝCH ELEKTRICKÝCH A ELEKTRONICKÝCH ZAŘÍZENÍ DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

FOR BUSINESS ENTITIES IN THE EUROPEAN UNION

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

DISPOSAL IN OTHER COUNTRIES OUTSIDE THE EUROPEAN UNION



If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller. This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.